



Tip -> Yellow (Video) Ring -> White (Audio-R) Ring -> Red (Audio-L)

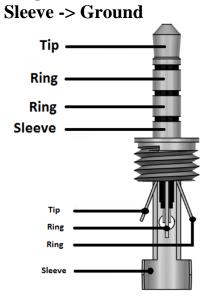


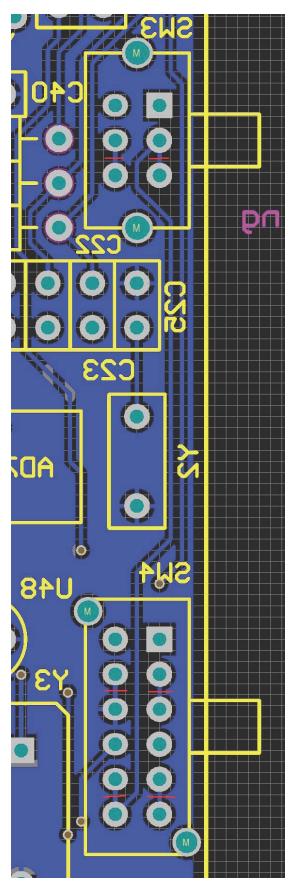

If install SW3 for switch between 48K timing and 128K timing, need to cut 2 wires as show in the picture. If don't use SW3, default timing is 128K

If install SW4 to switch between PAL and NTSC, need to cut 4 wire as show in the picture. If don't use SW4, default mode is PAL

Sega Mega Drive 2 (Genesis 2) to SCART Cable

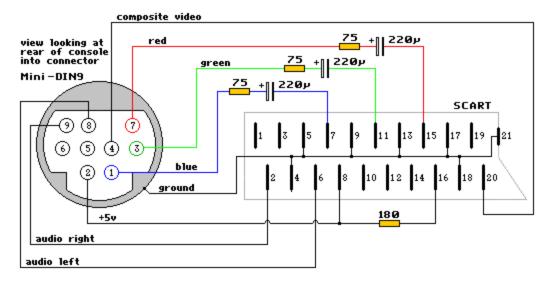

For RGB to SCART cable, use Sega Mega Drive2 (Genesis) cable and remove resistor 75 Ohm and Capacitor 220uF, just wire direct

