



Getting Started with Your ChompSaw:

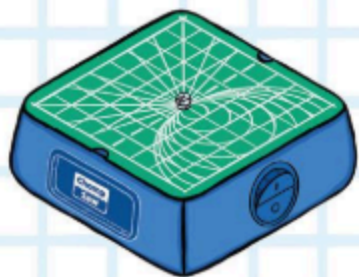

1. Place on a flat surface



2. Lift lid for power supply

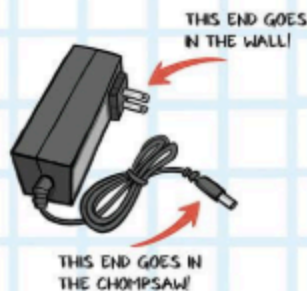

3. Plug it in



ON

4. Power on



5. Wait...

Wait about 10 seconds for it to reach full speed before you start cutting.



6. Lay cardboard flat

Lay your cardboard flat on the table in front of you. Make sure the cardboard is thin enough to fit in the cutting head (3mm or less).



7. Push to cut

To make a cut, push the cardboard in the direction of the arrows (away from you). Try pushing at different speeds to find what works best for you.



8. Rotate for curves

To make curves and turns, rotate the cardboard and keep pushing forward. Remember, the ChompSaw won't cut if you push sideways.