GUIslice

0.17.0

Generated by Doxygen 1.8.13

Contents

1	GUI	slice lib	rary											1
2	Tod	o List												3
3	Mod	lule Ind	ex											5
	3.1	Modul	es					 	 	 	 	 	 	 5
4	Hier	archica	l Index											7
	4.1	Class	Hierarchy					 	 	 	 	 	 	 7
5	Data	a Struct	ure Index											9
	5.1	Data S	Structures					 	 	 	 	 	 	 9
6	File	Index												11
	6.1	File Lis	st					 	 	 	 	 	 	 11
7	Mod	lule Dod	cumentati	on										13
	7.1	Gener	al Function	ns				 	 	 	 	 	 	 13
		7.1.1	Detailed	Descrip	tion .			 	 	 	 	 	 	 14
		7.1.2	Function	Docum	entation	n		 	 	 	 	 	 	 14
			7.1.2.1	gslc_E	DebugP	rintf()		 	 	 	 	 	 	 14
			7.1.2.2	gslc_C	GetClipF	Rect()		 	 	 	 	 	 	 14
			7.1.2.3		GetDrive									15
			7.1.2.4		GetDrive									15
			7.1.2.5 7.1.2.6		GetNam GetNam									15 16
				90.0_0	Jour talli	.5 .546	••()	 						

ii CONTENTS

		7.1.2.7	gslc_GetVer()	16
		7.1.2.8	gslc_GuiRotate()	16
		7.1.2.9	gslc_Init()	17
		7.1.2.10	gslc_InitDebug()	18
		7.1.2.11	gslc_Quit()	18
		7.1.2.12	gslc_SetBkgndColor()	18
		7.1.2.13	gslc_SetBkgndImage()	19
		7.1.2.14	gslc_SetClipRect()	19
		7.1.2.15	gslc_SetTransparentColor()	20
		7.1.2.16	gslc_Update()	20
7.2	Graphi	cs Genera	I Functions	21
	7.2.1	Detailed	Description	22
	7.2.2	Function	Documentation	22
		7.2.2.1	gslc_ClipLine()	22
		7.2.2.2	gslc_ClipPt()	22
		7.2.2.3	gslc_ClipRect()	23
		7.2.2.4	gslc_ColorBlend2()	23
		7.2.2.5	gslc_ColorBlend3()	24
		7.2.2.6	gslc_ColorEqual()	24
		7.2.2.7	gslc_cosFX()	25
		7.2.2.8	gslc_ExpandRect()	25
		7.2.2.9	gslc_GetImageFromFile()	25
		7.2.2.10	gslc_GetImageFromProg()	26
		7.2.2.11	gslc_GetImageFromRam()	26
		7.2.2.12	gslc_GetImageFromSD()	27
		7.2.2.13	gslc_InvalidateRgnAdd()	27
		7.2.2.14	gslc_InvalidateRgnPage()	27
		7.2.2.15	gslc_InvalidateRgnReset()	28
		7.2.2.16	gslc_InvalidateRgnScreen()	28
		7.2.2.17	gslc_lslnRect()	28

		7.2.2.18	gslc_lslnWH()	 29
		7.2.2.19	gslc_PolarToXY()	 29
		7.2.2.20	gslc_sinFX()	 30
		7.2.2.21	gslc_UnionRect()	 30
7.3	Graphi	cs Primitiv	ve Functions	 32
	7.3.1	Detailed	Description	 33
	7.3.2	Function	Documentation	 33
		7.3.2.1	gslc_DrawFillCircle()	 33
		7.3.2.2	gslc_DrawFillGradSector()	 33
		7.3.2.3	gslc_DrawFillQuad()	 34
		7.3.2.4	gslc_DrawFillRect()	 35
		7.3.2.5	gslc_DrawFillRoundRect()	 35
		7.3.2.6	gslc_DrawFillSector()	 36
		7.3.2.7	gslc_DrawFillTriangle()	 36
		7.3.2.8	gslc_DrawFrameCircle()	 37
		7.3.2.9	gslc_DrawFrameQuad()	 37
		7.3.2.10	gslc_DrawFrameRect()	 38
		7.3.2.11	gslc_DrawFrameRoundRect()	 38
		7.3.2.12	gslc_DrawFrameTriangle()	 39
		7.3.2.13	gslc_DrawLine()	 39
		7.3.2.14	gslc_DrawLineH()	 40
		7.3.2.15	gslc_DrawLinePolar()	 40
		7.3.2.16	gslc_DrawLineV()	 41
		7.3.2.17	gslc_DrawSetPixel()	 42
7.4	Font F	unctions .		 43
	7.4.1	Detailed	Description	 43
	7.4.2	Function	Documentation	 43
		7.4.2.1	gslc_FontAdd()	 43
		7.4.2.2	gslc_FontGet()	 44
		7.4.2.3	gslc_FontSet()	 44

iv CONTENTS

		7.4.2.4	gslc_FontSetMode()	 	45
7.5	Page F	unctions		 	46
	7.5.1	Detailed	Description	 	46
	7.5.2	Function	Documentation	 	46
		7.5.2.1	gslc_GetPageCur()	 	46
		7.5.2.2	gslc_PageAdd()	 	47
		7.5.2.3	gslc_PageFindElemById()	 	47
		7.5.2.4	gslc_PageRedrawGet()	 	48
		7.5.2.5	gslc_PageRedrawSet()	 	48
		7.5.2.6	gslc_PopupHide()	 	49
		7.5.2.7	gslc_PopupShow()	 	49
		7.5.2.8	gslc_SetPageBase()	 	50
		7.5.2.9	gslc_SetPageCur()	 	50
		7.5.2.10	gslc_SetPageOverlay()	 	50
		7.5.2.11	gslc_SetStackPage()	 	51
		7.5.2.12	gslc_SetStackState()	 	51
7.6	Eleme	nt Functior	ns	 	53
	7.6.1	Detailed	Description	 	53
7.7	Eleme	nt: Creatio	on Functions	 	54
	7.7.1	Detailed	Description	 	54
	7.7.2	Function	Documentation	 	54
		7.7.2.1	gslc_ElemCreateBox()	 	55
		7.7.2.2	gslc_ElemCreateBtnImg()	 	56
		7.7.2.3	gslc_ElemCreateBtnTxt()	 	57
		7.7.2.4	gslc_ElemCreateImg()	 	57
		7.7.2.5	gslc_ElemCreateLine()	 	58
		7.7.2.6	gslc_ElemCreateTxt()	 	59
7.8	Eleme	nt: Genera	al Functions	 	60
	7.8.1	Detailed	Description	 	60
	7.8.2	Function	Documentation	 	60

		7.8.2.1	gslc_ElemGetId()	60
7.9	Eleme	nt: Update	Functions	61
	7.9.1	Detailed	Description	63
	7.9.2	Function	Documentation	63
		7.9.2.1	gslc_ElemCalcRectState()	63
		7.9.2.2	gslc_ElemCalcResizeForFocus()	64
		7.9.2.3	gslc_ElemGetEdit()	64
		7.9.2.4	gslc_ElemGetFocus()	64
		7.9.2.5	gslc_ElemGetFocusEn()	65
		7.9.2.6	gslc_ElemGetGlow()	65
		7.9.2.7	gslc_ElemGetGlowEn()	66
		7.9.2.8	gslc_ElemGetGroup()	66
		7.9.2.9	gslc_ElemGetOnScreen()	66
		7.9.2.10	gslc_ElemGetRect()	67
		7.9.2.11	gslc_ElemGetRedraw()	67
		7.9.2.12	gslc_ElemGetTxtStr()	68
		7.9.2.13	gslc_ElemGetVisible()	68
		7.9.2.14	gslc_ElemGrowRect()	69
		7.9.2.15	gslc_ElemOwnsCoord()	69
		7.9.2.16	gslc_ElemSetClickEn()	70
		7.9.2.17	gslc_ElemSetCol()	70
		7.9.2.18	gslc_ElemSetDrawFunc()	70
		7.9.2.19	gslc_ElemSetEdit()	71
		7.9.2.20	gslc_ElemSetFillEn()	71
		7.9.2.21	gslc_ElemSetFocus()	72
		7.9.2.22	gslc_ElemSetFocusEn()	72
		7.9.2.23	gslc_ElemSetFrameEn()	73
		7.9.2.24	gslc_ElemSetGlow()	73
		7.9.2.25	gslc_ElemSetGlowCol()	74
		7.9.2.26	gslc_ElemSetGlowEn()	74

vi

	7.9.2.27	gslc_ElemSetGroup()	. 75
	7.9.2.28	gslc_ElemSetRect()	. 75
	7.9.2.29	gslc_ElemSetRedraw()	. 76
	7.9.2.30	gslc_ElemSetRoundEn()	. 76
	7.9.2.31	gslc_ElemSetStyleFrom()	. 76
	7.9.2.32	gslc_ElemSetTickFunc()	. 77
	7.9.2.33	gslc_ElemSetTouchFunc()	. 77
	7.9.2.34	gslc_ElemSetTxtAlign()	. 78
	7.9.2.35	gslc_ElemSetTxtCol()	. 78
	7.9.2.36	gslc_ElemSetTxtEnc()	. 79
	7.9.2.37	gslc_ElemSetTxtMargin()	. 79
	7.9.2.38	gslc_ElemSetTxtMarginXY()	. 80
	7.9.2.39	gslc_ElemSetTxtMem()	. 80
	7.9.2.40	gslc_ElemSetTxtStr()	. 81
	7.9.2.41	gslc_ElemSetVisible()	. 81
	7.9.2.42	gslc_ElemUpdateFont()	. 81
	7.9.2.43	gslc_ResetRectState()	. 82
	7.9.2.44	gslc_StrCopy()	. 82
7.10 Touchs	creen Fun	nctions	. 84
7.10.1	Detailed	Description	. 84
7.10.2	Macro De	efinition Documentation	. 84
	7.10.2.1	TOUCH_ROTATION_DATA [1/2]	. 85
	7.10.2.2	TOUCH_ROTATION_DATA [2/2]	. 85
	7.10.2.3	TOUCH_ROTATION_FLIPX [1/2]	. 85
	7.10.2.4	TOUCH_ROTATION_FLIPX [2/2]	. 85
	7.10.2.5	TOUCH_ROTATION_FLIPY [1/2]	. 85
	7.10.2.6	TOUCH_ROTATION_FLIPY [2/2]	. 85
	7.10.2.7	TOUCH_ROTATION_SWAPXY [1/2]	. 86
	7.10.2.8	TOUCH_ROTATION_SWAPXY [2/2]	. 86
7.10.3	Function	Documentation	. 86

CONTENTS vii

		7.10.3.1	gslc_GetTouch()	86
		7.10.3.2	gslc_GetTouchEn()	86
		7.10.3.3	gslc_InitTouch()	87
		7.10.3.4	gslc_SetTouchEn()	87
		7.10.3.5	gslc_SetTouchPressCal()	88
		7.10.3.6	gslc_SetTouchRemapCal()	88
		7.10.3.7	gslc_SetTouchRemapEn()	89
		7.10.3.8	gslc_SetTouchRemapYX()	89
7.11	Input M	lapping Fur	nctions	90
	7.11.1	Detailed D	Description	90
	7.11.2	Function [Documentation	90
		7.11.2.1	gslc_FocusElemGet()	90
		7.11.2.2	gslc_FocusElemIndSet()	91
		7.11.2.3	gslc_FocusElemStep()	91
		7.11.2.4	gslc_FocusPageStep()	92
		7.11.2.5	gslc_FocusSetToTrackedElem()	92
		7.11.2.6	gslc_InitInputMap()	92
		7.11.2.7	gslc_InputMapAdd()	93
		7.11.2.8	gslc_SetPinPollFunc()	93
7.12	Genera	ıl Purpose I	Macros	95
	7.12.1	Detailed D	Description	95
	7.12.2	Macro De	finition Documentation	95
		7.12.2.1	GSLC_DEBUG2_PRINT	95
		7.12.2.2	GSLC_DEBUG2_PRINT_CONST	95
		7.12.2.3	GSLC_DEBUG_PRINT	95
		7.12.2.4	GSLC_DEBUG_PRINT_CONST	96
7.13	Flash-b	ased Elem	ent Macros	97
	7.13.1	Detailed D	Description	97
	7.13.2	Macro De	finition Documentation	97
		7.13.2.1	gslc_ElemCreateBox_P	97

viii CONTENTS

98	_ElemCreateBtnTxt_P	7.13.2.2
99	_ElemCreateLine_P	7.13.2.3
99	_ElemCreateTxt_P	7.13.2.4
100	ElemCreateTxt_P_R	7.13.2.5
101	ElemCreateTxt_P_R_ext	7.13.2.6
103		7.14 Internal Functions
109	ption	7.14.1 Detailed [
109	nentation	7.14.2 Variable D
109	igeStackActive	7.14.2.1
109	geStackDoDraw	7.14.2.2
110	geStack	7.14.2.3
110	em	7.14.2.4
110	emRef	7.14.2.5
110	nt	7.14.2.6
110	outMap	7.14.2.7
110	ge	7.14.2.8
111		7.14.2.9
111	ntPending	7.14.2.10
111	alidateEn	7.14.2.11
111	drawNeeded	7.14.2.12
111	drawPartialEn	7.14.2.13
111	eenNeedFlip	7.14.2.14
112	eenNeedRedraw	7.14.2.15
112	chEn	7.14.2.16
112	chRemapEn	7.14.2.17
112	chRemapYX	7.14.2.18
112	ack	7.14.2.19
112	emFill	7.14.2.20
113	emFillGlow	7.14.2.21
113	emFrame	7.14.2.22

7.14.2.23 colElemFrameGlow
7.14.2.24 colElemText
7.14.2.25 colElemTextGlow
7.14.2.26 colFocus [1/2]
7.14.2.27 colFocus [2/2]
7.14.2.28 colFocusEdit
7.14.2.29 colFocusNone
7.14.2.30 colFrm
7.14.2.31 collnner
7.14.2.32 colTxtBack
7.14.2.33 colTxtFore
7.14.2.34 eAction
7.14.2.35 eElemFlags
7.14.2.36 eEvent
7.14.2.37 eFontRefMode
7.14.2.38 eFontRefType
7.14.2.39 elmgFlags
7.14.2.40 elnitStatTouch
7.14.2.41 eTouch
7.14.2.42 eTxtAlign
7.14.2.43 eTxtFlags
7.14.2.44 eType
7.14.2.45 g
7.14.2.46 h
7.14.2.47 nActionVal
7.14.2.48 nDisp0H
7.14.2.49 nDisp0W
7.14.2.50 nDispDepth
7.14.2.51 nDispH
7.14.2.52 nDispW

7.14.2.53 nElemAutoIdNext
7.14.2.54 nElemCnt
7.14.2.55 nElemIndTracked
7.14.2.56 nElemMax
7.14.2.57 nElemRefCnt
7.14.2.58 nElemRefMax
7.14.2.59 nFeatures
7.14.2.60 nFlipX
7.14.2.61 nFlipY
7.14.2.62 nFocusElemInd
7.14.2.63 nFocusElemMax
7.14.2.64 nFocusPageInd
7.14.2.65 nFocusSavedElemInd
7.14.2.66 nFocusSavedPageInd
7.14.2.67 nFontCnt
7.14.2.68 nFontMax
7.14.2.69 nFrameRateCnt
7.14.2.70 nFrameRateStart
7.14.2.71 nGroup
7.14.2.72 nld [1/2]
7.14.2.73 nld [2/2]
7.14.2.74 nInputMapCnt
7.14.2.75 nInputMapMax
7.14.2.76 nlnputMode
7.14.2.77 nPageCnt
7.14.2.78 nPageId
7.14.2.79 nPageMax
7.14.2.80 nRotation
7.14.2.81 nRoundRadius
7.14.2.82 nSize

CONTENTS xi

7.14.2.83 nStrBufMax
7.14.2.84 nSubType
7.14.2.85 nSwapXY
7.14.2.86 nTouchCalPressMax
7.14.2.87 nTouchCalPressMin
7.14.2.88 nTouchCalXMax
7.14.2.89 nTouchCalXMin
7.14.2.90 nTouchCalYMax
7.14.2.91 nTouchCalYMin
7.14.2.92 nTouchLastPress
7.14.2.93 nTouchLastX
7.14.2.94 nTouchLastY
7.14.2.95 nTouchRotation
7.14.2.96 nTxtMarginX
7.14.2.97 nTxtMarginY
7.14.2.98 nType
7.14.2.99 nVal
7.14.2.100nX
7.14.2.101nY
7.14.2.102pElem
7.14.2.103pElemRefParent
7.14.2.104pElemRefTracked
7.14.2.105pFname
7.14.2.10@FocusElemRef
7.14.2.107pFocusPage
7.14.2.10&pfuncPinPoll
7.14.2.109pfuncXDraw
7.14.2.110pfuncXEvent
7.14.2.111pfuncXTick
7.14.2.112pfuncXTouch

xii CONTENTS

7.14.2.113plmgBuf
7.14.2.114pStrBuf
7.14.2.115pTxtFont
7.14.2.11@pvData
7.14.2.117pvDriver
7.14.2.11&pvFont
7.14.2.119pvlmgRaw
7.14.2.120pvScope
7.14.2.121pXData
7.14.2.122
7.14.2.123 Bounds
7.14.2.124rElem
7.14.2.125 Focus
7.14.2.12 0 Full
7.14.2.127/Inner
7.14.2.12&InvalidateRect
7.14.2.129sCollect
7.14.2.130sElemRefTmp
7.14.2.131sElemTmp
7.14.2.13&ElemTmpProg
7.14.2.133sEventPend
7.14.2.134sEventTouchPend
7.14.2.135sImgRefBkgnd
7.14.2.136sImgRefGlow
7.14.2.137sImgRefNorm
7.14.2.138sTransCol
7.14.2.139w
7.14.2.140x [1/2]
7.14.2.141x [2/2]
7.14.2.142y [1/2]

CONTENTS xiii

	7.14.2.143y [2/2]	2
7.15 Interna	al: Misc Functions	3
7.15.1	Detailed Description	3
7.15.2	Function Documentation	3
	7.15.2.1 gslc_ResetImage()	3
7.16 Interna	al: Element Functions	4
7.16.1	Detailed Description	5
7.16.2	Function Documentation	5
	7.16.2.1 gslc_DrawTxtBase()	5
	7.16.2.2 gslc_ElemAdd()	5
	7.16.2.3 gslc_ElemCreate()	6
	7.16.2.4 gslc_ElemDraw()	7
	7.16.2.5 gslc_ElemDrawByRef()	7
	7.16.2.6 gslc_ElemSetImage()	8
	7.16.2.7 gslc_GetElemFromRef()	8
	7.16.2.8 gslc_GetElemFromRefD()	9
	7.16.2.9 gslc_GetElemRefFlag()	9
	7.16.2.10 gslc_GetXDataFromRef()	9
	7.16.2.11 gslc_SetElemRefFlag()	0
	7.16.2.12 gslc_SetFocusCol()	0
	7.16.2.13 gslc_SetRoundRadius()	-1
7.17 Interna	ıl: Page Functions	2
7.17.1	Detailed Description	2
7.17.2	Function Documentation	2
	7.17.2.1 gslc_ElemEvent()	2
	7.17.2.2 gslc_ElemSendEventTouch()	3
	7.17.2.3 gslc_EventCreate()	3
	7.17.2.4 gslc_PageEvent()	4
	7.17.2.5 gslc_PageFindByld()	4
	7.17.2.6 gslc_PageFlipGet()	5

xiv CONTENTS

7.17.2.8 gslc_PageFlipSet() 7.17.2.9 gslc_PageRedrawCalc() 7.17.2.10 gslc_PageRedrawGo() 7.18 Internal: Element Collection Functions 7.18.1 Detailed Description 7.18.2 Function Documentation 7.18.2.1 gslc_CollectElemAdd() 7.18.2.3 gslc_CollectFindElemByld() 7.18.2.4 gslc_CollectFindElemFromCoord() 7.18.2.5 gslc_CollectGetElemRefTracked() 7.18.2.6 gslc_CollectGetRedraw() 7.18.2.7 gslc_CollectGetRedraw() 7.18.2.8 gslc_CollectGetRedraw() 7.18.2.9 gslc_CollectSetElemTracked() 7.18.2.9 gslc_CollectSetElemTracked() 7.18.2.10 pslc_CollectSetElemTracked() 7.18.2.2 gslc_CollectSetElemTracked() 7.18.2.3 gslc_CollectSetElemTracked() 7.18.2.4 gslc_CollectSetElemTracked() 7.18.2.5 gslc_CollectSetElemTracked() 7.18.2.6 gslc_CollectSetElemTracked() 7.18.2.7 gslc_CollectSetElemTracked() 7.18.2.8 gslc_CollectSetElemTracked() 7.18.2.9 gslc_CollectSetElemTracked() 7.19.1 Detailed Description 7.19.2 function Documentation 7.19.2 gslc_CollectSetParent() 7.19.2.1 gslc_CollectFouch() 7.19.2.2 gslc_CollectTouch() 7.19.2.3 gslc_CollectTouch() 7.19.2.4 gslc_CollectTouchCompound()	. 146 . 148 . 148 . 148 . 149 . 149
7.17.2.10 gslc_PageRedrawGo() 7.18 Internal: Element Collection Functions 7.18.1 Detailed Description 7.18.2 Function Documentation 7.18.2.1 gslc_CollectElemAdd() 7.18.2.2 gslc_CollectFindElemByld() 7.18.2.3 gslc_CollectFindElemFromCoord() 7.18.2.4 gslc_CollectGetBlemRefTracked() 7.18.2.5 gslc_CollectGetRedraw() 7.18.2.6 gslc_CollectGetRedraw() 7.18.2.7 gslc_CollectGetReset() 7.18.2.8 gslc_CollectSetElemTracked() 7.18.2.9 gslc_CollectSetElemTracked() 7.19.1 Detailed Description 7.19.1 Detailed Description 7.19.2 Function Documentation 7.19.2.1 gslc_CollectEvent() 7.19.2.2 gslc_CollectEvent() 7.19.2.3 gslc_CollectTouch() 7.19.2.4 gslc_CollectTouchCompound()	. 146 . 148 . 148 . 149 . 149 . 150
7.18 Internal: Element Collection Functions 7.18.1 Detailed Description 7.18.2 Function Documentation 7.18.2.1 gslc_CollectElemAdd() 7.18.2.2 gslc_CollectFindElemByld() 7.18.2.3 gslc_CollectFindElemFromCoord() 7.18.2.4 gslc_CollectGetElemRefTracked() 7.18.2.5 gslc_CollectGetNextId() 7.18.2.6 gslc_CollectGetRedraw() 7.18.2.7 gslc_CollectGetRedraw() 7.18.2.8 gslc_CollectSetElemTracked() 7.18.2.9 gslc_CollectSetParent() 7.19 Internal: Element Collection Event Functions 7.19.1 Detailed Description 7.19.2 Function Documentation 7.19.2.1 gslc_CollectEvent() 7.19.2.2 gslc_CollectEvent() 7.19.2.3 gslc_CollectTouch() 7.19.2.4 gslc_CollectTouchCompound()	. 148 . 148 . 148 . 149 . 149
7.18.1 Detailed Description 7.18.2 Function Documentation 7.18.2.1 gslc_CollectElemAdd() 7.18.2.2 gslc_CollectFindElemById() 7.18.2.3 gslc_CollectFindElemFromCoord() 7.18.2.4 gslc_CollectGetElemRefTracked() 7.18.2.5 gslc_CollectGetNextId() 7.18.2.6 gslc_CollectGetRedraw() 7.18.2.7 gslc_CollectGetRedraw() 7.18.2.8 gslc_CollectSetElemTracked() 7.18.2.9 gslc_CollectSetParent() 7.19 Internal: Element Collection Event Functions 7.19.1 Detailed Description 7.19.2 Function Documentation 7.19.2.1 gslc_CollectEvent() 7.19.2.2 gslc_CollectTouch() 7.19.2.3 gslc_CollectTouch() 7.19.2.4 gslc_CollectTouchCompound()	. 148 . 148 . 149 . 149 . 150
7.18.2 Function Documentation 7.18.2.1 gslc_CollectElemAdd() 7.18.2.2 gslc_CollectFindElemByld() 7.18.2.3 gslc_CollectFindElemFromCoord() 7.18.2.4 gslc_CollectGetElemRefTracked() 7.18.2.5 gslc_CollectGetRedraw() 7.18.2.6 gslc_CollectGetRedraw() 7.18.2.7 gslc_CollectGetReset() 7.18.2.8 gslc_CollectSetElemTracked() 7.18.2.9 gslc_CollectSetParent() 7.19 Internal: Element Collection Event Functions 7.19.1 Detailed Description 7.19.2 Function Documentation 7.19.2.1 gslc_CollectEvent() 7.19.2.2 gslc_CollectInput() 7.19.2.3 gslc_CollectTouch() 7.19.2.4 gslc_CollectTouchCompound()	. 148 . 149 . 149 . 150
7.18.2.1 gslc_CollectElemAdd() 7.18.2.2 gslc_CollectFindElemByld() 7.18.2.3 gslc_CollectFindElemFromCoord() 7.18.2.4 gslc_CollectGetElemRefTracked() 7.18.2.5 gslc_CollectGetNextId() 7.18.2.6 gslc_CollectGetRedraw() 7.18.2.7 gslc_CollectGetRedraw() 7.18.2.8 gslc_CollectSetElemTracked() 7.18.2.9 gslc_CollectSetElemTracked() 7.18.2.9 gslc_CollectSetParent() 7.19 Internal: Element Collection Event Functions 7.19.1 Detailed Description 7.19.2 Function Documentation 7.19.2.1 gslc_CollectEvent() 7.19.2.2 gslc_CollectInput() 7.19.2.3 gslc_CollectInput() 7.19.2.4 gslc_CollectTouch() 7.19.2.4 gslc_CollectTouchCompound()	. 149 . 149 . 150
7.18.2.2 gslc_CollectFindElemById() 7.18.2.3 gslc_CollectFindElemFromCoord() 7.18.2.4 gslc_CollectGetElemRefTracked() 7.18.2.5 gslc_CollectGetNextId() 7.18.2.6 gslc_CollectGetRedraw() 7.18.2.7 gslc_CollectReset() 7.18.2.8 gslc_CollectSetElemTracked() 7.18.2.9 gslc_CollectSetParent() 7.19 Internal: Element Collection Event Functions 7.19.1 Detailed Description 7.19.2 Function Documentation 7.19.2.1 gslc_CollectEvent() 7.19.2.2 gslc_CollectInput() 7.19.2.3 gslc_CollectInput() 7.19.2.4 gslc_CollectTouch() 7.19.2.4 gslc_CollectTouchCompound()	. 149 . 150
7.18.2.3 gslc_CollectFindElemFromCoord() 7.18.2.4 gslc_CollectGetElemRefTracked() 7.18.2.5 gslc_CollectGetNextId() 7.18.2.6 gslc_CollectGetRedraw() 7.18.2.7 gslc_CollectReset() 7.18.2.8 gslc_CollectSetElemTracked() 7.18.2.9 gslc_CollectSetParent() 7.19 Internal: Element Collection Event Functions 7.19.1 Detailed Description 7.19.2 Function Documentation 7.19.2.1 gslc_CollectEvent() 7.19.2.2 gslc_CollectInput() 7.19.2.3 gslc_CollectTouch() 7.19.2.4 gslc_CollectTouchCompound()	. 150
7.18.2.4 gslc_CollectGetElemRefTracked() 7.18.2.5 gslc_CollectGetNextId() 7.18.2.6 gslc_CollectGetRedraw() 7.18.2.7 gslc_CollectReset() 7.18.2.8 gslc_CollectSetElemTracked() 7.18.2.9 gslc_CollectSetParent() 7.19 Internal: Element Collection Event Functions 7.19.1 Detailed Description 7.19.2 Function Documentation 7.19.2.1 gslc_CollectEvent() 7.19.2.2 gslc_CollectInput() 7.19.2.3 gslc_CollectInput() 7.19.2.4 gslc_CollectTouchCompound()	
7.18.2.5 gslc_CollectGetNextId() 7.18.2.6 gslc_CollectGetRedraw() 7.18.2.7 gslc_CollectReset() 7.18.2.8 gslc_CollectSetElemTracked() 7.18.2.9 gslc_CollectSetParent() 7.19 Internal: Element Collection Event Functions 7.19.1 Detailed Description 7.19.2 Function Documentation 7.19.2.1 gslc_CollectEvent() 7.19.2.2 gslc_CollectInput() 7.19.2.3 gslc_CollectInput() 7.19.2.4 gslc_CollectTouchCompound()	150
7.18.2.6 gslc_CollectGetRedraw() 7.18.2.7 gslc_CollectReset() 7.18.2.8 gslc_CollectSetElemTracked() 7.18.2.9 gslc_CollectSetParent() 7.19 Internal: Element Collection Event Functions 7.19.1 Detailed Description 7.19.2 Function Documentation 7.19.2.1 gslc_CollectEvent() 7.19.2.2 gslc_CollectInput() 7.19.2.3 gslc_CollectInput() 7.19.2.4 gslc_CollectTouch() 7.19.2.4 gslc_CollectTouchCompound()	. 150
7.18.2.7 gslc_CollectReset() 7.18.2.8 gslc_CollectSetElemTracked() 7.18.2.9 gslc_CollectSetParent() 7.19 Internal: Element Collection Event Functions 7.19.1 Detailed Description 7.19.2 Function Documentation 7.19.2.1 gslc_CollectEvent() 7.19.2.2 gslc_CollectInput() 7.19.2.3 gslc_CollectTouch() 7.19.2.4 gslc_CollectTouchCompound()	. 151
7.18.2.8 gslc_CollectSetElemTracked() 7.18.2.9 gslc_CollectSetParent() 7.19 Internal: Element Collection Event Functions 7.19.1 Detailed Description 7.19.2 Function Documentation 7.19.2.1 gslc_CollectEvent() 7.19.2.2 gslc_CollectInput() 7.19.2.3 gslc_CollectTouch() 7.19.2.4 gslc_CollectTouchCompound()	. 151
7.18.2.9 gslc_CollectSetParent()	. 151
7.19 Internal: Element Collection Event Functions	. 152
7.19.1 Detailed Description	. 152
7.19.2 Function Documentation 7.19.2.1 gslc_CollectEvent() 7.19.2.2 gslc_CollectInput() 7.19.2.3 gslc_CollectTouch() 7.19.2.4 gslc_CollectTouchCompound()	. 154
7.19.2.1 gslc_CollectEvent()	. 154
7.19.2.2 gslc_CollectInput()	. 154
7.19.2.3 gslc_CollectTouch()	. 154
7.19.2.4 gslc_CollectTouchCompound()	. 155
· - · · · · · · · · · · · · · · · · · ·	. 155
	. 156
7.20 Internal: Tracking Functions	. 157
7.20.1 Detailed Description	. 157
7.20.2 Function Documentation	. 157
7.20.2.1 gslc_InputMapLookup()	. 157
7.20.2.2 gslc_TrackInput()	. 158
7.20.2.3 gslc_TrackTouch()	. 158
7.21 Internal: Cleanup Functions	. 160
7.21.1 Detailed Description	. 160
7.21.2 Function Documentation	. 160
7.21.2.1 gslc_CollectDestruct()	. 160
7.21.2.2 gslc_ElemDestruct()	. 161
7.21.2.3 gslc_GuiDestruct()	. 161
7.21.2.4 gslc_PageDestruct()	. 161
7.21.2.5 gslc_ResetElem()	. 163
7.21.2.6 gslc_ResetFont()	

CONTENTS xv

8	Data	Structure Documentation	165
	8.1	gslc_tsCollect Struct Reference	165
		8.1.1 Detailed Description	166
	8.2	gslc_tsColor Struct Reference	166
		8.2.1 Detailed Description	166
	8.3	gslc_tsDriver Struct Reference	166
		8.3.1 Field Documentation	167
		8.3.1.1 nColBkgnd	167
		8.3.1.2 pvFontLast	167
		8.3.1.3 rClipRect	167
	8.4	gslc_tsElem Struct Reference	168
		8.4.1 Detailed Description	169
	8.5	gslc_tsElemRef Struct Reference	170
		8.5.1 Detailed Description	170
	8.6	gslc_tsEvent Struct Reference	170
		8.6.1 Detailed Description	171
	8.7	gslc_tsEventTouch Struct Reference	171
		8.7.1 Detailed Description	171
	8.8	gslc_tsFont Struct Reference	171
		8.8.1 Detailed Description	172
	8.9	gslc_tsGui Struct Reference	172
		8.9.1 Detailed Description	175
	8.10	gslc_tsImgRef Struct Reference	175
		8.10.1 Detailed Description	175
	8.11	gslc_tsInputMap Struct Reference	176
		8.11.1 Detailed Description	176
	8.12	gslc_tsKey Struct Reference	176
		8.12.1 Detailed Description	177
		8.12.2 Field Documentation	177
		8.12.2.1 nCol	177

xvi CONTENTS

8.12.2.2 nColSpan	177
8.12.2.3 nld	177
8.12.2.4 nRow	177
8.12.2.5 nRowSpan	177
8.12.2.6 nType	178
8.13 gslc_tsLabelSpecial Struct Reference	178
8.13.1 Detailed Description	178
8.13.2 Field Documentation	178
8.13.2.1 nld	178
8.13.2.2 pLabel	178
8.14 gslc_tsPage Struct Reference	179
8.14.1 Detailed Description	179
8.15 gslc_tsPt Struct Reference	180
8.15.1 Detailed Description	180
8.16 gslc_tsRect Struct Reference	180
8.16.1 Detailed Description	180
8.17 gslc_tsRectState Struct Reference	181
8.17.1 Detailed Description	181
8.18 gslc_tsXCheckbox Struct Reference	182
8.18.1 Detailed Description	182
8.18.2 Field Documentation	182
8.18.2.1 bChecked	182
8.18.2.2 bRadio	183
8.18.2.3 colCheck	183
8.18.2.4 nStyle	183
8.18.2.5 pfuncXToggle	183
8.19 gslc_tsXGauge Struct Reference	183
8.19.1 Detailed Description	184
8.19.2 Field Documentation	184
8.19.2.1 bFlip	184

CONTENTS xvii

		8.19.2.2	b	olnd	icFil	11 .							 	 						 185
		8.19.2.3	b	oVal	Last	tVali	d.			 			 	 						 185
		8.19.2.4	b	oVer	rt .					 			 	 						 185
		8.19.2.5	С	colG	aug	e.				 			 	 						 185
		8.19.2.6	C	colTi	ick					 			 	 						 185
		8.19.2.7	n	nInd	icLe	n .				 			 	 						 185
		8.19.2.8	n	nInd	licTip	p .				 			 	 						 186
		8.19.2.9	n	nMa	х.					 			 	 						 186
		8.19.2.10	0 n	nMir	١.					 			 	 						 186
		8.19.2.11	1 n	nSty	'le					 			 	 						 186
		8.19.2.12	2 n	nTic	kCn	t .				 			 	 						 186
		8.19.2.13	3 n	nTic	kLer	n .				 			 	 						 186
		8.19.2.14	4 n	nVal						 			 	 						 187
		8.19.2.15	5 n	nVal	Last	t .				 			 	 						 187
8.20	gslc_ts	XGlowball	II S	Struc	ot Re	efere	enc	е		 			 	 						 187
	8.20.1	Detailed	De	escr	riptic	n				 			 	 						 188
	8.20.2	Field Doo	cui	mer	ntatio	on				 			 	 						 188
		8.20.2.1	C	colB	g.					 			 	 						 188
		8.20.2.2	n	n A nç	gEn	d.				 			 	 						 188
		8.20.2.3	n	n A nç	gSta	art				 			 	 						 189
		8.20.2.4	n	nMic	Xk					 			 	 						 189
		8.20.2.5	n	nMic	Yk					 			 	 						 189
		8.20.2.6	n	nNuı	mRi	ngs				 			 	 						 189
		8.20.2.7	'n	nQu	ality					 			 	 						 189
		8.20.2.8	n	nVal						 			 	 						 189
		8.20.2.9	n	nVal	Last	t .				 			 	 						 190
		8.20.2.10	0 p	oRin	ıgs					 			 	 						 190
8.21	gslc_ts	XGlowball	IIRi	ing	Stru	ct R	efe	rer	nce	 			 	 						 190
	8.21.1	Field Doo	cui	mer	ntatio	on				 			 	 						 190
		8.21.1.1	C	cCol	١.					 			 	 						 191

xviii CONTENTS

	8.21.1.2 nRad1
	8.21.1.3 nRad2
8.22 gslc_ts	sXGraph Struct Reference
8.22.1	Detailed Description
8.22.2	Field Documentation
	8.22.2.1 bScrollEn
	8.22.2.2 colGraph
	8.22.2.3 eStyle
	8.22.2.4 nBufCnt
	8.22.2.5 nBufMax
	8.22.2.6 nMargin
	8.22.2.7 nPlotIndMax
	8.22.2.8 nPlotIndStart
	8.22.2.9 nPlotValMax
	8.22.2.10 nPlotValMin
	8.22.2.11 nScrollPos
	8.22.2.12 nWndHeight
	8.22.2.13 nWndWidth
	8.22.2.14 pBuf
8.23 gslc_ts	sXKeyPad Struct Reference
8.23.1	Detailed Description
8.23.2	Field Documentation
	8.23.2.1 acBuffer
	8.23.2.2 nBufferLen
	8.23.2.3 nBufferMax
	8.23.2.4 nCursorPos
	8.23.2.5 nFocusKeyInd
	8.23.2.6 nGlowKeyInd
	8.23.2.7 nScrollPos
	8.23.2.8 pConfig

CONTENTS xix

	8.23.2.9 pfuncCb	97
	8.23.2.10 pTargetRef	97
	8.23.2.11 sRedraw	97
8.24 gslc_	tsXKeyPadCfg Struct Reference	98
8.24	1 Detailed Description	99
8.24	2 Field Documentation	99
	8.24.2.1 bRoundEn	99
	8.24.2.2 eLayoutDef	99
	8.24.2.3 eLayoutSel	99
	8.24.2.4 nButtonSpaceX	00
	8.24.2.5 nButtonSpaceY	00
	8.24.2.6 nButtonSzH	00
	8.24.2.7 nButtonSzW	00
	8.24.2.8 nDispMax	00
	8.24.2.9 nFontId	00
	8.24.2.10 nFrameMargin	01
	8.24.2.11 nMaxCols	01
	8.24.2.12 nMaxRows	01
	8.24.2.13 nOffsetX	01
	8.24.2.14 nOffsetY	01
	8.24.2.15 pfuncBtnEvt	01
	8.24.2.16 pfuncLabelGet	02
	8.24.2.17 pfuncReset	02
	8.24.2.18 pfuncStyleGet	02
	8.24.2.19 pfuncTxtInit	02
	8.24.2.20 pLayout	02
	8.24.2.21 pLayouts	02
8.25 gslc_	tsXKeyPadCfg_Alpha Struct Reference	03
8.25	1 Field Documentation	03
	8.25.1.1 sBaseCfg	03

8.26 gslc_ts	sXKeyPadCfg_Num Struct Reference	ე4
8.26.1	Field Documentation	ე4
	8.26.1.1 bFloatEn	ე4
	8.26.1.2 bSignEn	05
	8.26.1.3 bValDecimalPt	05
	8.26.1.4 bValPositive	05
	8.26.1.5 sBaseCfg	05
8.27 gslc_ts	sXKeyPadData Struct Reference	05
8.27.1	Detailed Description	06
8.27.2	Prield Documentation	06
	8.27.2.1 pStr	06
	8.27.2.2 pTargetRef	06
8.28 gslc_t	sXKeyPadResult Struct Reference	06
8.28.1	Detailed Description	07
8.28.2	Prield Documentation	07
	8.28.2.1 eRedrawState	07
	8.28.2.2 nRedrawKeyld1	07
	8.28.2.3 nRedrawKeyld2	07
8.29 gslc_ts	sXListbox Struct Reference	08
8.29.1	Detailed Description	09
8.29.2	Prield Documentation	09
	8.29.2.1 bFocusLast	09
	8.29.2.2 bGlowLast	09
	8.29.2.3 bltemAutoSizeH	09
	8.29.2.4 bltemAutoSizeW	10
	8.29.2.5 bNeedRecalc	10
	8.29.2.6 colGap	10
	8.29.2.7 nBufltemsMax	10
	8.29.2.8 nBufltemsPos	10
	8.29.2.9 nCols	10

CONTENTS xxi

		8.29.2.10 nltemCnt
		8.29.2.11 nltemCurSel
		8.29.2.12 nltemCurSelLast
		8.29.2.13 nltemGap
		8.29.2.14 nltemH
		8.29.2.15 nltemSavedSel
		8.29.2.16 nltemTop
		8.29.2.17 nltemW
		8.29.2.18 nMarginH
		8.29.2.19 nMarginW
		8.29.2.20 nRows
		8.29.2.21 pBufltems
		8.29.2.22 pfuncXSel
8.30	gslc_ts	XProgress Struct Reference
	8.30.1	Detailed Description
	8.30.2	Field Documentation
		8.30.2.1 bFlip
		8.30.2.2 bValLastValid
		8.30.2.3 bVert
		8.30.2.4 colGauge
		8.30.2.5 nMax
		8.30.2.6 nMin
		8.30.2.7 nVal
		8.30.2.8 nValLast
8.31	gslc_ts	XRadial Struct Reference
	8.31.1	Detailed Description
	8.31.2	Field Documentation
		8.31.2.1 bFlip
		8.31.2.2 blndicFill
		8.31.2.3 bValLastValid

xxii CONTENTS

		8.31.2.4	colGauge .			 	 	 	 	 	 217
		8.31.2.5	colTick			 	 	 	 	 	 217
		8.31.2.6	nIndicLen .			 	 	 	 	 	 217
		8.31.2.7	nIndicTip .			 	 	 	 	 	 217
		8.31.2.8	nMax			 	 	 	 	 	 218
		8.31.2.9	nMin			 	 	 	 	 	 218
		8.31.2.10	nTickCnt .			 	 	 	 	 	 218
		8.31.2.11	nTickLen .			 	 	 	 	 	 218
		8.31.2.12	nVal			 	 	 	 	 	 218
		8.31.2.13	nValLast .			 	 	 	 	 	 218
8.	32 gslc_ts	XRamp Str	uct Referer	ice .		 	 	 	 	 	 219
	8.32.1	Detailed D	escription			 	 	 	 	 	 219
	8.32.2	Field Docu	umentation			 	 	 	 	 	 219
		8.32.2.1	bValLastVa	ılid		 	 	 	 	 	 219
		8.32.2.2	nMax			 	 	 	 	 	 219
		8.32.2.3	nMin			 	 	 	 	 	 220
		8.32.2.4	nVal			 	 	 	 	 	 220
		8.32.2.5	nValLast .			 	 	 	 	 	 220
8.	33 gslc_ts	XRingGaug	ge Struct Ro	eferenc	e	 	 	 	 	 	 220
	8.33.1	Detailed D	escription			 	 	 	 	 	 221
	8.33.2	Field Docu	umentation			 	 	 	 	 	 221
		8.33.2.1	acStrLast .			 	 	 	 	 	 221
		8.33.2.2	bGradient			 	 	 	 	 	 221
		8.33.2.3	colRing1 .			 	 	 	 	 	 221
		8.33.2.4	colRing2 .			 	 	 	 	 	 222
		8.33.2.5	colRingRe	main .		 	 	 	 	 	 222
		8.33.2.6	nAngRang	е		 	 	 	 	 	 222
		8.33.2.7	nAngStart			 	 	 	 	 	 222
		8.33.2.8	nQuality .			 	 	 	 	 	 222
		8.33.2.9	nSegGap .			 	 	 	 	 	 222

CONTENTS xxiii

	8.33.2.10 nThickness	. 222
	8.33.2.11 nVal	. 223
	8.33.2.12 nValLast	. 223
	8.33.2.13 nValMax	. 223
	8.33.2.14 nValMin	. 223
8.34 gslc_ts	tsXSeekbar Struct Reference	. 223
8.34.1	1 Detailed Description	. 224
8.34.2	2 Field Documentation	. 224
	8.34.2.1 bFrameThumb	. 225
	8.34.2.2 bTrimThumb	. 225
	8.34.2.3 bVert	. 225
	8.34.2.4 colFrame	. 225
	8.34.2.5 colProgress	. 225
	8.34.2.6 colRemain	. 225
	8.34.2.7 colThumb	. 226
	8.34.2.8 colTick	. 226
	8.34.2.9 colTrim	. 226
	8.34.2.10 nPos	. 226
	8.34.2.11 nPosMax	. 226
	8.34.2.12 nPosMin	. 226
	8.34.2.13 nProgressW	. 227
	8.34.2.14 nRemainW	. 227
	8.34.2.15 nThumbSz	. 227
	8.34.2.16 nTickDiv	. 227
	8.34.2.17 nTickLen	. 227
	8.34.2.18 pfuncXPos	. 227
8.35 gslc_ts	tsXSelNum Struct Reference	. 228
8.35.1	1 Detailed Description	. 228
8.35.2	2 Field Documentation	. 228
	8.35.2.1 acElemTxt	. 228

xxiv CONTENTS

		8.35.2.2	asElem			 	 	 	 	 	 		229
		8.35.2.3	asElem	Ref		 	 	 	 	 	 		229
		8.35.2.4	nCount	er		 	 	 	 	 	 		229
		8.35.2.5	sCollec	t		 	 	 	 	 	 		229
8.3	6 gslc_ts	XSlider Str	ruct Refe	rence .		 	 	 	 	 	 		229
	8.36.1	Detailed I	Descripti	on .		 	 	 	 	 	 		230
	8.36.2	Field Doc	umentat	ion .		 	 	 	 	 	 		230
		8.36.2.1	bSnapE	in		 	 	 	 	 	 		230
		8.36.2.2	bTrim .			 	 	 	 	 	 		230
		8.36.2.3	bVert .			 	 	 	 	 	 		231
		8.36.2.4	colTick			 	 	 	 	 	 		231
		8.36.2.5	colTrim			 	 	 	 	 	 		231
		8.36.2.6	nPos .			 	 	 	 	 	 		231
		8.36.2.7	nPosMa	ax		 	 	 	 	 	 		231
		8.36.2.8	nPosMi	n		 	 	 	 	 	 		231
		8.36.2.9	nThumb	oSz		 	 	 	 	 	 		232
		8.36.2.10	nTickDi	v		 	 	 	 	 	 		232
		8.36.2.11	nTickLe	en		 	 	 	 	 	 		232
		8.36.2.12	: pfuncXI	os .		 	 	 	 	 	 		232
8.3	7 gslc_ts	XSpinner S	Struct Re	eferenc	е.	 	 	 	 	 	 		232
	8.37.1	Detailed I	Descripti	on		 	 	 	 	 	 		233
	8.37.2	Field Doc	umentat	ion		 	 	 	 	 	 		233
		8.37.2.1	acDecr			 	 	 	 	 	 		233
		8.37.2.2	acElem	Txt		 	 	 	 	 	 		234
		8.37.2.3	acIncr			 	 	 	 	 	 		234
		8.37.2.4	nCount	er		 	 	 	 	 	 		234
		8.37.2.5	nFontId			 	 	 	 	 	 		234
		8.37.2.6	nIncr .			 	 	 	 	 	 		234
		8.37.2.7	nMax .			 	 	 	 	 	 		234
		8.37.2.8	nMin .			 	 	 	 	 	 	 -	235

CONTENTS xxv

8.37.2.9 pElemRef	235
8.37.2.10 pfuncXInput	235
8.37.2.11 rSubElemBtnDec	235
8.37.2.12 rSubElemBtnInc	235
8.37.2.13 rSubElemTxt	235
8.38 gslc_tsXTemplate Struct Reference	236
8.38.1 Detailed Description	236
8.39 gslc_tsXTextbox Struct Reference	236
8.39.1 Detailed Description	237
8.39.2 Field Documentation	237
8.39.2.1 bScrollEn	237
8.39.2.2 bWrapEn	237
8.39.2.3 nBufCols	237
8.39.2.4 nBufPosX	238
8.39.2.5 nBufPosY	238
8.39.2.6 nBufRows	238
8.39.2.7 nChSizeX	238
8.39.2.8 nChSizeY	238
8.39.2.9 nCurPosX	238
8.39.2.10 nCurPosY	239
8.39.2.11 nMarginX	239
8.39.2.12 nMarginY	239
8.39.2.13 nRedrawRow	239
8.39.2.14 nScrollPos	239
8.39.2.15 nWndCols	239
8.39.2.16 nWndRows	240
8.39.2.17 nWndRowStart	240
8.39.2.18 pBuf	240
8.40 gslc_tsXTogglebtn Struct Reference	240
8.40.1 Detailed Description	241

xxvi CONTENTS

	8.40.2	Field Docu	umer	ntation					 	 	 	 		 	241
	0	8.40.2.1													
		8.40.2.2													
		8.40.2.3	colO	ffState					 	 	 	 	 	 	241
		8.40.2.4	colO	nState				٠.	 	 	 	 	 	 	242
		8.40.2.5	colTl	humb					 	 	 	 	 	 	242
		8.40.2.6	nMyl	Pageld					 	 	 	 	 	 	242
		8.40.2.7	pfun	ctUser					 	 	 	 	 	 	242
8.41	gslc_ts	XToggleImg	gbtn	Struct	Refe	rence			 	 	 	 	 	 	242
	8.41.1	Detailed D	Descr	iption					 	 	 	 	 	 	243
	8.41.2	Field Docu	umen	ntation					 	 	 	 	 	 	243
		8.41.2.1	bOn						 	 	 	 	 	 	243
		8.41.2.2	nMy	Pageld					 	 	 	 	 	 	243
		8.41.2.3	pfun	ctUser					 	 	 	 	 	 	243
8.42	THPoir	nt Class Ref	eferen	ice					 	 	 	 	 	 	243
	8.42.1	Constructo	tor & I	Destru	ctor [Docui	menta	ation	 		 	 	 	 	244
		8.42.1.1	THP	oint() r	1/21						 	 			244
		8.42.1.2													
	0 40 0	0.12.1.2		Onne() [2/2]				 	 	 				
	0.42.2	Mombor E	Eupoti	ion Do	numa	ntati	on								244
		Member F											 		
		8.42.2.1	oper	ator"!=	() .				 	 	 	 	 	 	244
			oper	ator"!=	() .				 	 	 	 	 	 	244
	8.42.3	8.42.2.1	oper	rator"!= rator==	() .				 	 	 	 	 	 	244 244
	8.42.3	8.42.2.1 (8.42.2.2 (oper oper sumen	rator"!= rator== ntation	() .				 	 	 	 	 	 	244244244
	8.42.3	8.42.2.1 6 8.42.2.2 6 Field Docu	oper oper cumen x	rator"!= rator== ntation	() · · · · · · · · · · · · · · · · · · ·				 	 	 	 	 	 	244244244245
	8.42.3	8.42.2.1 (8.42.2.2 (Field Documents) 8.42.3.1 (19.42.3.	operacument	rator"!= rator== ntation	() -					 	 	 	 	 	244244245245
8.43		8.42.2.1 (8.42.2.2 (Field Documents) 8.42.3.1 (8.42.3.2 (9.42.3.2	operation operat	rator"!= rator== ntation	0 -					 	 	 	 	 	244244245245245
8.43	Touch	8.42.2.1 (8.42.2.2 (9.42.3.1 (9.42.3.2 (9.42.3.3 (9.42.3	operation operat	rator"!= rator== ntation	()						 	 		 	244 244 245 245 245 245
8.43	Touch	8.42.2.1 (8.42.2.2 (Field Docu 8.42.3.1 (8.42.3.2 (8.42.3.3 (8.42.3 (operation operat	rator"!= rator== ntation eference	()		·······································								244 244 245 245 245 245 245 246
8.43	TouchF 8.43.1	8.42.2.1 (8.42.2.2 (Field Docu 8.42.3.1 (8.42.3.2 (8.42.3.3 (8.42.3.3 (Constructors)	oper oper cumen x	rator"!= rator== ntation eference Destruct	()		·····								244 244 245 245 245 245 246 246

CONTENTS xxvii

			8.43.2.2	getPoint()	246
			8.43.2.3	scale()	246
			8.43.2.4	setCalibration()	246
			8.43.2.5	setSize()	247
			8.43.2.6	setSwapFlip()	247
	8.44	Touch	landler_XI	PT2046 Class Reference	247
		8.44.1	Construc	etor & Destructor Documentation	248
			8.44.1.1	TouchHandler_XPT2046()	248
		8.44.2	Member	Function Documentation	248
			8.44.2.1	begin()	248
			8.44.2.2	getPoint()	248
		8.44.3	Field Doo	cumentation	248
			8.44.3.1	spi	249
			8.44.3.2	touchDriver	249
9	File	Docume	entation		251
	9.1	READI	ME.md File	e Reference	251
	9.2	src/elei	m/XCheck	box.c File Reference	251
		9.2.1	Function	Documentation	252
			9.2.1.1	gslc_ElemXCheckboxCreate()	252
			9.2.1.1	gslc_ElemXCheckboxCreate() gslc_ElemXCheckboxDraw()	
					253
			9.2.1.2	gslc_ElemXCheckboxDraw()	253
			9.2.1.2 9.2.1.3	gslc_ElemXCheckboxDraw() gslc_ElemXCheckboxFindChecked() gslc_ElemXCheckboxGetState() gslc_ElemXCheckboxGetState()	253 253
			9.2.1.2 9.2.1.3 9.2.1.4	gslc_ElemXCheckboxDraw() gslc_ElemXCheckboxFindChecked() gslc_ElemXCheckboxGetState() gslc_ElemXCheckboxSetState()	253 253 254
			9.2.1.2 9.2.1.3 9.2.1.4 9.2.1.5	gslc_ElemXCheckboxDraw() gslc_ElemXCheckboxFindChecked() gslc_ElemXCheckboxGetState() gslc_ElemXCheckboxSetState() gslc_ElemXCheckboxSetStateFunc()	253 253 254 254
			9.2.1.2 9.2.1.3 9.2.1.4 9.2.1.5 9.2.1.6	gslc_ElemXCheckboxDraw() gslc_ElemXCheckboxFindChecked() gslc_ElemXCheckboxGetState() gslc_ElemXCheckboxSetState() gslc_ElemXCheckboxSetStateFunc() gslc_ElemXCheckboxSetStateHelp()	253 253 254 254 254
			9.2.1.2 9.2.1.3 9.2.1.4 9.2.1.5 9.2.1.6 9.2.1.7	gslc_ElemXCheckboxDraw() gslc_ElemXCheckboxFindChecked() gslc_ElemXCheckboxGetState() gslc_ElemXCheckboxSetState() gslc_ElemXCheckboxSetStateFunc() gslc_ElemXCheckboxSetStateHelp() gslc_ElemXCheckboxToggleState()	253 253 254 254 254
		9.2.2	9.2.1.2 9.2.1.3 9.2.1.4 9.2.1.5 9.2.1.6 9.2.1.7 9.2.1.8 9.2.1.9	gslc_ElemXCheckboxDraw() gslc_ElemXCheckboxFindChecked() gslc_ElemXCheckboxGetState() gslc_ElemXCheckboxSetState() gslc_ElemXCheckboxSetStateFunc() gslc_ElemXCheckboxSetStateHelp() gslc_ElemXCheckboxToggleState() gslc_ElemXCheckboxToggleState() gslc_ElemXCheckboxTouch()	253 253 254 254 254 255 255
		9.2.2	9.2.1.2 9.2.1.3 9.2.1.4 9.2.1.5 9.2.1.6 9.2.1.7 9.2.1.8 9.2.1.9	gslc_ElemXCheckboxDraw() gslc_ElemXCheckboxFindChecked() gslc_ElemXCheckboxGetState() gslc_ElemXCheckboxSetState() gslc_ElemXCheckboxSetStateFunc() gslc_ElemXCheckboxSetStateHelp() gslc_ElemXCheckboxToggleState() gslc_ElemXCheckboxTouch() Documentation	253 253 254 254 254 255 255
		9.2.2	9.2.1.2 9.2.1.3 9.2.1.4 9.2.1.5 9.2.1.6 9.2.1.7 9.2.1.8 9.2.1.9 Variable	gslc_ElemXCheckboxDraw() gslc_ElemXCheckboxFindChecked() gslc_ElemXCheckboxGetState() gslc_ElemXCheckboxSetStateFunc() gslc_ElemXCheckboxSetStateFunc() gslc_ElemXCheckboxSetStateHelp() gslc_ElemXCheckboxToggleState() gslc_ElemXCheckboxTouch() Documentation	253 253 254 254 255 255 255 256 256

xxviii CONTENTS

9.3	src/ele	m/XCheck	kbox.h File Reference
	9.3.1	Macro D	refinition Documentation
		9.3.1.1	gslc_ElemXCheckboxCreate_P
		9.3.1.2	GSLC_TYPEX_CHECKBOX
	9.3.2	Typedef	Documentation
		9.3.2.1	GSLC_CB_XCHECKBOX
	9.3.3	Enumera	ation Type Documentation
		9.3.3.1	gslc_teXCheckboxStyle
	9.3.4	Function	Documentation
		9.3.4.1	gslc_ElemXCheckboxCreate()
		9.3.4.2	gslc_ElemXCheckboxDraw()
		9.3.4.3	gslc_ElemXCheckboxFindChecked()
		9.3.4.4	gslc_ElemXCheckboxGetState()
		9.3.4.5	gslc_ElemXCheckboxSetState()
		9.3.4.6	gslc_ElemXCheckboxSetStateFunc()
		9.3.4.7	gslc_ElemXCheckboxToggleState()
		9.3.4.8	gslc_ElemXCheckboxTouch()
9.4	src/ele	m/XGauge	e.c File Reference
	9.4.1	Function	Documentation
		9.4.1.1	gslc_ElemXGaugeCreate()
		9.4.1.2	gslc_ElemXGaugeDraw()
		9.4.1.3	gslc_ElemXGaugeDrawProgressBar()
		9.4.1.4	gslc_ElemXGaugeSetFlip()
		9.4.1.5	gslc_ElemXGaugeSetIndicator()
		9.4.1.6	gslc_ElemXGaugeSetStyle()
		9.4.1.7	gslc_ElemXGaugeSetTicks()
		9.4.1.8	gslc_ElemXGaugeUpdate()
	9.4.2	Variable	Documentation
		9.4.2.1	ERRSTR_NULL
		9.4.2.2	ERRSTR_PXD_NULL

CONTENTS xxix

9.5	src/ele	m/XGauge	e.h File Reference	9
	9.5.1	Macro D	efinition Documentation	1
		9.5.1.1	gslc_ElemXGaugeCreate_P	1
		9.5.1.2	GSLC_TYPEX_GAUGE	2
	9.5.2	Enumera	ation Type Documentation	2
		9.5.2.1	gslc_teXGaugeStyle	2
	9.5.3	Function	Documentation	2
		9.5.3.1	gslc_ElemXGaugeCreate()	2
		9.5.3.2	gslc_ElemXGaugeDraw()	3
		9.5.3.3	gslc_ElemXGaugeDrawProgressBar()	4
		9.5.3.4	gslc_ElemXGaugeSetFlip()	4
		9.5.3.5	gslc_ElemXGaugeSetIndicator()	5
		9.5.3.6	gslc_ElemXGaugeSetStyle()	5
		9.5.3.7	gslc_ElemXGaugeSetTicks()	6
		9.5.3.8	gslc_ElemXGaugeUpdate()	6
9.6	src/ele	m/XGlowb	pall.c File Reference	6
	9.6.1	Function	Documentation	7
	9.6.1	Function 9.6.1.1	Documentation <	
	9.6.1			8
	9.6.1	9.6.1.1	drawXGlowball()	8
	9.6.1	9.6.1.1 9.6.1.2	drawXGlowball()	8
	9.6.1	9.6.1.1 9.6.1.2 9.6.1.3	drawXGlowball()	8 8
	9.6.1	9.6.1.1 9.6.1.2 9.6.1.3 9.6.1.4	drawXGlowball() 27 drawXGlowballArc() 27 drawXGlowballRing() 27 gslc_ElemXGlowballCreate() 27	8 8 8
	9.6.1	9.6.1.1 9.6.1.2 9.6.1.3 9.6.1.4 9.6.1.5	drawXGlowball() 27 drawXGlowballArc() 27 drawXGlowballRing() 27 gslc_ElemXGlowballCreate() 27 gslc_ElemXGlowballDraw() 27	8 8 8 9
	9.6.1	9.6.1.1 9.6.1.2 9.6.1.3 9.6.1.4 9.6.1.5 9.6.1.6	drawXGlowball() 27 drawXGlowballArc() 27 drawXGlowballRing() 27 gslc_ElemXGlowballCreate() 27 gslc_ElemXGlowballDraw() 27 gslc_ElemXGlowballSetAngles() 27	8 8 8 9 9
	9.6.1	9.6.1.1 9.6.1.2 9.6.1.3 9.6.1.4 9.6.1.5 9.6.1.6 9.6.1.7	drawXGlowball() 27 drawXGlowballArc() 27 drawXGlowballRing() 27 gslc_ElemXGlowballCreate() 27 gslc_ElemXGlowballDraw() 27 gslc_ElemXGlowballSetAngles() 27 gslc_ElemXGlowballSetAngles() 27 gslc_ElemXGlowballSetColorBack() 28	8 8 8 9 0
	9.6.1	9.6.1.1 9.6.1.2 9.6.1.3 9.6.1.4 9.6.1.5 9.6.1.6 9.6.1.7 9.6.1.8 9.6.1.9	drawXGlowball() 27 drawXGlowballArc() 27 drawXGlowballRing() 27 gslc_ElemXGlowballCreate() 27 gslc_ElemXGlowballDraw() 27 gslc_ElemXGlowballSetAngles() 27 gslc_ElemXGlowballSetColorBack() 28 gslc_ElemXGlowballSetQuality() 28	8 8 8 9 9 0
		9.6.1.1 9.6.1.2 9.6.1.3 9.6.1.4 9.6.1.5 9.6.1.6 9.6.1.7 9.6.1.8 9.6.1.9	drawXGlowball()27drawXGlowballArc()27drawXGlowballRing()27gslc_ElemXGlowballCreate()27gslc_ElemXGlowballDraw()27gslc_ElemXGlowballSetAngles()27gslc_ElemXGlowballSetColorBack()28gslc_ElemXGlowballSetQuality()28gslc_ElemXGlowballSetQuality()28gslc_ElemXGlowballSetVal()28	888899000
		9.6.1.1 9.6.1.2 9.6.1.3 9.6.1.4 9.6.1.5 9.6.1.6 9.6.1.7 9.6.1.8 9.6.1.9 Variable	drawXGlowball() 27 drawXGlowballArc() 27 drawXGlowballRing() 27 gslc_ElemXGlowballCreate() 27 gslc_ElemXGlowballDraw() 27 gslc_ElemXGlowballSetAngles() 27 gslc_ElemXGlowballSetColorBack() 28 gslc_ElemXGlowballSetQuality() 28 gslc_ElemXGlowballSetVal() 28 Documentation 28	8 8 8 9 9 0 0 0 0 0 0 0

	9.7.1	Macro De	finition Documentation	282
		9.7.1.1	GSLC_TYPEX_GLOW	282
	9.7.2	Function I	Documentation	282
		9.7.2.1	drawXGlowball()	282
		9.7.2.2	drawXGlowballArc()	282
		9.7.2.3	drawXGlowballRing()	283
		9.7.2.4	gslc_ElemXGlowballCreate()	283
		9.7.2.5	gslc_ElemXGlowballDraw()	283
		9.7.2.6	gslc_ElemXGlowballSetAngles()	284
		9.7.2.7	gslc_ElemXGlowballSetColorBack()	284
		9.7.2.8	gslc_ElemXGlowballSetQuality()	284
		9.7.2.9	gslc_ElemXGlowballSetVal()	284
9.8	src/ele	m/XGraph.	c File Reference	285
	9.8.1	Function I	Documentation	286
		9.8.1.1	gslc_ElemXGraphAdd()	286
		9.8.1.2	gslc_ElemXGraphCreate()	286
		9.8.1.3	gslc_ElemXGraphDraw()	287
		9.8.1.4	gslc_ElemXGraphReset()	287
		9.8.1.5	gslc_ElemXGraphScrollSet()	288
		9.8.1.6	gslc_ElemXGraphSetRange()	288
		9.8.1.7	gslc_ElemXGraphSetStyle()	288
	9.8.2	Variable D	Documentation	289
		9.8.2.1	ERRSTR_NULL	289
		9.8.2.2	ERRSTR_PXD_NULL	289
9.9	src/ele	m/XGraph.	h File Reference	289
	9.9.1	Macro De	finition Documentation	291
		9.9.1.1	GSLC_TYPEX_GRAPH	291
	9.9.2	Enumerat	ion Type Documentation	291
		9.9.2.1	gslc_teXGraphStyle	291
	9.9.3	Function I	Documentation	291

CONTENTS xxxi

	9.9.3.1	gslc_ElemXGraphAdd()	291
	9.9.3.2	gslc_ElemXGraphCreate()	292
	9.9.3.3	gslc_ElemXGraphDraw()	292
	9.9.3.4	gslc_ElemXGraphReset()	293
	9.9.3.5	gslc_ElemXGraphScrollSet()	293
	9.9.3.6	gslc_ElemXGraphSetRange()	294
	9.9.3.7	gslc_ElemXGraphSetStyle()	294
9.10 src/ele	m/XKeyPa	d.c File Reference	295
9.10.1	Function	Documentation	297
	9.10.1.1	gslc_ElemXKeyPadCfgInit()	297
	9.10.1.2	gslc_ElemXKeyPadCfgSetButtonSpace()	297
	9.10.1.3	gslc_ElemXKeyPadCfgSetButtonSz()	298
	9.10.1.4	gslc_ElemXKeyPadCfgSetRoundEn()	298
	9.10.1.5	gslc_ElemXKeyPadDataTargetIdGet()	298
	9.10.1.6	gslc_ElemXKeyPadDataValGet()	299
	9.10.1.7	gslc_ElemXKeyPadInputAsk()	299
	9.10.1.8	gslc_ElemXKeyPadInputGet()	300
	9.10.1.9	gslc_ElemXKeyPadReset()	300
	9.10.1.10	gslc_ElemXKeyPadTargetRefSet()	300
	9.10.1.11	gslc_ElemXKeyPadValGet()	301
	9.10.1.12	2 gslc_ElemXKeyPadValSet()	301
	9.10.1.13	3 gslc_ElemXKeyPadValSetCb()	302
	9.10.1.14	gslc_XKeyPadAdjustScroll()	302
	9.10.1.15	5 gslc_XKeyPadCreateBase()	302
	9.10.1.16	6 gslc_XKeyPadDraw()	303
	9.10.1.17	gslc_XKeyPadDrawKey()	303
	9.10.1.18	3 gslc_XKeyPadDrawLayout()	305
	9.10.1.19	9 gslc_XKeyPadDrawVirtualBtn()	305
	9.10.1.20	gslc_XKeyPadDrawVirtualTxt()	306
	9.10.1.21	gslc_XKeyPadFocusSetDefault()	306

xxxii CONTENTS

	9.10.1.22 gslc_XKeyPadLayoutSet())7
	9.10.1.23 gslc_XKeyPadLookupId())7
	9.10.1.24 gslc_XKeyPadLookupSpecialId())8
	9.10.1.25 gslc_XKeyPadMapEvent()	98
	9.10.1.26 gslc_XKeyPadPendRedrawAddKey())8
	9.10.1.27 gslc_XKeyPadPendRedrawAddTxt())8
	9.10.1.28 gslc_XKeyPadPendRedrawReset())9
	9.10.1.29 gslc_XKeyPadRedrawUpdate())9
	9.10.1.30 gslc_XKeyPadSizeAllGet())9
	9.10.1.31 gslc_XKeyPadSizeGet())9
	9.10.1.32 gslc_XKeyPadTouch()	10
	9.10.1.33 gslc_XKeyPadTrackSet()	11
	9.10.1.34 gslc_XKeyPadTxtAddCh()	11
	9.10.1.35 gslc_XKeyPadTxtAddStr()	11
	9.10.1.36 gslc_XKeyPadTxtDelCh()	12
9.10.2	Variable Documentation	12
	9.10.2.1 ERRSTR_NULL	13
	9.10.2.2 ERRSTR_PXD_NULL	13
9.11 src/ele	n/XKeyPad.h File Reference	13
9.11.1	Macro Definition Documentation	16
	9.11.1.1 DEBUG_XKEYPAD	17
	9.11.1.2 GSLC_TYPEX_KEYPAD	17
	9.11.1.3 XKEYPAD_BUF_MAX	17
	9.11.1.4 XKEYPAD_CB_STATE_CANCEL	17
	9.11.1.5 XKEYPAD_CB_STATE_DONE	17
	9.11.1.6 XKEYPAD_CB_STATE_UPDATE	17
	9.11.1.7 XKEYPAD_CURSOR_CH	17
	9.11.1.8 XKEYPAD_CURSOR_ENHANCED	18
	9.11.1.9 XKEYPAD_KEY_LEN	18
	9.11.1.10 XKEYPAD_REDRAW_ALL	18

CONTENTS xxxiii

	9.11.1.11	XKEYPAD_REDRAW_FULL		 	 	 . 318
	9.11.1.12	XKEYPAD_REDRAW_KEY .		 	 	 . 318
	9.11.1.13	XKEYPAD_REDRAW_NONE		 	 	 . 318
	9.11.1.14	XKEYPAD_REDRAW_TXT .		 	 	 . 318
9.11.2	Typedef [ocumentation		 	 	 . 318
	9.11.2.1	GSLC_CB_XKEYPAD_BTN_	EVT	 	 	 . 319
	9.11.2.2	GSLC_CB_XKEYPAD_LABE	L_GET	 	 	 . 319
	9.11.2.3	GSLC_CB_XKEYPAD_RESE	T	 	 	 . 319
	9.11.2.4	GSLC_CB_XKEYPAD_SYTLI	E_GET	 	 	 . 319
	9.11.2.5	GSLC_CB_XKEYPAD_TXT_I	INIT	 	 	 . 319
	9.11.2.6	gslc_tsKey		 	 	 . 319
9.11.3	Enumera	ion Type Documentation		 	 	 . 319
	9.11.3.1	anonymous enum		 	 	 . 319
	9.11.3.2	anonymous enum		 	 	 . 320
	9.11.3.3	gslc_tsXKeyPadAttrib		 	 	 . 320
9.11.4	Function	Documentation		 	 	 . 320
	9.11.4.1	gslc_ElemXKeyPadCfgInit() .		 	 	 . 320
	9.11.4.2	gslc_ElemXKeyPadCfgSetBut	ttonSpace()	 	 	 . 321
	9.11.4.3	gslc_ElemXKeyPadCfgSetBut	ttonSz()	 	 	 . 321
	9.11.4.4	gslc_ElemXKeyPadCfgSetRo	undEn()	 	 	 . 322
	9.11.4.5	gslc_ElemXKeyPadDataTarge	etIdGet()	 	 	 . 322
	9.11.4.6	gslc_ElemXKeyPadDataValGe	et()	 	 	 . 323
	9.11.4.7	gslc_ElemXKeyPadInputAsk()		 	 	 . 323
	9.11.4.8	gslc_ElemXKeyPadInputGet()		 	 	 . 323
	9.11.4.9	gslc_ElemXKeyPadTargetRef	Set()	 	 	 . 324
	9.11.4.10	gslc_ElemXKeyPadValGet() .		 	 	 . 324
	9.11.4.11	gslc_ElemXKeyPadValSet() .		 	 	 . 326
	9.11.4.12	gslc_ElemXKeyPadValSetCb()	 	 	 . 326
	9.11.4.13	gslc_XKeyPadCreateBase() .		 	 	 . 327
	9.11.4.14	gslc_XKeyPadDraw()		 	 	 . 327

9.11.4.15 gslc_XKeyPadDrawKey()	 328
9.11.4.16 gslc_XKeyPadDrawVirtualBtn()	 328
9.11.4.17 gslc_XKeyPadDrawVirtualTxt()	 329
9.11.4.18 gslc_XKeyPadFocusSetDefault()	 330
9.11.4.19 gslc_XKeyPadLayoutSet()	 330
9.11.4.20 gslc_XKeyPadLookupId()	 330
9.11.4.21 gslc_XKeyPadLookupSpecialId()	 331
9.11.4.22 gslc_XKeyPadPendRedrawAddKey()	 331
9.11.4.23 gslc_XKeyPadPendRedrawAddTxt()	 332
9.11.4.24 gslc_XKeyPadPendRedrawReset()	 332
9.11.4.25 gslc_XKeyPadRedrawUpdate()	 332
9.11.4.26 gslc_XKeyPadSizeAllGet()	 332
9.11.4.27 gslc_XKeyPadSizeGet()	 333
9.11.4.28 gslc_XKeyPadTouch()	 333
9.11.4.29 gslc_XKeyPadTrackSet()	 334
9.11.4.30 gslc_XKeyPadTxtAddCh()	 334
9.11.4.31 gslc_XKeyPadTxtAddStr()	 335
9.11.4.32 gslc_XKeyPadTxtDelCh()	 335
9.11.5 Variable Documentation	 336
9.11.5.1 RBIT_CTRL	 336
9.11.5.2 RBIT_KEYALL	 336
9.11.5.3 RBIT_KEYONE	 336
9.11.5.4 RBIT_TXT	 336
9.12 src/elem/XKeyPad_Alpha-setup.h File Reference	 336
9.12.1 Macro Definition Documentation	 338
9.12.1.1 XKEYPAD_COL_BASIC_FILL	 338
9.12.1.2 XKEYPAD_COL_BASIC_GLOW	 338
9.12.1.3 XKEYPAD_COL_DEF_FILL	 338
9.12.1.4 XKEYPAD_COL_DEF_FRAME	 338
9.12.1.5 XKEYPAD_COL_DEF_GLOW	 338

CONTENTS XXXV

	9.12.1.6 XKEYPAD_COL_DEF_TXT	339
	9.12.1.7 XKEYPAD_COL_DISABLE_FILL	339
	9.12.1.8 XKEYPAD_COL_DISABLE_TXT	339
	9.12.1.9 XKEYPAD_COL_ENTER_FILL	339
	9.12.1.10 XKEYPAD_COL_ENTER_GLOW	339
	9.12.1.11 XKEYPAD_COL_ESC_FILL	339
	9.12.1.12 XKEYPAD_COL_ESC_GLOW	339
	9.12.1.13 XKEYPAD_COL_SCROLL_L_FILL	339
	9.12.1.14 XKEYPAD_COL_SCROLL_L_GLOW	340
	9.12.1.15 XKEYPAD_COL_SCROLL_R_FILL	340
	9.12.1.16 XKEYPAD_COL_SCROLL_R_GLOW	340
	9.12.1.17 XKEYPAD_COL_SPACE_FILL	340
	9.12.1.18 XKEYPAD_COL_SPACE_GLOW	340
	9.12.1.19 XKEYPAD_COL_TEXT_FILL	340
	9.12.1.20 XKEYPAD_COL_TEXT_GLOW	340
	9.12.1.21 XKEYPAD_COL_TEXT_TXT	340
	9.12.1.22 XKEYPAD_DISP_MAX	341
	9.12.1.23 XKEYPAD_EXTEND_CHAR	341
	9.12.1.24 XKEYPAD_KEY_H	341
	9.12.1.25 XKEYPAD_KEY_W	341
	9.12.1.26 XKEYPAD_LABEL_MAX	341
	9.12.1.27 XKEYPAD_SPACING_X	341
	9.12.1.28 XKEYPAD_SPACING_Y	341
9.12.2	Enumeration Type Documentation	341
	9.12.2.1 gslc_teXKeyPadSel	341
9.12.3	Variable Documentation	342
	9.12.3.1 KEYPAD_LAYOUT	342
	9.12.3.2 KEYPAD_LAYOUTS	342
	9.12.3.3 KEYPAD_SET_LABEL	342
	9.12.3.4 KEYPAD_SPECIAL_LABEL	342

xxxvi CONTENTS

	9.12.3.5	KEYPAD_SPECIAL_SELECT	342
	9.12.3.6	XKEYPAD_LABEL_SPACE	343
	9.12.3.7	XKEYPAD_LAYOUT_DEFAULT	343
9.13 src/ele	em/XKeyPa	d_Alpha.c File Reference	343
9.13.1	Function	Documentation	344
	9.13.1.1	gslc_ElemXKeyPadBtnEvt_Alpha()	344
	9.13.1.2	gslc_ElemXKeyPadCfgInit_Alpha()	345
	9.13.1.3	gslc_ElemXKeyPadCreate_Alpha()	345
	9.13.1.4	gslc_ElemXKeyPadLabelGet_Alpha()	346
	9.13.1.5	gslc_ElemXKeyPadReset_Alpha()	346
	9.13.1.6	gslc_ElemXKeyPadStyleGet_Alpha()	346
	9.13.1.7	gslc_ElemXKeyPadTxtInit_Alpha()	347
9.13.2	Variable I	Documentation	348
	9.13.2.1	ERRSTR_NULL	348
	9.13.2.2	ERRSTR_PXD_NULL	348
9.14 src/ele	em/XKeyPa	d_Alpha.h File Reference	348
9.14.1	Function	Documentation	349
	9.14.1.1	gslc_ElemXKeyPadBtnEvt_Alpha()	350
	9.14.1.2	gslc_ElemXKeyPadCfgInit_Alpha()	350
	9.14.1.3	gslc_ElemXKeyPadCreate_Alpha()	350
	9.14.1.4	gslc_ElemXKeyPadLabelGet_Alpha()	351
	9.14.1.5	gslc_ElemXKeyPadReset_Alpha()	351
	9.14.1.6	gslc_ElemXKeyPadStyleGet_Alpha()	352
	9.14.1.7	gslc_ElemXKeyPadTxtInit_Alpha()	352
9.15 src/ele	em/XKeyPa	d_Num-setup.h File Reference	353
9.15.1	Macro De	efinition Documentation	355
	9.15.1.1	XKEYPAD_COL_BASIC_FILL	355
	9.15.1.2	XKEYPAD_COL_BASIC_GLOW	355
	9.15.1.3	XKEYPAD_COL_DECIMAL_FILL	355
	9.15.1.4	XKEYPAD_COL_DECIMAL_GLOW	355

CONTENTS xxxvii

	9.15.1.5 XKEYPAD_COL_DEF_FILL	356
	9.15.1.6 XKEYPAD_COL_DEF_FRAME	356
	9.15.1.7 XKEYPAD_COL_DEF_GLOW	356
	9.15.1.8 XKEYPAD_COL_DEF_TXT	356
	9.15.1.9 XKEYPAD_COL_DISABLE_FILL	356
	9.15.1.10 XKEYPAD_COL_DISABLE_TXT	356
	9.15.1.11 XKEYPAD_COL_ENTER_FILL	356
	9.15.1.12 XKEYPAD_COL_ENTER_GLOW	356
	9.15.1.13 XKEYPAD_COL_ESC_FILL	357
	9.15.1.14 XKEYPAD_COL_ESC_GLOW	357
	9.15.1.15 XKEYPAD_COL_MINUS_FILL	357
	9.15.1.16 XKEYPAD_COL_MINUS_GLOW	357
	9.15.1.17 XKEYPAD_COL_SCROLL_L_FILL	357
	9.15.1.18 XKEYPAD_COL_SCROLL_L_GLOW	357
	9.15.1.19 XKEYPAD_COL_SCROLL_R_FILL	357
	9.15.1.20 XKEYPAD_COL_SCROLL_R_GLOW	357
	9.15.1.21 XKEYPAD_COL_SPACE_FILL	358
	9.15.1.22 XKEYPAD_COL_SPACE_GLOW	358
	9.15.1.23 XKEYPAD_COL_TEXT_FILL	358
	9.15.1.24 XKEYPAD_COL_TEXT_GLOW	358
	9.15.1.25 XKEYPAD_COL_TEXT_TXT	358
	9.15.1.26 XKEYPAD_DISP_MAX	358
	9.15.1.27 XKEYPAD_EXTEND_CHAR	358
	9.15.1.28 XKEYPAD_KEY_H	358
	9.15.1.29 XKEYPAD_KEY_W	359
	9.15.1.30 XKEYPAD_LABEL_MAX	359
	9.15.1.31 XKEYPAD_SPACING_X	359
	9.15.1.32 XKEYPAD_SPACING_Y	359
9.15.2	Enumeration Type Documentation	359
	9.15.2.1 anonymous enum	359

xxxviii CONTENTS

	9.15.2.2	gslc_teXKeyPadSel	359
9.15.3	Variable	Documentation	360
	9.15.3.1	KEYPAD_LABEL_DECIMAL_PT	360
	9.15.3.2	KEYPAD_LABEL_NEGATIVE	360
	9.15.3.3	KEYPAD_LAYOUT	360
	9.15.3.4	KEYPAD_LAYOUTS	360
	9.15.3.5	KEYPAD_SET_LABEL	360
	9.15.3.6	KEYPAD_SPECIAL_LABEL	361
	9.15.3.7	XKEYPAD_LAYOUT_DEFAULT	361
9.16 src/ele	m/XKeyPa	d_Num.c File Reference	361
9.16.1	Function	Documentation	362
	9.16.1.1	gslc_ElemXKeyPadBtnEvt_Num()	362
	9.16.1.2	gslc_ElemXKeyPadCfgInit_Num()	363
	9.16.1.3	gslc_ElemXKeyPadCfgSetFloatEn_Num()	363
	9.16.1.4	gslc_ElemXKeyPadCfgSetSignEn_Num()	363
	9.16.1.5	gslc_ElemXKeyPadCreate_Num()	364
	9.16.1.6	gslc_ElemXKeyPadLabelGet_Num()	364
	9.16.1.7	gslc_ElemXKeyPadReset_Num()	365
	9.16.1.8	gslc_ElemXKeyPadStyleGet_Num()	365
	9.16.1.9	gslc_ElemXKeyPadTxtInit_Num()	366
	9.16.1.10	gslc_XKeyPadValSetSign_Num()	366
9.16.2	Variable	Documentation	367
	9.16.2.1	ERRSTR_NULL	367
	9.16.2.2	ERRSTR_PXD_NULL	367
9.17 src/ele	m/XKeyPa	ud_Num.h File Reference	367
9.17.1	Function	Documentation	368
	9.17.1.1	gslc_ElemXKeyPadBtnEvt_Num()	369
	9.17.1.2	gslc_ElemXKeyPadCfgInit_Num()	369
	9.17.1.3	gslc_ElemXKeyPadCfgSetFloatEn_Num()	369
	9.17.1.4	gslc_ElemXKeyPadCfgSetSignEn_Num()	370

CONTENTS xxxix

	9.17.1.5 gslc_ElemXKeyPadCreate_Num()
	9.17.1.6 gslc_ElemXKeyPadLabelGet_Num()
	9.17.1.7 gslc_ElemXKeyPadReset_Num()
	9.17.1.8 gslc_ElemXKeyPadStyleGet_Num()
	9.17.1.9 gslc_ElemXKeyPadTxtInit_Num()
9.18 src/ele	em/XListbox.c File Reference
9.18.1	Macro Definition Documentation
	9.18.1.1 XLISTBOX_MAX_STR
9.18.2	Function Documentation
	9.18.2.1 gslc_ElemXListboxAddItem()
	9.18.2.2 gslc_ElemXListboxCreate()
	9.18.2.3 gslc_ElemXListboxDeleteItemAt()
	9.18.2.4 gslc_ElemXListboxDraw()
	9.18.2.5 gslc_ElemXListboxGetItem()
	9.18.2.6 gslc_ElemXListboxGetItemAddr()
	9.18.2.7 gslc_ElemXListboxGetItemCnt()
	9.18.2.8 gslc_ElemXListboxGetSel()
	9.18.2.9 gslc_ElemXListboxInsertItemAt()
	9.18.2.10 gslc_ElemXListboxItemsSetGap()
	9.18.2.11 gslc_ElemXListboxItemsSetSize()
	9.18.2.12 gslc_ElemXListboxRecalcSize()
	9.18.2.13 gslc_ElemXListboxReset()
	9.18.2.14 gslc_ElemXListboxSetMargin()
	9.18.2.15 gslc_ElemXListboxSetScrollPos()
	9.18.2.16 gslc_ElemXListboxSetSel()
	9.18.2.17 gslc_ElemXListboxSetSelFunc()
	9.18.2.18 gslc_ElemXListboxSetSize()
	9.18.2.19 gslc_ElemXListboxTouch()
9.18.3	Variable Documentation
	9.18.3.1 ERRSTR_NULL

xI CONTENTS

		9.18.3.2	ER	RSTR_	_PXD)_NUI	LL .			 	 		 	 		 383
9.19	src/elei	m/XListbo	x.h F	ile Refe	erend	се.				 	 		 	 	 	 383
	9.19.1	Macro De	efiniti	ion Do	cume	entatio	on .			 	 		 	 	 	 385
		9.19.1.1	GS	LC_TY	'PEX	LIS1	ТВОХ			 	 		 	 	 	 385
		9.19.1.2	XLI	STBO	X_BL	JF_O	H_R			 	 		 	 	 	 385
		9.19.1.3	XLI	STBO	X_SE	EL_NO	SNE			 	 		 	 	 	 385
		9.19.1.4	XLI	STBO	X_SIZ	ZE_A	UTO			 	 		 	 	 	 386
	9.19.2	Typedef [Docu	menta	tion .					 	 		 	 	 	 386
		9.19.2.1	GS	LC_CE	3_XL	ISTB	OX_S	EL.		 	 		 	 	 	 386
	9.19.3	Function	Doc	umenta	ation					 	 		 	 	 	 386
		9.19.3.1	gslo	c_Elem	ıXLis	stbox A	AddIte	em()		 	 		 	 	 	 386
		9.19.3.2	gslo	c_Elem	ıXLis	tboxC	Create	e() .		 	 		 	 	 	 386
		9.19.3.3	gslo	c_Elem	ıXLis	tboxE)elete	eltem <i>P</i>	At()	 	 		 	 	 	 387
		9.19.3.4	gslo	c_Elem	าXLis	tboxE)raw())		 	 		 	 	 	 388
		9.19.3.5	gslo	c_Elem	าXLis	tboxG	3etIter	m() .		 	 		 	 	 	 388
		9.19.3.6	gslo	c_Elem	าXLis	tboxG	SetIter	mCnt	() .	 	 		 	 	 	 389
		9.19.3.7	gslo	c_Elem	าXLis	tboxG	3etSe	el() .		 	 		 	 	 	 389
		9.19.3.8	gslo	c_Elem	าXLis	tboxlr	nsertl	temA	t()	 	 		 	 	 	 389
		9.19.3.9	gslo	c_Elem	ıXLis	tboxlt	temsS	SetGa	p()	 	 		 	 	 	 390
		9.19.3.10	0 gslo	c_Elem	ıXLis	tboxlt	temsS	SetSiz	e()	 	 		 	 	 	 390
		9.19.3.11	1 gslo	c_Elem	ıXLis	tboxF	Reset(()		 	 		 	 	 	 391
		9.19.3.12	2 gslo	c_Elem	ıXLis	tboxS	SetMa	ırgin()		 	 		 	 	 	 391
		9.19.3.13	3 gslo	c_Elem	ıXLis	tboxS	SetScr	rollPo	s()	 	 		 	 	 	 392
		9.19.3.14	4 gslo	c_Elem	ıXLis	tboxS	SetSel	l() .		 	 		 	 	 	 392
		9.19.3.15	5 gslo	c_Elem	ıXLis	tboxS	SetSel	IFunc	() .	 	 		 	 	 	 392
		9.19.3.16	6 gslo	c_Elem	ıXLis	tboxS	SetSiz	ze() .		 	 		 	 	 	 393
		9.19.3.17	7 gslo	c_Elem	าXLis	tboxT	ouch(()		 	 		 	 	 	 393
9.20	src/elei	m/XProgre	ess.c	File Re	efere	nce				 	 		 	 	 	 394
	9.20.1	Function	Doc	umenta	ation					 	 		 	 	 	 395
		9.20.1.1	gslo	c_Elem	ıXPro	ogres	sCrea	ate()		 	 		 	 	 	 395

CONTENTS xli

		9.20.1.2	gslc_ElemXProgressDraw()	396
		9.20.1.3	gslc_ElemXProgressDrawHelp()	396
		9.20.1.4	gslc_ElemXProgressSetFlip()	397
		9.20.1.5	gslc_ElemXProgressSetGaugeCol()	397
		9.20.1.6	gslc_ElemXProgressSetVal()	398
	9.20.2	Variable I	Documentation	398
		9.20.2.1	ERRSTR_NULL	398
		9.20.2.2	ERRSTR_PXD_NULL	398
9.21	src/eler	m/XProgre	ess.h File Reference	398
	9.21.1	Macro De	efinition Documentation	399
		9.21.1.1	gslc_ElemXProgressCreate_P	400
		9.21.1.2	GSLC_TYPEX_PROGRESS	400
	9.21.2	Function	Documentation	400
		9.21.2.1	gslc_ElemXProgressCreate()	401
		9.21.2.2	gslc_ElemXProgressDraw()	401
		9.21.2.3	gslc_ElemXProgressDrawHelp()	402
		9.21.2.4	gslc_ElemXProgressSetFlip()	402
		9.21.2.5	gslc_ElemXProgressSetGaugeCol()	403
		9.21.2.6	gslc_ElemXProgressSetVal()	403
9.22	src/eler	m/XRadial	.c File Reference	404
	9.22.1	Function	Documentation	405
		9.22.1.1	gslc_ElemXRadialCreate()	405
		9.22.1.2	gslc_ElemXRadialDraw()	405
		9.22.1.3	gslc_ElemXRadialDrawRadial()	406
		9.22.1.4	gslc_ElemXRadialDrawRadialHelp()	406
		9.22.1.5	gslc_ElemXRadialSetFlip()	407
		9.22.1.6	gslc_ElemXRadialSetIndicator()	407
		9.22.1.7	gslc_ElemXRadialSetTicks()	408
		9.22.1.8	gslc_ElemXRadialSetVal()	408
	9,22.2	Variable I	Documentation	409

xlii CONTENTS

	9.22.2.1	ERRSTR_NULL	409
	9.22.2.2	ERRSTR_PXD_NULL	409
9.23 src/	elem/XRadia	ıl.h File Reference	409
9.23	3.1 Macro D	Definition Documentation	411
	9.23.1.1	gslc_ElemXRadialCreate_P	411
	9.23.1.2	GSLC_TYPEX_RADIAL	411
9.23	3.2 Function	Documentation	412
	9.23.2.1	gslc_ElemXRadialCreate()	412
	9.23.2.2	gslc_ElemXRadialDraw()	412
	9.23.2.3	gslc_ElemXRadialDrawRadial()	413
	9.23.2.4	gslc_ElemXRadialSetFlip()	413
	9.23.2.5	gslc_ElemXRadialSetIndicator()	414
	9.23.2.6	gslc_ElemXRadialSetTicks()	414
	9.23.2.7	gslc_ElemXRadialSetVal()	415
9.24 src/	elem/XRamp	o.c File Reference	415
9.24	1.1 Function	Documentation	416
	9.24.1.1	gslc_ElemXRampCreate()	416
	9.24.1.2	gslc_ElemXRampDraw()	417
	9.24.1.3	gslc_ElemXRampDrawHelp()	418
	9.24.1.4	gslc_ElemXRampSetVal()	418
9.24	1.2 Variable	Documentation	419
	9.24.2.1	ERRSTR_NULL	419
	9.24.2.2	ERRSTR_PXD_NULL	419
9.25 src/	elem/XRamp	o.h File Reference	419
9.2	5.1 Macro D	Definition Documentation	420
	9.25.1.1	gslc_ElemXRampCreate_P	420
	9.25.1.2	GSLC_TYPEX_RAMP	421
9.2	5.2 Function	Documentation	421
	9.25.2.1	gslc_ElemXRampCreate()	421
	9.25.2.2	gslc_ElemXRampDraw()	422

CONTENTS xliii

		9.25.2.3	gslc_ElemXRampDrawHelp()	422
		9.25.2.4	gslc_ElemXRampSetVal()	423
9.26	src/eler	m/XRingG	auge.c File Reference	423
	9.26.1	Function	Documentation	425
		9.26.1.1	gslc_ElemXRingGaugeCreate()	425
		9.26.1.2	gslc_ElemXRingGaugeDraw()	425
		9.26.1.3	gslc_ElemXRingGaugeSetAngleRange()	426
		9.26.1.4	gslc_ElemXRingGaugeSetColorActiveFlat()	427
		9.26.1.5	gslc_ElemXRingGaugeSetColorActiveGradient()	427
		9.26.1.6	gslc_ElemXRingGaugeSetColorInactive()	427
		9.26.1.7	gslc_ElemXRingGaugeSetQuality()	428
		9.26.1.8	gslc_ElemXRingGaugeSetThickness()	428
		9.26.1.9	gslc_ElemXRingGaugeSetVal()	429
		9.26.1.10	gslc_ElemXRingGaugeSetValRange()	430
	9.26.2	Variable I	Documentation	430
		9.26.2.1	ERRSTR_NULL	430
		9.26.2.2	ERRSTR_PXD_NULL	430
9.27	src/eler	m/XRingG	auge.h File Reference	431
	9.27.1	Macro De	efinition Documentation	432
		9.27.1.1	GSLC_TYPEX_RING	432
		9.27.1.2	XRING_STR_MAX	432
	9.27.2	Function	Documentation	432
		9.27.2.1	gslc_ElemXRingGaugeCreate()	432
		9.27.2.2	gslc_ElemXRingGaugeDraw()	433
		9.27.2.3	gslc_ElemXRingGaugeSetAngleRange()	433
		9.27.2.4	gslc_ElemXRingGaugeSetColorActiveFlat()	434
		9.27.2.5	gslc_ElemXRingGaugeSetColorActiveGradient()	435
		9.27.2.6	gslc_ElemXRingGaugeSetColorInactive()	435
		9.27.2.7	gslc_ElemXRingGaugeSetQuality()	436
		9.27.2.8	gslc_ElemXRingGaugeSetThickness()	436

XIIV CONTENTS

		9.27.2.9	gslc_ElemXRingGaugeSetVal()	 437
		9.27.2.10	gslc_ElemXRingGaugeSetValRange()	 437
9.28	src/eler	m/XSeekba	ar.c File Reference	 438
	9.28.1	Function I	Documentation	 439
		9.28.1.1	gslc_ElemXSeekbarCreate()	 439
		9.28.1.2	gslc_ElemXSeekbarDraw()	 440
		9.28.1.3	gslc_ElemXSeekbarGetPos()	 440
		9.28.1.4	gslc_ElemXSeekbarSetPos()	 440
		9.28.1.5	gslc_ElemXSeekbarSetPosFunc()	 441
		9.28.1.6	gslc_ElemXSeekbarSetStyle()	 441
		9.28.1.7	gslc_ElemXSeekbarTouch()	 442
	9.28.2	Variable [Documentation	 442
		9.28.2.1	ERRSTR_NULL	 443
		9.28.2.2	ERRSTR_PXD_NULL	 443
9.29	src/eler	m/XSeekba	ar.h File Reference	 443
	9.29.1	Macro De	efinition Documentation	 444
		9.29.1.1	gslc_ElemXSeekbarCreate_P	 445
		9.29.1.2	GSLC_TYPEX_SEEKBAR	 446
	9.29.2	Typedef D	Documentation	 446
		9.29.2.1	GSLC_CB_XSEEKBAR_POS	 446
	9.29.3	Function I	Documentation	 446
		9.29.3.1	gslc_ElemXSeekbarCreate()	 446
		9.29.3.2	gslc_ElemXSeekbarDraw()	 447
		9.29.3.3	gslc_ElemXSeekbarGetPos()	 448
		9.29.3.4	gslc_ElemXSeekbarSetPos()	 448
		9.29.3.5	gslc_ElemXSeekbarSetPosFunc()	 448
		9.29.3.6	gslc_ElemXSeekbarSetStyle()	 449
		9.29.3.7	gslc_ElemXSeekbarTouch()	 449
9.30	src/eler	m/XSelNun	m.c File Reference	 450
	9.30.1	Function I	Documentation	 451

CONTENTS xlv

		9.30.1.1	gslc_ElemXSelNumClick()	451
		9.30.1.2	gslc_ElemXSelNumCreate()	452
		9.30.1.3	gslc_ElemXSelNumDraw()	452
		9.30.1.4	gslc_ElemXSelNumGetCounter()	453
		9.30.1.5	gslc_ElemXSelNumSetCounter()	453
		9.30.1.6	gslc_ElemXSelNumTouch()	453
	9.30.2	Variable I	Documentation	454
		9.30.2.1	ERRSTR_NULL	454
		9.30.2.2	ERRSTR_PXD_NULL	454
		9.30.2.3	SELNUM_ID_BTN_DEC	454
		9.30.2.4	SELNUM_ID_BTN_INC	454
		9.30.2.5	SELNUM_ID_TXT	455
9.31	src/elei	m/XSelNu	m.h File Reference	455
	9.31.1	Macro De	efinition Documentation	456
		9.31.1.1	GSLC_TYPEX_SELNUM	456
		9.31.1.2	SELNUM_STR_LEN	456
	9.31.2	Function	Documentation	456
		9.31.2.1	gslc_ElemXSelNumClick()	456
		9.31.2.2	gslc_ElemXSelNumCreate()	457
		9.31.2.3	gslc_ElemXSelNumDraw()	457
		9.31.2.4	gslc_ElemXSelNumGetCounter()	458
		9.31.2.5	gslc_ElemXSelNumSetCounter()	458
		9.31.2.6	gslc_ElemXSelNumTouch()	459
9.32	src/elei	m/XSlider.	c File Reference	459
	9.32.1	Function	Documentation	460
		9.32.1.1	gslc_ElemXSliderCreate()	461
		9.32.1.2	gslc_ElemXSliderDraw()	461
		9.32.1.3	gslc_ElemXSliderGetPos()	462
		9.32.1.4	gslc_ElemXSliderSetPos()	462
		9.32.1.5	gslc_ElemXSliderSetPosFunc()	463

XIVI

		9.32.1.6	gslc_ElemXSliderSetSnapEn()	463
		9.32.1.7	gslc_ElemXSliderSetStyle()	463
		9.32.1.8	gslc_ElemXSliderTouch()	464
	9.32.2	Variable I	Documentation	465
		9.32.2.1	ERRSTR_NULL	465
		9.32.2.2	ERRSTR_PXD_NULL	465
9.33	src/eler	m/XSlider.l	h File Reference	465
	9.33.1	Macro De	efinition Documentation	466
		9.33.1.1	gslc_ElemXSliderCreate_P	467
		9.33.1.2	GSLC_TYPEX_SLIDER	467
	9.33.2	Typedef [Documentation	468
		9.33.2.1	GSLC_CB_XSLIDER_POS	468
	9.33.3	Function	Documentation	468
		9.33.3.1	gslc_ElemXSliderCreate()	468
		9.33.3.2	gslc_ElemXSliderDraw()	469
		9.33.3.3	gslc_ElemXSliderGetPos()	469
		9.33.3.4	gslc_ElemXSliderSetPos()	469
		9.33.3.5	gslc_ElemXSliderSetPosFunc()	470
		9.33.3.6	gslc_ElemXSliderSetSnapEn()	470
		9.33.3.7	gslc_ElemXSliderSetStyle()	471
		9.33.3.8	gslc_ElemXSliderTouch()	471
9.34	src/eler	m/XSpinne	er.c File Reference	472
	9.34.1	Detailed	Description	473
	9.34.2	Function	Documentation	473
		9.34.2.1	gslc_ElemXSpinnerCreate()	473
		9.34.2.2	gslc_ElemXSpinnerDraw()	474
		9.34.2.3	gslc_ElemXSpinnerGetCounter()	474
		9.34.2.4	gslc_ElemXSpinnerSetChars()	475
		9.34.2.5	gslc_ElemXSpinnerSetCounter()	475
		9.34.2.6	gslc_ElemXSpinnerTouch()	476

CONTENTS xlvii

		9.34.2.7	gslc_XSpinnerDrawVirtualBtn()	476
		9.34.2.8	gslc_XSpinnerDrawVirtualTxt()	477
		9.34.2.9	gslc_XSpinnerMapEvent()	477
	9.34.3	Variable I	Documentation	477
		9.34.3.1	ERRSTR_NULL	477
		9.34.3.2	ERRSTR_PXD_NULL	477
		9.34.3.3	SPINNER_ID_BTN_DEC	478
		9.34.3.4	SPINNER_ID_BTN_INC	478
		9.34.3.5	SPINNER_ID_TXT	478
9.35	src/eler	m/XSpinne	er.h File Reference	478
	9.35.1	Detailed	Description	479
	9.35.2	Macro De	efinition Documentation	479
		9.35.2.1	GSLC_TYPEX_SPINNER	479
		9.35.2.2	XSPINNER_CB_STATE_UPDATE	480
		9.35.2.3	XSPINNER_COMP_CNT	480
		9.35.2.4	XSPINNER_STR_LEN	480
	9.35.3	Function	Documentation	480
		9.35.3.1	gslc_ElemXSpinnerClick()	480
		9.35.3.2	gslc_ElemXSpinnerCreate()	481
		9.35.3.3	gslc_ElemXSpinnerDraw()	481
		9.35.3.4	gslc_ElemXSpinnerGetCounter()	482
		9.35.3.5	gslc_ElemXSpinnerSetChars()	482
		9.35.3.6	gslc_ElemXSpinnerSetCounter()	483
		9.35.3.7	gslc_ElemXSpinnerTouch()	483
9.36	src/eler	m/XTempla	ate.c File Reference	484
	9.36.1	Function	Documentation	484
		9.36.1.1	gslc_ElemXTemplateCreate()	485
		9.36.1.2	gslc_ElemXTemplateDraw()	485
		9.36.1.3	gslc_ElemXTemplateTouch()	486
	9.36.2	Variable I	Documentation	486

xlviii CONTENTS

		9.36.2.1	ERRSTR_NULL	486
		9.36.2.2	ERRSTR_PXD_NULL	486
9.37	src/eler	m/XTempla	ate.h File Reference	487
	9.37.1	Macro De	efinition Documentation	488
		9.37.1.1	GSLC_TYPEX_TEMPLATE	488
	9.37.2	Function	Documentation	488
		9.37.2.1	gslc_ElemXTemplateCreate()	488
		9.37.2.2	gslc_ElemXTemplateDraw()	488
		9.37.2.3	gslc_ElemXTemplateTouch()	489
9.38	src/eler	m/XTextbo	x.c File Reference	489
	9.38.1	Function	Documentation	490
		9.38.1.1	gslc_ElemXTextboxAdd()	491
		9.38.1.2	gslc_ElemXTextboxBufAdd()	491
		9.38.1.3	gslc_ElemXTextboxColReset()	491
		9.38.1.4	gslc_ElemXTextboxColSet()	492
		9.38.1.5	gslc_ElemXTextboxCreate()	492
		9.38.1.6	gslc_ElemXTextboxDraw()	493
		9.38.1.7	gslc_ElemXTextboxLineWrAdv()	493
		9.38.1.8	gslc_ElemXTextboxReset()	494
		9.38.1.9	gslc_ElemXTextboxScrollSet()	494
		9.38.1.10	gslc_ElemXTextboxWrapSet()	494
	9.38.2	Variable I	Documentation	495
		9.38.2.1	ERRSTR_NULL	495
		9.38.2.2	ERRSTR_PXD_NULL	495
9.39	src/eler	m/XTextbo	x.h File Reference	495
	9.39.1	Macro De	efinition Documentation	497
		9.39.1.1	GSLC_TYPEX_TEXTBOX	497
		9.39.1.2	GSLC_XTEXTBOX_CODE_COL_RESET	497
		9.39.1.3	GSLC_XTEXTBOX_CODE_COL_SET	497
		9.39.1.4	XTEXTBOX_REDRAW_ALL	497

CONTENTS xlix

		9.39.1.5	XTEXTBOX_REDRAW_NONE	497
	9.39.2	Function I	Documentation	497
		9.39.2.1	gslc_ElemXTextboxAdd()	497
		9.39.2.2	gslc_ElemXTextboxColReset()	498
		9.39.2.3	gslc_ElemXTextboxColSet()	498
		9.39.2.4	gslc_ElemXTextboxCreate()	499
		9.39.2.5	gslc_ElemXTextboxDraw()	499
		9.39.2.6	gslc_ElemXTextboxReset()	500
		9.39.2.7	gslc_ElemXTextboxScrollSet()	500
		9.39.2.8	gslc_ElemXTextboxWrapSet()	501
9.40	src/eler	m/XTogglel	otn.c File Reference	501
	9.40.1	Function I	Documentation	502
		9.40.1.1	gslc_ElemXTogglebtnCreate()	503
		9.40.1.2	gslc_ElemXTogglebtnDraw()	503
		9.40.1.3	gslc_ElemXTogglebtnDrawCircularHelp()	504
		9.40.1.4	gslc_ElemXTogglebtnDrawRectangularHelp()	504
		9.40.1.5	gslc_ElemXTogglebtnFindSelected()	504
		9.40.1.6	gslc_ElemXTogglebtnGetState()	505
		9.40.1.7	gslc_ElemXTogglebtnSetState()	505
		9.40.1.8	gslc_ElemXTogglebtnSetStateHelp()	505
		9.40.1.9	gslc_ElemXTogglebtnToggleState()	506
		9.40.1.10	gslc_ElemXTogglebtnTouch()	506
	9.40.2	Variable E	Documentation	506
		9.40.2.1	ERRSTR_NULL	507
		9.40.2.2	ERRSTR_PXD_NULL	507
9.41	src/eler	m/XTogglel	otn.h File Reference	507
	9.41.1	Macro De	finition Documentation	508
		9.41.1.1	gslc_ElemXTogglebtnCreate_P	508
		9.41.1.2	GSLC_TYPEX_TOGGLEBTN	509
	9.41.2	Function I	Documentation	509

I CONTENTS

		9.41.2.1	gslc_ElemXTogglebtnCreate()	509
		9.41.2.2	gslc_ElemXTogglebtnDraw()	510
		9.41.2.3	gslc_ElemXTogglebtnFindSelected()	510
		9.41.2.4	gslc_ElemXTogglebtnGetState()	512
		9.41.2.5	gslc_ElemXTogglebtnSetState()	512
		9.41.2.6	gslc_ElemXTogglebtnToggleState()	513
		9.41.2.7	gslc_ElemXTogglebtnTouch()	513
9.42	2 src/ele	m/XToggle	Imgbtn.c File Reference	514
	9.42.1	Function	Documentation	515
		9.42.1.1	gslc_ElemXToggleImgbtnCreate()	515
		9.42.1.2	gslc_ElemXToggleImgbtnDraw()	515
		9.42.1.3	gslc_ElemXToggleImgbtnFindSelected()	516
		9.42.1.4	gslc_ElemXToggleImgbtnGetState()	516
		9.42.1.5	gslc_ElemXToggleImgbtnSetState()	517
		9.42.1.6	gslc_ElemXToggleImgbtnSetStateHelp()	517
		9.42.1.7	gslc_ElemXToggleImgbtnToggleState()	517
		9.42.1.8	gslc_ElemXToggleImgbtnTouch()	518
	9.42.2	Variable I	Documentation	518
		9.42.2.1	ERRSTR_NULL	518
		9.42.2.2	ERRSTR_PXD_NULL	518
9.43	3 src/ele	m/XToggle	Imgbtn.h File Reference	519
	9.43.1	Macro De	efinition Documentation	520
		9.43.1.1	gslc_ElemXToggleImgbtnCreate_P	520
		9.43.1.2	GSLC_TYPEX_TOGGLEIMGBTN	521
	9.43.2	Function	Documentation	521
		9.43.2.1	gslc_ElemXToggleImgbtnCreate()	521
		9.43.2.2	gslc_ElemXToggleImgbtnDraw()	522
		9.43.2.3	gslc_ElemXToggleImgbtnFindSelected()	522
		9.43.2.4	gslc_ElemXToggleImgbtnGetState()	522
		9.43.2.5	gslc_ElemXToggleImgbtnSetState()	523

CONTENTS

	9.43.2.6	gslc_ElemXToggleImgbtnToggleState()	523
	9.43.2.7	gslc_ElemXToggleImgbtnTouch()	524
9.44 src/GL	JIslice.c File	e Reference	524
9.44.1	Enumera	tion Type Documentation	533
	9.44.1.1	gslc_teDebugPrintState	533
9.44.2	Function	Documentation	534
	9.44.2.1	gslc_DrawFillSectorBase()	534
	9.44.2.2	gslc_ElemCanFocus()	534
	9.44.2.3	gslc_ElemGetEditEn()	534
	9.44.2.4	gslc_FontSetBase()	534
	9.44.2.5	gslc_ImgRefEqual()	535
	9.44.2.6	gslc_OrderCoord()	535
	9.44.2.7	gslc_SwapCoords()	535
9.44.3	Variable I	Documentation	535
	9.44.3.1	ERRSTR_NULL	535
	9.44.3.2	ERRSTR_PXD_NULL	535
	9.44.3.3	g_pfDebugOut	535
	9.44.3.4	m_nLUTSinF0X16	536
9.45 src/GL	JIslice.h Fil	e Reference	536
9.45.1	Macro De	efinition Documentation	551
	9.45.1.1	GSLC_2PI	551
	9.45.1.2	GSLC_ALIGN_BOT_LEFT	551
	9.45.1.3	GSLC_ALIGN_BOT_MID	551
	9.45.1.4	GSLC_ALIGN_BOT_RIGHT	552
	9.45.1.5	GSLC_ALIGN_MID_LEFT	552
	9.45.1.6	GSLC_ALIGN_MID_MID	552
	9.45.1.7	GSLC_ALIGN_MID_RIGHT	552
	9.45.1.8	GSLC_ALIGN_TOP_LEFT	552
	9.45.1.9	GSLC_ALIGN_TOP_MID	552
	9.45.1.10	GSLC_ALIGN_TOP_RIGHT	553

lii CONTENTS

9.45.1.11 GSLC_ALIGNH_LEFT	553
9.45.1.12 GSLC_ALIGNH_MID	553
9.45.1.13 GSLC_ALIGNH_RIGHT	553
9.45.1.14 GSLC_ALIGNV_BOT	553
9.45.1.15 GSLC_ALIGNV_MID	553
9.45.1.16 GSLC_ALIGNV_TOP	554
9.45.1.17 GSLC_COL_BLACK	554
9.45.1.18 GSLC_COL_BLUE	554
9.45.1.19 GSLC_COL_BLUE_DK1	554
9.45.1.20 GSLC_COL_BLUE_DK2	554
9.45.1.21 GSLC_COL_BLUE_DK3	554
9.45.1.22 GSLC_COL_BLUE_DK4	555
9.45.1.23 GSLC_COL_BLUE_LT1	555
9.45.1.24 GSLC_COL_BLUE_LT2	555
9.45.1.25 GSLC_COL_BLUE_LT3	555
9.45.1.26 GSLC_COL_BLUE_LT4	555
9.45.1.27 GSLC_COL_BROWN	555
9.45.1.28 GSLC_COL_CYAN	556
9.45.1.29 GSLC_COL_GRAY	556
9.45.1.30 GSLC_COL_GRAY_DK1	556
9.45.1.31 GSLC_COL_GRAY_DK2	556
9.45.1.32 GSLC_COL_GRAY_DK3	556
9.45.1.33 GSLC_COL_GRAY_DK4	556
9.45.1.34 GSLC_COL_GRAY_LT1	557
9.45.1.35 GSLC_COL_GRAY_LT2	557
9.45.1.36 GSLC_COL_GRAY_LT3	557
9.45.1.37 GSLC_COL_GRAY_LT4	557
9.45.1.38 GSLC_COL_GREEN	557
9.45.1.39 GSLC_COL_GREEN_DK1	557
9.45.1.40 GSLC_COL_GREEN_DK2	558

CONTENTS

9.45.1.41 GSLC_COL_GREEN_DK3	558
9.45.1.42 GSLC_COL_GREEN_DK4	558
9.45.1.43 GSLC_COL_GREEN_LT1	558
9.45.1.44 GSLC_COL_GREEN_LT2	558
9.45.1.45 GSLC_COL_GREEN_LT3	558
9.45.1.46 GSLC_COL_GREEN_LT4	559
9.45.1.47 GSLC_COL_MAGENTA	559
9.45.1.48 GSLC_COL_ORANGE	559
9.45.1.49 GSLC_COL_PURPLE	559
9.45.1.50 GSLC_COL_RED	559
9.45.1.51 GSLC_COL_RED_DK1	559
9.45.1.52 GSLC_COL_RED_DK2	560
9.45.1.53 GSLC_COL_RED_DK3	560
9.45.1.54 GSLC_COL_RED_DK4	560
9.45.1.55 GSLC_COL_RED_LT1	560
9.45.1.56 GSLC_COL_RED_LT2	560
9.45.1.57 GSLC_COL_RED_LT3	560
9.45.1.58 GSLC_COL_RED_LT4	561
9.45.1.59 GSLC_COL_TEAL	561
9.45.1.60 GSLC_COL_WHITE	561
9.45.1.61 GSLC_COL_YELLOW	561
9.45.1.62 GSLC_COL_YELLOW_DK	561
9.45.1.63 GSLC_COLMONO_BLACK	561
9.45.1.64 GSLC_COLMONO_WHITE	562
9.45.1.65 GSLC_ELEM_FEA_CLICK_EN	562
9.45.1.66 GSLC_ELEM_FEA_EDIT_EN	562
9.45.1.67 GSLC_ELEM_FEA_FILL_EN	562
9.45.1.68 GSLC_ELEM_FEA_FOCUS_EN	562
9.45.1.69 GSLC_ELEM_FEA_FRAME_EN	562
9.45.1.70 GSLC_ELEM_FEA_GLOW_EN	563

liv CONTENTS

	9.45.1.71	1 GS	LC_I	ELEM	_FE/	A_NC	NE					 	 	 	 -	 	563
	9.45.1.72	2 GS	LC_I	ELEM	_FE/	A_NC	SHF	RINK				 	 	 		 	563
	9.45.1.73	3 GS	LC_I	ELEM	_FE/	A_RC	UNI	D_EN	١.			 	 	 		 	563
	9.45.1.74	4 GS	LC_I	ELEM	_FE/	A_VA	LID					 	 	 		 	563
	9.45.1.75	5 GS	LC_I	ELEM	REF	_DEF	AUL	Ι.				 	 	 		 	563
	9.45.1.76	6 GS	LC_I	FEAT	URE	_FOC	DUS_	_ON_	TO	UCI	Η.	 	 	 		 	564
	9.45.1.77	7 GS	LC_I	MAX								 	 	 		 	564
	9.45.1.78	8 GS	LC_I	MIN .								 	 	 		 	564
	9.45.1.79	9 GS	LC_I	PMEN	1.							 	 	 		 	564
9.45.2	Typedef [Doci	ımen	ıtation	l . .							 	 	 		 	564
	9.45.2.1	GS	LC_	CB_D	EBU	G_OI	UT .					 	 	 		 	564
	9.45.2.2	GS	LC_	CB_D	RAW	<i>I</i>						 	 	 		 	564
	9.45.2.3	GS	LC_	CB_E	VEN [®]	Т.						 	 	 		 	565
	9.45.2.4	GS	LC_	CB_IN	1PUT	Γ						 	 	 		 	565
	9.45.2.5	GS	LC_	CB_P	IN_P	OLL						 	 	 		 	565
	9.45.2.6	GS	LC_	CB_T	ICK							 	 	 		 	565
	9.45.2.7	GS	LC_	CB_T	OUC	Н.						 	 	 		 	565
	9.45.2.8	gsl	c_ts(Color								 	 	 		 	565
	9.45.2.9	gsl	c_tsE	Elem								 	 	 		 	566
	9.45.2.10	0 gsl	c_tsE	Event								 	 	 		 	566
	9.45.2.11	1 gsl	c_tsE	Event⊺	Fouch	ı						 	 	 		 	566
	9.45.2.12	2 gsl	c_tsF	Pt								 	 	 		 	566
	9.45.2.13	3 gsl	c_tsF	Rect .								 	 	 		 	566
	9.45.2.14	4 gsl	c_tsF	RectSt	tate							 	 	 		 	567
9.45.3	Enumera	ation	Type	Docu	ımen	tation	١					 	 	 		 	567
	9.45.3.1	gsl	c_te/	Action								 	 	 		 	567
	9.45.3.2	gsl	c_tel	Elemi	d							 	 	 		 	567
	9.45.3.3	gsl	c_tel	Elemlr	nd.							 	 	 		 	568
	9.45.3.4	gsl	c_tel	ElemF	?efFla	ags						 	 	 		 	568
	9.45.3.5	gsl	c_tel	Events	SubT	ype						 	 	 		 	569

CONTENTS

		9.45.3.6	gslc_	_teEven	it type			٠.		• •	 ٠.	 	• • •	 	٠.	 569
		9.45.3.7	gslc_	_teFontl	ld						 	 		 		 569
		9.45.3.8	gslc_	_teFontI	RefMo	de .					 	 		 		 570
		9.45.3.9	gslc_	_teFontI	RefTyp	e .					 	 		 		 570
		9.45.3.10	gslc_	_teGrou	ıpld .						 	 		 		 571
		9.45.3.11	gslc_	_telmgF	RefFlag	gs .					 	 		 		 571
		9.45.3.12	gslc_	_teInitSt	tat .						 	 		 		 571
		9.45.3.13	gslc_	_teInput	tMode						 	 		 		 572
		9.45.3.14	l gslc_	_teInput	lRawE	vent					 	 		 		 572
		9.45.3.15	gslc_	_tePage	eld .						 	 		 		 572
		9.45.3.16	gslc_	_tePin							 	 		 		 573
		9.45.3.17	gslc_	_teRedr	·awTyp	e .					 	 		 		 573
		9.45.3.18	gslc_	_teStacl	kPage						 	 		 		 574
		9.45.3.19	gslc_	_teTouc	h						 	 		 		 574
		9.45.3.20	gslc_	_teTxtFl	lags						 	 		 		 574
		9.45.3.21	gslc_	_teType	Core						 	 		 		 575
9	9.45.4	Variable I	Docun	nentatic	on .						 	 		 		 575
		9.45.4.1	g_pf	DebugC	Out .						 	 		 		 576
9.46 s	src/GU	Islice_con	fig.h F	ile Refe	erence						 	 		 		 576
9.47 s	src/GU	Islice_drv.	h File	Refere	nce.						 	 		 		 576
9.48 s	src/GU	lslice_drv_	_adag	fx.cpp F	File Re	eferen	ice .				 	 		 		 576
9.49 s	src/GU	lslice_drv_	_adag	fx.h File	e Refe	rence					 	 		 		 577
9	9.49.1	Detailed I	Descr	iption							 	 		 		 579
9	9.49.2	Macro De	efinitio	n Docu	menta	tion					 	 		 		 579
		9.49.2.1	DRV	_HAS_	DRAW	V_BM	IP_M	EM			 	 		 		 580
		9.49.2.2	DRV	_HAS_	DRAW	V_CIF	RCLE	_FILI	L		 	 		 		 580
		9.49.2.3	DRV	_HAS_	DRAW	V_CIF	RCLE	_FR/	AME		 	 		 		 580
		9.49.2.4	DRV	_HAS_	DRAW	V_LIN	IE .				 	 		 		 580
		9.49.2.5	DRV	_HAS_	DRAW	V_PO	INT				 	 		 		 580
		9.49.2.6	DRV	_HAS_	DRAW	V_PO	INTS	. .			 	 		 		 580

Ivi CONTENTS

	9.49.2.7	DRV_HAS_DRAW_RECT_FILL	 581
	9.49.2.8	DRV_HAS_DRAW_RECT_FRAME	 581
	9.49.2.9	DRV_HAS_DRAW_RECT_ROUND_FILL	 581
	9.49.2.10	DRV_HAS_DRAW_RECT_ROUND_FRAME	 581
	9.49.2.11	DRV_HAS_DRAW_TEXT	 581
	9.49.2.12	2 DRV_HAS_DRAW_TRI_FILL	 581
	9.49.2.13	B DRV_HAS_DRAW_TRI_FRAME	 582
	9.49.2.14	DRV_OVERRIDE_TXT_ALIGN	 582
9.49.3	Function	Documentation	 582
	9.49.3.1	gslc_DrvAdaptColorToRaw()	 582
	9.49.3.2	gslc_DrvDestruct()	 582
	9.49.3.3	gslc_DrvDrawBkgnd()	 583
	9.49.3.4	gslc_DrvDrawBmp24FromMem()	 583
	9.49.3.5	gslc_DrvDrawBmp24FromSD()	 584
	9.49.3.6	gslc_DrvDrawFillCircle()	 584
	9.49.3.7	gslc_DrvDrawFillRect()	 585
	9.49.3.8	gslc_DrvDrawFillRoundRect()	 585
	9.49.3.9	gslc_DrvDrawFillTriangle()	 585
	9.49.3.10	gslc_DrvDrawFrameCircle()	 586
	9.49.3.11	gslc_DrvDrawFrameRect()	 587
	9.49.3.12	2 gslc_DrvDrawFrameRoundRect()	 587
	9.49.3.13	B gslc_DrvDrawFrameTriangle()	 587
	9.49.3.14	gslc_DrvDrawImage()	 588
	9.49.3.15	5 gslc_DrvDrawLine()	 589
	9.49.3.16	6 gslc_DrvDrawMonoFromMem()	 589
	9.49.3.17	gslc_DrvDrawPoint()	 590
	9.49.3.18	B gslc_DrvDrawPoints()	 590
	9.49.3.19	9 gslc_DrvDrawTxt()	 591
	9.49.3.20	gslc_DrvFontAdd()	 591
	9.49.3.21	gslc_DrvFontsDestruct()	 592

CONTENTS

verDisp()	9.49.3.22
verTouch()	9.49.3.23
neDisp()	9.49.3.24
neTouch()	9.49.3.25
ch()	9.49.3.26
Size()	9.49.3.27
Destruct()	9.49.3.28
	9.49.3.29
ch() 596	9.49.3.30
	9.49.3.31
age()	9.49.3.32
pNow()	9.49.3.33
)	9.49.3.34
ndColor()	9.49.3.35
ndImage()	9.49.3.36
Rect()	9.49.3.37
mlmageGlow()	9.49.3.38
mlmageNorm()	9.49.3.39
Reference	9.50 src/GUIslice_drv_
eference	9.51 src/GUIslice_drv_
	9.51.1 Detailed [
tation	9.51.2 Macro De
W_BMP_MEM	9.51.2.1
W_CIRCLE_FILL	9.51.2.2
W_CIRCLE_FRAME	9.51.2.3
W_LINE	9.51.2.4
W_POINT 604	9.51.2.5
W_POINTS	9.51.2.6
W_RECT_FILL	9.51.2.7
W_RECT_FRAME 604	9.51.2.8

Iviii CONTENTS

9.51.2.9	D	RV	/_H	IAS	_DR	łΑV	V_ F	REC	CT_	RO	UN	D_	FIL	L.															605
9.51.2.10) D	RV	/_H	IAS	_DR	۱A۷	V_ F	REC	CT_	RO	UN	D_	FR	ΑN	1E														605
9.51.2.11	1 D	RV	/_H	IAS	_DR	۱A۷	٧_٦	ТЕХ	T																				605
9.51.2.12	2 D	RV	/_H	IAS	_DR	۱A۷	\ _7	TRI_	_FII	LL																			605
9.51.2.13	3 D	RV	<u>/_</u> H	IAS	_DR	۱A۷	N _7	TRI	_FF	RAN	1E						-												605
9.51.2.14	4 D	RV	/_C	VE	RRII	DE	_T	XT_	_AL	.IGN	۱.																		605
Function I	Do	ocu	me	ntat	tion												-												606
9.51.3.1	g	slc_	_Dr	rvAc	dapt	Col	lor [¬]	ToR	aw	() .							-												606
9.51.3.2	g	slc_	_Dr	rvDe	estru	uct(() .																						606
9.51.3.3	g	slc_	_Dr	rvDı	rawE	3kg	ınd	() .									-												606
9.51.3.4	g	slc_	_Dr	rvDı	rawE	3mp	p24	4Fro	om l	Лeп	า()																		607
9.51.3.5	g	slc_	_Dr	rvDı	rawF	FillC	Sirc	ole()	٠.																				607
9.51.3.6	g	slc_	_Dr	rvDı	rawF	FillF	Rec	ot()																					608
9.51.3.7	g	slc_	_Dr	rvDı	rawF	FillF	₹οι	ındl	Rec	ct()																			608
9.51.3.8	g	slc_	_Dr	rvDı	rawF	FillT	Гria	ıngle	e()																				609
9.51.3.9	g	slc_	_Dr	rvDı	rawF	- rar	me	Circ	cle()) .																			609
9.51.3.10) g:	slc_	_Dr	rvDı	rawF	- rar	me	Rec	ct()																				610
9.51.3.11	l g	slc_	_Dr	rvDı	rawF	- rar	me	Rou	und	Red	ct()																		610
9.51.3.12	2 g:	slc_	_Dr	rvDı	rawF	- rar	me ⁻	Tria	ngl	e()							-												611
9.51.3.13	3 g:	slc_	_Dr	rvDı	rawlı	ma	ıge(() .																					611
9.51.3.14	4 g:	slc_	_Dr	rvDı	rawL	_ine	∋()																						612
9.51.3.15	5 g:	slc_	_Dr	rvDı	r awl	Nor	noF	-ron	nMe	em() .																		612
9.51.3.16	6 g:	slc_	_Dr	rvDı	rawF	oir	nt()	١									-												613
9.51.3.17	7 g:	slc_	_Dr	rvDı	rawF	oir	nts(() .																					613
9.51.3.18	3 g:	slc_	_Dr	rvDı	rawT	Γxt(() .																						614
9.51.3.19	9 g:	slc_	_Dr	rvDı	rawT	Γ xt /	Alig	յո()																					614
9.51.3.20) g:	slc_	_Dr	rvFc	ontA	dd(() .																						615
9.51.3.21	l g:	slc_	_Dr	rvFc	ontsl	Des	stru	uct()) .																				615
9.51.3.22	2 g:	slc_	_Dr	r vG	etDr	ive	rDi	isp()) .																				616
9.51.3.23	3 g:	slc_	_Dr	rvG	etDr	ive	rTo	ouch	1()																				616
	9.51.2.10 9.51.2.12 9.51.2.13 9.51.2.14 Function 9.51.3.1 9.51.3.2 9.51.3.3 9.51.3.4 9.51.3.5 9.51.3.6 9.51.3.7 9.51.3.10 9.51.3.12 9.51.3.12 9.51.3.13 9.51.3.13 9.51.3.14 9.51.3.15 9.51.3.15 9.51.3.16 9.51.3.16 9.51.3.16	9.51.2.10 E 9.51.2.11 E 9.51.2.13 E 9.51.2.14 E Function D 9.51.3.1 g 9.51.3.2 g 9.51.3.4 g 9.51.3.5 g 9.51.3.6 g 9.51.3.7 g 9.51.3.10 g 9.51.3.10 g 9.51.3.11 g 9.51.3.12 g 9.51.3.13 g 9.51.3.14 g 9.51.3.15 g 9.51.3.15 g 9.51.3.16 g 9.51.3.17 g 9.51.3.16 g 9.51.3.17 g 9.51.3.18 g 9.51.3.19 g 9.51.3.19 g 9.51.3.20 g 9.51.3.21 g	9.51.2.10 DRV 9.51.2.11 DRV 9.51.2.12 DRV 9.51.2.13 DRV 9.51.2.14 DRV 9.51.3.1 gslc 9.51.3.2 gslc 9.51.3.3 gslc 9.51.3.4 gslc 9.51.3.5 gslc 9.51.3.6 gslc 9.51.3.1 gslc	9.51.2.10 DRV_H 9.51.2.11 DRV_H 9.51.2.12 DRV_H 9.51.2.13 DRV_H 9.51.2.14 DRV_C Function Docume 9.51.3.1 gslc_Di 9.51.3.2 gslc_Di 9.51.3.4 gslc_Di 9.51.3.5 gslc_Di 9.51.3.6 gslc_Di 9.51.3.7 gslc_Di 9.51.3.8 gslc_Di 9.51.3.9 gslc_Di 9.51.3.10 gslc_Di 9.51.3.11 gslc_Di 9.51.3.12 gslc_Di 9.51.3.13 gslc_Di 9.51.3.14 gslc_Di 9.51.3.15 gslc_Di 9.51.3.15 gslc_Di 9.51.3.16 gslc_Di 9.51.3.17 gslc_Di 9.51.3.18 gslc_Di 9.51.3.19 gslc_Di 9.51.3.20 gslc_Di 9.51.3.22 gslc_Di 9.51.3.22 gslc_Di 9.51.3.22 gslc_Di	9.51.2.10 DRV_HAS 9.51.2.11 DRV_HAS 9.51.2.12 DRV_HAS 9.51.2.13 DRV_HAS 9.51.2.14 DRV_OVE Function Documentat 9.51.3.1 gslc_DrvDt 9.51.3.2 gslc_DrvDt 9.51.3.5 gslc_DrvDt 9.51.3.6 gslc_DrvDt 9.51.3.7 gslc_DrvDt 9.51.3.9 gslc_DrvDt 9.51.3.10 gslc_DrvDt 9.51.3.11 gslc_DrvDt 9.51.3.12 gslc_DrvDt 9.51.3.13 gslc_DrvDt 9.51.3.14 gslc_DrvDt 9.51.3.15 gslc_DrvDt 9.51.3.17 gslc_DrvDt 9.51.3.18 gslc_DrvDt 9.51.3.19 gslc_DrvDt 9.51.3.19 gslc_DrvDt 9.51.3.19 gslc_DrvDt 9.51.3.19 gslc_DrvDt 9.51.3.20 gslc_DrvDt 9.51.3.21 gslc_DrvDt 9.51.3.22 gslc_DrvDt	9.51.2.10 DRV_HAS_DR 9.51.2.11 DRV_HAS_DR 9.51.2.12 DRV_HAS_DR 9.51.2.13 DRV_HAS_DR 9.51.2.14 DRV_OVERRI Function Documentation 9.51.3.1 gslc_DrvDestr 9.51.3.2 gslc_DrvDrawE 9.51.3.4 gslc_DrvDrawE 9.51.3.5 gslc_DrvDrawE 9.51.3.6 gslc_DrvDrawE 9.51.3.7 gslc_DrvDrawE 9.51.3.9 gslc_DrvDrawE 9.51.3.10 gslc_DrvDrawE 9.51.3.11 gslc_DrvDrawE 9.51.3.12 gslc_DrvDrawE 9.51.3.13 gslc_DrvDrawE 9.51.3.14 gslc_DrvDrawE 9.51.3.15 gslc_DrvDrawE 9.51.3.15 gslc_DrvDrawE 9.51.3.16 gslc_DrvDrawE 9.51.3.17 gslc_DrvDrawE 9.51.3.18 gslc_DrvDrawE 9.51.3.19 gslc_DrvDrawE 9.51.3.19 gslc_DrvDrawE 9.51.3.20 gslc_DrvDrawE 9.51.3.21 gslc_DrvDrawE 9.51.3.22 gslc_DrvFontsl 9.51.3.22 gslc_DrvFontsl 9.51.3.22 gslc_DrvGetDr	9.51.2.10 DRV_HAS_DRAW 9.51.2.11 DRV_HAS_DRAW 9.51.2.12 DRV_HAS_DRAW 9.51.2.13 DRV_HAS_DRAW 9.51.2.14 DRV_OVERRIDE Function Documentation . 9.51.3.1 gslc_DrvAdaptCo 9.51.3.2 gslc_DrvDrawBkg 9.51.3.3 gslc_DrvDrawBkg 9.51.3.4 gslc_DrvDrawFill 9.51.3.5 gslc_DrvDrawFill 9.51.3.6 gslc_DrvDrawFill 9.51.3.7 gslc_DrvDrawFill 9.51.3.9 gslc_DrvDrawFram 9.51.3.10 gslc_DrvDrawFram 9.51.3.11 gslc_DrvDrawFram 9.51.3.12 gslc_DrvDrawFram 9.51.3.13 gslc_DrvDrawFram 9.51.3.14 gslc_DrvDrawFram 9.51.3.15 gslc_DrvDrawFram 9.51.3.16 gslc_DrvDrawHom 9.51.3.17 gslc_DrvDrawPoin 9.51.3.18 gslc_DrvDrawPoin 9.51.3.19 gslc_DrvDrawPoin 9.51.3.19 gslc_DrvDrawTxt 9.51.3.20 gslc_DrvDrawTxt 9.51.3.21 gslc_DrvDrawTxt 9.51.3.22 gslc_DrvFontsDes	9.51.2.10 DRV_HAS_DRAW_I 9.51.2.11 DRV_HAS_DRAW_I 9.51.2.12 DRV_HAS_DRAW_I 9.51.2.13 DRV_HAS_DRAW_I 9.51.2.14 DRV_OVERRIDE_T Function Documentation 9.51.3.1 gslc_DrvAdaptColor 9.51.3.2 gslc_DrvDrawBkgnd 9.51.3.4 gslc_DrvDrawBmp24 9.51.3.5 gslc_DrvDrawFillCirc 9.51.3.6 gslc_DrvDrawFillRoc 9.51.3.7 gslc_DrvDrawFillRoc 9.51.3.9 gslc_DrvDrawFillRoc 9.51.3.9 gslc_DrvDrawFrame 9.51.3.10 gslc_DrvDrawFrame 9.51.3.11 gslc_DrvDrawFrame 9.51.3.12 gslc_DrvDrawFrame 9.51.3.13 gslc_DrvDrawFrame 9.51.3.14 gslc_DrvDrawFrame 9.51.3.15 gslc_DrvDrawLine() 9.51.3.16 gslc_DrvDrawLoop 9.51.3.17 gslc_DrvDrawPoint() 9.51.3.18 gslc_DrvDrawPoints 9.51.3.19 gslc_DrvDrawTxtAlig 9.51.3.20 gslc_DrvDrawTxtAlig 9.51.3.21 gslc_DrvFontsDestru 9.51.3.21 gslc_DrvFontsDestru 9.51.3.22 gslc_DrvFontsDestru 9.51.3.22 gslc_DrvFontsDestru 9.51.3.22 gslc_DrvGetDriverDi	9.51.2.10 DRV_HAS_DRAW_REG 9.51.2.11 DRV_HAS_DRAW_TEX 9.51.2.12 DRV_HAS_DRAW_TRI 9.51.2.13 DRV_HAS_DRAW_TRI 9.51.2.14 DRV_OVERRIDE_TXT_ Function Documentation 9.51.3.1 gslc_DrvAdaptColorToR 9.51.3.2 gslc_DrvDrawBkgnd() 9.51.3.3 gslc_DrvDrawBkgnd() 9.51.3.4 gslc_DrvDrawFillCircle() 9.51.3.5 gslc_DrvDrawFillCircle() 9.51.3.6 gslc_DrvDrawFillRect() 9.51.3.7 gslc_DrvDrawFillRoundl 9.51.3.8 gslc_DrvDrawFillTriangle 9.51.3.9 gslc_DrvDrawFrameCirc 9.51.3.10 gslc_DrvDrawFrameRec 9.51.3.11 gslc_DrvDrawFrameRec 9.51.3.12 gslc_DrvDrawFrameRec 9.51.3.13 gslc_DrvDrawFrameRec 9.51.3.14 gslc_DrvDrawImage() 9.51.3.15 gslc_DrvDrawLine() 9.51.3.16 gslc_DrvDrawPoint() 9.51.3.17 gslc_DrvDrawPoint() 9.51.3.18 gslc_DrvDrawTxtAlign() 9.51.3.20 gslc_DrvDrawTxtAlign() 9.51.3.21 gslc_DrvFontsDestruct() 9.51.3.22 gslc_DrvGetDriverDisp()	9.51.2.10 DRV_HAS_DRAW_RECT_ 9.51.2.11 DRV_HAS_DRAW_TEXT 9.51.2.12 DRV_HAS_DRAW_TRI_FI 9.51.2.13 DRV_HAS_DRAW_TRI_FI 9.51.2.14 DRV_OVERRIDE_TXT_AL Function Documentation 9.51.3.1 gslc_DrvAdaptColorToRaw 9.51.3.2 gslc_DrvDrawBkgnd() 9.51.3.3 gslc_DrvDrawBkgnd() 9.51.3.4 gslc_DrvDrawFillCircle() 9.51.3.5 gslc_DrvDrawFillRect() 9.51.3.6 gslc_DrvDrawFillRoundRect 9.51.3.7 gslc_DrvDrawFillRoundRect 9.51.3.8 gslc_DrvDrawFillRoundRect 9.51.3.9 gslc_DrvDrawFrameCircle() 9.51.3.10 gslc_DrvDrawFrameRect() 9.51.3.11 gslc_DrvDrawFrameRound 9.51.3.12 gslc_DrvDrawFrameRound 9.51.3.13 gslc_DrvDrawFrameTriangl 9.51.3.14 gslc_DrvDrawLine() 9.51.3.15 gslc_DrvDrawHonoFromMonoFr	9.51.2.10 DRV_HAS_DRAW_RECT_RO 9.51.2.11 DRV_HAS_DRAW_TEXT 9.51.2.12 DRV_HAS_DRAW_TRI_FILL 9.51.2.13 DRV_HAS_DRAW_TRI_FRAM 9.51.2.14 DRV_OVERRIDE_TXT_ALIGN Function Documentation	9.51.2.10 DRV_HAS_DRAW_RECT_ROUN 9.51.2.11 DRV_HAS_DRAW_TEXT 9.51.2.12 DRV_HAS_DRAW_TRI_FILL 9.51.2.13 DRV_HAS_DRAW_TRI_FRAME 9.51.2.14 DRV_OVERRIDE_TXT_ALIGN . Function Documentation 9.51.3.1 gslc_DrvAdaptColorToRaw() 9.51.3.2 gslc_DrvDestruct()	9.51.2.10 DRV_HAS_DRAW_RECT_ROUND_ 9.51.2.11 DRV_HAS_DRAW_TEXT	9.51.2.10 DRV_HAS_DRAW_RECT_ROUND_FR 9.51.2.11 DRV_HAS_DRAW_TEXT	9.51.2.10 DRV_HAS_DRAW_RECT_ROUND_FRAM 9.51.2.11 DRV_HAS_DRAW_TEXT 9.51.2.12 DRV_HAS_DRAW_TRI_FILL 9.51.2.13 DRV_HAS_DRAW_TRI_FRAME 9.51.2.14 DRV_OVERRIDE_TXT_ALIGN 9.51.3.1 gslc_DrvAdaptColorToRaw() 9.51.3.2 gslc_DrvDestruct() 9.51.3.3 gslc_DrvDrawBkgnd() 9.51.3.4 gslc_DrvDrawBillCircle() 9.51.3.5 gslc_DrvDrawFillRect() 9.51.3.7 gslc_DrvDrawFillRect() 9.51.3.9 gslc_DrvDrawFillTriangle() 9.51.3.10 gslc_DrvDrawFrameCircle() 9.51.3.11 gslc_DrvDrawFrameRoundRect() 9.51.3.12 gslc_DrvDrawFrameRoundRect() 9.51.3.13 gslc_DrvDrawFrameTriangle() 9.51.3.15 gslc_DrvDrawFrameTriangle() 9.51.3.17 gslc_DrvDrawLine() 9.51.3.18 gslc_DrvDrawPoint() 9.51.3.19 gslc_DrvDrawPoint() 9.51.3.19 gslc_DrvDrawTxtAlign() 9.51.3.20 gslc_DrvDrawTxtAlign() 9.51.3.21 gslc_DrvFontsDestruct() 9.51.3.22 gslc_DrvGetDriverDisp()	9.51.2.10 DRV_HAS_DRAW_RECT_ROUND_FRAME 9.51.2.11 DRV_HAS_DRAW_TEXT	9.51.2.10 DRV_HAS_DRAW_RECT_ROUND_FRAME 9.51.2.11 DRV_HAS_DRAW_TEXT 9.51.2.12 DRV_HAS_DRAW_TRI_FILL 9.51.2.13 DRV_HAS_DRAW_TRI_FRAME 9.51.2.14 DRV_OVERRIDE_TXT_ALIGN Function Documentation 9.51.3.1 gslc_DrvDestruct() 9.51.3.2 gslc_DrvDestruct() 9.51.3.3 gslc_DrvDrawBkgnd() 9.51.3.4 gslc_DrvDrawBmp24FromMem() 9.51.3.5 gslc_DrvDrawFillCircle() 9.51.3.6 gslc_DrvDrawFillRect() 9.51.3.7 gslc_DrvDrawFillRoundRect() 9.51.3.9 gslc_DrvDrawFillRoundRect() 9.51.3.10 gslc_DrvDrawFrameCircle() 9.51.3.11 gslc_DrvDrawFrameRoundRect() 9.51.3.12 gslc_DrvDrawFrameTriangle() 9.51.3.13 gslc_DrvDrawFrameTriangle() 9.51.3.14 gslc_DrvDrawImage() 9.51.3.15 gslc_DrvDrawMonoFromMem() 9.51.3.16 gslc_DrvDrawPoints() 9.51.3.17 gslc_DrvDrawPoints() 9.51.3.18 gslc_DrvDrawPoints() 9.51.3.19 gslc_DrvDrawTxtAlign() 9.51.3.21 gslc_DrvDrawTxtAlign() 9.51.3.22 gslc_DrvFontsDestruct() 9.51.3.22 gslc_DrvFontsDestruct()	9.51.2.10 DRV_HAS_DRAW_RECT_ROUND_FRAME	9.51.2.10 DRV_HAS_DRAW_RECT_ROUND_FRAME 9.51.2.11 DRV_HAS_DRAW_TEXT 9.51.2.12 DRV_HAS_DRAW_TRI_FILL 9.51.2.13 DRV_HAS_DRAW_TRI_FRAME 9.51.2.14 DRV_OVERRIDE_TXT_ALIGN Function Documentation 9.51.3.1 gslc_DrvAdaptColorToRaw() 9.51.3.2 gslc_DrvDrawBkgnd() 9.51.3.3 gslc_DrvDrawBkgnd() 9.51.3.4 gslc_DrvDrawFillCircle() 9.51.3.5 gslc_DrvDrawFillRoundRect() 9.51.3.7 gslc_DrvDrawFillRoundRect() 9.51.3.9 gslc_DrvDrawFillTriangle() 9.51.3.10 gslc_DrvDrawFrameCircle() 9.51.3.11 gslc_DrvDrawFrameRect() 9.51.3.12 gslc_DrvDrawFrameRoundRect() 9.51.3.13 gslc_DrvDrawFrameTriangle() 9.51.3.14 gslc_DrvDrawLine() 9.51.3.15 gslc_DrvDrawLine() 9.51.3.16 gslc_DrvDrawPoint() 9.51.3.17 gslc_DrvDrawPoint() 9.51.3.18 gslc_DrvDrawPoint() 9.51.3.19 gslc_DrvDrawTxtAlign() 9.51.3.20 gslc_DrvFontAdd() 9.51.3.21 gslc_DrvFontsDestruct() 9.51.3.21 gslc_DrvFontsDestruct() 9.51.3.22 gslc_DrvGetDriverDisp()	9.51.2.10 DRV_HAS_DRAW_RECT_ROUND_FRAME 9.51.2.11 DRV_HAS_DRAW_TEXT 9.51.2.12 DRV_HAS_DRAW_TRI_FILL 9.51.2.13 DRV_HAS_DRAW_TRI_FRAME 9.51.2.14 DRV_OVERRIDE_TXT_ALIGN Function Documentation 9.51.3.1 gslc_DrvAdaptColorToRaw() 9.51.3.2 gslc_DrvDrawBkgnd() 9.51.3.3 gslc_DrvDrawBkgnd() 9.51.3.4 gslc_DrvDrawBillCircle() 9.51.3.5 gslc_DrvDrawFillCircle() 9.51.3.6 gslc_DrvDrawFillRect() 9.51.3.7 gslc_DrvDrawFillRoundRect() 9.51.3.9 gslc_DrvDrawFrameCircle() 9.51.3.10 gslc_DrvDrawFrameRect() 9.51.3.11 gslc_DrvDrawFrameRoundRect() 9.51.3.12 gslc_DrvDrawFrameRoundRect() 9.51.3.13 gslc_DrvDrawFrameTriangle() 9.51.3.14 gslc_DrvDrawHmage() 9.51.3.15 gslc_DrvDrawHonoFromMem() 9.51.3.16 gslc_DrvDrawPoint() 9.51.3.17 gslc_DrvDrawPoint() 9.51.3.18 gslc_DrvDrawPoint() 9.51.3.19 gslc_DrvDrawTxtI() 9.51.3.20 gslc_DrvDrawTxtIIgin() 9.51.3.21 gslc_DrvDrawTxtIIgin() 9.51.3.22 gslc_DrvFontAdd() 9.51.3.21 gslc_DrvFontSDestruct() 9.51.3.22 gslc_DrvGetDriverDisp()	9.51.2.10 DRV_HAS_DRAW_RECT_ROUND_FRAME 9.51.2.11 DRV_HAS_DRAW_TEXT 9.51.2.12 DRV_HAS_DRAW_TRI_FILL 9.51.2.13 DRV_HAS_DRAW_TRI_FRAME 9.51.2.14 DRV_OVERRIDE_TXT_ALIGN Function Documentation 9.51.3.1 gslc_DrvDadaptColorToRaw() 9.51.3.2 gslc_DrvDrawBkgnd() 9.51.3.3 gslc_DrvDrawBkgnd() 9.51.3.4 gslc_DrvDrawBmp24FromMem() 9.51.3.5 gslc_DrvDrawFillCircle() 9.51.3.6 gslc_DrvDrawFillRoundRect() 9.51.3.7 gslc_DrvDrawFillRoundRect() 9.51.3.9 gslc_DrvDrawFillTriangle() 9.51.3.10 gslc_DrvDrawFrameRect() 9.51.3.11 gslc_DrvDrawFrameRect() 9.51.3.12 gslc_DrvDrawFrameRoundRect() 9.51.3.13 gslc_DrvDrawFrameTriangle() 9.51.3.14 gslc_DrvDrawImage() 9.51.3.15 gslc_DrvDrawLine() 9.51.3.16 gslc_DrvDrawLone() 9.51.3.17 gslc_DrvDrawPoint() 9.51.3.18 gslc_DrvDrawPoint() 9.51.3.19 gslc_DrvDrawTxt() 9.51.3.20 gslc_DrvDrawTxtAlign() 9.51.3.21 gslc_DrvDrawTxtAlign() 9.51.3.22 gslc_DrvGotDriverDisp()	9.51.2.10 DRV_HAS_DRAW_RECT_ROUND_FRAME 9.51.2.11 DRV_HAS_DRAW_TEXT 9.51.2.12 DRV_HAS_DRAW_TRI_FILL 9.51.2.13 DRV_HAS_DRAW_TRI_FRAME 9.51.2.14 DRV_OVERRIDE_TXT_ALIGN Function Documentation 9.51.3.1 gslc_DrvAdaptColorToRaw() 9.51.3.2 gslc_DrvDrawBkgnd() 9.51.3.3 gslc_DrvDrawBkgnd() 9.51.3.4 gslc_DrvDrawBmp24FromMem() 9.51.3.5 gslc_DrvDrawFillCircle() 9.51.3.6 gslc_DrvDrawFillRoundRect() 9.51.3.9 gslc_DrvDrawFillRoundRect() 9.51.3.10 gslc_DrvDrawFrameCircle() 9.51.3.10 gslc_DrvDrawFrameRect() 9.51.3.11 gslc_DrvDrawFrameRect() 9.51.3.12 gslc_DrvDrawFrameTriangle() 9.51.3.13 gslc_DrvDrawImage() 9.51.3.14 gslc_DrvDrawImage() 9.51.3.15 gslc_DrvDrawHonoFromMem() 9.51.3.16 gslc_DrvDrawPoint() 9.51.3.17 gslc_DrvDrawPoint() 9.51.3.19 gslc_DrvDrawPoint() 9.51.3.19 gslc_DrvDrawTxtAlign() 9.51.3.20 gslc_DrvDrawTxtAlign() 9.51.3.21 gslc_DrvDrawTxtAlign() 9.51.3.22 gslc_DrvFontsDestruct() 9.51.3.21 gslc_DrvFontsDestruct()	9.51.2.10 DRV_HAS_DRAW_RECT_ROUND_FRAME 9.51.2.11 DRV_HAS_DRAW_TRI_FILL 9.51.2.12 DRV_HAS_DRAW_TRI_FILL 9.51.2.13 DRV_HAS_DRAW_TRI_FRAME 9.51.2.14 DRV_OVERRIDE_TXT_ALIGN Function Documentation 9.51.3.1 gslc_DrvAdaptColorToRaw() 9.51.3.2 gslc_DrvDestruct() 9.51.3.3 gslc_DrvDrawBkgnd() 9.51.3.4 gslc_DrvDrawBkgnd() 9.51.3.5 gslc_DrvDrawFillCircle() 9.51.3.6 gslc_DrvDrawFillRect() 9.51.3.7 gslc_DrvDrawFillRoundRect() 9.51.3.9 gslc_DrvDrawFillRoundRect() 9.51.3.10 gslc_DrvDrawFrameCircle() 9.51.3.11 gslc_DrvDrawFrameRoundRect() 9.51.3.12 gslc_DrvDrawFrameRoundRect() 9.51.3.13 gslc_DrvDrawFrameRoundRect() 9.51.3.14 gslc_DrvDrawHrameRoundRect() 9.51.3.15 gslc_DrvDrawHrameRoundRect() 9.51.3.16 gslc_DrvDrawHonoFromMem() 9.51.3.17 gslc_DrvDrawPoints() 9.51.3.18 gslc_DrvDrawPoints() 9.51.3.19 gslc_DrvDrawTxtAlign() 9.51.3.20 gslc_DrvDrawTxtAlign() 9.51.3.21 gslc_DrvDrawTxtAlign() 9.51.3.22 gslc_DrvGetDriverDisp()	9.51.2.10 DRV_HAS_DRAW_RECT_ROUND_FRAME 9.51.2.11 DRV_HAS_DRAW_TEXT 9.51.2.12 DRV_HAS_DRAW_TRI_FILL 9.51.2.13 DRV_HAS_DRAW_TRI_FRAME 9.51.2.14 DRV_OVERRIDE_TXT_ALIGN Function Documentation 9.51.3.1 gslc_DrvAdaptColorToRaw() 9.51.3.2 gslc_DrvDrawBkgnd() 9.51.3.3 gslc_DrvDrawBkgnd() 9.51.3.4 gslc_DrvDrawBmp24FromMem() 9.51.3.5 gslc_DrvDrawFillCircle() 9.51.3.6 gslc_DrvDrawFillRoundRect() 9.51.3.7 gslc_DrvDrawFillRoundRect() 9.51.3.9 gslc_DrvDrawFillTriangle() 9.51.3.10 gslc_DrvDrawFrameCircle() 9.51.3.11 gslc_DrvDrawFrameRect() 9.51.3.12 gslc_DrvDrawFrameRoundRect() 9.51.3.13 gslc_DrvDrawFrameRoundRect() 9.51.3.14 gslc_DrvDrawHrameRoundRect() 9.51.3.15 gslc_DrvDrawHrame() 9.51.3.16 gslc_DrvDrawHonoFromMem() 9.51.3.17 gslc_DrvDrawPoints() 9.51.3.18 gslc_DrvDrawPoints() 9.51.3.19 gslc_DrvDrawTxtAlign() 9.51.3.20 gslc_DrvDrawTxtAlign() 9.51.3.21 gslc_DrvDrawTxtAlign() 9.51.3.22 gslc_DrvGetDriverDisp()	9.51.2.10 DRV_HAS_DRAW_RECT_ROUND_FRAME 9.51.2.11 DRV_HAS_DRAW_TEXT 9.51.2.12 DRV_HAS_DRAW_TRI_FILL 9.51.2.13 DRV_HAS_DRAW_TRI_FRAME 9.51.2.14 DRV_OVERRIDE_TXT_ALIGN Function Documentation 9.51.3.1 gslc_DrvAdaptColorToRaw() 9.51.3.2 gslc_DrvDestruct() 9.51.3.3 gslc_DrvDrawBkgnd() 9.51.3.4 gslc_DrvDrawBmp24FromMem() 9.51.3.5 gslc_DrvDrawFillCircle() 9.51.3.6 gslc_DrvDrawFillRoundRect() 9.51.3.7 gslc_DrvDrawFillRoundRect() 9.51.3.8 gslc_DrvDrawFillTriangle() 9.51.3.9 gslc_DrvDrawFrameCircle() 9.51.3.10 gslc_DrvDrawFrameRoundRect() 9.51.3.11 gslc_DrvDrawFrameRoundRect() 9.51.3.12 gslc_DrvDrawFrameRoundRect() 9.51.3.13 gslc_DrvDrawFrameRoundRect() 9.51.3.14 gslc_DrvDrawFrameTriangle() 9.51.3.15 gslc_DrvDrawHange() 9.51.3.16 gslc_DrvDrawHonoFromMem() 9.51.3.17 gslc_DrvDrawPoint() 9.51.3.18 gslc_DrvDrawPoint() 9.51.3.19 gslc_DrvDrawPoint() 9.51.3.20 gslc_DrvDrawTxtAlign() 9.51.3.21 gslc_DrvDrawTxtAlign() 9.51.3.22 gslc_DrvGetDriverDisp()	9.51.2.10 DRV_HAS_DRAW_RECT_ROUND_FRAME 9.51.2.11 DRV_HAS_DRAW_TEXT 9.51.2.12 DRV_HAS_DRAW_TRI_FILL 9.51.2.13 DRV_HAS_DRAW_TRI_FRAME 9.51.2.14 DRV_OVERRIDE_TXT_ALIGN Function Documentation 9.51.3.1 gslc_DrvAdaptColorToRaw() 9.51.3.2 gslc_DrvDestruct() 9.51.3.3 gslc_DrvDrawBkgnd() 9.51.3.4 gslc_DrvDrawBkgnd() 9.51.3.5 gslc_DrvDrawFillCircle() 9.51.3.6 gslc_DrvDrawFillRect() 9.51.3.7 gslc_DrvDrawFillRect() 9.51.3.9 gslc_DrvDrawFillRoundRect() 9.51.3.10 gslc_DrvDrawFillRect() 9.51.3.10 gslc_DrvDrawFrameCircle() 9.51.3.11 gslc_DrvDrawFrameRect() 9.51.3.12 gslc_DrvDrawFrameRoundRect() 9.51.3.13 gslc_DrvDrawFrameRoundRect() 9.51.3.14 gslc_DrvDrawFrameTriangle() 9.51.3.15 gslc_DrvDrawMonoFromMem() 9.51.3.16 gslc_DrvDrawMonoFromMem() 9.51.3.17 gslc_DrvDrawPoint() 9.51.3.19 gslc_DrvDrawPoint() 9.51.3.19 gslc_DrvDrawTxtAlign() 9.51.3.20 gslc_DrvDrawTxtAlign() 9.51.3.21 gslc_DrvDrawTxtAlign() 9.51.3.22 gslc_DrvGetDriverDisp()	9.51.2.10 DRV_HAS_DRAW_RECT_ROUND_FRAME 9.51.2.11 DRV_HAS_DRAW_TEXT 9.51.2.12 DRV_HAS_DRAW_TRI_FILL 9.51.2.13 DRV_HAS_DRAW_TRI_FRAME 9.51.2.14 DRV_OVERRIDE_TXT_ALIGN Function Documentation 9.51.3.1 gslc_DrvAdaptColorToRaw() 9.51.3.2 gslc_DrvDestruct() 9.51.3.3 gslc_DrvDrawBkgnd() 9.51.3.4 gslc_DrvDrawBkgnd() 9.51.3.5 gslc_DrvDrawFillCircle() 9.51.3.6 gslc_DrvDrawFillRect() 9.51.3.7 gslc_DrvDrawFillRect() 9.51.3.9 gslc_DrvDrawFillTriangle() 9.51.3.10 gslc_DrvDrawFillTriangle() 9.51.3.10 gslc_DrvDrawFrameCircle() 9.51.3.11 gslc_DrvDrawFrameRoundRect() 9.51.3.12 gslc_DrvDrawFrameRoundRect() 9.51.3.13 gslc_DrvDrawFrameTriangle() 9.51.3.14 gslc_DrvDrawHrameTriangle() 9.51.3.15 gslc_DrvDrawHonoFromMem() 9.51.3.16 gslc_DrvDrawHonoFromMem() 9.51.3.17 gslc_DrvDrawPoint() 9.51.3.19 gslc_DrvDrawPoint() 9.51.3.19 gslc_DrvDrawTxtAlign() 9.51.3.20 gslc_DrvDrawTxtAlign() 9.51.3.21 gslc_DrvFontSDestruct() 9.51.3.22 gslc_DrvGetDriverDisp()	9.51.2.10 DRV_HAS_DRAW_RECT_ROUND_FRAME 9.51.2.11 DRV_HAS_DRAW_TEXT 9.51.2.12 DRV_HAS_DRAW_TRI_FILL 9.51.2.13 DRV_HAS_DRAW_TRI_FRAME 9.51.2.14 DRV_OVERRIDE_TXT_ALIGN Function Documentation 9.51.3.1 gslc_DrvAdaptColorToRaw() 9.51.3.2 gslc_DrvDestruct() 9.51.3.3 gslc_DrvDrawBkgnd() 9.51.3.4 gslc_DrvDrawBkgnd() 9.51.3.5 gslc_DrvDrawFillCirole() 9.51.3.6 gslc_DrvDrawFillCirole() 9.51.3.7 gslc_DrvDrawFillRect() 9.51.3.8 gslc_DrvDrawFillRect() 9.51.3.9 gslc_DrvDrawFillRect() 9.51.3.10 gslc_DrvDrawFillRect() 9.51.3.11 gslc_DrvDrawFrameCirole() 9.51.3.11 gslc_DrvDrawFrameRect() 9.51.3.12 gslc_DrvDrawFrameRoundRect() 9.51.3.15 gslc_DrvDrawFrameRoundRect() 9.51.3.16 gslc_DrvDrawFrameRoundRect() 9.51.3.17 gslc_DrvDrawHonoFromMem() 9.51.3.18 gslc_DrvDrawHonoFromMem() 9.51.3.19 gslc_DrvDrawPoint() 9.51.3.20 gslc_DrvDrawTxtAlign() 9.51.3.21 gslc_DrvFontAdd() 9.51.3.22 gslc_DrvGetDriverDisp()	9.51.3.4 gslc_DrvDrawBmp24FromMem() 9.51.3.5 gslc_DrvDrawFillCircle() 9.51.3.6 gslc_DrvDrawFillRect() 9.51.3.7 gslc_DrvDrawFillRoundRect() 9.51.3.8 gslc_DrvDrawFillTriangle()

CONTENTS

	9.51.3.24 gslc_DrvGetNameDisp()
	9.51.3.25 gslc_DrvGetNameTouch()
	9.51.3.26 gslc_DrvGetTxtSize()
	9.51.3.27 gslc_DrvImageDestruct()
	9.51.3.28 gslc_DrvInit()
	9.51.3.29 gslc_DrvInitTs()
	9.51.3.30 gslc_DrvLoadImage()
	9.51.3.31 gslc_DrvPageFlipNow()
	9.51.3.32 gslc_DrvRotate()
	9.51.3.33 gslc_DrvSetBkgndColor()
	9.51.3.34 gslc_DrvSetBkgndImage()
	9.51.3.35 gslc_DrvSetClipRect()
	9.51.3.36 gslc_DrvSetElemImageGlow()
	9.51.3.37 gslc_DrvSetElemImageNorm()
9.51.4	Variable Documentation
	9.51.4.1 ERRSTR_NULL
	9.51.4.2 ERRSTR_PXD_NULL
9.52 src/GU	Islice_drv_sdl.c File Reference
9.53 src/GU	Islice_drv_sdl.h File Reference
9.53.1	Detailed Description
9.53.2	Macro Definition Documentation
	9.53.2.1 DRV_HAS_DRAW_POINT
	9.53.2.2 DRV_OVERRIDE_TXT_ALIGN
9.53.3	Function Documentation
	9.53.3.1 gslc_DrvAdaptColor()
	9.53.3.2 gslc_DrvAdaptRect()
	9.53.3.3 gslc_DrvCleanStart()
	9.53.3.4 gslc_DrvDestruct()
	9.53.3.5 gslc_DrvDrawBkgnd()
	9.53.3.6 gslc_DrvDrawFillRect()

IX

	9.53.3.	7 gslc_Drv	DrawFrame	Rect()		 	 	 	 . 62	28
	9.53.3.	8 gslc_Drv	Drawlmage	()		 	 	 	 . 63	30
	9.53.3.	9 gslc_Drv	DrawLine()			 	 	 	 . 63	30
	9.53.3.	10 gslc_Drv	DrawPoint())		 	 	 	 . 63	31
	9.53.3.	11 gslc_Drv	DrawPoints	()		 	 	 	 . 63	31
	9.53.3.	12 gslc_Drv	DrawTxt() .			 	 	 	 . 63	32
	9.53.3.	13 gslc_Drv	FontAdd() .			 	 	 	 . 63	32
	9.53.3.	14 gslc_Drv	FontsDestru	uct()		 	 	 	 . 63	33
	9.53.3.	15 gslc_Drv	GetDriverD	isp()		 	 	 	 . 63	33
	9.53.3.	16 gslc_Drv	GetDriverTo	ouch()		 	 	 	 . 63	34
	9.53.3.	17 gslc_Drv	GetNameDi	isp()		 	 	 	 . 63	34
	9.53.3.	18 gslc_Drv	GetNameTo	ouch()		 	 	 	 . 63	34
	9.53.3.	19 gslc_Drv	GetTouch()			 	 	 	 . 63	35
	9.53.3.	20 gslc_Drv	GetTxtSize(()		 	 	 	 . 63	35
	9.53.3.	21 gslc_Drv	ImageDestr	ruct()		 	 	 	 . 63	36
	9.53.3.	22 gslc_Drv	Init()			 	 	 	 . 63	36
	9.53.3.	23 gslc_Drv	InitTouch()			 	 	 	 . 63	37
	9.53.3.	24 gslc_Drv	LoadImage	()		 	 	 	 . 63	37
	9.53.3.	25 gslc_Drv	PageFlipNo	ow()		 	 	 	 . 63	38
	9.53.3.	26 gslc_Drv	ReportInfoF	Post()		 	 	 	 . 63	38
	9.53.3.	27 gslc_Drv	ReportInfoF	Pre()		 	 	 	 . 63	38
	9.53.3.	28 gslc_Drv	Rotate()			 	 	 	 . 63	38
	9.53.3.	29 gslc_Drv	SetBkgndC	olor()		 	 	 	 . 63	39
	9.53.3.	30 gslc_Drv	SetBkgndIn	nage()		 	 	 	 . 63	39
	9.53.3.	31 gslc_Drv	SetClipRec	t()		 	 	 	 . 64	40
	9.53.3.	32 gslc_Drv	SetElemIma	ageGlow()	 	 	 	 . 64	40
	9.53.3.	33 gslc_Drv	SetElemIma	ageNorm	()	 	 	 	 . 64	40
9.54	src/GUIslice_dr	v_tft_espi.c _l	op File Refe	erence		 	 	 	 . 64	41
9.55	src/GUIslice_dr	v_tft_espi.h	File Refere	nce		 	 	 	 . 64	41
	9.55.1 Detaile	d Description	n			 	 	 	 . 64	44

CONTENTS

9.55.2	Macro De	finition Documentation	644
	9.55.2.1	DRV_HAS_DRAW_BMP_MEM	644
	9.55.2.2	DRV_HAS_DRAW_CIRCLE_FILL	645
	9.55.2.3	DRV_HAS_DRAW_CIRCLE_FRAME	645
	9.55.2.4	DRV_HAS_DRAW_LINE	645
	9.55.2.5	DRV_HAS_DRAW_POINT	645
	9.55.2.6	DRV_HAS_DRAW_POINTS	645
	9.55.2.7	DRV_HAS_DRAW_RECT_FILL	645
	9.55.2.8	DRV_HAS_DRAW_RECT_FRAME	646
	9.55.2.9	DRV_HAS_DRAW_RECT_ROUND_FILL	646
	9.55.2.10	DRV_HAS_DRAW_RECT_ROUND_FRAME	646
	9.55.2.11	DRV_HAS_DRAW_TEXT	646
	9.55.2.12	DRV_HAS_DRAW_TRI_FILL	646
	9.55.2.13	DRV_HAS_DRAW_TRI_FRAME	646
	9.55.2.14	DRV_OVERRIDE_TXT_ALIGN	647
	9.55.2.15	GSLC_SPIFFS_EN	647
9.55.3	Function I	Documentation	647
	9.55.3.1	gslc_DrvAdaptColorToRaw()	647
	9.55.3.2	gslc_DrvDestruct()	647
	9.55.3.3	gslc_DrvDrawBkgnd()	647
	9.55.3.4	gslc_DrvDrawBmp24FromMem()	649
	9.55.3.5	gslc_DrvDrawFillCircle()	649
	9.55.3.6	gslc_DrvDrawFillRect()	650
	9.55.3.7	gslc_DrvDrawFillRoundRect()	650
	9.55.3.8	gslc_DrvDrawFillTriangle()	651
	9.55.3.9	gslc_DrvDrawFrameCircle()	651
	9.55.3.10	gslc_DrvDrawFrameRect()	652
	9.55.3.11	gslc_DrvDrawFrameRoundRect()	652
	9.55.3.12	gslc_DrvDrawFrameTriangle()	653
	9.55.3.13	gslc_DrvDrawImage()	653

lxii CONTENTS

9.55.3.14 gslc_DrvDrawLine()
9.55.3.15 gslc_DrvDrawMonoFromMem()
9.55.3.16 gslc_DrvDrawPoint()
9.55.3.17 gslc_DrvDrawPoints()
9.55.3.18 gslc_DrvDrawTxt()
9.55.3.19 gslc_DrvDrawTxtAlign()
9.55.3.20 gslc_DrvFontAdd()
9.55.3.21 gslc_DrvFontsDestruct()
9.55.3.22 gslc_DrvGetDriverDisp()
9.55.3.23 gslc_DrvGetDriverTouch()
9.55.3.24 gslc_DrvGetNameDisp()
9.55.3.25 gslc_DrvGetNameTouch()
9.55.3.26 gslc_DrvGetTxtSize()
9.55.3.27 gslc_DrvImageDestruct()
9.55.3.28 gslc_DrvInit()
9.55.3.29 gslc_DrvInitTs()
9.55.3.30 gslc_DrvLoadImage()
9.55.3.31 gslc_DrvPageFlipNow()
9.55.3.32 gslc_DrvRotate()
9.55.3.33 gslc_DrvSetBkgndColor()
9.55.3.34 gslc_DrvSetBkgndImage()
9.55.3.35 gslc_DrvSetClipRect()
9.55.3.36 gslc_DrvSetElemImageGlow()
9.55.3.37 gslc_DrvSetElemImageNorm()
9.56 src/GUIslice_drv_utft.cpp File Reference
9.57 src/GUIslice_drv_utft.h File Reference
9.57.1 Detailed Description
9.57.2 Macro Definition Documentation
9.57.2.1 DRV_HAS_DRAW_BMP_MEM
9.57.2.2 DRV_HAS_DRAW_CIRCLE_FILL

CONTENTS

	9.57.2.3	DRV_HAS_DRAW_CIRCLE_FRAME	668
	9.57.2.4	DRV_HAS_DRAW_LINE	669
	9.57.2.5	DRV_HAS_DRAW_POINT	669
	9.57.2.6	DRV_HAS_DRAW_POINTS	669
	9.57.2.7	DRV_HAS_DRAW_RECT_FILL	669
	9.57.2.8	DRV_HAS_DRAW_RECT_FRAME	669
	9.57.2.9	DRV_HAS_DRAW_RECT_ROUND_FILL	669
	9.57.2.10	DRV_HAS_DRAW_RECT_ROUND_FRAME	670
	9.57.2.11	DRV_HAS_DRAW_TEXT	670
	9.57.2.12	DRV_HAS_DRAW_TRI_FILL	670
	9.57.2.13	DRV_HAS_DRAW_TRI_FRAME	670
	9.57.2.14	DRV_OVERRIDE_TXT_ALIGN	670
9.57.3	Function I	Documentation	670
	9.57.3.1	gslc_DrvAdaptColorToRaw()	670
	9.57.3.2	gslc_DrvDestruct()	670
	9.57.3.3	gslc_DrvDrawBkgnd()	671
	9.57.3.4	gslc_DrvDrawBmp24FromMem()	671
	9.57.3.5	gslc_DrvDrawFillCircle()	672
	9.57.3.6	gslc_DrvDrawFillRect()	672
	9.57.3.7	gslc_DrvDrawFillRoundRect()	673
	9.57.3.8	gslc_DrvDrawFillTriangle()	673
	9.57.3.9	gslc_DrvDrawFrameCircle()	674
	9.57.3.10	gslc_DrvDrawFrameRect()	674
	9.57.3.11	gslc_DrvDrawFrameRoundRect()	675
	9.57.3.12	gslc_DrvDrawFrameTriangle()	675
	9.57.3.13	gslc_DrvDrawImage()	676
	9.57.3.14	gslc_DrvDrawLine()	676
	9.57.3.15	gslc_DrvDrawMonoFromMem()	677
	9.57.3.16	gslc_DrvDrawPoint()	677
	9.57.3.17	gslc_DrvDrawPoints()	678

lxiv CONTENTS

		9.57.3.18	3 gslc_DrvDrawTxt()	. 678
		9.57.3.19	9 gslc_DrvFontAdd()	. 679
		9.57.3.20	9 gslc_DrvFontsDestruct()	. 679
		9.57.3.21	gslc_DrvGetDriverDisp()	. 679
		9.57.3.22	2 gslc_DrvGetDriverTouch()	. 680
		9.57.3.23	3 gslc_DrvGetNameDisp()	. 680
		9.57.3.24	4 gslc_DrvGetNameTouch()	. 681
		9.57.3.25	5 gslc_DrvGetTouch()	. 681
		9.57.3.26	6 gslc_DrvGetTxtSize()	. 682
		9.57.3.27	gslc_DrvImageDestruct()	. 682
		9.57.3.28	3 gslc_DrvInit()	. 683
		9.57.3.29	gslc_DrvInitTouch()	. 683
		9.57.3.30	gslc_DrvInitTs()	. 684
		9.57.3.31	gslc_DrvLoadImage()	. 684
		9.57.3.32	2 gslc_DrvPageFlipNow()	. 684
		9.57.3.33	3 gslc_DrvRotate()	. 685
		9.57.3.34	4 gslc_DrvSetBkgndColor()	. 685
		9.57.3.35	5 gslc_DrvSetBkgndImage()	. 686
		9.57.3.36	6 gslc_DrvSetClipRect()	. 686
		9.57.3.37	gslc_DrvSetElemImageGlow()	. 687
		9.57.3.38	3 gslc_DrvSetElemImageNorm()	. 687
9.58	src/GU	Islice_ex.h	n File Reference	. 687
9.59	src/GU	Islice_th.c	pp File Reference	. 688
	9.59.1	Function	Documentation	. 688
		9.59.1.1	gslc_getTouchHandler()	. 689
		9.59.1.2	gslc_InitTouchHandler()	. 689
	9.59.2	Variable [Documentation	. 689
		9.59.2.1	pTouchHandler	. 689
9.60	src/GU	Islice_th.h	File Reference	. 689
	9.60.1	Function	Documentation	. 690
		9.60.1.1	gslc_getTouchHandler()	. 690
		9.60.1.2	gslc_InitTouchHandler()	. 690
9.61	src/GU	Islice_th_>	XPT2046.h File Reference	. 690
9.62	src/GU	Islice_vers	sion.h File Reference	. 691
	9.62.1	Macro De	efinition Documentation	. 691
		9.62.1.1	GUISLICE_VER	. 691

Chapter 1

GUIslice library

A lightweight GUI framework for embedded displays

Design your GUI with a **drag & drop builder**, then apply the same code to a wide range of displays, libraries and controllers with the **cross-platform framework**. Open source **MIT license** grants free commercial usage.

- Extensive Documentation guides available
- GUIslice API documentation (online) & (PDF)
- Active development: see latest updates & work in progress
- Release history
- Website (www.impulseadventure.com)
- Support email: guislice@gmail.com
- GUIslice by Calvin Hass and GitHub contributors, Builder by Paul Conti

Features

- · Pure C library, no dynamic memory allocation
- · Widgets:
 - text, images, buttons, checkboxes, radio buttons, sliders, custom keypads, listbox, radial controls, scrolling textbox / terminal, graphs, etc. plus extensions and multiple pages.
- · Cross-platform GUIslice Builder application to generate layouts
- Platform-independent GUI core currently supports:
 - Adafruit-GFX, TFT eSPI, mcufriend, UTFT, LCDGFX, SDL1.2, SDL2.0
- · Devices:
 - Raspberry Pi, Arduino, ATmega2560, ESP8266 / NodeMCU, ESP32, M5stack, Teensy 3 / T4, WIO Terminal, Feather M0 (Cortex-M0), nRF52 (Cortex-M4F), LINUX, Beaglebone Black, STM32, Due, etc.
- Typical displays:

2 GUIslice library

PiTFT, Adafruit TFT 3.5" / 2.8" / 2.4" / 2.2" / 1.44", FeatherWing TFT, OLED 0.96", mcufriend, BuyDisplay / EastRising 4.3" 5" 7", Waveshare, 4D Cape

- · Display drivers include:
 - ILI9341, ST7735, SSD1306, HX8347D, HX8357, PCD8544, RA8875, RA8876, ILI9225, ILI9341_t3, ILI9341_due
- · Touchscreen control including:
 - STMPE610, FT6206, FT5206, XPT2046, 4-wire, tslib, URTouch, Adafruit Seesaw
- IDE Support:
 - GUIslice has been tested for use in the Arduino IDE and Platform IO environments, in addition to LINUX make
- Foreign characters / UTF-8 encoding (in SDL mode), anti-aliased fonts (in TFT_eSPI mode)
- · Dynamic display rotation
- GPIO / pin / keyboard / Adafruit Seesaw navigation for non-touchscreen devices

Screenshots

GUIslice Builder

- · Includes cross-platform (Windows, LINUX and Mac) desktop application to generate GUIslice layouts
- Please refer to GUIslice Builder wiki for documentation

Disclaimer

The Software is not designed for use in devices or situations where there may be physical injury if the Software has errors.

Chapter 2

Todo List

```
Global gslc_ElemGetEditEn (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)
   Doc
Global gslc_ElemGetFocusEn (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)
Global gslc_ElemSetFocusEn (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bFocusEn)
Global gslc InputMapLookup (gslc tsGui *pGui, gslc teInputRawEvent eInputEvent, int16 t nInputVal,
   gslc_teAction *peAction, int16_t *pnActionVal)
   Doc.
Global gslc_XKeyPadFocusSetDefault (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)
Global gslc_XKeyPadPendRedrawAddKey (gslc_tsXKeyPadResult *pResult, int16_t nld)
   Doc
Global gslc_XKeyPadPendRedrawAddTxt (gslc_tsXKeyPadResult *pResult)
Global gslc_XKeyPadPendRedrawReset (gslc_tsXKeyPadResult *pResult)
Global gslc XKeyPadRedrawUpdate (gslc tsGui *pGui, gslc tsElemRef *pElemRef)
Global gslc_XKeyPadTrackSet (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nInd, gslc_tsXKey ←
   PadAttrib eAttrib)
   Doc
```

4 Todo List

Chapter 3

Module Index

3.1 Modules

Here is a list of all modules:

eneral Functions	. 13
raphics General Functions	. 21
raphics Primitive Functions	. 32
ont Functions	. 43
age Functions	. 46
ement Functions	. 53
Element: Creation Functions	54
Element: General Functions	60
Element: Update Functions	61
ouchscreen Functions	. 84
put Mapping Functions	. 90
eneral Purpose Macros	. 95
ash-based Element Macros	. 97
ternal Functions	. 103
Internal: Misc Functions	133
Internal: Element Functions	134
Internal: Page Functions	142
Internal: Element Collection Functions	148
Internal: Element Collection Event Functions	154
Internal: Tracking Functions	157
Internal: Cleanup Functions	160

6 Module Index

Chapter 4

Hierarchical Index

4.1 Class Hierarchy

This inheritance list is sorted roughly, but not completely, alphabetically:

gslc_tsCollect	65
gslc_tsColor	66
gslc_tsDriver	66
gslc_tsElem	68
gslc_tsElemRef	70
gslc_tsEvent	70
gslc_tsEventTouch	71
gslc_tsFont	
gslc_tsGui	72
gslc_tslmgRef	
gslc_tsInputMap	76
gslc_tsKey	76
gslc_tsLabelSpecial	78
gslc_tsPage	
gslc_tsPt	
gslc_tsRect	
gslc_tsRectState	
gslc_tsXCheckbox	
gslc_tsXGauge	
gslc_tsXGlowball	
gslc_tsXGlowballRing	
gslc_tsXGraph	
gslc_tsXKeyPad	
gslc_tsXKeyPadCfg	
gslc_tsXKeyPadCfg_Alpha	
gslc_tsXKeyPadCfg_Num	:04
gslc_tsXKeyPadData	
gslc_tsXKeyPadResult	
gslc_tsXListbox	
gslc_tsXProgress	
gslc_tsXRadial	
gslc_tsXRamp	
gslc_tsXRingGauge	
gslc_tsXSeekbar	23
asic tsXSelNum	28

8 Hierarchical Index

pslc_tsXSlider	 229
pslc_tsXSpinner	 232
pslc_tsXTemplate	 236
pslc_tsXTextbox	 236
pslc_tsXTogglebtn	 240
pslc_tsXToggleImgbtn	 242
THPoint	 243
ouchHandler	 245
TouchHandler VPT2046	247

Chapter 5

Data Structure Index

5.1 Data Structures

Here are the data structures with brief descriptions:

gslc_tsCollect
Element collection struct
gslc_tsColor
Color structure. Defines RGB triplet
gslc_tsDriver
gslc_tsElem
Element Struct
gslc_tsElemRef
Element reference structure
gslc_tsEvent
Event structure
Structure used to pass touch data through event
gslc_tsFont
Font reference structure
gslc_tsGui
GUI structure
gslc_tslmgRef
Image reference structure
gslc_tsInputMap
Input mapping
gslc_tsKey
Key information. Defines everything we need to know about a particular key
gslc_tsLabelSpecial
Key Label strings for special buttons
gslc_tsPage
Page structure
gslc_tsPt Define point coordinates
gslc tsRect
Rectangular region. Defines X,Y corner coordinates plus dimensions
gslc_tsRectState
State associated with an element's region
gslc_tsXCheckbox
Extended data for Checkbox element

10 Data Structure Index

gslc_tsXGauge	
Extended data for Gauge element	183
gslc_tsXGlowball	
Extended data for Slider element	187
gslc_tsXGlowballRing	190
gslc_tsXGraph	
Extended data for Graph element	191
gslc_tsXKeyPad	
Extended data for KeyPad element	195
gslc_tsXKeyPadCfg	
Configuration for the KeyPad	198
gslc_tsXKeyPadCfg_Alpha	203
gslc_tsXKeyPadCfg_Num	204
gslc_tsXKeyPadData	
Input callback data structure	205
gslc_tsXKeyPadResult	
Return status for XKeyPad	206
gslc_tsXListbox	
Extended data for Listbox element	208
gslc_tsXProgress	
Extended data for Gauge element	213
gslc_tsXRadial	
Extended data for Gauge element	215
gslc_tsXRamp	
Extended data for Gauge element	219
gslc_tsXRingGauge	
Extended data for XRingGauge element	220
gslc_tsXSeekbar	
Extended data for Seekbar element	223
gslc_tsXSelNum	
Extended data for SelNum element	228
gslc_tsXSlider	
	229
gslc_tsXSpinner	
	232
gslc_tsXTemplate .	
	236
gslc_tsXTextbox	
	236
gslc_tsXTogglebtn	
	240
gslc_tsXToggleImgbtn	
	242
	243
	245
	247

Chapter 6

File Index

6.1 File List

Here is a list of all files with brief descriptions:

src/GUIslice.c
src/GUIslice.h
src/GUIslice_config.h
src/GUIslice_drv.h
src/GUIslice_drv_adagfx.cpp
src/GUIslice_drv_adagfx.h
GUIslice library (driver layer for Adafruit-GFX)
src/GUIslice_drv_m5stack.cpp
src/GUIslice_drv_m5stack.h
GUIslice library (driver layer for M5stack)
src/GUIslice_drv_sdl.c
src/GUIslice_drv_sdl.h
GUIslice library (driver layer for LINUX / SDL)
src/GUIslice_drv_tft_espi.cpp
src/GUIslice_drv_tft_espi.h
GUIslice library (driver layer for TFT-eSPI)
src/GUIslice_drv_utft.cpp
src/GUIslice_drv_utft.h
GUIslice library (driver layer for UTFT)
src/GUIslice_ex.h
src/GUIslice_th.cpp
src/GUIslice_th.h
src/GUIslice_th_XPT2046.h
src/GUIslice_version.h
src/elem/XCheckbox.c
src/elem/XCheckbox.h
src/elem/XGauge.c
src/elem/XGauge.h
src/elem/XGlowball.c
src/elem/XGlowball.h
src/elem/XGraph.c
src/elem/XGraph.h
src/elem/XKeyPad.c
src/elem/XKeyPad.h
src/elem/XKeyPad_Alpha-setup.h

12 File Index

src/elem/XKeyPad_Alpha.c
src/elem/XKeyPad_Alpha.h
src/elem/XKeyPad_Num-setup.h
src/elem/XKeyPad_Num.c
src/elem/XKeyPad_Num.h
src/elem/XListbox.c
src/elem/XListbox.h
src/elem/XProgress.c
src/elem/XProgress.h
src/elem/XRadial.c
src/elem/XRadial.h
src/elem/XRamp.c
src/elem/XRamp.h
src/elem/XRingGauge.c
src/elem/XRingGauge.h
src/elem/XSeekbar.c
src/elem/XSeekbar.h
src/elem/XSelNum.c
src/elem/XSelNum.h
src/elem/XSlider.c
src/elem/XSlider.h
src/elem/XSpinner.c
Author: Paul Conti Date: 2022-04-06 Modified to use Virtual Elements instead of Compound . 472
src/elem/XSpinner.h
Author: Paul Conti Date: 2022-04-06 Modified to use Virtual Elements instead of Compound . 478
src/elem/XTemplate.c
src/elem/XTemplate.h
src/elem/XTextbox.c
src/elem/XTextbox.h
src/elem/XTogglebtn.c
src/elem/XTogglebtn.h
src/elem/XToggleImgbtn.c
src/elem/XToggleImgbtn.h

Chapter 7

Module Documentation

7.1 General Functions

General functions for configuring the GUI.

Functions

char * gslc_GetVer (gslc_tsGui *pGui)

Get the GUIslice version number.

const char * gslc_GetNameDisp (gslc_tsGui *pGui)

Get the GUIslice display driver name.

const char * gslc_GetNameTouch (gslc_tsGui *pGui)

Get the GUIslice touch driver name.

void * gslc_GetDriverDisp (gslc_tsGui *pGui)

Get the native display driver instance.

void * gslc_GetDriverTouch (gslc_tsGui *pGui)

Get the native touch driver instance.

bool gslc_Init (gslc_tsGui *pGui, void *pvDriver, gslc_tsPage *asPage, uint8_t nMaxPage, gslc_tsFont *as←
 Font, uint8_t nMaxFont)

Initialize the GUIslice library.

void gslc_InitDebug (GSLC_CB_DEBUG_OUT pfunc)

Initialize debug output.

void gslc_DebugPrintf (const char *pFmt,...)

Optimized printf routine for GUIslice debug/error output.

bool gslc_GuiRotate (gslc_tsGui *pGui, uint8_t nRotation)

Dynamically change rotation, automatically adapt touchscreen axes swap/flip.

void gslc_Quit (gslc_tsGui *pGui)

Exit the GUIslice environment.

void gslc_Update (gslc_tsGui *pGui)

Perform main GUIslice handling functions.

bool gslc_SetBkgndImage (gslc_tsGui *pGui, gslc_tsImgRef sImgRef)

Configure the background to use a bitmap image.

bool gslc_SetBkgndColor (gslc_tsGui *pGui, gslc_tsColor nCol)

Configure the background to use a solid color.

bool gslc_SetTransparentColor (gslc_tsGui *pGui, gslc_tsColor nCol)

Configure the color to use for image transparency.

• gslc_tsRect gslc_GetClipRect (gslc_tsGui *pGui)

Get the current the clipping rectangle.

bool gslc_SetClipRect (gslc_tsGui *pGui, gslc_tsRect *pRect)

Set the clipping rectangle for further drawing.

7.1.1 Detailed Description

General functions for configuring the GUI.

7.1.2 Function Documentation

7.1.2.1 gslc_DebugPrintf()

Optimized printf routine for GUIslice debug/error output.

- Only supports 's','d','u' tokens
- Calls on the output function configured in gslc_InitDebug()

Parameters

in	pFmt	Format string to use for printing
in		Variable parameter list

Returns

none

7.1.2.2 gslc_GetClipRect()

Get the current the clipping rectangle.

Parameters

in	pGui	Pointer to GUI
----	------	----------------

Returns

rect for active clipping region

7.1 General Functions 15

7.1.2.3 gslc_GetDriverDisp()

Get the native display driver instance.

• This can be useful to access special commands available in the selected driver.

Parameters

```
in pGui Pointer to GUI
```

Returns

Void pointer to the display driver instance. This pointer should be typecast to the particular driver being used. If no driver was created then this function will return NULL.

7.1.2.4 gslc_GetDriverTouch()

Get the native touch driver instance.

• This can be useful to access special commands available in the selected driver.

Parameters

```
in pGui Pointer to GUI
```

Returns

Void pointer to the touch driver instance. This pointer should be typecast to the particular driver being used. If no driver was created then this function will return NULL.

7.1.2.5 gslc_GetNameDisp()

Get the GUIslice display driver name.

Parameters

Returns

String containing driver name

7.1.2.6 gslc_GetNameTouch()

```
\begin{tabular}{ll} const char* gslc\_GetNameTouch ( & gslc\_tsGui * pGui ) \end{tabular}
```

Get the GUIslice touch driver name.

Parameters

in	pGui	Pointer to GUI
----	------	----------------

Returns

String containing driver name

7.1.2.7 gslc_GetVer()

Get the GUIslice version number.

Parameters

```
in pGui Pointer to GUI
```

Returns

String containing version number

7.1.2.8 gslc_GuiRotate()

7.1 General Functions 17

Dynamically change rotation, automatically adapt touchscreen axes swap/flip.

The function assumes that the touchscreen settings for swap and flip in the GUIslice config are valid for the configured GSLC_ROTATE.

Parameters

in	pGui	Pointer to GUI
in	nRotation	Screen Rotation value (0, 1, 2 or 3)

Returns

true if success, false otherwise

7.1.2.9 gslc_Init()

Initialize the GUIslice library.

- Configures the primary screen surface(s)
- · Initializes font support

PRE:

• The environment variables should be configured before calling gslc_lnit().

Parameters

in	pGui	Pointer to GUI
in	pvDriver	Void pointer to Driver struct (gslc_tsDriver*)
in	asPage	Pointer to Page array
in	nMaxPage	Size of Page array
in	asFont	Pointer to Font array
in	nMaxFont	Size of Font array

Returns

true if success, false if fail

7.1.2.10 gslc_InitDebug()

Initialize debug output.

- Defines the user function used for debug/error output
- pfunc is responsible for outputing a single character
- For Arduino, this user function would typically call Serial.print()

Parameters

in	pfunc	Pointer to user character-out function
----	-------	--

Returns

none

7.1.2.11 gslc_Quit()

Exit the GUIslice environment.

• Calls lower-level destructors to clean up any initialized subsystems and deletes any created elements or fonts

Parameters

```
in pGui Pointer to GUI
```

Returns

None

7.1.2.12 gslc_SetBkgndColor()

Configure the background to use a solid color.

7.1 General Functions

• The background is used when redrawing the entire page

Parameters

in	pGui	Pointer to GUI
in	nCol	RGB Color to use

Returns

true if success, false if fail

7.1.2.13 gslc_SetBkgndImage()

Configure the background to use a bitmap image.

• The background is used when redrawing the entire page

Parameters

in	pGui	Pointer to GUI
in	sImgRef	Image reference

Returns

true if success, false if fail

7.1.2.14 gslc_SetClipRect()

Set the clipping rectangle for further drawing.

Parameters

in	pGui	Pointer to GUI
in	pRect	Pointer to Rect for clipping (or NULL for entire screen)

Returns

true if success, false if error

7.1.2.15 gslc_SetTransparentColor()

Configure the color to use for image transparency.

- · Drawing a BMP with transparency enabled will cause regions in this specific color to appear transparent
- This API overrides the config option GSLC_BMP_TRANS_RGB

Parameters

in	pGui	Pointer to GUI
in	nCol	RGB Color to use

Returns

true if success, false if fail

7.1.2.16 gslc_Update()

Perform main GUIslice handling functions.

- · Handles any touch events
- · Performs any necessary screen redraw

Parameters

in	pGui	Pointer to GUI
----	------	----------------

Returns

None

7.2 Graphics General Functions

Helper functions that support graphics operations.

Functions

bool gslc_lslnRect (int16_t nSelX, int16_t nSelY, gslc_tsRect rRect)

Determine if a coordinate is inside of a rectangular region.

gslc_tsRect gslc_ExpandRect (gslc_tsRect rRect, int16_t nExpandW, int16_t nExpandH)

Expand or contract a rectangle in width and/or height (equal amounts on both side), based on the centerpoint of the rectangle.

bool gslc_lslnWH (int16_t nSelX, int16_t nSelY, uint16_t nWidth, uint16_t nHeight)

Determine if a coordinate is inside of a width x height region.

void gslc_UnionRect (gslc_tsRect *pRect, gslc_tsRect rAddRect)

Expand a rect to include another rect.

void gslc_InvalidateRgnReset (gslc_tsGui *pGui)

Reset the invalidation region.

void gslc InvalidateRgnPage (gslc tsGui *pGui, gslc tsPage *pPage)

Include an entire page (eg.

void gslc_InvalidateRgnScreen (gslc_tsGui *pGui)

Mark the entire screen as invalidated.

void gslc_InvalidateRgnAdd (gslc_tsGui *pGui, gslc_tsRect rAddRect)

Add a rectangular region to the invalidation region.

bool gslc_ClipPt (gslc_tsRect *pClipRect, int16_t nX, int16_t nY)

Perform basic clipping of a single point to a clipping region.

bool gslc_ClipLine (gslc_tsRect *pClipRect, int16_t *pnX0, int16_t *pnY0, int16_t *pnX1, int16_t *pnY1)

Perform basic clipping of a line to a clipping region.

bool gslc_ClipRect (gslc_tsRect *pClipRect, gslc_tsRect *pRect)

Perform basic clipping of a rectangle to a clipping region.

gslc_tslmgRef gslc_GetImageFromFile (const char *pFname, gslc_teImgRefFlags eFmt)

Create an image reference to a bitmap file in LINUX filesystem.

• gslc_tsImgRef gslc_GetImageFromSD (const char *pFname, gslc_teImgRefFlags eFmt)

Create an image reference to a bitmap file in SD card.

gslc_tslmgRef gslc_GetImageFromRam (unsigned char *pImgBuf, gslc_teImgRefFlags eFmt)

Create an image reference to a bitmap in SRAM.

gslc_tslmgRef gslc_GetImageFromProg (const unsigned char *pImgBuf, gslc_teImgRefFlags eFmt)

Create an image reference to a bitmap in program memory (PROGMEM)

void gslc_PolarToXY (uint16_t nRad, int16_t n64Ang, int16_t *nDX, int16_t *nDY)

Convert polar coordinate to cartesian.

• int16 t gslc sinFX (int16 t n64Ang)

Calculate fixed-point sine function from fractional degrees.

int16_t gslc_cosFX (int16_t n64Ang)

Calculate fixed-point cosine function from fractional degrees.

gslc_tsColor gslc_ColorBlend2 (gslc_tsColor colStart, gslc_tsColor colEnd, uint16_t nMidAmt, uint16_t n
 BlendAmt)

Create a color based on a blend between two colors.

 gslc_tsColor gslc_ColorBlend3 (gslc_tsColor colStart, gslc_tsColor colMid, gslc_tsColor colEnd, uint16_t n← MidAmt, uint16 t nBlendAmt)

Create a color based on a blend between three colors.

bool gslc_ColorEqual (gslc_tsColor a, gslc_tsColor b)

Check whether two colors are equal.

7.2.1 Detailed Description

Helper functions that support graphics operations.

7.2.2 Function Documentation

7.2.2.1 gslc_ClipLine()

Perform basic clipping of a line to a clipping region.

- Implements Cohen-Sutherland algorithm
- Coordinates in parameter list are modified to fit the region

Parameters

in	pClipRect	Pointer to clipping region
in,out	pnX0	Ptr to X coordinate of line start
in,out	pnY0	Ptr to Y coordinate of line start
in,out	pnX1	Ptr to X coordinate of line end
in,out	pnY1	Ptr to Y coordinate of line end

Returns

true if line is visible, false if it should be discarded

7.2.2.2 gslc_ClipPt()

Perform basic clipping of a single point to a clipping region.

Parameters

in	pClipRect	Pointer to clipping region
in	nΧ	X coordinate of point
in	nY	Y coordinate of point

Returns

true if point is visible, false if it should be discarded

7.2.2.3 gslc_ClipRect()

Perform basic clipping of a rectangle to a clipping region.

• Coordinates in parameter rect are modified to fit the region

Parameters

in	pClipRect	Pointer to clipping region
in,out	pRect	Ptr to rectangle

Returns

true if rect is visible, false if it should be discarded

7.2.2.4 gslc_ColorBlend2()

Create a color based on a blend between two colors.

Parameters

in	colStart	Starting color
in	colEnd	Ending color
in	nMidAmt	Position (01000) between start and end color at which the midpoint between colors should appear. Normally set to 500 (half-way).
Generate	ed hBPengamt	The position (01000) between start and end at which we want to calculate the resulting blended color.

Returns

Blended color

7.2.2.5 gslc_ColorBlend3()

Create a color based on a blend between three colors.

Parameters

in	colStart	Starting color
in	colMid	Intermediate color
in	colEnd	Ending color
in	nMidAmt	Position (01000) between start and end color at which the intermediate color should appear.
in	nBlendAmt	The position (01000) between start and end at which we want to calculate the resulting blended color.

Returns

Blended color

7.2.2.6 gslc_ColorEqual()

Check whether two colors are equal.

Parameters

in	а	First color
in	b	Second color

Returns

True iff a and b are the same color.

7.2.2.7 gslc_cosFX()

Calculate fixed-point cosine function from fractional degrees.

- Depending on configuration, the result is derived from either floating point math library or fixed point lookup
- gslc_cosFX(nAngDeg*64)/32768.0 = cos(nAngDeg*2pi/360)

Parameters

in	n64Ang	Angle (in units of 1/64 degrees)
----	--------	----------------------------------

Returns

Fixed-point cosine result. Signed 16-bit; divide by 32768 to get the actual value.

7.2.2.8 gslc_ExpandRect()

Expand or contract a rectangle in width and/or height (equal amounts on both side), based on the centerpoint of the rectangle.

Parameters

in	rRect	Rect Rectangular region before resizing	
in	nExpandW	Number of pixels to expand the width (if positive) of contract the width (if negative)	
in	nExpandH	Number of pixels to expand the height (if positive) of contract the height (if negative)	

Returns

gslc_tsRect() with resized dimensions

7.2.2.9 gslc_GetImageFromFile()

Create an image reference to a bitmap file in LINUX filesystem.

Parameters

in	pFname	Pointer to filename string of image in filesystem
in	eFmt	Image format

Returns

Loaded image reference

7.2.2.10 gslc_GetImageFromProg()

Create an image reference to a bitmap in program memory (PROGMEM)

Parameters

in	pImgBuf	Pointer to image buffer in memory
in	eFmt	Image format

Returns

Loaded image reference

7.2.2.11 gslc_GetImageFromRam()

Create an image reference to a bitmap in SRAM.

Parameters

in	pImgBuf	Pointer to image buffer in memory
in	eFmt	Image format

Returns

Loaded image reference

7.2.2.12 gslc_GetImageFromSD()

Create an image reference to a bitmap file in SD card.

Parameters

in	pFname	Pointer to filename string of image in SD card
in	eFmt	Image format

Returns

Loaded image reference

7.2.2.13 gslc_InvalidateRgnAdd()

Add a rectangular region to the invalidation region.

• This is usually called when an element has been modified

Parameters

in	pGui	Pointer to GUI
in	rAddRect	Rectangle to add to the invalidation region

Returns

none

7.2.2.14 gslc_InvalidateRgnPage()

Include an entire page (eg.

from a page stack) in the invalidation region

Parameters

in	pGui	Pointer to GUI
in	pPage	Pointer to page

Returns

none

7.2.2.15 gslc_InvalidateRgnReset()

```
void gslc_InvalidateRgnReset ( {\tt gslc\_tsGui\ *\ pGui\ )}
```

Reset the invalidation region.

Parameters

in <i>pGui</i> Pointe	r to GUI
-----------------------	----------

Returns

none

7.2.2.16 gslc_InvalidateRgnScreen()

Mark the entire screen as invalidated.

Parameters

```
in pGui Pointer to GUI
```

Returns

none

7.2.2.17 gslc_lslnRect()

```
int16_t nSelY,
gslc_tsRect rRect )
```

Determine if a coordinate is inside of a rectangular region.

• This routine is useful in determining if a touch coordinate is inside of a button.

Parameters

in	nSelX	X coordinate to test
in	nSelY	X coordinate to test
in	rRect	Rectangular region to compare against

Returns

true if inside region, false otherwise

7.2.2.18 gslc_lslnWH()

Determine if a coordinate is inside of a width x height region.

• This routine is useful in determining if a relative coordinate is within a given W x H dimension

Parameters

in	nSelX	X coordinate to test
in	nSelY	X coordinate to test
in	nWidth	Width to test against
in	nHeight	Height to test against

Returns

true if inside region, false otherwise

7.2.2.19 gslc_PolarToXY()

```
int16_t n64Ang,
int16_t * nDX,
int16_t * nDY )
```

Convert polar coordinate to cartesian.

Parameters

in	nRad	Radius of ray
in	n64Ang	Angle of ray (in units of 1/64 degrees, 0 is up)
out	nDX	X offset for ray end
out	nDY	Y offset for ray end

Returns

none

7.2.2.20 gslc_sinFX()

Calculate fixed-point sine function from fractional degrees.

- Depending on configuration, the result is derived from either floating point math library or fixed point lookup table.
- gslc_sinFX(nAngDeg*64)/32768.0 = sin(nAngDeg*2pi/360)

Parameters

in	n64Ang	Angle (in units of 1/64 degrees)

Returns

Fixed-point sine result. Signed 16-bit; divide by 32768 to get the actual value.

7.2.2.21 gslc_UnionRect()

Expand a rect to include another rect.

• This routine can be useful to modify an invalidation region to include another modified element

Parameters

in	pRect	Initial rect region
in	rAddRect	Rectangle to add to the rect region

Returns

none

7.3 Graphics Primitive Functions

These routines cause immediate drawing to occur on the primary screen.

Functions

• void gslc_DrawSetPixel (gslc_tsGui *pGui, int16_t nX, int16_t nY, gslc_tsColor nCol)

Set a pixel on the active screen to the given color with lock.

• void gslc_DrawLine (gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, gslc_tsColor nCol)

Draw an arbitrary line using Bresenham's algorithm.

void gslc DrawLineH (gslc tsGui *pGui, int16 t nX, int16 t nY, uint16 t nW, gslc tsColor nCol)

Draw a horizontal line.

• void gslc_DrawLineV (gslc_tsGui *pGui, int16_t nX, int16_t nY, uint16_t nH, gslc_tsColor nCol)

Draw a vertical line.

void gslc_DrawLinePolar (gslc_tsGui *pGui, int16_t nX, int16_t nY, uint16_t nRadStart, uint16_t nRadEnd, int16_t n64Ang, gslc_tsColor nCol)

Draw a polar ray segment.

void gslc DrawFrameRect (gslc tsGui *pGui, gslc tsRect rRect, gslc tsColor nCol)

Draw a framed rectangle.

• void gslc_DrawFrameRoundRect (gslc_tsGui *pGui, gslc_tsRect rRect, int16_t nRadius, gslc_tsColor nCol)

Draw a framed rounded rectangle.
 void gslc_DrawFillRect (gslc_tsGui *pGui, gslc_tsRect rRect, gslc_tsColor nCol)

Draw a filled rectangle.

Draw a filled rounded rectangle.

 $\bullet \ \ void \ gslc_DrawFillRoundRect \ (gslc_tsGui \ *pGui, \ gslc_tsRect \ rRect, \ int 16_t \ nRadius, \ gslc_tsColor \ nCol)$

void gslc_DrawFrameCircle (gslc_tsGui *pGui, int16_t nMidX, int16_t nMidY, uint16_t nRadius, gslc_tsColor nCol)

Draw a framed circle.

void gslc_DrawFillCircle (gslc_tsGui *pGui, int16_t nMidX, int16_t nMidY, uint16_t nRadius, gslc_tsColor n←
 Col)

Draw a filled circle.

void gslc_DrawFrameTriangle (gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int16_t nX2, int16_t nY2, gslc_tsColor nCol)

Draw a framed triangle.

• void gslc_DrawFillTriangle (gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int16_t nX2, int16_t nY2, gslc_tsColor nCol)

Draw a filled triangle.

void gslc_DrawFrameQuad (gslc_tsGui *pGui, gslc_tsPt *psPt, gslc_tsColor nCol)

Draw a framed quadrilateral.

void gslc_DrawFillQuad (gslc_tsGui *pGui, gslc_tsPt *psPt, gslc_tsColor nCol)

Draw a filled quadrilateral.

void gslc_DrawFillGradSector (gslc_tsGui *pGui, int16_t nQuality, int16_t nMidX, int16_t nMidY, int16_t nAng
 Rad1, int16_t nRad2, gslc_tsColor cArcStart, gslc_tsColor cArcEnd, int16_t nAngSecStart, int16_t nAng
 SecEnd, int16_t nAngGradStart, int16_t nAngGradRange)

Draw a gradient filled sector of a circle with support for inner and outer radius.

void gslc_DrawFillSector (gslc_tsGui *pGui, int16_t nQuality, int16_t nMidX, int16_t nMidY, int16_t nRad1, int16_t nRad2, gslc_tsColor cArc, int16_t nAngSecStart, int16_t nAngSecEnd)

Draw a flat filled sector of a circle with support for inner and outer radius.

7.3.1 Detailed Description

These routines cause immediate drawing to occur on the primary screen.

7.3.2 Function Documentation

7.3.2.1 gslc_DrawFillCircle()

Draw a filled circle.

Parameters

in	pGui	Pointer to GUI
in	nMidX	Center X coordinate
in	nMidY	Center Y coordinate
in	nRadius	Radius of circle
in	nCol	Color RGB value for the fill

Returns

none

7.3.2.2 gslc_DrawFillGradSector()

```
void gslc_DrawFillGradSector (
    gslc_tsGui * pGui,
    int16_t nQuality,
    int16_t nMidX,
    int16_t nMidY,
    int16_t nRad1,
    int16_t nRad2,
    gslc_tsColor cArcStart,
    gslc_tsColor cArcEnd,
    int16_t nAngSecStart,
    int16_t nAngGradStart,
    int16_t nAngGradStart,
    int16_t nAngGradRange )
```

Draw a gradient filled sector of a circle with support for inner and outer radius.

- · Can be used to create a ring or pie chart
- Note that the gradient fill is defined by both the color stops (cArcStart..cArcEnd) as well as a gradient angular range (nAngGradStart..nAngGradStart+nAngGradRange). This gradient angular range can be differeng from the drawing angular range (nAngSegStart..nAngSecEnd) to enable more advanced control styling / updates.

Parameters

in	pGui	Pointer to GUI
in	nQuality	Number of segments used to depict a full circle. The higher the value, the smoother the resulting arcs. A value of 72 provides 360/72=5 degrees per segment which is a reasonable compromise between smoothness and performance. Note that 360/nQuality should be an integer result, thus the allowable quality settings are: 360 (max quality), 180, 120, 90, 72, 60, 45, 40, 36 (low quality), etc.
in	nMidX	Midpoint X coordinate of circle
in	nMidY	Midpoint Y coordinate of circle
in	nRad1	Inner sector radius (0 for sector / pie, non-zero for ring)
in	nRad2	Outer sector radius. Delta from nRad1 defines ring thickness.
in	cArcStart	Start color for gradient fill (with angular range defined by nAngGradStart,nAngGradRange)
in	cArcEnd	End color for gradient fill
in	nAngSecStart	Angle of start of sector drawing (0 at top), measured in degrees.
in	nAngSecEnd	Angle of end of sector drawing (0 at top), measured in degrees.
in	nAngGradStart	For gradient fill, defines the starting angle associated with the starting color (cArcStart)
in	nAngGradRange	For gradient fill, defines the angular range associated with the start-to-end color range (cArcStartcArcEnd)

Returns

none

7.3.2.3 gslc_DrawFillQuad()

Draw a filled quadrilateral.

Parameters

in	pGui	Pointer to GUI
in	psPt	Pointer to array of 4 points
in	nCol	Color RGB value for the frame

Returns

true if success, false if error

7.3.2.4 gslc_DrawFillRect()

Draw a filled rectangle.

Parameters

in	pGui	Pointer to GUI
in	rRect	Rectangular region to fill
in	nCol	Color RGB value to fill

Returns

none

7.3.2.5 gslc_DrawFillRoundRect()

Draw a filled rounded rectangle.

Parameters

in	pGui	Pointer to GUI
in	rRect	Rectangular region to fill
in	nRadius	Radius for the rounded corners
in	nCol	Color RGB value to fill

Returns

none

7.3.2.6 gslc_DrawFillSector()

Draw a flat filled sector of a circle with support for inner and outer radius.

· Can be used to create a ring or pie chart

Parameters

in	pGui	Pointer to GUI
in	nQuality	Number of segments used to depict a full circle. The higher the value, the smoother the resulting arcs. A value of 72 provides 360/72=5 degrees per segment which is a reasonable compromise between smoothness and performance.
in	nMidX	Midpoint X coordinate of circle
in	nMidY	Midpoint Y coordinate of circle
in	nRad1	Inner sector radius (0 for sector / pie, non-zero for ring)
in	nRad2	Outer sector radius. Delta from nRad1 defines ring thickness.
in	cArc	Color for flat fill
in	nAngSecStart	Angle of start of sector drawing (0 at top), measured in degrees.
in	nAngSecEnd	Angle of end of sector drawing (0 at top), measured in degrees.

Returns

none

7.3.2.7 gslc_DrawFillTriangle()

Draw a filled triangle.

Parameters

in	pGui	Pointer to GUI
in	nX0	X Coordinate #1
in	nY0	Y Coordinate #1
in	nX1	X Coordinate #2
in	nY1	Y Coordinate #2
in	nX2	X Coordinate #3
in	nY2	Y Coordinate #3
in	nCol	Color RGB value for the fill

Returns

true if success, false if error

7.3.2.8 gslc_DrawFrameCircle()

Draw a framed circle.

Parameters

in	pGui	Pointer to GUI
in	nMidX	Center X coordinate
in	nMidY	Center Y coordinate
in	nRadius	Radius of circle
in	nCol	Color RGB value for the frame

Returns

none

7.3.2.9 gslc_DrawFrameQuad()

Draw a framed quadrilateral.

Parameters

in	pGui	Pointer to GUI
in	psPt	Pointer to array of 4 points
in	nCol	Color RGB value for the frame

Returns

true if success, false if error

7.3.2.10 gslc_DrawFrameRect()

Draw a framed rectangle.

Parameters

in	pGui	Pointer to GUI
in	rRect	Rectangular region to frame
in	nCol	Color RGB value for the frame

Returns

none

7.3.2.11 gslc_DrawFrameRoundRect()

Draw a framed rounded rectangle.

Parameters

in	pGui	Pointer to GUI
in	rRect	Rectangular region to frame
in	nRadius	Radius for the rounded corners
in	nCol	Color RGB value for the frame

Returns

none

7.3.2.12 gslc_DrawFrameTriangle()

Draw a framed triangle.

Parameters

in	pGui	Pointer to GUI
in	nX0	X Coordinate #1
in	nY0	Y Coordinate #1
in	nX1	X Coordinate #2
in	nY1	Y Coordinate #2
in	nX2	X Coordinate #3
in	nY2	Y Coordinate #3
in	nCol	Color RGB value for the frame

Returns

true if success, false if error

7.3.2.13 gslc_DrawLine()

Draw an arbitrary line using Bresenham's algorithm.

Parameters

in	pGui	Pointer to GUI	
----	------	----------------	--

Parameters

in	nX0	X coordinate of line startpoint
in	nY0	Y coordinate of line startpoint
in	nX1	X coordinate of line endpoint
in	nY1	Y coordinate of line endpoint
in	nCol	Color RGB value for the line

Returns

none

7.3.2.14 gslc_DrawLineH()

Draw a horizontal line.

• Note that direction of line is in +ve X axis

Parameters

in	pGui	Pointer to GUI
in	nΧ	X coordinate of line startpoint
in	nΥ	Y coordinate of line startpoint
in	nW	Width of line (in +X direction)
in	nCol	Color RGB value for the line

Returns

none

7.3.2.15 gslc_DrawLinePolar()

```
uint16_t nRadStart,
uint16_t nRadEnd,
int16_t n64Ang,
gslc_tsColor nCol )
```

Draw a polar ray segment.

Parameters

in	pGui	Pointer to GUI
in	nX X coordinate of line startpoint	
in	nΥ	Y coordinate of line startpoint
in	nRadStart	Starting radius of line
in	nRadEnd	Ending radius of line
in	n64Ang	Angle of ray (degrees * 64). 0 is up, +90*64 is to right From -180*64 to +180*64
in	nCol	Color RGB value for the line

Returns

none

7.3.2.16 gslc_DrawLineV()

Draw a vertical line.

• Note that direction of line is in +ve Y axis

Parameters

in	pGui	Pointer to GUI
in	nΧ	X coordinate of line startpoint
in	nΥ	Y coordinate of line startpoint
in	nΗ	Height of line (in +Y direction)
in	nCol	Color RGB value for the line

Returns

none

7.3.2.17 gslc_DrawSetPixel()

Set a pixel on the active screen to the given color with lock.

- Calls upon gslc_DrvDrawSetPixelRaw() but wraps with a surface lock lock
- If repeated access is needed, use gslc_DrvDrawSetPixelRaw() instead

Parameters

in	pGui	Pointer to GUI
in	nΧ	Pixel X coordinate to set
in	nΥ	Pixel Y coordinate to set
in	nCol	Color pixel value to assign

Returns

none

7.4 Font Functions 43

7.4 Font Functions

Functions that load fonts.

Functions

bool gslc_FontAdd (gslc_tsGui *pGui, int16_t nFontId, gslc_teFontRefType eFontRefType, const void *pv←
FontRef, uint16_t nFontSz)

Load a font into the local font cache and assign font ID (nFontId).

bool gslc_FontSet (gslc_tsGui *pGui, int16_t nFontId, gslc_teFontRefType eFontRefType, const void *pv←
FontRef, uint16_t nFontSz)

Load a font into the local font cache and store as font ID (nFontId)

• gslc_tsFont * gslc_FontGet (gslc_tsGui *pGui, int16_t nFontId)

Fetch a font from its ID value.

• bool gslc_FontSetMode (gslc_tsGui *pGui, int16_t nFontId, gslc_teFontRefMode eFontMode)

Set the font operating mode.

7.4.1 Detailed Description

Functions that load fonts.

7.4.2 Function Documentation

7.4.2.1 gslc_FontAdd()

Load a font into the local font cache and assign font ID (nFontId).

- · Font is stored into next available internal array element
- NOTE: Use FontSet() instead

Parameters

in	pGui	Pointer to GUI
in	nFontId	ID to use when referencing this font
in	eFontRefType	Font reference type (eg. filename or pointer)
in	pvFontRef Reference pointer to identify the font. In the case of SDL mode, it is a filepath to the font file. In the case of Arduino it is a pointer value to the font bitmap array (GFXFont)	
in	nFontSz	Typeface size to use (only used in SDL mode)

Generated by Doxygen

Returns

true if load was successful, false otherwise

7.4.2.2 gslc_FontGet()

Fetch a font from its ID value.

Parameters

in	pGui	Pointer to GUI
in	n⊷	ID value used to reference the font (supplied originally to gslc_FontAdd()
	FontId	

Returns

A pointer to the font structure or NULL if error

7.4.2.3 gslc_FontSet()

Load a font into the local font cache and store as font ID (nFontId)

- Font is stored into index nFontId, so nFontId must be from separate font enum (0-based).
- Example: enum { E_FONT_BTN, E_FONT_TXT, MAX_FONT };

Parameters

in	pGui	Pointer to GUI
in	nFontId	ID to use when referencing this font
in	eFontRefType	Font reference type (eg. filename or pointer)
in	pvFontRef	Reference pointer to identify the font. In the case of SDL mode, it is a filepath to the font file. In the case of Arduino it is a pointer value to the font bitmap array (GFXFont)
in	nFontSz	Typeface size to use (only used in SDL mode)

7.4 Font Functions 45

Returns

true if load was successful, false otherwise

7.4.2.4 gslc_FontSetMode()

Set the font operating mode.

Parameters

in	pGui	Pointer to GUI
in	nFontId	ID value used to reference the font (supplied originally to gslc_FontAdd()
in,out	eFontMode	Font mode to assign to this font

Returns

true if success

7.5 Page Functions

Functions that operate at the page level.

Functions

int gslc GetPageCur (gslc tsGui *pGui)

Fetch the current page ID.

void gslc SetStackPage (gslc tsGui *pGui, uint8 t nStackPos, int16 t nPageId)

Assign a page to the page stack.

• void gslc_SetStackState (gslc_tsGui *pGui, uint8_t nStackPos, bool bActive, bool bDoDraw)

Change the status of a page in a page stack.

void gslc_SetPageBase (gslc_tsGui *pGui, int16_t nPageId)

Assigns a page for the base layer in the page stack.

void gslc_SetPageCur (gslc_tsGui *pGui, int16_t nPageId)

Select a page for the current layer in the page stack.

void gslc SetPageOverlay (gslc tsGui *pGui, int16 t nPageId)

Select a page for the overlay layer in the page stack.

void gslc_PopupShow (gslc_tsGui *pGui, int16_t nPageId, bool bModal)

Show a popup dialog.

void gslc PopupHide (gslc tsGui *pGui)

Hides the currently active popup dialog.

• void gslc_PageRedrawSet (gslc_tsGui *pGui, bool bRedraw)

Update the need-redraw status for the current page.

bool gslc_PageRedrawGet (gslc_tsGui *pGui)

Get the need-redraw status for the current page.

• void gslc_PageAdd (gslc_tsGui *pGui, int16_t nPageId, gslc_tsElem *psElem, uint16_t nMaxElem, gslc_← tsElemRef *psElemRef, uint16_t nMaxElemRef)

Add a page to the GUI.

• gslc_tsElemRef * gslc_PageFindElemById (gslc_tsGui *pGui, int16_t nPageId, int16_t nElemId)

Find an element in the GUI by its Page ID and Element ID.

7.5.1 Detailed Description

Functions that operate at the page level.

7.5.2 Function Documentation

7.5.2.1 gslc_GetPageCur()

Fetch the current page ID.

7.5 Page Functions 47

Parameters

in <i>pGui</i>	Pointer to GUI
----------------	----------------

Returns

Page ID

7.5.2.2 gslc_PageAdd()

Add a page to the GUI.

- This call associates an element array with the collection within the page
- Once a page has been added to the GUI, elements can be added to the page by specifying the same page ID

Parameters

in	pGui	Pointer to GUI
in	nPageId	Page ID to assign
in	psElem	Internal element array storage to associate with the page
in	nMaxElem	Maximum number of elements that can be added to the internal element array (ie. RAM))
in	psElemRef	Internal element reference array storage to associate with the page. All elements, whether they are located in the internal element array or in external Flash (PROGMEM) storage, require an entry in the element reference array.
in	nMaxElemRef	Maximum number of elements in the reference array. This is effectively the maximum number of elements that can appear on a page, irrespective of whether it is stored in RAM or Flash (PROGMEM).

Returns

none

7.5.2.3 gslc_PageFindElemByld()

```
gslc_tsElemRef* gslc_PageFindElemById ( gslc\_tsGui \ * pGui, \label{eq:gslc_tsGui}
```

```
int16_t nPageId,
int16_t nElemId )
```

Find an element in the GUI by its Page ID and Element ID.

Parameters

in	pGui	Pointer to GUI
in	n⊷	Page ID to search
	Pageld	
in	n⊷	Element ID to search
	ElemId	

Returns

Ptr to an element or NULL if none found

7.5.2.4 gslc_PageRedrawGet()

```
bool gslc_PageRedrawGet ( {\tt gslc\_tsGui\ *\ pGui\ )}
```

Get the need-redraw status for the current page.

Parameters

in	pGui	Pointer to GUI
----	------	----------------

Returns

True if redraw required, false otherwise

7.5.2.5 gslc_PageRedrawSet()

Update the need-redraw status for the current page.

Parameters

	in	pGui	Pointer to GUI
ſ	in	bRedraw	True if redraw required, false otherwise

7.5 Page Functions 49

Returns

none

7.5.2.6 gslc_PopupHide()

```
void gslc_PopupHide ( {\tt gslc\_tsGui\ *\ pGui\ )}
```

Hides the currently active popup dialog.

Parameters

in	pGui	Pointer to GUI
----	------	----------------

Returns

none

7.5.2.7 gslc_PopupShow()

Show a popup dialog.

• Popup dialogs use the overlay layer in the page stack

Parameters

in	pGui	Pointer to GUI	
in	n⊷	Page ID to use as the popup dialog	
	Pageld		
in	bModal	If true, popup is modal (other layers won't accept touch). If false, popup is modeless (other	
		layers still accept touch)	

Returns

none

7.5.2.8 gslc_SetPageBase()

Assigns a page for the base layer in the page stack.

Parameters

in	pGui	Pointer to GUI
in	n⊷	Page ID to select (or GSLC_PAGE_NONE to disable)
	Pageld	

Returns

none

7.5.2.9 gslc_SetPageCur()

Select a page for the current layer in the page stack.

Parameters

in	pGui	Pointer to GUI
in	n⊷	Page ID to select
	Pageld	

Returns

none

7.5.2.10 gslc_SetPageOverlay()

Select a page for the overlay layer in the page stack.

7.5 Page Functions 51

Parameters

in	pGui	Pointer to GUI
in	n⊷	Page ID to select (or GSLC_PAGE_NONE to disable)
	Pageld	

Returns

none

7.5.2.11 gslc_SetStackPage()

Assign a page to the page stack.

Parameters

	in	pGui Pointer to GUI	
	in	nStackPos	Position to update in the page stack (0GSLC_STACKMAX-1)
Ī	in	nPageId	Page ID to select as current

Returns

none

7.5.2.12 gslc_SetStackState()

Change the status of a page in a page stack.

Parameters

in	pGui	Pointer to GUI
in	nStackPos	Position to update in the page stack (0GSLC_STACKMAX-1)
in	bActive Indicate if page should receive touch events	
in bDoDraw Indicate if page should continue to be redrawn. If pages in the stack are overlapping		Indicate if page should continue to be redrawn. If pages in the stack are overlapping and an
		element in a lower layer continues to receive updates, then the element may "show
Generated by Doxygen through" the layers above it. In such cases where pages in the stack are		through" the layers above it. In such cases where pages in the stack are overlapping and lower pages contain dynamically updating elements, it may be best to disable redraw while the overlapping page is visible (by setting bDoDraw to false).

Returns


none

7.6 Element Functions 53

7.6 Element Functions

Functions that are used to create and manipulate elements.

Collaboration diagram for Element Functions:

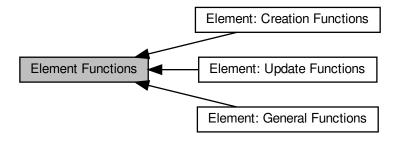

Modules

• Element: Creation Functions

Functions that create GUI elements.

• Element: General Functions

General-purpose functions that operate on Elements.

• Element: Update Functions

Functions that configure or modify an existing eleemnt.

7.6.1 Detailed Description

Functions that are used to create and manipulate elements.

7.7 Element: Creation Functions

Functions that create GUI elements.

Collaboration diagram for Element: Creation Functions:



Functions

 gslc_tsElemRef * gslc_ElemCreateTxt (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsRect rElem, char *pStrBuf, uint8_t nStrBufMax, int16_t nFontId)

Create a Text Element.

 gslc_tsElemRef * gslc_ElemCreateBtnTxt (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsRect rElem, char *pStrBuf, uint8_t nStrBufMax, int16_t nFontId, GSLC_CB_TOUCH cbTouch)

Create a textual Button Element.

• gslc_tsElemRef * gslc_ElemCreateBtnImg (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsRect rElem, gslc_tsImgRef sImgRef, gslc_tsImgRef sImgRefSel, GSLC_CB_TOUCH cbTouch)

Create a graphical Button Element.

gslc_tsElemRef * gslc_ElemCreateBox (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsRect r←
 Elem)

Create a Box Element.

• gslc_tsElemRef * gslc_ElemCreateLine (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1)

Create a Line Element.

gslc_tsElemRef * gslc_ElemCreateImg (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsRect r
 Elem, gslc_tsImgRef sImgRef)

Create an image Element.

7.7.1 Detailed Description

Functions that create GUI elements.

7.7.2 Function Documentation

7.7.2.1 gslc_ElemCreateBox()

Create a Box Element.

• Draws a box with frame and fill

Parameters

in	pGui	Pointer to GUI	
in	n⊷	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)	
	ElemId		
in	nPage	Page ID to attach element to	
in	rElem	Rectangle coordinates defining box size	

Returns

Pointer to the Element reference or NULL if failure

7.7.2.2 gslc_ElemCreateBtnImg()

Create a graphical Button Element.

- · Creates a clickable element that uses a BMP image with no frame or fill
- Transparency is supported by bitmap color (0xFF00FF)

Parameters

in	pGui	Pointer to GUI	
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)	
in	nPage Page ID to attach element to		
in	rElem	Elem Rectangle coordinates defining image size	
in	sImgRef Image reference to load (unselected state)		
in	sImgRefSel Image reference to load (selected state)		
in	cbTouch Callback for touch events		

Returns

Pointer to the Element reference or NULL if failure

7.7.2.3 gslc_ElemCreateBtnTxt()

Create a textual Button Element.

· Creates a clickable element that has a textual label with frame and fill

Parameters

in	pGui	Pointer to GUI	
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)	
in	nPage	Page ID to attach element to	
in	rElem	Rectangle coordinates defining text background size	
in	pStrBuf	Buf String to copy into element	
in	nStrBufMax	nStrBufMax Maximum length of string buffer (pStrBuf). Only applicable if GSLC_LOCAL_STR=0. Ignored if GSLC_LOCAL_STR=1.)	
in	n FontID to use for text display		
in	n cbTouch Callback for touch events		

Returns

Pointer to the Element reference or NULL if failure

7.7.2.4 gslc_ElemCreateImg()

Create an image Element.

· Draws an image

Parameters

in	pGui	Pointer to GUI	
in	n⊷	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)	
	ElemId		
in	nPage Page ID to attach element to		
in	rElem Rectangle coordinates defining box size		
in	sImgRef Image reference to load		

Returns

Pointer to the Element reference or NULL if failure

7.7.2.5 gslc_ElemCreateLine()

```
gslc_tsElemRef* gslc_ElemCreateLine (
    gslc_tsGui * pGui,
    int16_t nElemId,
    int16_t nPage,
    int16_t nX0,
    int16_t nX1,
    int16_t nX1,
    int16_t nY1)
```

Create a Line Element.

· Draws a line with fill color

Parameters

in	pGui	Pointer to GUI	
in	n⊷	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)	
	ElemId		
in	nPage	Page ID to attach element to	
in	nX0	X coordinate of line startpoint	
in	nY0	Y coordinate of line startpoint	
in	nX1	X coordinate of line endpoint	
in	nY1	Y coordinate of line endpoint	

Returns

Pointer to the Element reference or NULL if failure

7.7.2.6 gslc_ElemCreateTxt()

Create a Text Element.

• Draws a text string with filled background

Parameters

in	pGui	Pointer to GUI	
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)	
in	nPage	Page ID to attach element to	
in	rElem	Rectangle coordinates defining text background size	
in	pStrBuf	String to copy into element	
in	nStrBufMax	Maximum length of string buffer (pStrBuf). Only applicable if GSLC_LOCAL_STR=0.	
		Ignored if GSLC_LOCAL_STR=1.)	
in	nFontId	Font ID to use for text display	

Returns

Pointer to the Element reference or NULL if failure

7.8 Element: General Functions

General-purpose functions that operate on Elements.

Collaboration diagram for Element: General Functions:



Functions

• int gslc_ElemGetId (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get an Element ID from an element structure.

7.8.1 Detailed Description

General-purpose functions that operate on Elements.

7.8.2 Function Documentation

7.8.2.1 gslc_ElemGetId()

Get an Element ID from an element structure.

Parameters

in	pGui	Pointer to GUI
in <i>pElemRef</i>		Pointer to Element reference structure

Returns

ID of element or GSLC_ID_NONE if not found

7.9 Element: Update Functions

Functions that configure or modify an existing element.

Collaboration diagram for Element: Update Functions:



Functions

void gslc_ElemSetFillEn (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bFillEn)

Set the fill state for an Element.

void gslc_ElemSetFrameEn (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bFrameEn)

Set the frame state for an Element.

void gslc_ElemSetRoundEn (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bRoundEn)

Set the rounded frame/fill state for an Element.

void gslc_ElemSetCol (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colFrame, gslc_tsColor colFill, gslc_tsColor colFillGlow)

Update the common color selection for an Element.

void gslc_ElemSetGlowCol (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colFrameGlow, gslc_tsColor colFillGlow, gslc_tsColor colTxtGlow)

Update the common color selection for glowing state of an Element.

void gslc_ElemSetGroup (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int nGroupId)

Set the group ID for an element.

• int gslc_ElemGetGroup (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get the group ID for an element.

void gslc_ElemSetRect (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsRect rElem)

Set the position and size for an element.

gslc_tsRect gslc_ElemGetRect (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get the rectangular region for an element.

void gslc_ElemSetTxtAlign (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, unsigned nAlign)

Set the alignment of a textual element (horizontal and vertical)

void gslc_ElemSetTxtMargin (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, unsigned nMargin)

Set the margin around of a textual element.

void gslc_ElemSetTxtMarginXY (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int8_t nMarginX, int8_t n
 MarginY)

Set the margin around of a textual element (X & Y offsets can be different)

void gslc_StrCopy (char *pDstStr, const char *pSrcStr, uint16_t nDstLen)

Helper routine to perform string deep copy.

void gslc_ElemSetTxtStr (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, const char *pStr)

Update the text string associated with an Element.

char * gslc_ElemGetTxtStr (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Fetch the current text string associated with an Element.

void gslc_ElemSetTxtCol (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colVal)
 Update the text string color associated with an Element ID.

void gslc_ElemSetTxtMem (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_teTxtFlags eFlags)

Update the text string location in memory.

void gslc_ElemSetTxtEnc (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_teTxtFlags eFlags)

Update the text string encoding mode.

void gslc ElemUpdateFont (gslc tsGui *pGui, gslc tsElemRef *pElemRef, int nFontId)

Update the Font selected for an Element's text.

• void gslc_ElemSetRedraw (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_teRedrawType eRedraw)

Update the need-redraw status for an element.

gslc teRedrawType gslc ElemGetRedraw (gslc tsGui *pGui, gslc tsElemRef *pElemRef)

Get the need-redraw status for an element.

void gslc_ElemSetGlowEn (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bGlowEn)

Update the glowing enable for an element.

void gslc ElemSetClickEn (gslc tsGui *pGui, gslc tsElemRef *pElemRef, bool bClickEn)

Update the click enable for an element.

 $\bullet \ \ void \ gslc_ElemSetTouchFunc \ (gslc_tsGui \ *pGui, \ gslc_tsElemRef \ *pElemRef, \ GSLC_CB_TOUCH \ funcCb)$

Update the touch function callback for an element.

void gslc_ElemSetStyleFrom (gslc_tsGui *pGui, gslc_tsElemRef *pElemRefSrc, gslc_tsElemRef *pElem←
 RefDest)

Copy style settings from one element to another.

void gslc_ResetRectState (gslc_tsRectState *pState)

Reset the element region state struct.

Calculate the element region state struct.

 $\bullet \ \ void \ gslc_ElemCalcRectState \ (gslc_tsGui \ *pGui, \ gslc_tsElemRef \ *pElemRef, \ gslc_tsRectState \ *pState)$

• int8_t gslc_ElemCalcResizeForFocus (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Calculate the change in dimensions of an element to account for any change in focus and/or frame attributes.

• void gslc_ElemGrowRect (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int8_t nDelta)

Increase or decrease the size of an element's region.

bool gslc_ElemGetGlowEn (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get the glowing enable for an element.

void gslc_ElemSetGlow (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bGlowing)

Update the glowing indicator for an element.

• bool gslc_ElemGetGlow (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get the glowing indicator for an element.

bool gslc_ElemGetFocusEn (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get the focus enable for an element.

void gslc ElemSetFocusEn (gslc tsGui *pGui, gslc tsElemRef *pElemRef, bool bFocusEn)

Set the focus enable for an element.

void gslc_ElemSetFocus (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bFocused)

Update the focused indicator for an element.

bool gslc ElemGetFocus (gslc tsGui *pGui, gslc tsElemRef *pElemRef)

Get the focused indicator for an element.

• void gslc_ElemSetEdit (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bEditing)

Update the editing indicator for an element.

bool gslc_ElemGetEdit (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get the editing indicator for an element.

void gslc ElemSetVisible (gslc tsGui *pGui, gslc tsElemRef *pElemRef, bool bVisible)

Update the visibility status for an element.

• bool gslc ElemGetVisible (gslc tsGui *pGui, gslc tsElemRef *pElemRef)

Get the visibility status for an element.

- $\bullet \ \ bool\ gslc_ElemGetOnScreen\ (gslc_tsGui\ *pGui,\ gslc_tsElemRef\ *pElemRef)$
 - Determine whether an element is visible on the screen.
- void gslc_ElemSetDrawFunc (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, GSLC_CB_DRAW funcCb)

 Assign the drawing callback function for an element.
- void gslc_ElemSetTickFunc (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, GSLC_CB_TICK funcCb)

 Assign the tick callback function for an element.
- bool gslc_ElemOwnsCoord (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nX, int16_t nY, bool b← OnlyClickEn)

Determine if a coordinate is inside of an element.

7.9.1 Detailed Description

Functions that configure or modify an existing eleemnt.

7.9.2 Function Documentation

7.9.2.1 gslc_ElemCalcRectState()

Calculate the element region state struct.

- · Establishes the size of the frame and inner regions
- Determines the color of various parts of the element (focus rect, frame, text, fll, etc.)
- The region state is calculated based upon the element's attributes, including the frame enable, ability to support focus, whether the contents can be shrunk to accommodate a frame, and the current state of focus/edit/etc.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
out	pState	Pointer to element region state

Returns

none

7.9.2.2 gslc_ElemCalcResizeForFocus()

Calculate the change in dimensions of an element to account for any change in focus and/or frame attributes.

It also takes into account the "NoShrink" attribute which indicates that an element's contents can't be reduced in size (eg. because they contain a fixed-sized image).

• This routine is usually called whenever an element is created and also whenever size-impacting features are adjusted (eg. ElemSetFrameEn).

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference

Returns

The increase (or decrease) in size of the element

7.9.2.3 gslc_ElemGetEdit()

Get the editing indicator for an element.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference

Returns

True if element is being edited

7.9.2.4 gslc_ElemGetFocus()

Get the focused indicator for an element.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference

Returns

True if element is focused

7.9.2.5 gslc_ElemGetFocusEn()

Get the focus enable for an element.

Parameters

i	n	pGui	Pointer to GUI
i	n	pElemRef	Pointer to Element reference

Returns

True if element supports focus

Todo Doc

7.9.2.6 gslc_ElemGetGlow()

Get the glowing indicator for an element.

Parameters

i	Ln	pGui	Pointer to GUI
i	Ln	pElemRef	Pointer to Element reference

Returns

True if element is glowing

7.9.2.7 gslc_ElemGetGlowEn()

Get the glowing enable for an element.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference

Returns

True if element supports glowing

7.9.2.8 gslc_ElemGetGroup()

Get the group ID for an element.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference

Returns

Group ID or GSLC_GROUP_ID_NONE if unassigned

7.9.2.9 gslc_ElemGetOnScreen()

Determine whether an element is visible on the screen.

• This function takes into account both the element's "Visible" state as well as whether the element's associated page is active in the page stack.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference

Returns

True if element appears on the screen, false otherwise

7.9.2.10 gslc_ElemGetRect()

Get the rectangular region for an element.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference

Returns

Rect region of an element

7.9.2.11 gslc_ElemGetRedraw()

Get the need-redraw status for an element.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference

Returns

Redraw status

7.9.2.12 gslc_ElemGetTxtStr()

Fetch the current text string associated with an Element.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference

Returns

Pointer to character array string

7.9.2.13 gslc_ElemGetVisible()

Get the visibility status for an element.

• Note that the visibility state is independent of whether or not the page associated with the element is actively displayed.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference

Returns

True if element is marked as visible, false if hidden

7.9.2.14 gslc_ElemGrowRect()

Increase or decrease the size of an element's region.

· Update the redraw status as needed

Parameters

in pGui Pointer to GUI		Pointer to GUI
in	pElemRef	Pointer to Element reference
in nDelta The increase of element size (negative for dec		The increase of element size (negative for decrease)

Returns

none

7.9.2.15 gslc_ElemOwnsCoord()

Determine if a coordinate is inside of an element.

• This routine is useful in determining if a touch coordinate is inside of a button.

Parameters

in	pGui Pointer to GUI	
in	pElemRef	Element reference used for boundary test
in	nΧ	X coordinate to test
in	nΥ	Y coordinate to test
in	bOnlyClickEn	Only output true if element was also marked as "clickable" (eg. bClickEn=true)

Returns

true if inside element, false otherwise

7.9.2.16 gslc_ElemSetClickEn()

Update the click enable for an element.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	bClickEn	True if element should support click events

Returns

none

7.9.2.17 gslc_ElemSetCol()

Update the common color selection for an Element.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	colFrame	Color for the frame
in	colFill	Color for the fill
in	colFillGlow	Color for the fill when glowing

Returns

none

7.9.2.18 gslc_ElemSetDrawFunc()

```
gslc_tsElemRef * pElemRef,
GSLC_CB_DRAW funcCb )
```

Assign the drawing callback function for an element.

• This allows the user to override the default rendering for an element, enabling the creation of a custom element

Parameters

in pGui Pointer to GUI		Pointer to GUI
in	pElemRef	Pointer to Element reference
in funcCb Function pointer to drawing routine (or NULL for defau		Function pointer to drawing routine (or NULL for default))

Returns

none

7.9.2.19 gslc_ElemSetEdit()

Update the editing indicator for an element.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	bEditing	True if element is being edited

Returns

none

7.9.2.20 gslc_ElemSetFillEn()

Set the fill state for an Element.

• If not filled, the element can support transparency against an arbitrary background, but this can require full screen redraws if the element is updated.

• If filled, the background fill color can be changed by gslc_ElemSetCol()

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	bFillEn	True if filled, false otherwise

Returns

none

7.9.2.21 gslc_ElemSetFocus()

Update the focused indicator for an element.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	bFocused	True if element is focused

Returns

none

7.9.2.22 gslc_ElemSetFocusEn()

Set the focus enable for an element.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	bFocusEn	Enable focus if 1, 0 if not supported

Returns

none

Todo Doc

7.9.2.23 gslc_ElemSetFrameEn()

Set the frame state for an Element.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	bFrameEn	True if framed, false otherwise

Returns

none

7.9.2.24 gslc_ElemSetGlow()

Update the glowing indicator for an element.

Parameters

	in	pGui	Pointer to GUI
	in	pElemRef	Pointer to Element reference
ĺ	in	bGlowing	True if element is glowing

Returns

none

7.9.2.25 gslc_ElemSetGlowCol()

Update the common color selection for glowing state of an Element.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	colFrameGlow	Color for the frame when glowing
in	colFillGlow	Color for the fill when glowing
in	colTxtGlow	Color for the text when glowing

Returns

none

7.9.2.26 gslc_ElemSetGlowEn()

Update the glowing enable for an element.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	bGlowEn	True if element should support glowing

Returns

none

7.9.2.27 gslc_ElemSetGroup()

Set the group ID for an element.

· Typically used to associate radio button elements together

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nGroupId	Group ID to assign

Returns

none

7.9.2.28 gslc_ElemSetRect()

Set the position and size for an element.

• This updates the element's rectangular region, which can be used to relocate or resize an element at runtime

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	rElem	Rect region (top-left coord, width, height)

Returns

none

7.9.2.29 gslc_ElemSetRedraw()

Update the need-redraw status for an element.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	eRedraw	Redraw state to set

Returns

none

7.9.2.30 gslc_ElemSetRoundEn()

Set the rounded frame/fill state for an Element.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	bRoundEn	True if rounded, false otherwise

Returns

none

7.9.2.31 gslc_ElemSetStyleFrom()

Copy style settings from one element to another.

Parameters

	in	pGui	Pointer to GUI
Ī	in	pElemRefSrc	Pointer to source Element reference
ĺ	in	pElemRefDest	Pointer to destination Element reference

Returns

none

7.9.2.32 gslc_ElemSetTickFunc()

Assign the tick callback function for an element.

This allows the user to provide background updates to an element triggered by the main loop call to gslc_←
 Update()

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	funcCb	Function pointer to tick routine (or NULL for none))

Returns

none

7.9.2.33 gslc_ElemSetTouchFunc()

Update the touch function callback for an element.

Parameters

in	pGui	Pointer to GUI
in	'	Pointer to Element reference
Genera 1 N	ted by Doxygen fUNCCD	Pointer to the touch callback function

Returns

none

7.9.2.34 gslc_ElemSetTxtAlign()

Set the alignment of a textual element (horizontal and vertical)

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nAlign	Alignment to specify:
		• GSLC_ALIGN_TOP_LEFT
		• GSLC_ALIGN_TOP_MID
		• GSLC_ALIGN_TOP_RIGHT
		• GSLC_ALIGN_MID_LEFT
		• GSLC_ALIGN_MID_MID
		• GSLC_ALIGN_MID_RIGHT
		• GSLC_ALIGN_BOT_LEFT
		• GSLC_ALIGN_BOT_MID
		• GSLC_ALIGN_BOT_RIGHT

Returns

none

7.9.2.35 gslc_ElemSetTxtCol()

Update the text string color associated with an Element ID.

Parameters

	in	pGui	Pointer to GUI
ſ	in	pElemRef	Pointer to Element reference
Ī	in	colVal	RGB color to change to

Returns

none

7.9.2.36 gslc_ElemSetTxtEnc()

Update the text string encoding mode.

• This function can be used to indicate that the element's text string is encoded in UTF-8, which supports extended / foreign character maps

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	eFlags	Flags associated with text encoding (GSLC_TXT_ENC_*)

Returns

none

7.9.2.37 gslc_ElemSetTxtMargin()

Set the margin around of a textual element.

Parameters

in	pGui	Pointer to GUI
		Pointer to Element reference
Generat	ed by Doxygen nMargin	Number of pixels gap to leave surrounding text

Returns

none

7.9.2.38 gslc_ElemSetTxtMarginXY()

Set the margin around of a textual element (X & Y offsets can be different)

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nMarginX	Number of pixels gap to offset text horizontally
in	nMarginY	Number of pixels gap to offset text vertically

Returns

none

7.9.2.39 gslc_ElemSetTxtMem()

Update the text string location in memory.

Parameters

	in	pGui	Pointer to GUI
Ī	in	pElemRef	Pointer to Element reference
	in	eFlags	Flags associated with text memory location (GSLC_TXT_MEM_*)

Returns

7.9.2.40 gslc_ElemSetTxtStr()

Update the text string associated with an Element.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	pStr	String to copy into element

Returns

none

7.9.2.41 gslc_ElemSetVisible()

Update the visibility status for an element.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	bVisible	True if element is shown, false if hidden

Returns

none

7.9.2.42 gslc_ElemUpdateFont()

Update the Font selected for an Element's text.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nFontId	Font ID to select

Returns

none

7.9.2.43 gslc_ResetRectState()

Reset the element region state struct.

Parameters

	out	pState	Pointer to the element region structure	
--	-----	--------	---	--

Returns

none

7.9.2.44 gslc_StrCopy()

Helper routine to perform string deep copy.

- · Includes termination
- Similar to strncpy() except:
 - nDstLen is the total buffer size (including terminator)
 - A terminator is added at the end of the buffer

Parameters

in,out	pDstStr	Pointer to destination buffer
in	nDstLen	Size of destination buffer (includes NULL)
in	pSrcStr	Pointer to source buffer

Returns

7.10 Touchscreen Functions

Functions that configure and respond to a touch device.

Macros

#define TOUCH ROTATION DATA

Additional definitions for Touch Handling These macros define the transforms used in remapping the touchscreen inputs on the basis of the GUI nRotation setting.

• #define TOUCH ROTATION DATA

Additional definitions for Touch Handling These macros define the transforms used in remapping the touchscreen inputs on the basis of the GUI nRotation setting.

- #define TOUCH_ROTATION_SWAPXY(rotation)
- #define TOUCH ROTATION SWAPXY(rotation)
- #define TOUCH_ROTATION_FLIPX(rotation)
- #define TOUCH_ROTATION_FLIPX(rotation)
- #define TOUCH ROTATION FLIPY(rotation)
- #define TOUCH_ROTATION_FLIPY(rotation)

Functions

• bool gslc_InitTouch (gslc_tsGui *pGui, const char *acDev)

Initialize the touchscreen device driver.

 bool gslc_GetTouch (gslc_tsGui *pGui, int16_t *pnX, int16_t *pnY, uint16_t *pnPress, gslc_teInputRawEvent *peInputEvent, int16_t *pnInputVal)

Initialize the touchscreen device driver.

void gslc SetTouchRemapEn (gslc tsGui *pGui, bool bEn)

Configure touchscreen remapping.

void gslc_SetTouchRemapCal (gslc_tsGui *pGui, uint16_t nXMin, uint16_t nXMax, uint16_t nYMin, uint16_t nYMax)

Configure touchscreen calibration remapping values.

• void gslc_SetTouchPressCal (gslc_tsGui *pGui, uint16_t nPressMin, uint16_t nPressMax)

Configure touchscreen calibration pressure values.

void gslc_SetTouchRemapYX (gslc_tsGui *pGui, bool bSwap)

Configure touchscreen XY swap.

void gslc_SetTouchEn (gslc_tsGui *pGui, bool bEn)

Make touchscreen sensitive (GUI reacts to touch events) or insensitive (GUI ignores touch events)

bool gslc_GetTouchEn (gslc_tsGui *pGui)

Get whether the GUI will react to touch events or not.

7.10.1 Detailed Description

Functions that configure and respond to a touch device.

7.10.2 Macro Definition Documentation

7.10.2.1 TOUCH_ROTATION_DATA [1/2]

```
#define TOUCH_ROTATION_DATA
```

Additional definitions for Touch Handling These macros define the transforms used in remapping the touchscreen inputs on the basis of the GUI nRotation setting.

7.10.2.2 TOUCH_ROTATION_DATA [2/2]

```
#define TOUCH_ROTATION_DATA
```

Additional definitions for Touch Handling These macros define the transforms used in remapping the touchscreen inputs on the basis of the GUI nRotation setting.

7.10.2.3 TOUCH_ROTATION_FLIPX [1/2]

7.10.2.4 TOUCH_ROTATION_FLIPX [2/2]

```
\begin{tabular}{ll} \# define \ TOUCH\_ROTATION\_FLIPX ( \\ rotation \ ) \end{tabular}
```

7.10.2.5 TOUCH_ROTATION_FLIPY [1/2]

7.10.2.6 TOUCH_ROTATION_FLIPY [2/2]

```
\begin{tabular}{ll} \# define \ TOUCH\_ROTATION\_FLIPY ( \\ rotation \ ) \end{tabular}
```

7.10.2.7 TOUCH_ROTATION_SWAPXY [1/2]

```
\begin{tabular}{ll} \# define \ \ TOUCH\_ROTATION\_SWAPXY ( \\ & rotation \ ) \end{tabular}
```

7.10.2.8 TOUCH_ROTATION_SWAPXY [2/2]

7.10.3 Function Documentation

7.10.3.1 gslc_GetTouch()

Initialize the touchscreen device driver.

Parameters

in	pGui	Pointer to GUI
out	pnX	Ptr to int to contain latest touch X coordinate
out	pnY	Ptr to int to contain latest touch Y coordinate
out	pnPress	Ptr to int to contain latest touch pressure value
out	peInputEvent	Indication of event type
out	pnInputVal	Additional data for event type

Returns

true if touch event, false otherwise

7.10.3.2 gslc_GetTouchEn()

Get whether the GUI will react to touch events or not.

Parameters

│ in │ <i>pGui</i> │ Pointer to GUI

Returns

whether the GUI is sensitive for touch events

7.10.3.3 gslc_InitTouch()

Initialize the touchscreen device driver.

Parameters

ĺ	in	pGui	Pointer to GUI	
	in	acDev	Device path to touchscreen (or "" if not applicable)) eg. "/dev/input/touchscreen"	

Returns

true if successful

7.10.3.4 gslc_SetTouchEn()

Make touchscreen sensitive (GUI reacts to touch events) or insensitive (GUI ignores touch events)

Parameters

in	pGui	Pointer to GUI
in	bEn	Enable GUI reaction to touch events

Returns

7.10.3.5 gslc_SetTouchPressCal()

Configure touchscreen calibration pressure values.

· Only used if calibration remapping has been enabled

Parameters

i	n	pGui	Pointer to GUI
i	n	nPressMin	Resistive touchscreen pressure min value
i	n	nPressMax	Resistive touchscreen pressure max value

Returns

none

7.10.3.6 gslc_SetTouchRemapCal()

Configure touchscreen calibration remapping values.

· Only used if calibration remapping has been enabled

Parameters

in	pGui	Pointer to GUI
in	nXMin	Resistive touchscreen X_MIN calibration value
in	nXMax	Resistive touchscreen X_MAX calibration value
in <i>nYMin</i>		Resistive touchscreen Y_MIN calibration value
in	nYMax	Resistive touchscreen Y MAX calibration value

Returns

7.10.3.7 gslc_SetTouchRemapEn()

Configure touchscreen remapping.

Parameters

in	pGui	Pointer to GUI
in	bEn	Enable touchscreen remapping?

Returns

none

7.10.3.8 gslc_SetTouchRemapYX()

Configure touchscreen XY swap.

Parameters

in	pGui	Pointer to GUI
in	bSwap	Enable touchscreen XY swap

Returns

7.11 Input Mapping Functions

Functions that handle GPIO / pin and keyboard input.

Functions

• void gslc_SetPinPollFunc (gslc_tsGui *pGui, GSLC_CB_PIN_POLL pfunc)

Specify the callback function that is used to collect the state of any external inputs (eg.

• void gslc_InitInputMap (gslc_tsGui *pGui, gslc_tsInputMap *asInputMap, uint8_t nInputMapMax)

Specify the mapping between external pin inputs (fetched by the SetPinPollFunc() callback and the GUI actions.

Add an entry into the external input mapping table.

gslc_tsElemRef * gslc_FocusElemGet (gslc_tsGui *pGui)

Find the currently focused element.

void gslc_FocusPageStep (gslc_tsGui *pGui, bool bNext)

Advance the focus to the next page in the page stack.

int16_t gslc_FocusElemStep (gslc_tsGui *pGui, bool bNext)

Advance the focus to the next element in the focused page.

• void gslc_FocusElemIndSet (gslc_tsGui *pGui, int16_t nPageInd, int16_t nElemInd, bool bFocus)

Change the focus to the indexed element on the specified page.

• void gslc_FocusSetToTrackedElem (gslc_tsGui *pGui, gslc_tsCollect *pCollect)

Change the focus to the currently-tracked element.

7.11.1 Detailed Description

Functions that handle GPIO / pin and keyboard input.

7.11.2 Function Documentation

7.11.2.1 gslc_FocusElemGet()

Find the currently focused element.

Parameters

in	pGui	Pointer to GUI

Returns

Element reference of focused widget, or NULL if none

7.11.2.2 gslc_FocusElemIndSet()

Change the focus to the indexed element on the specified page.

• First clear any existing focus before setting a new focus

Parameters

in	pGui	Pointer to GUI	
in	nPageInd The index of the page containing the element		
in	nElemInd	The index of the element containing the element	
in	bFocus	bFocus If true, enables the focus on the specified element after clearing the focus on the old element. If false, no focus is enabled after clearing any existing focus.	

Returns

none

7.11.2.3 gslc_FocusElemStep()

Advance the focus to the next element in the focused page.

Parameters

	in	pGui	Pointer to GUI
in bNext Advance to next element if true, previous		Advance to next element if true, previous if false	

Returns

7.11.2.4 gslc_FocusPageStep()

Advance the focus to the next page in the page stack.

Parameters

	in	pGui	Pointer to GUI
ĺ	in	bNext	Advance to next page if true, previous if false

Returns

none

7.11.2.5 gslc_FocusSetToTrackedElem()

Change the focus to the currently-tracked element.

Parameters

ſ	in	pGui	Pointer to GUI
	in	pCollect	The active element collection to examine

Returns

none

7.11.2.6 gslc_InitInputMap()

Specify the mapping between external pin inputs (fetched by the SetPinPollFunc() callback and the GUI actions.

• This is used to enable external controls to navigate and manipulate the GUI.

Parameters

in	pGui	Pointer to GUI
in	asInputMap	Pointer to the input mapping table
in	nInputMapMax	Total number of entries in mapping table

Returns

none

7.11.2.7 gslc_InputMapAdd()

Add an entry into the external input mapping table.

Parameters

in	pGui	Pointer to GUI
in	eInputEvent The event to detect	
in	nInputVal	The value associated with the detected event
in	eAction	The action to take in the GUI
in	nActionVal	An optional parameter to associate with the GUI action

Returns

none

7.11.2.8 gslc_SetPinPollFunc()

Specify the callback function that is used to collect the state of any external inputs (eg.

buttons, pins, encoders, etc.)

Parameters

in	pGui	Pointer to GUI
in	pfunc	Pointer to the callback function

Returns

7.12 General Purpose Macros

Macros that are used throughout the GUI for debug.

Macros

```
    #define GSLC_DEBUG_PRINT(sFmt, ...)
        Macro to enable optional debug output.
    #define GSLC_DEBUG2_PRINT(sFmt, ...)
    #define GSLC_DEBUG_PRINT_CONST(sFmt, ...)
    #define GSLC_DEBUG2_PRINT_CONST(sFmt, ...)
```

7.12.1 Detailed Description

Macros that are used throughout the GUI for debug.

7.12.2 Macro Definition Documentation

7.12.2.1 GSLC_DEBUG2_PRINT

7.12.2.2 GSLC_DEBUG2_PRINT_CONST

7.12.2.3 GSLC_DEBUG_PRINT

Macro to enable optional debug output.

- Supports printf formatting via gslc_DebugPrintf()
- · Supports storing the format string in PROGMEM
- Note that at least one variable argument must be provided to the macro after the format string. This is a limitation of the macro definition. If no parameters are needed, then simply pass 0. For example: GSLC_D← EBUG_PRINT("Loaded OK",0);

Parameters

in	sFmt	Format string for debug message	
----	------	---------------------------------	--

7.12.2.4 GSLC_DEBUG_PRINT_CONST

```
#define GSLC_DEBUG_PRINT_CONST( sFmt, \\ \dots \quad )
```

7.13 Flash-based Element Macros

Macros that represent element creation routines based in FLASH memory.

Macros

• #define gslc_ElemCreateTxt_P(pGui, nElemId, nPage, nX, nY, nW, nH, strTxt, pFont, colTxt, colFrame, col ← Fill, nAlignTxt, bFrameEn, bFillEn)

Create a read-only text element.

• #define gslc_ElemCreateTxt_P_R(pGui, nElemId, nPage, nX, nY, nW, nH, strTxt, strLength, pFont, colTxt, colFrame, colFill, nAlignTxt, bFrameEn, bFillEn)

Create a read-write text element (element in Flash, string in RAM)

#define gslc_ElemCreateTxt_P_R_ext(pGui, nElemId, nPage, nX, nY, nW, nH, strTxt, strLength, pFont, col
 — Txt, colTxtGlow, colFrame, colFill, nAlignTxt, nMarginX, nMarginY, bFrameEn, bFillEn, bClickEn, bGlowEn,
 pfuncXEvent, pfuncXDraw, pfuncXTouch, pfuncXTick)

Create a read-write text element (element in Flash, string in RAM) with extended customization options.

#define gslc_ElemCreateBox_P(pGui, nElemId, nPage, nX, nY, nW, nH, colFrame, colFill, bFrameEn, bFillEn, pfuncXDraw, pfuncXTick)

Create a read-only box element.

- #define gslc_ElemCreateLine_P(pGui, nElemId, nPage, nX0, nY0, nX1, nY1, colFill)
 - Create a read-only line element.
- #define gslc_ElemCreateBtnTxt_P(pGui, nElemId, nPage, nX, nY, nW, nH, strTxt, pFont, colTxt, colFrame, colFill, colFrameGlow, colFillGlow, nAlignTxt, bFrameEn, bFillEn, callFunc, extraData)

Create a text button element.

7.13.1 Detailed Description

Macros that represent element creation routines based in FLASH memory.

7.13.2 Macro Definition Documentation

7.13.2.1 gslc_ElemCreateBox_P

Create a read-only box element.

Parameters

in	pGui	Pointer to GUI
in	nElemId	Unique element ID to assign
in	nPage	Page ID to attach element to
in	nΧ	X coordinate of element
in	nΥ	Y coordinate of element
in	nW	Width of element
in	nH	Height of element
in	colFrame	Color for the frame
in	colFill	Color for the fill
in	bFrameEn	True if framed, false otherwise
in	bFillEn	True if filled, false otherwise
in	pfuncXDraw	Pointer to custom draw callback (or NULL if default)
in	pfuncXTick	Pointer to custom tick callback (or NULL if default)

7.13.2.2 gslc_ElemCreateBtnTxt_P

```
#define gslc_ElemCreateBtnTxt_P(
            pGui,
             nElemId,
             nPage,
             nX,
             nY,
             nW,
             nН,
             strTxt,
             pFont,
             colTxt,
             colFrame,
              colFill,
              colFrameGlow,
              colFillGlow,
             nAlignTxt,
             bFrameEn,
             bFillEn,
             callFunc,
              extraData )
```

Create a text button element.

Parameters

in	pGui	Pointer to GUI
in	nElemId	Unique element ID to assign
in	nPage	Page ID to attach element to
in	nX	X coordinate of element
in	nY	Y coordinate of element
in	nW	Width of element
in	nH	Height of element

Parameters

in	strTxt	Text string to display
in	pFont	Pointer to font resource
in	colTxt	Color for the text
in	colFrame	Color for the frame
in	colFill	Color for the fill
in	colFrameGlow	Color for the frame when glowing
in	colFillGlow	Color for the fill when glowing
in	nAlignTxt	Text alignment
in	bFrameEn	True if framed, false otherwise
in	bFillEn	True if filled, false otherwise
in	callFunc	Callback function for button press
in	extraData	Ptr to extended data structure

7.13.2.3 gslc_ElemCreateLine_P

Create a read-only line element.

Parameters

in	pGui	Pointer to GUI
in	n⊷	Unique element ID to assign
	ElemId	
in	nPage	Page ID to attach element to
in	nX0	X coordinate of line start
in	nY0	Y coordinate of line start
in	nX1	X coordinate of line end
in	nY1	Y coordinate of line end
in	colFill	Color for the line

7.13.2.4 gslc_ElemCreateTxt_P

```
\label{eq:continuous_def} \begin{tabular}{ll} \#define & gslc\_ElemCreateTxt\_P (\\ & pGui, \end{tabular}
```

```
nElemId,
nPage,
nX,
nY,
nW,
nH,
strTxt,
pFont,
colTxt,
colFrame,
colFill,
nAlignTxt,
bFrameEn,
bFillEn)
```

Create a read-only text element.

Parameters

in	pGui	Pointer to GUI
in	nElemId	Unique element ID to assign
in	nPage	Page ID to attach element to
in	nΧ	X coordinate of element
in	nΥ	Y coordinate of element
in	nW	Width of element
in	nΗ	Height of element
in	strTxt	Text string to display
in	pFont	Pointer to font resource
in	colTxt	Color for the text
in	colFrame	Color for the frame
in	colFill	Color for the fill
in	nAlignTxt	Text alignment
in	bFrameEn	True if framed, false otherwise
in	bFillEn	True if filled, false otherwise

7.13.2.5 gslc_ElemCreateTxt_P_R

```
nAlignTxt,
bFrameEn,
bFillEn )
```

Create a read-write text element (element in Flash, string in RAM)

Parameters

in	pGui	Pointer to GUI
in	nElemId	Unique element ID to assign
in	nPage	Page ID to attach element to
in	nΧ	X coordinate of element
in	nΥ	Y coordinate of element
in	nW	Width of element
in	nΗ	Height of element
in	strTxt	Text string to display
in	strLength	Length of text string
in	pFont	Pointer to font resource
in	colTxt	Color for the text
in	colFrame	Color for the frame
in	colFill	Color for the fill
in	nAlignTxt	Text alignment
in	bFrameEn	True if framed, false otherwise
in	bFillEn	True if filled, false otherwise

7.13.2.6 gslc_ElemCreateTxt_P_R_ext

```
#define gslc_ElemCreateTxt_P_R_ext(
             pGui,
             nElemId,
             nPage,
             nX,
             nY,
             nW,
             nH,
             strTxt,
             strLength,
             pFont,
             colTxt,
             colTxtGlow,
             colFrame,
             colFill,
             nAlignTxt,
             nMarginX,
             nMarginY,
             bFrameEn,
             bFillEn,
             bClickEn,
             bGlowEn,
             pfuncXEvent,
             pfuncXDraw,
```

pfuncXTouch,
pfuncXTick)

Create a read-write text element (element in Flash, string in RAM) with extended customization options.

Parameters


in	pGui	Pointer to GUI
in	nElemId	Unique element ID to assign
in	nPage	Page ID to attach element to
in	nΧ	X coordinate of element
in	nY	Y coordinate of element
in	nW	Width of element
in	nH	Height of element
in	strTxt	Text string to display
in	strLength	Length of text string
in	pFont	Pointer to font resource
in	colTxt	Color for the text
in	colTxtGlow	Color for the text when glowing
in	colFrame	Color for the frame
in	colFill	Color for the fill
in	nAlignTxt	Text alignment
in	nMarginX	Text margin (X offset)
in	nMarginY	Text margin (Y offset)
in	bFrameEn	True if framed, false otherwise
in	bFillEn	True if filled, false otherwise
in	bClickEn	True if accept click events, false otherwise
in	bGlowEn	True if supports glow state, false otherwise
in	pfuncXEvent	Callback function ptr for Event
in	pfuncXDraw	Callback function ptr for Redraw
in	pfuncXTouch	Callback function ptr for Touch
in	pfuncXTick	Callback function ptr for Timer tick

7.14 Internal Functions 103

7.14 Internal Functions

These functions are internal to the GUIslice implementation and are not intended to be called by user code and subject to change even in minor releases.

Collaboration diagram for Internal Functions:

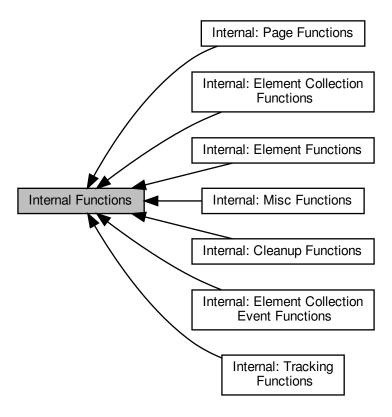

Modules

- Internal: Misc Functions
- · Internal: Element Functions
- Internal: Page Functions
- Internal: Element Collection Functions
- Internal: Element Collection Event Functions
- Internal: Tracking Functions
- Internal: Cleanup Functions

Variables

- int16_t gslc_tsRect::x
 - X coordinate of corner.
- int16_t gslc_tsRect::y

Y coordinate of corner.

uint16_t gslc_tsRect::w

Width of region.

• uint16_t gslc_tsRect::h

Height of region.

int16_t gslc_tsPt::x

X coordinate.

int16_t gslc_tsPt::y

Y coordinate.

• uint8_t gslc_tsColor::r

RGB red value.

uint8_t gslc_tsColor::g

RGB green value.

• uint8_t gslc_tsColor::b

RGB blue value.

- gslc_tsRect gslc_tsRectState::rFocus
- gslc_tsRect gslc_tsRectState::rFull
- · gslc tsRect gslc tsRectState::rInner
- · gslc tsColor gslc tsRectState::colFocus
- gslc_tsColor gslc_tsRectState::colFrm
- gslc_tsColor gslc_tsRectState::colInner
- gslc_tsColor gslc_tsRectState::colBack
- gslc_tsColor gslc_tsRectState::colTxtFore
- gslc_tsColor gslc_tsRectState::colTxtBack
- gslc_teEventType gslc_tsEvent::eType

Event type.

uint8_t gslc_tsEvent::nSubType

Event sub-type.

void * gslc_tsEvent::pvScope

Event target scope (eg. Page, Collection, Event)

void * gslc tsEvent::pvData

Generic data pointer for event.

gslc_teTouch gslc_tsEventTouch::eTouch

Touch state.

• int16 t gslc tsEventTouch::nX

Touch X coordinate (or param1)

int16_t gslc_tsEventTouch::nY

Touch Y coordinate (or param2)

int16_t gslc_tsFont::nld

Font ID specified by user.

• gslc_teFontRefType gslc_tsFont::eFontRefType

Font reference type.

• gslc_teFontRefMode gslc_tsFont::eFontRefMode

Font reference mode.

const void * gslc tsFont::pvFont

Void ptr to the font reference (type defined by driver)

uint16_t gslc_tsFont::nSize

Font size.

const unsigned char * gslc_tslmgRef::plmgBuf

Pointer to input image buffer in memory [RAM,FLASH].

• const char * gslc_tslmgRef::pFname

7.14 Internal Functions 105

Pathname to input image file [FILE,SD].

• gslc_teImgRefFlags gslc_tsImgRef::eImgFlags

Image reference flags.

void * gslc tslmgRef::pvlmgRaw

Ptr to raw output image data (for pre-loaded images)

gslc tsElem * gslc tsElemRef::pElem

Pointer to element in memory [RAM,FLASH].

gslc teElemRefFlags gslc tsElemRef::eElemFlags

Element reference flags.

int16_t gslc_tsElem::nld

Element ID specified by user.

• uint16_t gslc_tsElem::nFeatures

Element feature vector (appearance/behavior))

int16_t gslc_tsElem::nType

Element type enumeration.

gslc_tsRect gslc_tsElem::rElem

Rect region containing element.

• int16_t gslc_tsElem::nGroup

Group ID that the element belongs to.

gslc tsColor gslc tsElem::colElemFrame

Color for frame.

• gslc_tsColor gslc_tsElem::colElemFill

Color for background fill.

• gslc_tsColor gslc_tsElem::colElemFrameGlow

Color to use for frame when glowing.

• gslc_tsColor gslc_tsElem::colElemFillGlow

Color to use for fill when glowing.

gslc_tsImgRef gslc_tsElem::sImgRefNorm

Image reference to draw (normal)

· gslc tsImgRef gslc tsElem::sImgRefGlow

Image reference to draw (glowing)

• gslc tsElemRef * gslc tsElem::pElemRefParent

Parent element reference.

char * gslc_tsElem::pStrBuf

Ptr to text string buffer to overlay.

• uint8_t gslc_tsElem::nStrBufMax

Size of string buffer.

gslc_teTxtFlags gslc_tsElem::eTxtFlags

Flags associated with text buffer.

gslc_tsColor gslc_tsElem::colElemText

Color of overlay text.

· gslc tsColor gslc tsElem::colElemTextGlow

Color of overlay text when glowing.

int8_t gslc_tsElem::eTxtAlign

Alignment of overlay text.

int8_t gslc_tsElem::nTxtMarginX

Margin of overlay text within rect region (x offset)

int8_t gslc_tsElem::nTxtMarginY

Margin of overlay text within rect region (y offset)

gslc_tsFont * gslc_tsElem::pTxtFont

Ptr to Font for overlay text.

void * gslc_tsElem::pXData

Ptr to extended data structure.

GSLC_CB_EVENT gslc_tsElem::pfuncXEvent

UNUSED: Callback func ptr for event tree (draw,touch,tick)

GSLC_CB_DRAW gslc_tsElem::pfuncXDraw

Callback func ptr for custom drawing.

GSLC CB TOUCH gslc tsElem::pfuncXTouch

Callback func ptr for touch.

GSLC_CB_TICK gslc_tsElem::pfuncXTick

Callback func ptr for timer/main loop tick.

gslc tsElem * gslc tsCollect::asElem

Array of elements.

uint16_t gslc_tsCollect::nElemMax

Maximum number of elements to allocate (in RAM)

uint16 t gslc tsCollect::nElemCnt

Number of elements allocated.

• int16_t gslc_tsCollect::nElemAutoIdNext

Next Element ID for auto-assignment.

• gslc_tsElemRef * gslc_tsCollect::asElemRef

Array of element references.

• uint16_t gslc_tsCollect::nElemRefMax

Maximum number of element references to allocate.

uint16 t gslc tsCollect::nElemRefCnt

Number of element references allocated.

gslc_tsElemRef * gslc_tsCollect::pElemRefTracked

Element reference currently being touch-tracked (NULL for none)

int16_t gslc_tsCollect::nElemIndTracked

Element index currently being touch-tracked (GSLC_IND_NONE for none)

• gslc_tsCollect gslc_tsPage::sCollect

Collection of elements on page.

int16_t gslc_tsPage::nPageId

Page identifier.

• gslc_tsRect gslc_tsPage::rBounds

Bounding rect for page elements.

gslc_teInputRawEvent gslc_tsInputMap::eEvent

The input event.

int16_t gslc_tsInputMap::nVal

The value associated with the input event.

• gslc_teAction gslc_tsInputMap::eAction

Resulting action.

• int16 t gslc tsInputMap::nActionVal

The value for the output action.

uint16_t gslc_tsGui::nDispW

Width of the display (pixels)

uint16_t gslc_tsGui::nDispH

Height of the display (pixels)

uint16_t gslc_tsGui::nDisp0W
 Width of the display (pixels) in native orientation.

• uint16 t gslc tsGui::nDisp0H

Height of the display (pixels) in native orientation.

• uint8_t gslc_tsGui::nDispDepth

7.14 Internal Functions 107

Bit depth of display (bits per pixel)

• uint8_t gslc_tsGui::nRotation

Adafruit GFX Rotation of display.

· uint8 t gslc tsGui::nTouchRotation

Touchscreen rotation offset vs display.

uint8_t gslc_tsGui::nSwapXY

Adafruit GFX Touch Swap x and y axes.

uint8 t gslc tsGui::nFlipX

Adafruit GFX Touch Flip x axis.

uint8_t gslc_tsGui::nFlipY

Adafruit GFX Touch Flip x axis.

int16_t gslc_tsGui::nTouchCalXMin

Calibration X minimum reading.

int16_t gslc_tsGui::nTouchCalXMax

Calibration X maximum reading.

int16_t gslc_tsGui::nTouchCalYMin

Calibration Y minimum reading.

int16_t gslc_tsGui::nTouchCalYMax

Calibration Y maximum reading.

int16 t gslc tsGui::nTouchCalPressMin

Calibration minimum pressure threshold.

int16_t gslc_tsGui::nTouchCalPressMax

Calibration maximum pressure threshold.

gslc_tsFont * gslc_tsGui::asFont

Collection of loaded fonts.

uint8_t gslc_tsGui::nFontMax

Maximum number of fonts to allocate.

uint8_t gslc_tsGui::nFontCnt

Number of fonts allocated.

uint8 t gslc tsGui::nRoundRadius

Radius for rounded elements.

gslc tsColor gslc tsGui::sTransCol

Color used for transparent image regions (GSLC_BMP_TRANS_EN=1)

gslc_tsElem gslc_tsGui::sElemTmp

Temporary element.

gslc_tsElemRef gslc_tsGui::sElemRefTmp

Temporary element reference.

gslc_tsElem gslc_tsGui::sElemTmpProg

Temporary element for Flash compatibility.

gslc_teInitStat gslc_tsGui::eInitStatTouch

Status of touch initialization.

int16_t gslc_tsGui::nTouchLastX

Last touch event X coord.

int16 t gslc tsGui::nTouchLastY

Last touch event Y coord.

uint16_t gslc_tsGui::nTouchLastPress

Last touch event pressure (0=none))

bool gslc_tsGui::bTouchRemapEn

Enable touch remapping?

bool gslc_tsGui::bTouchRemapYX

Enable touch controller swapping of X & Y.

bool gslc_tsGui::bTouchEn

Enable reaction to touch events.

void * gslc_tsGui::pvDriver

Driver-specific members (gslc_tsDriver*)

bool gslc_tsGui::bRedrawNeeded

Does anything on page require redraw?

· bool gslc tsGui::bRedrawPartialEn

Driver supports partial page redraw.

· bool gslc_tsGui::bEventPending

Is there an event pending?

gslc tsEventTouch gslc tsGui::sEventTouchPend

A touch event that has been deferred (if bEventPending=true)

gslc_tsEvent gslc_tsGui::sEventPend

An event that has been deferred (if bEventPending=true)

gslc_tsImgRef gslc_tsGui::sImgRefBkgnd

Image reference for background.

uint8_t gslc_tsGui::nFrameRateCnt

Diagnostic frame rate count.

uint8_t gslc_tsGui::nFrameRateStart

Diagnostic frame rate timestamp.

gslc_tsPage * gslc_tsGui::asPage

Array of all pages defined in system.

uint8 t gslc tsGui::nPageMax

Maximum number of pages that can be defined.

· uint8_t gslc_tsGui::nPageCnt

Current number of pages defined.

gslc_tsPage * gslc_tsGui::apPageStack [GSLC_STACK__MAX]

Stack of pages.

• bool gslc_tsGui::abPageStackActive [GSLC_STACK__MAX]

Whether page in stack can receive touch events.

bool gslc_tsGui::abPageStackDoDraw [GSLC_STACK__MAX]

Whether page in stack is still actively drawn.

· bool gslc_tsGui::bScreenNeedRedraw

Screen requires a redraw.

bool gslc_tsGui::bScreenNeedFlip

Screen requires a page flip.

bool gslc_tsGui::bInvalidateEn

A region of the display has been invalidated.

gslc_tsRect gslc_tsGui::rInvalidateRect

The rect region that has been invalidated.

• GSLC CB PIN POLL gslc tsGui::pfuncPinPoll

Callback func ptr for pin polling.

gslc_tsInputMap * gslc_tsGui::asInputMap

Array of input maps.

uint8_t gslc_tsGui::nInputMapMax

Maximum number of input maps.

• uint8_t gslc_tsGui::nInputMapCnt

Current number of input maps.

uint8 t gslc tsGui::nInputMode

Input mode: 0=navigate, 1=edit.

int16_t gslc_tsGui::nFocusPageInd

7.14 Internal Functions 109

Index of page in stack currently in focus.

gslc_tsPage * gslc_tsGui::pFocusPage

Page ptr currently in focus.

gslc_tsElemRef * gslc_tsGui::pFocusElemRef

Reference to element in focus.

int16_t gslc_tsGui::nFocusElemInd

Index of element in page currently in focus.

int16_t gslc_tsGui::nFocusElemMax

Max number of elements in page in focus.

gslc_tsColor gslc_tsGui::colFocusNone

Focus frame color when not in focus (typically background color)

· gslc_tsColor gslc_tsGui::colFocus

Focus frame color when in focus.

gslc_tsColor gslc_tsGui::colFocusEdit

Focus frame color when in focus and edit mode.

int16_t gslc_tsGui::nFocusSavedPageInd

Focus page index saved prior to popup/overlay.

• int16_t gslc_tsGui::nFocusSavedElemInd

Focus element index saved prior to popup/overlay.

7.14.1 Detailed Description

These functions are internal to the GUIslice implementation and are not intended to be called by user code and subject to change even in minor releases.

• The following functions are generally not required for typical users of GUIslice. However, for advanced usage more direct access may be required.

7.14.2 Variable Documentation

7.14.2.1 abPageStackActive

bool gslc_tsGui::abPageStackActive[GSLC_STACK__MAX]

Whether page in stack can receive touch events.

7.14.2.2 abPageStackDoDraw

bool gslc_tsGui::abPageStackDoDraw[GSLC_STACK__MAX]

Whether page in stack is still actively drawn.

```
7.14.2.3 apPageStack
gslc_tsPage* gslc_tsGui::apPageStack[GSLC_STACK__MAX]
Stack of pages.
7.14.2.4 asElem
gslc_tsElem* gslc_tsCollect::asElem
Array of elements.
7.14.2.5 asElemRef
gslc_tsElemRef* gslc_tsCollect::asElemRef
Array of element references.
7.14.2.6 asFont
gslc_tsFont* gslc_tsGui::asFont
Collection of loaded fonts.
7.14.2.7 asInputMap
gslc_tsInputMap* gslc_tsGui::asInputMap
Array of input maps.
7.14.2.8 asPage
gslc_tsPage* gslc_tsGui::asPage
```

Array of all pages defined in system.

7.14 Internal Functions

7.14.2.9 b

uint8_t gslc_tsColor::b

RGB blue value.

7.14.2.10 bEventPending

bool gslc_tsGui::bEventPending

Is there an event pending?

7.14.2.11 blnvalidateEn

bool gslc_tsGui::bInvalidateEn

A region of the display has been invalidated.

7.14.2.12 bRedrawNeeded

bool gslc_tsGui::bRedrawNeeded

Does anything on page require redraw?

7.14.2.13 bRedrawPartialEn

bool gslc_tsGui::bRedrawPartialEn

Driver supports partial page redraw.

If true, only changed elements are redrawn during next page redraw command. If false, entire page is redrawn when any element has been updated prior to next page redraw command.

7.14.2.14 bScreenNeedFlip

bool gslc_tsGui::bScreenNeedFlip

Screen requires a page flip.

7.14.2.15 bScreenNeedRedraw

bool gslc_tsGui::bScreenNeedRedraw

Screen requires a redraw.

7.14.2.16 bTouchEn

bool gslc_tsGui::bTouchEn

Enable reaction to touch events.

7.14.2.17 bTouchRemapEn

bool gslc_tsGui::bTouchRemapEn

Enable touch remapping?

7.14.2.18 bTouchRemapYX

bool gslc_tsGui::bTouchRemapYX

Enable touch controller swapping of X & Y.

7.14.2.19 colBack

 ${\tt gslc_tsColor} \ {\tt gslc_tsRectState::colBack}$

7.14.2.20 colElemFill

gslc_tsColor gslc_tsElem::colElemFill

Color for background fill.

7.14 Internal Functions

7.14.2.21 colElemFillGlow gslc_tsColor gslc_tsElem::colElemFillGlow Color to use for fill when glowing. 7.14.2.22 colElemFrame gslc_tsColor gslc_tsElem::colElemFrame Color for frame. 7.14.2.23 colElemFrameGlow gslc_tsColor gslc_tsElem::colElemFrameGlow Color to use for frame when glowing. 7.14.2.24 colElemText gslc_tsColor gslc_tsElem::colElemText Color of overlay text. 7.14.2.25 colElemTextGlow gslc_tsColor gslc_tsElem::colElemTextGlow Color of overlay text when glowing. **7.14.2.26** colFocus [1/2]

gslc_tsColor gslc_tsRectState::colFocus

```
7.14.2.27 colFocus [2/2]
gslc_tsColor gslc_tsGui::colFocus
Focus frame color when in focus.
7.14.2.28 colFocusEdit
gslc_tsColor gslc_tsGui::colFocusEdit
Focus frame color when in focus and edit mode.
7.14.2.29 colFocusNone
gslc_tsColor gslc_tsGui::colFocusNone
Focus frame color when not in focus (typically background color)
7.14.2.30 colFrm
gslc_tsColor gslc_tsRectState::colFrm
7.14.2.31 collnner
gslc_tsColor gslc_tsRectState::colInner
7.14.2.32 colTxtBack
gslc_tsColor gslc_tsRectState::colTxtBack
7.14.2.33 colTxtFore
```

gslc_tsColor gslc_tsRectState::colTxtFore

```
7.14.2.34 eAction
gslc_teAction gslc_tsInputMap::eAction
Resulting action.
7.14.2.35 eElemFlags
{\tt gslc\_teElemRefFlags} \ {\tt gslc\_tsElemRef::eElemFlags}
Element reference flags.
7.14.2.36 eEvent
gslc_teInputRawEvent gslc_tsInputMap::eEvent
The input event.
7.14.2.37 eFontRefMode
gslc_teFontRefMode gslc_tsFont::eFontRefMode
Font reference mode.
7.14.2.38 eFontRefType
gslc_teFontRefType gslc_tsFont::eFontRefType
Font reference type.
7.14.2.39 elmgFlags
gslc_teImgRefFlags gslc_tsImgRef::eImgFlags
Image reference flags.
```

```
7.14.2.40 elnitStatTouch
gslc_teInitStat gslc_tsGui::eInitStatTouch
Status of touch initialization.
7.14.2.41 eTouch
{\tt gslc\_teTouch} \ {\tt gslc\_tsEventTouch::eTouch}
Touch state.
7.14.2.42 eTxtAlign
int8_t gslc_tsElem::eTxtAlign
Alignment of overlay text.
7.14.2.43 eTxtFlags
gslc_teTxtFlags gslc_tsElem::eTxtFlags
Flags associated with text buffer.
7.14.2.44 eType
gslc_teEventType gslc_tsEvent::eType
Event type.
7.14.2.45 g
uint8_t gslc_tsColor::g
```

RGB green value.

7.14.2.46 h

uint16_t gslc_tsRect::h

Height of region.

7.14.2.47 nActionVal

int16_t gslc_tsInputMap::nActionVal

The value for the output action.

7.14.2.48 nDisp0H

uint16_t gslc_tsGui::nDispOH

Height of the display (pixels) in native orientation.

7.14.2.49 nDisp0W

uint16_t gslc_tsGui::nDisp0W

Width of the display (pixels) in native orientation.

7.14.2.50 nDispDepth

uint8_t gslc_tsGui::nDispDepth

Bit depth of display (bits per pixel)

7.14.2.51 nDispH

uint16_t gslc_tsGui::nDispH

Height of the display (pixels)

7.14.2.52 nDispW

uint16_t gslc_tsGui::nDispW

Width of the display (pixels)

7.14.2.53 nElemAutoldNext

int16_t gslc_tsCollect::nElemAutoIdNext

Next Element ID for auto-assignment.

7.14.2.54 nElemCnt

uint16_t gslc_tsCollect::nElemCnt

Number of elements allocated.

7.14.2.55 nElemIndTracked

int16_t gslc_tsCollect::nElemIndTracked

Element index currently being touch-tracked (GSLC_IND_NONE for none)

7.14.2.56 nElemMax

uint16_t gslc_tsCollect::nElemMax

Maximum number of elements to allocate (in RAM)

7.14.2.57 nElemRefCnt

uint16_t gslc_tsCollect::nElemRefCnt

Number of element references allocated.

7.14.2.58 nElemRefMax

uint16_t gslc_tsCollect::nElemRefMax

Maximum number of element references to allocate.

7.14.2.59 nFeatures

uint16_t gslc_tsElem::nFeatures

Element feature vector (appearance/behavior))

7.14.2.60 nFlipX

uint8_t gslc_tsGui::nFlipX

Adafruit GFX Touch Flip x axis.

7.14.2.61 nFlipY

uint8_t gslc_tsGui::nFlipY

Adafruit GFX Touch Flip x axis.

7.14.2.62 nFocusElemInd

int16_t gslc_tsGui::nFocusElemInd

Index of element in page currently in focus.

7.14.2.63 nFocusElemMax

int16_t gslc_tsGui::nFocusElemMax

Max number of elements in page in focus.

7.14.2.64 nFocusPageInd

int16_t gslc_tsGui::nFocusPageInd

Index of page in stack currently in focus.

7.14.2.65 nFocusSavedElemInd

int16_t gslc_tsGui::nFocusSavedElemInd

Focus element index saved prior to popup/overlay.

7.14.2.66 nFocusSavedPageInd

int16_t gslc_tsGui::nFocusSavedPageInd

Focus page index saved prior to popup/overlay.

7.14.2.67 nFontCnt

uint8_t gslc_tsGui::nFontCnt

Number of fonts allocated.

7.14.2.68 nFontMax

uint8_t gslc_tsGui::nFontMax

Maximum number of fonts to allocate.

7.14.2.69 nFrameRateCnt

uint8_t gslc_tsGui::nFrameRateCnt

Diagnostic frame rate count.

7.14.2.70 nFrameRateStart uint8_t gslc_tsGui::nFrameRateStart Diagnostic frame rate timestamp. 7.14.2.71 nGroup int16_t gslc_tsElem::nGroup Group ID that the element belongs to. **7.14.2.72 nld** [1/2] int16_t gslc_tsFont::nId Font ID specified by user. **7.14.2.73 nld** [2/2] int16_t gslc_tsElem::nId Element ID specified by user. 7.14.2.74 nlnputMapCnt uint8_t gslc_tsGui::nInputMapCnt Current number of input maps. 7.14.2.75 nlnputMapMax

Maximum number of input maps.

uint8_t gslc_tsGui::nInputMapMax

7.14.2.76 nlnputMode

uint8_t gslc_tsGui::nInputMode

Input mode: 0=navigate, 1=edit.

7.14.2.77 nPageCnt

uint8_t gslc_tsGui::nPageCnt

Current number of pages defined.

7.14.2.78 nPageId

int16_t gslc_tsPage::nPageId

Page identifier.

7.14.2.79 nPageMax

uint8_t gslc_tsGui::nPageMax

Maximum number of pages that can be defined.

7.14.2.80 nRotation

uint8_t gslc_tsGui::nRotation

Adafruit GFX Rotation of display.

7.14.2.81 nRoundRadius

uint8_t gslc_tsGui::nRoundRadius

Radius for rounded elements.

7.14.2.82 nSize uint16_t gslc_tsFont::nSize Font size. 7.14.2.83 nStrBufMax uint8_t gslc_tsElem::nStrBufMax Size of string buffer. 7.14.2.84 nSubType uint8_t gslc_tsEvent::nSubType Event sub-type. 7.14.2.85 nSwapXY uint8_t gslc_tsGui::nSwapXY Adafruit GFX Touch Swap x and y axes. 7.14.2.86 nTouchCalPressMax int16_t gslc_tsGui::nTouchCalPressMax Calibration maximum pressure threshold. 7.14.2.87 nTouchCalPressMin int16_t gslc_tsGui::nTouchCalPressMin Calibration minimum pressure threshold.

7.14.2.88 nTouchCalXMax int16_t gslc_tsGui::nTouchCalXMax Calibration X maximum reading. 7.14.2.89 nTouchCalXMin int16_t gslc_tsGui::nTouchCalXMin Calibration X minimum reading. 7.14.2.90 nTouchCalYMax int16_t gslc_tsGui::nTouchCalYMax Calibration Y maximum reading. 7.14.2.91 nTouchCalYMin int16_t gslc_tsGui::nTouchCalYMin Calibration Y minimum reading. 7.14.2.92 nTouchLastPress uint16_t gslc_tsGui::nTouchLastPress Last touch event pressure (0=none))

7.14.2.93 nTouchLastX

int16_t gslc_tsGui::nTouchLastX

Last touch event X coord.

7.14.2.94 nTouchLastY int16_t gslc_tsGui::nTouchLastY Last touch event Y coord. 7.14.2.95 nTouchRotation uint8_t gslc_tsGui::nTouchRotation Touchscreen rotation offset vs display. 7.14.2.96 nTxtMarginX int8_t gslc_tsElem::nTxtMarginX Margin of overlay text within rect region (x offset) 7.14.2.97 nTxtMarginY int8_t gslc_tsElem::nTxtMarginY Margin of overlay text within rect region (y offset) 7.14.2.98 nType int16_t gslc_tsElem::nType Element type enumeration.

7.14.2.99 nVal

int16_t gslc_tsInputMap::nVal

The value associated with the input event.

7.14.2.100 nX

int16_t gslc_tsEventTouch::nX

Touch X coordinate (or param1)

7.14.2.101 nY

int16_t gslc_tsEventTouch::nY

Touch Y coordinate (or param2)

7.14.2.102 pElem

```
gslc_tsElem* gslc_tsElemRef::pElem
```

Pointer to element in memory [RAM,FLASH].

7.14.2.103 pElemRefParent

```
gslc_tsElemRef* gslc_tsElem::pElemRefParent
```

Parent element reference.

Used during redraw to notify parent elements that they require redraw as well. Primary usage is in compound elements. NOTE: Although this field is only used in GLSC_COMPOUND mode, it is not wrapped in an ifdef because the ElemCreate*_P() function macros currently initialize this field.

7.14.2.104 pElemRefTracked

```
gslc_tsElemRef* gslc_tsCollect::pElemRefTracked
```

Element reference currently being touch-tracked (NULL for none)

7.14.2.105 pFname

const char* gslc_tsImgRef::pFname

Pathname to input image file [FILE,SD].

```
7.14.2.106 pFocusElemRef
```

```
gslc_tsElemRef* gslc_tsGui::pFocusElemRef
```

Reference to element in focus.

7.14.2.107 pFocusPage

```
gslc_tsPage* gslc_tsGui::pFocusPage
```

Page ptr currently in focus.

7.14.2.108 pfuncPinPoll

```
GSLC_CB_PIN_POLL gslc_tsGui::pfuncPinPoll
```

Callback func ptr for pin polling.

7.14.2.109 pfuncXDraw

```
GSLC_CB_DRAW gslc_tsElem::pfuncXDraw
```

Callback func ptr for custom drawing.

7.14.2.110 pfuncXEvent

```
GSLC_CB_EVENT gslc_tsElem::pfuncXEvent
```

UNUSED: Callback func ptr for event tree (draw,touch,tick)

7.14.2.111 pfuncXTick

```
GSLC_CB_TICK gslc_tsElem::pfuncXTick
```

Callback func ptr for timer/main loop tick.

7.14.2.112 pfuncXTouch

```
GSLC_CB_TOUCH gslc_tsElem::pfuncXTouch
```

Callback func ptr for touch.

7.14.2.113 plmgBuf

```
const unsigned char* gslc_tsImgRef::pImgBuf
```

Pointer to input image buffer in memory [RAM,FLASH].

7.14.2.114 pStrBuf

```
char* gslc_tsElem::pStrBuf
```

Ptr to text string buffer to overlay.

7.14.2.115 pTxtFont

```
gslc_tsFont* gslc_tsElem::pTxtFont
```

Ptr to Font for overlay text.

7.14.2.116 pvData

```
void* gslc_tsEvent::pvData
```

Generic data pointer for event.

This member is used to either pass a pointer to a simple data datatype (such as Element or Collection) or to a another structure that contains multiple fields.

7.14.2.117 pvDriver

```
void* gslc_tsGui::pvDriver
```

Driver-specific members (gslc_tsDriver*)

```
7.14.2.118 pvFont
const void* gslc_tsFont::pvFont
Void ptr to the font reference (type defined by driver)
7.14.2.119 pvlmgRaw
void* gslc_tsImgRef::pvImgRaw
Ptr to raw output image data (for pre-loaded images)
7.14.2.120 pvScope
void* gslc_tsEvent::pvScope
Event target scope (eg. Page, Collection, Event)
7.14.2.121 pXData
void* gslc_tsElem::pXData
Ptr to extended data structure.
7.14.2.122 r
uint8_t gslc_tsColor::r
RGB red value.
7.14.2.123 rBounds
gslc_tsRect gslc_tsPage::rBounds
Bounding rect for page elements.
```

7.14.2.124 rElem gslc_tsRect gslc_tsElem::rElem Rect region containing element. 7.14.2.125 rFocus gslc_tsRect gslc_tsRectState::rFocus 7.14.2.126 rFull gslc_tsRect gslc_tsRectState::rFull 7.14.2.127 rInner gslc_tsRect gslc_tsRectState::rInner 7.14.2.128 rInvalidateRect gslc_tsRect gslc_tsGui::rInvalidateRect The rect region that has been invalidated. 7.14.2.129 sCollect gslc_tsCollect gslc_tsPage::sCollect Collection of elements on page. 7.14.2.130 sElemRefTmp gslc_tsElemRef gslc_tsGui::sElemRefTmp

Temporary element reference.

```
7.14.2.131 sElemTmp
```

```
gslc_tsElem gslc_tsGui::sElemTmp
```

Temporary element.

7.14.2.132 sElemTmpProg

```
gslc_tsElem gslc_tsGui::sElemTmpProg
```

Temporary element for Flash compatibility.

7.14.2.133 sEventPend

```
gslc_tsEvent gslc_tsGui::sEventPend
```

An event that has been deferred (if bEventPending=true)

7.14.2.134 sEventTouchPend

```
gslc_tsEventTouch gslc_tsGui::sEventTouchPend
```

A touch event that has been deferred (if bEventPending=true)

7.14.2.135 slmgRefBkgnd

```
gslc_tsImgRef gslc_tsGui::sImgRefBkgnd
```

Image reference for background.

7.14.2.136 slmgRefGlow

```
gslc_tsImgRef gslc_tsElem::sImgRefGlow
```

Image reference to draw (glowing)

```
7.14.2.137 slmgRefNorm
gslc_tsImgRef gslc_tsElem::sImgRefNorm
Image reference to draw (normal)
7.14.2.138 sTransCol
gslc_tsColor gslc_tsGui::sTransCol
Color used for transparent image regions (GSLC_BMP_TRANS_EN=1)
7.14.2.139 w
uint16_t gslc_tsRect::w
Width of region.
7.14.2.140 x [1/2]
int16_t gslc_tsRect::x
X coordinate of corner.
7.14.2.141 x [2/2]
int16_t gslc_tsPt::x
X coordinate.
7.14.2.142 y [1/2]
int16_t gslc_tsRect::y
Y coordinate of corner.
7.14.2.143 y [2/2]
int16_t gslc_tsPt::y
```

Y coordinate.

7.15 Internal: Misc Functions

Collaboration diagram for Internal: Misc Functions:



Functions

• gslc_tsImgRef gslc_ResetImage ()

Create a blank image reference structure.

7.15.1 Detailed Description

7.15.2 Function Documentation

7.15.2.1 gslc_ResetImage()

```
gslc_tsImgRef gslc_ResetImage ( )
```

Create a blank image reference structure.

Returns

Image reference struct

7.16 Internal: Element Functions

Collaboration diagram for Internal: Element Functions:



Functions

• gslc_tsElem gslc_ElemCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPageId, int16_t nType, gslc_ts← Rect rElem, char *pStrBuf, uint8 t nStrBufMax, int16 t nFontId)

Create a new element with default styling.

gslc_tsElemRef * gslc_ElemAdd (gslc_tsGui *pGui, int16_t nPageId, gslc_tsElem *pElem, gslc_teElem←
 RefFlags eFlags)

Add the Element to the list of generated elements in the GUI environment.

• uint8_t gslc_GetElemRefFlag (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, uint8_t nFlagMask)

Get the flags associated with an element reference.

 void gslc_SetElemRefFlag (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, uint8_t nFlagMask, uint8_t n← FlagVal)

Set the flags associated with an element reference.

gslc_tsElem * gslc_GetElemFromRef (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Returns a pointer to an element from an element reference, copying from FLASH to RAM if element is stored in PROGMEM.

- gslc_tsElem * gslc_GetElemFromRefD (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nLineNum)

 Returns a pointer to an element from an element reference.
- void * gslc_GetXDataFromRef (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nType, int16_t nLine ← Num)

Returns a pointer to the data structure associated with an extended element.

void gslc_ElemSetImage (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsImgRef sImgRef, gslc_ts
 ImgRef sImgRefSel)

Set an element to use a bitmap image.

Draw an element to the active display.

 $\bullet \ \ bool\ gslc_ElemDrawByRef\ (gslc_tsGui\ *pGui,\ gslc_tsElemRef\ *pElemRef,\ gslc_teRedrawType\ eRedraw)$

• void gslc_ElemDraw (gslc_tsGui *pGui, int16_t nPageId, int16_t nElemId)

Draw an element to the active display.

void gslc_DrawTxtBase (gslc_tsGui *pGui, char *pStrBuf, gslc_tsRect rTxt, gslc_tsFont *pTxtFont, gslc_teTxtFlags eTxtFlags, int8_t eTxtAlign, gslc_tsColor colTxt, gslc_tsColor colBg, int16_t nMarginW, int16_t nMarginH)

Draw text with full text justification.

• void gslc SetRoundRadius (gslc tsGui *pGui, uint8 t nRadius)

Set the global rounded radius.

void gslc_SetFocusCol (gslc_tsGui *pGui, gslc_tsColor colFocusNone, gslc_tsColor colFocus, gslc_tsColor colFocusEdit)

Set the global focus color choices.

7.16.1 Detailed Description

7.16.2 Function Documentation

7.16.2.1 gslc_DrawTxtBase()

Draw text with full text justification.

• This function is usually only required by internal GUIslice rendering operations but is made available for custom element usage as well

Parameters

in	pGui	Pointer to GUI
in	pStrBuf Pointer to text string buffer	
in	rTxt	Rectangle region to contain the text
in	pTxtFont	Pointer to the font
in	eTxtFlags	Text string attributes
in	eTxtAlign	Text alignment / justification mode
in	colTxt	Text foreground color
in	colBg	Text background color
in	nMarginW	Horizontal margin within rect region to keep text away
in	nMarginH	Vertical margin within rect region to keep text away

Returns

none

7.16.2.2 gslc_ElemAdd()

```
int16_t nPageId,
gslc_tsElem * pElem,
gslc_teElemRefFlags eFlags )
```

Add the Element to the list of generated elements in the GUI environment.

• NOTE: The content of pElem is copied so the pointer can be released after the call.

Parameters

in	pGui	Pointer to GUI	
in	n⊷	Page ID to add element to (GSLC_PAGE_NONE to skip in case of temporary creation for	
	Pageld	compound elements)	
in	pElem	Pointer to Element to add	
in	eFlags	Flags describing the element (eg. whether the element should be stored in internal RAM array	
		or is located in Flash/PROGMEM).	

Returns

Pointer to Element reference or NULL if fail

7.16.2.3 gslc_ElemCreate()

Create a new element with default styling.

Parameters

in	pGui	Pointer to GUI
in	nElemId	User-supplied ID for referencing this element (or GSLC_ID_AUTO to auto-generate)
in	nPageId	The page ID on which this page should be associated
in	пТуре	Enumeration that indicates the type of element that is requested for creation. The type
		adjusts the visual representation and default styling.
in	rElem	Rectangle region framing the element
in	pStrBuf	String to copy into element
in	nStrBufMax	Maximum length of string buffer (pStrBuf). Only applicable if GSLC_LOCAL_STR=0.
		Ignored if GSLC_LOCAL_STR=1.)
in	nFontId	Font ID for textual elements

Returns

Initialized structure

7.16.2.4 gslc_ElemDraw()

Draw an element to the active display.

- · Element is referenced by a page ID and element ID
- · Provides similar functionality as ElemDrawByRef() but accepts page and element IDs

Parameters

in	pGui	Pointer to GUI
in	n⊷ Pageld	ID of page containing element
in	n⊷ ElemId	ID of element

Returns

none

7.16.2.5 gslc_ElemDrawByRef()

Draw an element to the active display.

· Element is referenced by an element pointer

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Ptr to Element reference to draw
in	eRedraw	Redraw mode

Returns

true if success, false otherwise

7.16.2.6 gslc_ElemSetImage()

Set an element to use a bitmap image.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference to update
in	sImgRef	Image reference (normal state)
in	sImgRefSel	Image reference (glowing state)

Returns

none

7.16.2.7 gslc_GetElemFromRef()

Returns a pointer to an element from an element reference, copying from FLASH to RAM if element is stored in PROGMEM.

This function enables all APIs to work with Elements irrespective of whether they were created in RAM or Flash.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element Reference

Returns

Pointer to Element after ensuring that it is accessible from RAM

7.16.2.8 gslc_GetElemFromRefD()

Returns a pointer to an element from an element reference.

This is a wrapper for GetElemFromRef() including debug checking for invalid pointers.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element Reference
in	nLineNum	Line number from calling function (ie. LINE)

Returns

Pointer to Element after ensuring that it is accessible from RAM

7.16.2.9 gslc_GetElemRefFlag()

Get the flags associated with an element reference.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Element reference pointer
in	nFlagMask	Flags to read

Returns

Values associated with the element reference flags (subject to the flag mask)

7.16.2.10 gslc_GetXDataFromRef()

```
int16_t nType,
int16_t nLineNum )
```

Returns a pointer to the data structure associated with an extended element.

• Example usage: gslc_tsXListbox* pListbox = (gslc_tsXListbox*)gslc_GetXDataFromRef(pGui, pElemRef, GSLC_TYPEX_LISTBOX, **LINE**);

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element Reference
in	пТуре	Expected type indicator (ie. GSLC_TYPEX_*)
in	nLineNum	Line number from calling function (ie. LINE)

Returns

Void pointer to extended data (pXData), or NULL if error. Needs to be typecasted accordingly.

7.16.2.11 gslc_SetElemRefFlag()

Set the flags associated with an element reference.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Element reference pointer
in	nFlagMask	Flags to read
in	nFlagVal	Values to assign to masked flags

Returns

none

7.16.2.12 gslc_SetFocusCol()

```
gslc_tsColor colFocusNone,
gslc_tsColor colFocus,
gslc_tsColor colFocusEdit )
```

Set the global focus color choices.

• These colors will be used when depicting focus frames around elements

Parameters

in	pGui	Pointer to GUI
in	colFocusNone	The color to use when the element is not in focus. This is typically set to match the background color.
in	colFocus	The color to use when the element is in focus.
in	colFocusEdit	The color to use when the element is in edit mode.

Returns

none

7.16.2.13 gslc_SetRoundRadius()

Set the global rounded radius.

· Used for rounded rectangles

Parameters

in	pGui	Pointer to GUI
in	nRadius	Radius for rounded elements

Returns

none

7.17 Internal: Page Functions

Collaboration diagram for Internal: Page Functions:



Functions

bool gslc_PageEvent (void *pvGui, gslc_tsEvent sEvent)

Common event handler function for a page.

void gslc PageRedrawGo (gslc tsGui *pGui)

Redraw all elements on the active page.

void gslc_PageFlipSet (gslc_tsGui *pGui, bool bNeeded)

Indicate whether the screen requires page flip.

• bool gslc_PageFlipGet (gslc_tsGui *pGui)

Get state of pending page flip state.

void gslc_PageFlipGo (gslc_tsGui *pGui)

Update the visible screen if page has been marked for flipping.

gslc_tsPage * gslc_PageFindByld (gslc_tsGui *pGui, int16_t nPageId)

Find a page in the GUI by its ID.

void gslc_PageRedrawCalc (gslc_tsGui *pGui)

Perform a redraw calculation on the page to determine if additional elements should also be redrawn.

 gslc_tsEvent gslc_EventCreate (gslc_tsGui *pGui, gslc_teEventType eType, uint8_t nSubType, void *pv← Scope, void *pvData)

Create an event structure.

bool gslc_ElemEvent (void *pvGui, gslc_tsEvent sEvent)

Common event handler function for an element.

Trigger an element's touch event.

7.17.1 Detailed Description

7.17.2 Function Documentation

7.17.2.1 gslc_ElemEvent()

Common event handler function for an element.

Parameters

in	pvGui	Void pointer to GUI
in	sEvent	Event data structure

Returns

true if success, false if fail

7.17.2.2 gslc_ElemSendEventTouch()

Trigger an element's touch event.

This is an optional behavior useful in some extended element types.

Parameters

in	pGui	Pointer to GUI	
in	pElemRefTracked	Pointer to tracked Element reference (or NULL for none))	
in	eTouch	Touch event type	
in	x coordinate of event (absolute coordinate)		
in	nY	Y coordinate of event (absolute coordinate)	

Returns

true if success, false if error

7.17.2.3 gslc_EventCreate()

Create an event structure.

Parameters

in	pGui	Pointer to GUI	
in	eType Event type (draw, touch, tick, etc.)		
in	nSubType	Refinement of event type (or 0 if unused)	
in	pvScope	Void ptr to object receiving event so that the event handler will have the context	
in	pvData	Void ptr to additional data associated with the event (eg. coordinates for touch events)	

Returns

None

7.17.2.4 gslc_PageEvent()

Common event handler function for a page.

Parameters

in	pvGui	Void pointer to GUI
in	sEvent	Event data structure

Returns

true if success, false if fail

7.17.2.5 gslc_PageFindByld()

Find a page in the GUI by its ID.

Parameters

in	pGui	Pointer to GUI
in	n⊷	Page ID to search
	Pageld	

Returns

Ptr to a page or NULL if none found

7.17.2.6 gslc_PageFlipGet()

```
bool gslc_PageFlipGet ( {\tt gslc\_tsGui\ *\ pGui\ )}
```

Get state of pending page flip state.

Parameters

in <i>pGui</i> Pointe

Returns

True if screen requires page flip

7.17.2.7 gslc_PageFlipGo()

Update the visible screen if page has been marked for flipping.

• On some hardware this can trigger a double-buffering page flip.

Parameters

```
in pGui Pointer to GUI
```

Returns

None

7.17.2.8 gslc_PageFlipSet()

Indicate whether the screen requires page flip.

• This is generally called with bNeeded=true whenever drawing has been done to the active page. Page flip is actually performed later when calling PageFlipGo().

Parameters

in	pGui	Pointer to GUI
in	bNeeded	True if screen requires page flip

Returns

None

7.17.2.9 gslc_PageRedrawCalc()

Perform a redraw calculation on the page to determine if additional elements should also be redrawn.

This routine checks to see if any transparent elements have been marked as needing redraw. If so, the whole page may be marked as needing redraw (or at least the other elements that have been exposed underneath).

Parameters

in	pGui	Pointer to GUI

Returns

none

7.17.2.10 gslc_PageRedrawGo()

Redraw all elements on the active page.

Only the elements that have been marked as needing redraw are rendered unless the entire page has been marked as needing redraw (in which case everything is drawn)

Parameters

in	pGui	Pointer to GUI

Returns

none

7.18 Internal: Element Collection Functions

Collaboration diagram for Internal: Element Collection Functions:



Functions

void gslc_CollectReset (gslc_tsCollect *pCollect, gslc_tsElem *asElem, uint16_t nElemMax, gslc_tsElemRef
 *asElemRef, uint16_t nElemRefMax)

Reset the members of an element collection.

gslc_tsElemRef * gslc_CollectElemAdd (gslc_tsGui *pGui, gslc_tsCollect *pCollect, const gslc_tsElem *p←
 Elem, gslc_teElemRefFlags eFlags)

Add an element to a collection.

bool gslc_CollectGetRedraw (gslc_tsGui *pGui, gslc_tsCollect *pCollect)

Determine if any elements in a collection need redraw.

- gslc_tsElemRef * gslc_CollectFindElemById (gslc_tsGui *pGui, gslc_tsCollect *pCollect, int16_t nElemId)

 Find an element in a collection by its Element ID.
- gslc_tsElemRef * gslc_CollectFindElemFromCoord (gslc_tsGui *pGui, gslc_tsCollect *pCollect, int16_t nX, int16_t nY, int16_t *pnElemInd)

Find an element in a collection by a coordinate coordinate.

int gslc_CollectGetNextId (gslc_tsGui *pGui, gslc_tsCollect *pCollect)

Allocate the next available Element ID in a collection.

gslc tsElemRef * gslc CollectGetElemRefTracked (gslc tsGui *pGui, gslc tsCollect *pCollect)

Get the element within a collection that is currently being tracked.

void gslc_CollectSetElemTracked (gslc_tsGui *pGui, gslc_tsCollect *pCollect, gslc_tsElemRef *pElemRef, int16 t nElemInd)

Set the element within a collection that is currently being tracked.

• void gslc_CollectSetParent (gslc_tsGui *pGui, gslc_tsCollect *pCollect, gslc_tsElemRef *pElemRefParent)

Assign the parent element reference to all elements within a collection.

7.18.1 Detailed Description

7.18.2 Function Documentation

7.18.2.1 gslc_CollectElemAdd()

Add an element to a collection.

• Note that the contents of pElem are copied to the collection's element array so the pElem pointer can be discarded are the call is complete.

Parameters

in	pGui	Pointer to GUI	
in	pCollect	Pointer to the collection	
in	pElem	Ptr to the element to add	
in	eFlags	Flags describing the element (eg. whether the element should be stored in internal RAM array or is located in Flash/PROGMEM).	

Returns

Pointer to the element reference in the collection that has been added or NULL if there was an error

7.18.2.2 gslc_CollectFindElemByld()

Find an element in a collection by its Element ID.

Parameters

in	pGui	Pointer to GUI
in	pCollect	Pointer to the collection
in	n⊷	Element ID to search for
	ElemId	

Returns

Pointer to the element reference in the collection that was found or NULL if no matches found

7.18.2.3 gslc_CollectFindElemFromCoord()

Find an element in a collection by a coordinate coordinate.

• A match is found if the element is "clickable" (bClickEn=true) and the coordinate falls within the element's bounds (rElem).

Parameters

in	pGui	Pointer to GUI
in	pCollect	Pointer to the collection
in	nΧ	Absolute X coordinate to use for search
in	nΥ	Absolute Y coordinate to use for search
out	pnElemInd	Pointer to element index found

Returns

Pointer to the element reference in the collection that was found or NULL if no matches found

7.18.2.4 gslc_CollectGetElemRefTracked()

Get the element within a collection that is currently being tracked.

Parameters

in	pGui	Pointer to GUI
in	pCollect	Pointer to the collection

Returns

Pointer to the element reference in the collection that is currently being tracked or NULL if no elements are being tracked

7.18.2.5 gslc_CollectGetNextId()

Allocate the next available Element ID in a collection.

Parameters

in	pGui	Pointer to GUI
in	pCollect	Pointer to the collection

Returns

Element ID that is reserved for use

7.18.2.6 gslc_CollectGetRedraw()

Determine if any elements in a collection need redraw.

Parameters

in	pGui	Pointer to GUI
in	pCollect	Pointer to Element collection

Returns

True if redraw required, false otherwise

7.18.2.7 gslc_CollectReset()

Reset the members of an element collection.

152 Module Documentation

Parameters

in	pCollect	Pointer to the collection
in	asElem	Internal element array storage to associate with the collection
in	nElemMax	Maximum number of elements that can be added to the internal element array (ie. RAM))
in	asElemRef	Internal element reference array storage to associate with the collection. All elements, whether they are located in the internal element array or in external Flash (PROGMEM) storage, require an entry in the element reference array.
in	nElemRefMax	Maximum number of elements in the reference array. This is effectively the maximum number of elements that can appear in the collection, irrespective of whether it is stored in RAM or Flash (PROGMEM).

Returns

none

7.18.2.8 gslc_CollectSetElemTracked()

Set the element within a collection that is currently being tracked.

Parameters

in	pGui	Pointer to GUI
in	pCollect	Pointer to the collection
in	pElemRef	Ptr to element reference to mark as being tracked
in	nElemInd	Element index to mark as being tracked

Returns

none

7.18.2.9 gslc_CollectSetParent()

Assign the parent element reference to all elements within a collection.

• This is generally used in the case of compound elements where updates to a sub-element should cause the parent (compound element) to be redrawn as well.)

Parameters

in	pGui	Pointer to GUI
in	pCollect	Pointer to the collection
in	pElemRefParent	Ptr to element reference that is the parent


Returns

none

154 Module Documentation

7.19 Internal: Element Collection Event Functions

Collaboration diagram for Internal: Element Collection Event Functions:

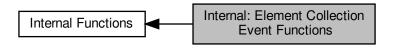

Functions

- bool gslc_CollectEvent (void *pvGui, gslc_tsEvent sEvent)
 - Common event handler function for an element collection.
- void gslc_CollectTouch (gslc_tsGui *pGui, gslc_tsCollect *pCollect, gslc_tsEventTouch *pEventTouch)

 Handle touch events within the element collection.
- bool gslc_CollectTouchCompound (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY, gslc_tsCollect *pCollect)

Handle dispatch of touch (up,down,move) events to compound elements sub elements.

 $\bullet \ \ void \ gslc_CollectInput \ (gslc_tsGui \ *pGui, \ gslc_tsCollect \ *pCollect, \ gslc_tsEventTouch \ *pEventTouch)$

Handle direct input events within the element collection.

7.19.1 Detailed Description

7.19.2 Function Documentation

7.19.2.1 gslc_CollectEvent()

Common event handler function for an element collection.

Parameters

in	pvGui	Void pointer to GUI
in	sEvent	Event data structure

Returns

true if success, false if fail

7.19.2.2 gslc_CollectInput()

Handle direct input events within the element collection.

Parameters

in	pGui	Pointer to the GUI
in	pCollect	Ptr to the element collection
in	pEventTouch	Ptr to the touch event structure

Returns

none

7.19.2.3 gslc_CollectTouch()

Handle touch events within the element collection.

Parameters

in	pGui	Pointer to the GUI
in	pCollect	Ptr to the element collection
in	pEventTouch	Ptr to the touch event structure

Returns

none

156 Module Documentation

7.19.2.4 gslc_CollectTouchCompound()

Handle dispatch of touch (up,down,move) events to compound elements sub elements.

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
T11	pvGui	void pit to dot (typecast to gsic_tsdut*)
in	pvElemRef	Void ptr to Element Reference(typecast to gslc_tsElemRef*)
in	eTouch	Touch event type
in	nRelX	Touch X coord relative to element
in	nRelY	Touch Y coord relative to element
in	pCollect	Collection containing sub elements

Returns

true if success, false otherwise

7.20 Internal: Tracking Functions

Collaboration diagram for Internal: Tracking Functions:



Functions

- void gslc_TrackTouch (gslc_tsGui *pGui, gslc_tsPage *pPage, int16_t nX, int16_t nY, uint16_t nPress)

 Handles a touch event and performs the necessary tracking, glowing and selection actions depending on the press state
- void gslc_TrackInput (gslc_tsGui *pGui, gslc_teInputRawEvent eInputEvent, int16_t nInputVal)
 Handles a direct input event and performs the necessary tracking, glowing and selection actions depending on the state.
- bool gslc_InputMapLookup (gslc_tsGui *pGui, gslc_teInputRawEvent eInputEvent, int16_t nInputVal, gslc
 _teAction *peAction, int16_t *pnActionVal)

7.20.1 Detailed Description

7.20.2 Function Documentation

7.20.2.1 gslc_InputMapLookup()

Todo Doc.

This API is experimental and subject to change

Convert an external input event into a GUI action

• Use the InputMap table to determine the action to take as a result of the external input event.

158 Module Documentation

Parameters

in	pGui	Pointer to GUI
in	eInputEvent	Indication of event type
in	nInputVal	Additional data for event type
out	peAction	The GUI action to take
out	pnActionVal	Additional parameter for the GUI action

Returns

true if a matching event was found, false if none

7.20.2.2 gslc_TrackInput()

Handles a direct input event and performs the necessary tracking, glowing and selection actions depending on the state.

Parameters

in	pGui	Pointer to GUI
in	eInputEvent	Indication of event type
in	nInputVal	Additional data for event type

Returns

none

7.20.2.3 gslc_TrackTouch()

Handles a touch event and performs the necessary tracking, glowing and selection actions depending on the press state.

Parameters

in	pGui	Pointer to GUI
in	pPage	Pointer to current page
in	nΧ	X coordinate of touch event
in	nΥ	Y coordinate of touch event
in	nPress	Pressure level of touch event (0 for none, else touch)

Returns

none

160 Module Documentation

7.21 Internal: Cleanup Functions

Collaboration diagram for Internal: Cleanup Functions:



Functions

• void gslc_GuiDestruct (gslc_tsGui *pGui)

Free up any surfaces associated with the GUI, pages, collections and elements.

void gslc_PageDestruct (gslc_tsGui *pGui, gslc_tsPage *pPage)

Free up any members associated with a page.

void gslc_CollectDestruct (gslc_tsGui *pGui, gslc_tsCollect *pCollect)

Free up any members associated with an element collection.

void gslc_ElemDestruct (gslc_tsElem *pElem)

Free up any members associated with an element.

void gslc_ResetFont (gslc_tsFont *pFont)

Initialize a Font struct.

void gslc_ResetElem (gslc_tsElem *pElem)

Initialize an Element struct.

7.21.1 Detailed Description

7.21.2 Function Documentation

7.21.2.1 gslc_CollectDestruct()

Free up any members associated with an element collection.

Parameters

in	pGui	Pointer to GUI
in	pCollect	Pointer to collection

Returns

none

7.21.2.2 gslc_ElemDestruct()

```
void gslc_ElemDestruct ( {\tt gslc\_tsElem} \ * \ p{\tt Elem} \ )
```

Free up any members associated with an element.

Parameters

in pElem Pointer to element

Returns

none

7.21.2.3 gslc_GuiDestruct()

```
void gslc_GuiDestruct ( {\tt gslc\_tsGui} \ * \ p{\tt Gui} \ )
```

Free up any surfaces associated with the GUI, pages, collections and elements.

Also frees up any fonts.

Called by gslc_Quit()

Parameters

```
in pGui Pointer to GUI
```

Returns

none

7.21.2.4 gslc_PageDestruct()

162 Module Documentation

Free up any members associated with a page.

Parameters

in	pGui	Pointer to GUI
in	pPage	Pointer to Page

Returns

none

7.21.2.5 gslc_ResetElem()

Initialize an Element struct.

Parameters

in <i>pElem</i> Pointer to El

Returns

none

7.21.2.6 gslc_ResetFont()

Initialize a Font struct.

Parameters

in <i>pFont</i>	Pointer to Font
-----------------	-----------------

Returns

none

164 Module Documentation

Chapter 8


Data Structure Documentation

8.1 gslc_tsCollect Struct Reference

Element collection struct.

#include <GUIslice.h>

Collaboration diagram for gslc_tsCollect:

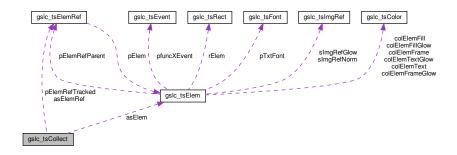

Data Fields

• gslc_tsElem * asElem

Array of elements.

uint16_t nElemMax

Maximum number of elements to allocate (in RAM)

uint16_t nElemCnt

Number of elements allocated.

int16_t nElemAutoIdNext

Next Element ID for auto-assignment.

gslc_tsElemRef * asElemRef

Array of element references.

• uint16_t nElemRefMax

Maximum number of element references to allocate.

• uint16_t nElemRefCnt

Number of element references allocated.

• gslc_tsElemRef * pElemRefTracked

Element reference currently being touch-tracked (NULL for none)

• int16_t nElemIndTracked

Element index currently being touch-tracked (GSLC_IND_NONE for none)

8.1.1 Detailed Description

Element collection struct.

- Collections are used to maintain a list of elements and any touch tracking status.
- · Pages and Compound Elements both instantiate a Collection

The documentation for this struct was generated from the following file:

· src/GUIslice.h

8.2 gslc_tsColor Struct Reference

Color structure. Defines RGB triplet.

```
#include <GUIslice.h>
```

Data Fields

• uint8 tr

RGB red value.

• uint8_t g

RGB green value.

uint8_t b

RGB blue value.

8.2.1 Detailed Description

Color structure. Defines RGB triplet.


The documentation for this struct was generated from the following file:

• src/GUIslice.h

8.3 gslc_tsDriver Struct Reference

```
#include <GUIslice_drv_adagfx.h>
```

Collaboration diagram for gslc_tsDriver:

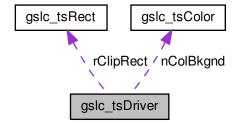

Data Fields

• gslc_tsColor nColBkgnd

Background color (if not image-based)

gslc_tsRect rClipRect

Clipping rectangle.

const void * pvFontLast

Last loadFont() reference.

8.3.1 Field Documentation

8.3.1.1 nColBkgnd

```
gslc_tsColor gslc_tsDriver::nColBkgnd
```

Background color (if not image-based)

8.3.1.2 pvFontLast

```
const void* gslc_tsDriver::pvFontLast
```

Last loadFont() reference.

8.3.1.3 rClipRect

```
gslc_tsRect gslc_tsDriver::rClipRect
```

Clipping rectangle.

The documentation for this struct was generated from the following files:


- src/GUIslice_drv_adagfx.h
- src/GUIslice_drv_m5stack.h
- src/GUIslice_drv_sdl.h
- src/GUIslice_drv_tft_espi.h
- src/GUIslice_drv_utft.h

8.4 gslc_tsElem Struct Reference

Element Struct.

#include <GUIslice.h>

Collaboration diagram for gslc_tsElem:

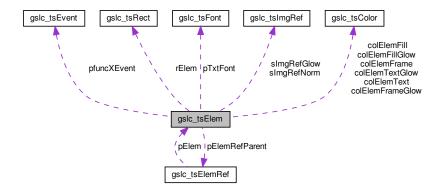

Data Fields

• int16_t nld

Element ID specified by user.

uint16_t nFeatures

Element feature vector (appearance/behavior))

• int16_t nType

Element type enumeration.

gslc_tsRect rElem

Rect region containing element.

• int16_t nGroup

Group ID that the element belongs to.

• gslc_tsColor colElemFrame

Color for frame.

• gslc_tsColor colElemFill

Color for background fill.

gslc_tsColor colElemFrameGlow

Color to use for frame when glowing.

gslc_tsColor colElemFillGlow

Color to use for fill when glowing.

gslc_tslmgRef slmgRefNorm

Image reference to draw (normal)

• gslc_tsImgRef sImgRefGlow

Image reference to draw (glowing)

gslc tsElemRef * pElemRefParent

Parent element reference.

char * pStrBuf

Ptr to text string buffer to overlay.

uint8_t nStrBufMax

Size of string buffer.

gslc_teTxtFlags eTxtFlags

Flags associated with text buffer.

gslc_tsColor colElemText

Color of overlay text.

gslc_tsColor colElemTextGlow

Color of overlay text when glowing.

int8_t eTxtAlign

Alignment of overlay text.

• int8 t nTxtMarginX

Margin of overlay text within rect region (x offset)

int8_t nTxtMarginY

Margin of overlay text within rect region (y offset)

• gslc_tsFont * pTxtFont

Ptr to Font for overlay text.

void * pXData

Ptr to extended data structure.

GSLC CB EVENT pfuncXEvent

UNUSED: Callback func ptr for event tree (draw,touch,tick)

GSLC_CB_DRAW pfuncXDraw

Callback func ptr for custom drawing.

GSLC_CB_TOUCH pfuncXTouch

Callback func ptr for touch.

• GSLC_CB_TICK pfuncXTick

Callback func ptr for timer/main loop tick.

8.4.1 Detailed Description

Element Struct.

- · Represents a single graphic element in the GUIslice environment
- · A page is made up of a number of elements
- Each element is created with a user-specified ID for further accesses (or GSLC_ID_AUTO for it to be autogenerated)
- · Display order of elements in a page is based upon the creation order
- Extensions to the core element types is provided through the pXData reference and pfuncX* callback functions.

The documentation for this struct was generated from the following file:


· src/GUIslice.h

8.5 gslc_tsElemRef Struct Reference

Element reference structure.

#include <GUIslice.h>

Collaboration diagram for gslc_tsElemRef:

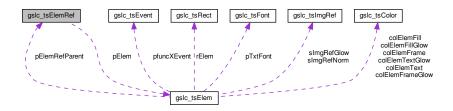

Data Fields

- gslc_tsElem * pElem
 - Pointer to element in memory [RAM,FLASH].
- gslc_teElemRefFlags eElemFlags

Element reference flags.

8.5.1 Detailed Description

Element reference structure.

The documentation for this struct was generated from the following file:

src/GUIslice.h

8.6 gslc_tsEvent Struct Reference

Event structure.

#include <GUIslice.h>

Data Fields

- gslc_teEventType eType
 - Event type.
- uint8_t nSubType

Event sub-type.

void * pvScope

Event target scope (eg. Page, Collection, Event)

void * pvData

Generic data pointer for event.

8.6.1 Detailed Description

Event structure.

The documentation for this struct was generated from the following file:

· src/GUIslice.h

8.7 gslc_tsEventTouch Struct Reference

Structure used to pass touch data through event.

```
#include <GUIslice.h>
```

Data Fields

· gslc teTouch eTouch

Touch state.

int16_t nX

Touch X coordinate (or param1)

int16 t nY

Touch Y coordinate (or param2)

8.7.1 Detailed Description

Structure used to pass touch data through event.

The documentation for this struct was generated from the following file:

· src/GUIslice.h

8.8 gslc_tsFont Struct Reference

Font reference structure.

```
#include <GUIslice.h>
```

Data Fields

• int16 t nld

Font ID specified by user.

• gslc_teFontRefType eFontRefType

Font reference type.

• gslc_teFontRefMode eFontRefMode

Font reference mode.

const void * pvFont

Void ptr to the font reference (type defined by driver)

• uint16_t nSize

Font size.

8.8.1 Detailed Description

Font reference structure.

The documentation for this struct was generated from the following file:


· src/GUIslice.h

8.9 gslc_tsGui Struct Reference

GUI structure.

#include <GUIslice.h>

Collaboration diagram for gslc_tsGui:

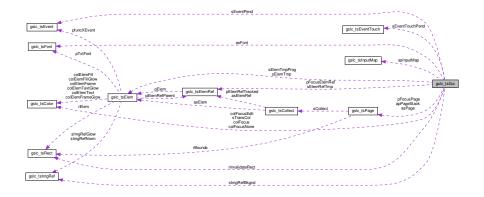

Data Fields

• uint16_t nDispW

Width of the display (pixels)

uint16_t nDispH

Height of the display (pixels)

uint16_t nDisp0W

Width of the display (pixels) in native orientation.

• uint16_t nDisp0H

Height of the display (pixels) in native orientation.

uint8_t nDispDepth

Bit depth of display (bits per pixel)

uint8_t nRotation

Adafruit GFX Rotation of display.

uint8_t nTouchRotation

Touchscreen rotation offset vs display.

uint8_t nSwapXY

Adafruit GFX Touch Swap x and y axes.

uint8_t nFlipX

Adafruit GFX Touch Flip x axis.

uint8_t nFlipY

Adafruit GFX Touch Flip x axis.

• int16 t nTouchCalXMin

Calibration X minimum reading.

int16_t nTouchCalXMax

Calibration X maximum reading.

int16 t nTouchCalYMin

Calibration Y minimum reading.

int16_t nTouchCalYMax

Calibration Y maximum reading.

• int16_t nTouchCalPressMin

Calibration minimum pressure threshold.

• int16_t nTouchCalPressMax

Calibration maximum pressure threshold.

gslc tsFont * asFont

Collection of loaded fonts.

uint8 t nFontMax

Maximum number of fonts to allocate.

uint8 t nFontCnt

Number of fonts allocated.

• uint8_t nRoundRadius

Radius for rounded elements.

gslc_tsColor sTransCol

Color used for transparent image regions (GSLC_BMP_TRANS_EN=1)

gslc_tsElem sElemTmp

Temporary element.

gslc_tsElemRef sElemRefTmp

Temporary element reference.

gslc tsElem sElemTmpProg

Temporary element for Flash compatibility.

· gslc telnitStat elnitStatTouch

Status of touch initialization.

int16_t nTouchLastX

Last touch event X coord.

int16_t nTouchLastY

Last touch event Y coord.

uint16_t nTouchLastPress

Last touch event pressure (0=none))

bool bTouchRemapEn

Enable touch remapping?

bool bTouchRemapYX

Enable touch controller swapping of X & Y.

bool bTouchEn

Enable reaction to touch events.

void * pvDriver

Driver-specific members (gslc_tsDriver*)

bool bRedrawNeeded

Does anything on page require redraw?

bool bRedrawPartialEn

Driver supports partial page redraw.

· bool bEventPending

Is there an event pending?

gslc tsEventTouch sEventTouchPend

A touch event that has been deferred (if bEventPending=true)

gslc_tsEvent sEventPend

An event that has been deferred (if bEventPending=true)

· gslc tslmgRef slmgRefBkgnd

Image reference for background.

uint8 t nFrameRateCnt

Diagnostic frame rate count.

· uint8 t nFrameRateStart

Diagnostic frame rate timestamp.

gslc_tsPage * asPage

Array of all pages defined in system.

uint8_t nPageMax

Maximum number of pages that can be defined.

uint8_t nPageCnt

Current number of pages defined.

gslc_tsPage * apPageStack [GSLC_STACK__MAX]

Stack of pages.

bool abPageStackActive [GSLC_STACK__MAX]

Whether page in stack can receive touch events.

bool abPageStackDoDraw [GSLC_STACK__MAX]

Whether page in stack is still actively drawn.

· bool bScreenNeedRedraw

Screen requires a redraw.

bool bScreenNeedFlip

Screen requires a page flip.

• bool blnvalidateEn

A region of the display has been invalidated.

gslc_tsRect rInvalidateRect

The rect region that has been invalidated.

• GSLC_CB_PIN_POLL pfuncPinPoll

Callback func ptr for pin polling.

gslc_tsInputMap * asInputMap

Array of input maps.

uint8_t nInputMapMax

Maximum number of input maps.

uint8_t nInputMapCnt

Current number of input maps.

• uint8 t nInputMode

Input mode: 0=navigate, 1=edit.

int16_t nFocusPageInd

Index of page in stack currently in focus.

• gslc_tsPage * pFocusPage

Page ptr currently in focus.

gslc_tsElemRef * pFocusElemRef

Reference to element in focus.

• int16 t nFocusElemInd

Index of element in page currently in focus.

• int16_t nFocusElemMax

Max number of elements in page in focus.

gslc_tsColor colFocusNone

Focus frame color when not in focus (typically background color)

· gslc tsColor colFocus

Focus frame color when in focus.

gslc_tsColor colFocusEdit

Focus frame color when in focus and edit mode.

• int16_t nFocusSavedPageInd

Focus page index saved prior to popup/overlay.

int16_t nFocusSavedElemInd

Focus element index saved prior to popup/overlay.

8.9.1 Detailed Description

GUI structure.

- · Contains all GUI state and content
- · Maintains list of one or more pages

The documentation for this struct was generated from the following file:

· src/GUIslice.h

8.10 gslc_tslmgRef Struct Reference

Image reference structure.

```
#include <GUIslice.h>
```

Data Fields

· const unsigned char * plmgBuf

Pointer to input image buffer in memory [RAM,FLASH].

• const char * pFname

Pathname to input image file [FILE,SD].

• gslc_teImgRefFlags eImgFlags

Image reference flags.

void * pvImgRaw

Ptr to raw output image data (for pre-loaded images)

8.10.1 Detailed Description

Image reference structure.

The documentation for this struct was generated from the following file:

· src/GUIslice.h

8.11 gslc_tsInputMap Struct Reference

Input mapping.

```
#include <GUIslice.h>
```

Data Fields

• gslc_teInputRawEvent eEvent

The input event.

• int16 t nVal

The value associated with the input event.

• gslc_teAction eAction

Resulting action.

• int16_t nActionVal

The value for the output action.

8.11.1 Detailed Description

Input mapping.

- Describes mapping from keyboard or GPIO input to a GUI action (such as changing the current element focus)
- This is generally used to support keyboard or GPIO control over the GUI operation

The documentation for this struct was generated from the following file:

• src/GUIslice.h

8.12 gslc_tsKey Struct Reference

Key information. Defines everything we need to know about a particular key.

```
#include <XKeyPad.h>
```

Data Fields

• uint8_t nld

Unique identifier.

• uint8_t nRow

Row to place the key (0 is top-most)

• uint8_t nCol

Column to place the key (0 is left-most)

• uint8_t nRowSpan

Number of rows that key takes up (in units of nButtonSzH pixels)

• uint8_t nColSpan

Number of columns that key takes up (in units of nButtonSzW pixels)

• uint8_t nType

Key type.

8.12.1 Detailed Description

Key information. Defines everything we need to know about a particular key.

8.12.2 Field Documentation

```
8.12.2.1 nCol
```

uint8_t gslc_tsKey::nCol

Column to place the key (0 is left-most)

8.12.2.2 nColSpan

uint8_t gslc_tsKey::nColSpan

Number of columns that key takes up (in units of nButtonSzW pixels)

8.12.2.3 nld

uint8_t gslc_tsKey::nId

Unique identifier.

8.12.2.4 nRow

uint8_t gslc_tsKey::nRow

Row to place the key (0 is top-most)

8.12.2.5 nRowSpan

uint8_t gslc_tsKey::nRowSpan

Number of rows that key takes up (in units of nButtonSzH pixels)

8.12.2.6 nType

```
uint8_t gslc_tsKey::nType
```

Key type.

The documentation for this struct was generated from the following file:

• src/elem/XKeyPad.h

8.13 gslc_tsLabelSpecial Struct Reference

Key Label strings for special buttons.

```
#include <XKeyPad.h>
```

Data Fields

- uint8_t nld
- const char * pLabel

Unique key ID.

8.13.1 Detailed Description

Key Label strings for special buttons.

· Includes ID and string

8.13.2 Field Documentation

8.13.2.1 nld

```
uint8_t gslc_tsLabelSpecial::nId
```

8.13.2.2 pLabel

```
const char* gslc_tsLabelSpecial::pLabel
```

Unique key ID.

The documentation for this struct was generated from the following file:


• src/elem/XKeyPad.h

8.14 gslc_tsPage Struct Reference

Page structure.

#include <GUIslice.h>

Collaboration diagram for gslc_tsPage:

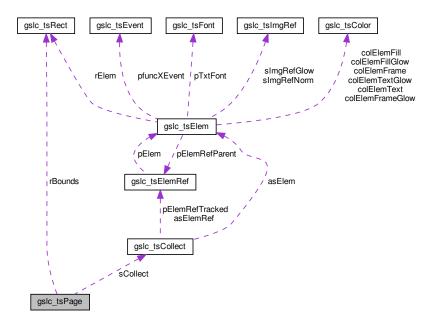

Data Fields

- gslc_tsCollect sCollect
 - Collection of elements on page.
- int16_t nPageId

Page identifier.

gslc_tsRect rBounds

Bounding rect for page elements.

8.14.1 Detailed Description

Page structure.

- · A page contains a collection of elements
- · Many redraw functions operate at a page level
- · Maintains state as to whether redraw or screen flip is required

The documentation for this struct was generated from the following file:

• src/GUIslice.h

8.15 gslc_tsPt Struct Reference

Define point coordinates.

```
#include <GUIslice.h>
```

Data Fields

```
• int16_t x
```

X coordinate.

• int16_t y

Y coordinate.

8.15.1 Detailed Description

Define point coordinates.

The documentation for this struct was generated from the following file:

· src/GUIslice.h

8.16 gslc_tsRect Struct Reference

Rectangular region. Defines X,Y corner coordinates plus dimensions.

```
#include <GUIslice.h>
```

Data Fields

• int16_t x

X coordinate of corner.

• int16_t y

Y coordinate of corner.

• uint16_t w

Width of region.

uint16_t h

Height of region.

8.16.1 Detailed Description

Rectangular region. Defines X,Y corner coordinates plus dimensions.

The documentation for this struct was generated from the following file:


• src/GUIslice.h

8.17 gslc_tsRectState Struct Reference

State associated with an element's region.

#include <GUIslice.h>

Collaboration diagram for gslc_tsRectState:

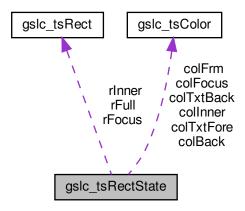

Data Fields

- gslc_tsRect rFocus
- gslc_tsRect rFull
- gslc_tsRect rInner
- gslc_tsColor colFocus
- gslc_tsColor colFrm
- gslc_tsColor colInner
- gslc_tsColor colBack
- gslc_tsColor colTxtFore
- gslc_tsColor colTxtBack

8.17.1 Detailed Description

State associated with an element's region.

- This struct is used for gslc_ElemCalcRectState()
- · Accounts for various rects including focus, frame and internal content
- · Also contains the various colors associated with each region.

The documentation for this struct was generated from the following file:


• src/GUIslice.h

8.18 gslc_tsXCheckbox Struct Reference

Extended data for Checkbox element.

#include <XCheckbox.h>

Collaboration diagram for gslc_tsXCheckbox:

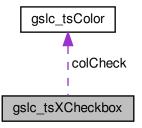

Data Fields

bool bRadio

Radio-button operation if true.

• gslc_teXCheckboxStyle nStyle

Drawing style for element.

· bool bChecked

Indicates if it is selected (checked)

• gslc_tsColor colCheck

Color of checked inner fill.

• GSLC_CB_XCHECKBOX pfuncXToggle

Callback event to say element has changed.

8.18.1 Detailed Description

Extended data for Checkbox element.

8.18.2 Field Documentation

8.18.2.1 bChecked

bool gslc_tsXCheckbox::bChecked

Indicates if it is selected (checked)

8.18.2.2 bRadio

bool gslc_tsXCheckbox::bRadio

Radio-button operation if true.

8.18.2.3 colCheck

gslc_tsColor gslc_tsXCheckbox::colCheck

Color of checked inner fill.

8.18.2.4 nStyle

gslc_teXCheckboxStyle gslc_tsXCheckbox::nStyle

Drawing style for element.

8.18.2.5 pfuncXToggle

GSLC_CB_XCHECKBOX gslc_tsXCheckbox::pfuncXToggle

Callback event to say element has changed.

The documentation for this struct was generated from the following file:


• src/elem/XCheckbox.h

8.19 gslc_tsXGauge Struct Reference

Extended data for Gauge element.

#include <XGauge.h>

Collaboration diagram for gslc_tsXGauge:

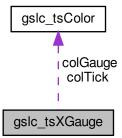

Data Fields

• int16_t nMin

Minimum control value.

• int16 t nMax

Maximum control value.

• int16_t nVal

Current control value.

int16 t nValLast

Last value.

bool bValLastValid

Last value valid?

• gslc_teXGaugeStyle nStyle

Gauge sub-type.

• gslc_tsColor colGauge

Color of gauge fill bar.

gslc_tsColor colTick

Color of gauge tick marks.

uint16_t nTickCnt

Number of gauge tick marks.

• uint16_t nTickLen

Length of gauge tick marks.

bool bVert

Vertical if true, else Horizontal.

bool bFlip

Reverse direction of gauge.

• uint16 t nIndicLen

Indicator length.

• uint16_t nIndicTip

Size of tip at end of indicator.

bool blndicFill

Fill the indicator if true.

8.19.1 Detailed Description

Extended data for Gauge element.

8.19.2 Field Documentation

8.19.2.1 bFlip

bool gslc_tsXGauge::bFlip

Reverse direction of gauge.

8.19.2.2 blndicFill bool gslc_tsXGauge::bIndicFill Fill the indicator if true. 8.19.2.3 bValLastValid bool gslc_tsXGauge::bValLastValid Last value valid? 8.19.2.4 bVert bool gslc_tsXGauge::bVert Vertical if true, else Horizontal. 8.19.2.5 colGauge gslc_tsColor gslc_tsXGauge::colGauge Color of gauge fill bar. 8.19.2.6 colTick gslc_tsColor gslc_tsXGauge::colTick Color of gauge tick marks.

Generated by Doxygen

Indicator length.

8.19.2.7 nIndicLen

uint16_t gslc_tsXGauge::nIndicLen

uint16_t gslc_tsXGauge::nTickLen

Length of gauge tick marks.

```
8.19.2.8 nIndicTip
uint16_t gslc_tsXGauge::nIndicTip
Size of tip at end of indicator.
8.19.2.9 nMax
int16_t gslc_tsXGauge::nMax
Maximum control value.
8.19.2.10 nMin
int16_t gslc_tsXGauge::nMin
Minimum control value.
8.19.2.11 nStyle
gslc_teXGaugeStyle gslc_tsXGauge::nStyle
Gauge sub-type.
8.19.2.12 nTickCnt
uint16_t gslc_tsXGauge::nTickCnt
Number of gauge tick marks.
8.19.2.13 nTickLen
```

8.19.2.14 nVal

int16_t gslc_tsXGauge::nVal

Current control value.

8.19.2.15 nValLast

int16_t gslc_tsXGauge::nValLast

Last value.

The documentation for this struct was generated from the following file:


• src/elem/XGauge.h

8.20 gslc_tsXGlowball Struct Reference

Extended data for Slider element.

#include <XGlowball.h>

Collaboration diagram for gslc_tsXGlowball:

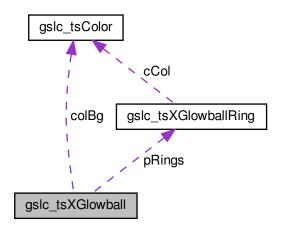

Data Fields

• int16_t nMidX

Gauge midpoint X coord.

• int16_t nMidY

Gauge midpoint Y coord.

• gslc_tsXGlowballRing * pRings

Ring definition array.

• uint8_t nNumRings

Number of rings in definition.

• uint16_t nQuality

Rendering quality (number of segments / rotation)

int16_t nAngStart

Starting angle (0..510 degrees)

• int16_t nAngEnd

Ending angle (0..510 degrees)

• gslc_tsColor colBg

Background color (for redraw)

• int16_t nVal

Current value.

int16_t nValLast

Previous value.

8.20.1 Detailed Description

Extended data for Slider element.

8.20.2 Field Documentation

```
8.20.2.1 colBg
```

gslc_tsColor gslc_tsXGlowball::colBg

Background color (for redraw)

8.20.2.2 nAngEnd

int16_t gslc_tsXGlowball::nAngEnd

Ending angle (0..510 degrees)

```
8.20.2.3 nAngStart
\verb|int16_t gslc_tsXGlowball::nAngStart|\\
Starting angle (0..510 degrees)
8.20.2.4 nMidX
int16_t gslc_tsXGlowball::nMidX
Gauge midpoint X coord.
8.20.2.5 nMidY
int16_t gslc_tsXGlowball::nMidY
Gauge midpoint Y coord.
8.20.2.6 nNumRings
uint8_t gslc_tsXGlowball::nNumRings
Number of rings in definition.
8.20.2.7 nQuality
uint16_t gslc_tsXGlowball::nQuality
Rendering quality (number of segments / rotation)
8.20.2.8 nVal
int16_t gslc_tsXGlowball::nVal
Current value.
```

8.20.2.9 nValLast

int16_t gslc_tsXGlowball::nValLast

Previous value.

8.20.2.10 pRings

gslc_tsXGlowballRing* gslc_tsXGlowball::pRings

Ring definition array.


The documentation for this struct was generated from the following file:

• src/elem/XGlowball.h

8.21 gslc_tsXGlowballRing Struct Reference

#include <XGlowball.h>

Collaboration diagram for gslc_tsXGlowballRing:

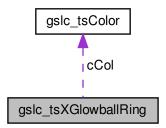

Data Fields

- uint8_t nRad1
- uint8_t nRad2
- gslc_tsColor cCol

8.21.1 Field Documentation

8.21.1.1 cCol

```
gslc_tsColor gslc_tsXGlowballRing::cCol
```

8.21.1.2 nRad1

uint8_t gslc_tsXGlowballRing::nRad1

8.21.1.3 nRad2

uint8_t gslc_tsXGlowballRing::nRad2

The documentation for this struct was generated from the following file:


• src/elem/XGlowball.h

8.22 gslc_tsXGraph Struct Reference

Extended data for Graph element.

#include <XGraph.h>

Collaboration diagram for gslc_tsXGraph:

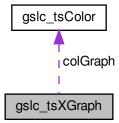

Data Fields

int16_t * pBuf

Ptr to the data buffer (circular buffer))

• uint8_t nMargin

Margin for graph area within element rect.

• gslc_tsColor colGraph

Color of the graph.

• gslc_teXGraphStyle eStyle

Style of the graph.

• uint16_t nBufMax

Maximum number of points in buffer.

• bool bScrollEn

Enable for scrollbar.

• uint16_t nScrollPos

Current scrollbar position.

• uint16 t nWndHeight

Visible window height.

uint16_t nWndWidth

Visible window width.

int16_t nPlotValMax

Visible window maximum value.

• int16_t nPlotValMin

Visible window minimum value.

• uint16_t nPlotIndMax

Number of data points to show in window.

• uint16_t nBufCnt

Number of points in buffer.

• uint16_t nPlotIndStart

First row of current window.

8.22.1 Detailed Description

Extended data for Graph element.

8.22.2 Field Documentation

8.22.2.1 bScrollEn

bool gslc_tsXGraph::bScrollEn

Enable for scrollbar.

8.22.2.2 colGraph

 ${\tt gslc_tsColor}\ {\tt gslc_tsXGraph::colGraph}$

Color of the graph.

8.22.2.3 eStyle

gslc_teXGraphStyle gslc_tsXGraph::eStyle

Style of the graph.

8.22.2.4 nBufCnt

uint16_t gslc_tsXGraph::nBufCnt

Number of points in buffer.

8.22.2.5 nBufMax

uint16_t gslc_tsXGraph::nBufMax

Maximum number of points in buffer.

8.22.2.6 nMargin

uint8_t gslc_tsXGraph::nMargin

Margin for graph area within element rect.

8.22.2.7 nPlotIndMax

uint16_t gslc_tsXGraph::nPlotIndMax

Number of data points to show in window.

8.22.2.8 nPlotIndStart

uint16_t gslc_tsXGraph::nPlotIndStart

First row of current window.

8.22.2.9 nPlotValMax

int16_t gslc_tsXGraph::nPlotValMax

Visible window maximum value.

8.22.2.10 nPlotValMin

int16_t gslc_tsXGraph::nPlotValMin

Visible window minimum value.

8.22.2.11 nScrollPos

uint16_t gslc_tsXGraph::nScrollPos

Current scrollbar position.

8.22.2.12 nWndHeight

uint16_t gslc_tsXGraph::nWndHeight

Visible window height.

8.22.2.13 nWndWidth

uint16_t gslc_tsXGraph::nWndWidth

Visible window width.

8.22.2.14 pBuf

int16_t* gslc_tsXGraph::pBuf

Ptr to the data buffer (circular buffer))

The documentation for this struct was generated from the following file:


· src/elem/XGraph.h

8.23 gslc_tsXKeyPad Struct Reference

Extended data for KeyPad element.

#include <XKeyPad.h>

Collaboration diagram for gslc_tsXKeyPad:

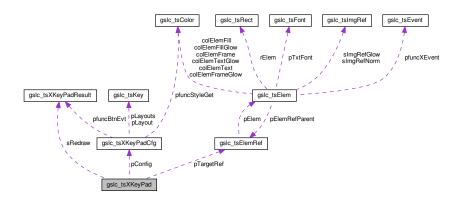

Data Fields

• uint8_t nBufferMax

Maximum number of characters stored in edit value string.

• uint8_t nBufferLen

Current number of characters stored in edit value string.

char acBuffer [XKEYPAD_BUF_MAX]

Buffer storage for edit value string.

uint8 t nCursorPos

Cursor position within the buffer.

• uint8 t nScrollPos

Display offset within the buffer.

gslc_tsXKeyPadResult sRedraw

Pending redraw state.

int16_t nFocusKeyInd

Indicate key in focus (GSLC_IND_NONE if none)

int16_t nGlowKeyInd

Indicate key in glow (GSLC_IND_NONE if none)

gslc_tsXKeyPadCfg * pConfig

Ptr to config struct (may be derived variant)

• GSLC_CB_INPUT pfuncCb

Callback function for KeyPad actions.

• gslc_tsElemRef * pTargetRef

Target element ref associated with keypad (GSLC_CB_INPUT)

8.23.1 Detailed Description

Extended data for KeyPad element.

8.23.2 Field Documentation

8.23.2.1 acBuffer

```
char gslc_tsXKeyPad::acBuffer[XKEYPAD_BUF_MAX]
```

Buffer storage for edit value string.

8.23.2.2 nBufferLen

```
uint8_t gslc_tsXKeyPad::nBufferLen
```

Current number of characters stored in edit value string.

8.23.2.3 nBufferMax

```
uint8_t gslc_tsXKeyPad::nBufferMax
```

Maximum number of characters stored in edit value string.

8.23.2.4 nCursorPos

```
uint8_t gslc_tsXKeyPad::nCursorPos
```

Cursor position within the buffer.

8.23.2.5 nFocusKeyInd

```
int16_t gslc_tsXKeyPad::nFocusKeyInd
```

Indicate key in focus (GSLC_IND_NONE if none)

```
8.23.2.6 nGlowKeyInd
int16_t gslc_tsXKeyPad::nGlowKeyInd
Indicate key in glow (GSLC_IND_NONE if none)
8.23.2.7 nScrollPos
uint8_t gslc_tsXKeyPad::nScrollPos
Display offset within the buffer.
8.23.2.8 pConfig
gslc_tsXKeyPadCfg* gslc_tsXKeyPad::pConfig
Ptr to config struct (may be derived variant)
8.23.2.9 pfuncCb
GSLC_CB_INPUT gslc_tsXKeyPad::pfuncCb
Callback function for KeyPad actions.
8.23.2.10 pTargetRef
gslc_tsElemRef* gslc_tsXKeyPad::pTargetRef
Target element ref associated with keypad (GSLC_CB_INPUT)
```

8.23.2.11 sRedraw

```
gslc_tsXKeyPadResult gslc_tsXKeyPad::sRedraw
```

Pending redraw state.

The documentation for this struct was generated from the following file:


• src/elem/XKeyPad.h

8.24 gslc_tsXKeyPadCfg Struct Reference

Configuration for the KeyPad.

#include <XKeyPad.h>

Collaboration diagram for gslc_tsXKeyPadCfg:

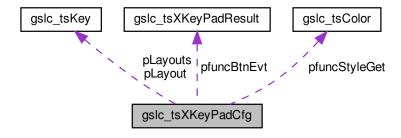

Data Fields

uint8_t nDispMax

Maximum length to display.

bool bRoundEn

Enable rounded corners.

int8_t nButtonSzW

Button width (in pixels)

• int8_t nButtonSzH

Button height (in pixels)

int8_t nButtonSpaceX

Button X spacing (in pixels)

• int8_t nButtonSpaceY

Button Y spacing (in pixels)

gslc_tsKey * pLayout

Current selected layout.

gslc_tsKey ** pLayouts

Key Positions for each KeyPad layout.

• int8_t eLayoutDef

Default KeyPad layout (type gslc_teXKeyPadSel)

int8_t eLayoutSel

Current KeyPad layout (type gslc_teXKeyPadSel)

• int16_t nFontId

Configured font for KeyPad labels.

int16_t nOffsetX

Configured offset (X direction) for buttons from parent container.

int16_t nOffsetY

Configured offset (Y direction) for buttons from parent container.

• int8_t nFrameMargin

Margin around text value field.

• uint8 t nMaxCols

Maximum number of columns to occupy.

uint8_t nMaxRows

Maximum number of rows to occupy.

GSLC_CB_XKEYPAD_RESET pfuncReset

Callback function whenever keypad needs to be reset.

GSLC_CB_XKEYPAD_TXT_INIT pfuncTxtInit

Callback function whenever text string initialized.

• GSLC_CB_XKEYPAD_LABEL_GET pfuncLabelGet

Callback function to get a key label.

• GSLC_CB_XKEYPAD_SYTLE_GET pfuncStyleGet

Callback function to get a key's style.

GSLC_CB_XKEYPAD_BTN_EVT pfuncBtnEvt

Callback function to handle a key.

8.24.1 Detailed Description

Configuration for the KeyPad.

8.24.2 Field Documentation

8.24.2.1 bRoundEn

bool gslc_tsXKeyPadCfg::bRoundEn

Enable rounded corners.

8.24.2.2 eLayoutDef

int8_t gslc_tsXKeyPadCfg::eLayoutDef

Default KeyPad layout (type gslc_teXKeyPadSel)

8.24.2.3 eLayoutSel

int8_t gslc_tsXKeyPadCfg::eLayoutSel

Current KeyPad layout (type gslc_teXKeyPadSel)

8.24.2.4 nButtonSpaceX

int8_t gslc_tsXKeyPadCfg::nButtonSpaceX

Button X spacing (in pixels)

8.24.2.5 nButtonSpaceY

int8_t gslc_tsXKeyPadCfg::nButtonSpaceY

Button Y spacing (in pixels)

8.24.2.6 nButtonSzH

int8_t gslc_tsXKeyPadCfg::nButtonSzH

Button height (in pixels)

8.24.2.7 nButtonSzW

int8_t gslc_tsXKeyPadCfg::nButtonSzW

Button width (in pixels)

8.24.2.8 nDispMax

uint8_t gslc_tsXKeyPadCfg::nDispMax

Maximum length to display.

8.24.2.9 nFontId

int16_t gslc_tsXKeyPadCfg::nFontId

Configured font for KeyPad labels.

8.24.2.10 nFrameMargin

int8_t gslc_tsXKeyPadCfg::nFrameMargin

Margin around text value field.

8.24.2.11 nMaxCols

uint8_t gslc_tsXKeyPadCfg::nMaxCols

Maximum number of columns to occupy.

8.24.2.12 nMaxRows

uint8_t gslc_tsXKeyPadCfg::nMaxRows

Maximum number of rows to occupy.

8.24.2.13 nOffsetX

int16_t gslc_tsXKeyPadCfg::nOffsetX

Configured offset (X direction) for buttons from parent container.

8.24.2.14 nOffsetY

int16_t gslc_tsXKeyPadCfg::nOffsetY

Configured offset (Y direction) for buttons from parent container.

8.24.2.15 pfuncBtnEvt

 ${\tt GSLC_CB_XKEYPAD_BTN_EVT} \ {\tt gslc_tsXKeyPadCfg::} {\tt pfuncBtnEvt}$

Callback function to handle a key.

```
8.24.2.16 pfuncLabelGet
```

```
GSLC_CB_XKEYPAD_LABEL_GET gslc_tsXKeyPadCfg::pfuncLabelGet
```

Callback function to get a key label.

8.24.2.17 pfuncReset

```
GSLC_CB_XKEYPAD_RESET gslc_tsXKeyPadCfg::pfuncReset
```

Callback function whenever keypad needs to be reset.

8.24.2.18 pfuncStyleGet

```
GSLC_CB_XKEYPAD_SYTLE_GET gslc_tsXKeyPadCfg::pfuncStyleGet
```

Callback function to get a key's style.

8.24.2.19 pfuncTxtInit

```
GSLC_CB_XKEYPAD_TXT_INIT gslc_tsXKeyPadCfg::pfuncTxtInit
```

Callback function whenever text string initialized.

8.24.2.20 pLayout

```
gslc_tsKey* gslc_tsXKeyPadCfg::pLayout
```

Current selected layout.

8.24.2.21 pLayouts

```
gslc_tsKey** gslc_tsXKeyPadCfg::pLayouts
```

Key Positions for each KeyPad layout.


The documentation for this struct was generated from the following file:

• src/elem/XKeyPad.h

8.25 gslc_tsXKeyPadCfg_Alpha Struct Reference

#include <XKeyPad_Alpha.h>

Collaboration diagram for gslc_tsXKeyPadCfg_Alpha:

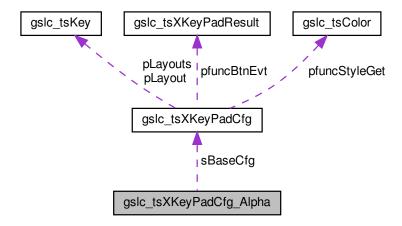

Data Fields

gslc_tsXKeyPadCfg sBaseCfg
 KeyPad base config struct.

8.25.1 Field Documentation

8.25.1.1 sBaseCfg

 ${\tt gslc_tsXKeyPadCfg} \ {\tt gslc_tsXKeyPadCfg_Alpha::sBaseCfg}$

KeyPad base config struct.


The documentation for this struct was generated from the following file:

src/elem/XKeyPad_Alpha.h

8.26 gslc_tsXKeyPadCfg_Num Struct Reference

#include <XKeyPad_Num.h>

Collaboration diagram for gslc_tsXKeyPadCfg_Num:

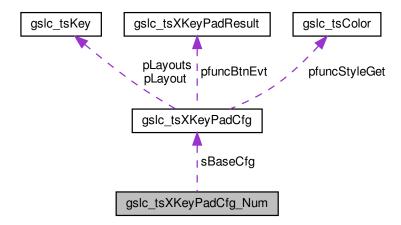

Data Fields

• gslc_tsXKeyPadCfg sBaseCfg

KeyPad base config struct.

bool bFloatEn

Enable floating point (ie. decimal point)

• bool bSignEn

Enable negative numbers.

· bool bValPositive

Is the current value positive? (1=positive, 0=negative)

bool bValDecimalPt

Does the current value include a decimal point?

8.26.1 Field Documentation

8.26.1.1 bFloatEn

bool gslc_tsXKeyPadCfg_Num::bFloatEn

Enable floating point (ie. decimal point)

8.26.1.2 bSignEn

bool gslc_tsXKeyPadCfg_Num::bSignEn

Enable negative numbers.

8.26.1.3 bValDecimalPt

bool gslc_tsXKeyPadCfg_Num::bValDecimalPt

Does the current value include a decimal point?

8.26.1.4 bValPositive

bool gslc_tsXKeyPadCfg_Num::bValPositive

Is the current value positive? (1=positive, 0=negative)

8.26.1.5 sBaseCfg

gslc_tsXKeyPadCfg gslc_tsXKeyPadCfg_Num::sBaseCfg

KeyPad base config struct.

The documentation for this struct was generated from the following file:


• src/elem/XKeyPad_Num.h

8.27 gslc_tsXKeyPadData Struct Reference

Input callback data structure.

#include <XKeyPad.h>

Collaboration diagram for gslc_tsXKeyPadData:

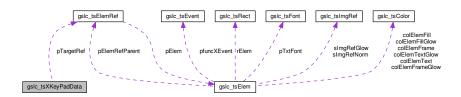

Data Fields

char * pStr

Final value of edited value field.

• gslc_tsElemRef * pTargetRef

Target element reference to receive the value.

8.27.1 Detailed Description

Input callback data structure.

• This struct is returned in GSLC_CB_INPUT when the KeyPad edits are complete, and is used to provide the resulting edited value.

8.27.2 Field Documentation

8.27.2.1 pStr

```
char* gslc_tsXKeyPadData::pStr
```

Final value of edited value field.

8.27.2.2 pTargetRef

```
gslc_tsElemRef* gslc_tsXKeyPadData::pTargetRef
```

Target element reference to receive the value.

The documentation for this struct was generated from the following file:

src/elem/XKeyPad.h

8.28 gslc_tsXKeyPadResult Struct Reference

Return status for XKeyPad.

```
#include <XKeyPad.h>
```

Data Fields

• int16_t eRedrawState

XKeyPad pending redraw state.

• int16_t nRedrawKeyId1

XKeyPad specific key (#1) to redraw (-1 for none)

• int16_t nRedrawKeyId2

XKeyPad specific key (#2) to redraw (-1 for none)

8.28.1 Detailed Description

Return status for XKeyPad.

· Includes any pending redraw state

8.28.2 Field Documentation

8.28.2.1 eRedrawState

```
int16_t gslc_tsXKeyPadResult::eRedrawState
```

XKeyPad pending redraw state.

8.28.2.2 nRedrawKeyld1

```
int16_t gslc_tsXKeyPadResult::nRedrawKeyId1
```

XKeyPad specific key (#1) to redraw (-1 for none)

8.28.2.3 nRedrawKeyld2

```
int16_t gslc_tsXKeyPadResult::nRedrawKeyId2
```

XKeyPad specific key (#2) to redraw (-1 for none)

The documentation for this struct was generated from the following file:


• src/elem/XKeyPad.h

8.29 gslc_tsXListbox Struct Reference

Extended data for Listbox element.

#include <XListbox.h>

Collaboration diagram for gslc_tsXListbox:

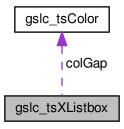

Data Fields

uint8_t * pBufltems

Buffer containing items.

uint16_t nBufltemsMax

Max size of buffer containing items.

uint16_t nBufltemsPos

Current buffer position.

• int16_t nltemCnt

Number of items in the list.

int8_t nCols

Number of columns.

• int8_t nRows

Number of columns (or XLSITBOX_SIZE_AUTO to calculate)

bool bNeedRecalc

Determine if sizing may need recalc.

• int8_t nMarginW

Margin inside main listbox area (X offset)

• int8_t nMarginH

Margin inside main listbox area (Y offset)

· int16 t nltemW

Width of listbox item.

• int16_t nltemH

Height of listbox item.

int8_t nltemGap

Gap between listbox items.

gslc_tsColor colGap

Gap color.

bool bltemAutoSizeW

Enable auto-sizing of items (in width)

• bool bltemAutoSizeH

Enable auto-sizing of items (in height)

int16_t nltemCurSel

Currently selected item (XLISTBOX_SEL_NONE for none)

int16 t nltemCurSelLast

Old selected item to redraw (XLISTBOX_SEL_NONE for none)

int16_t nltemSavedSel

Persistent selected item (ie. saved selection)

int16_t nltemTop

Item to show at top of list after scrolling (0 is default)

· bool bGlowLast

Last glow state.

bool bFocusLast

Last focus state // TODO: Merge with bGlowLast.

GSLC_CB_XLISTBOX_SEL pfuncXSel

Callback func ptr for selection update.

8.29.1 Detailed Description

Extended data for Listbox element.

8.29.2 Field Documentation

8.29.2.1 bFocusLast

bool gslc_tsXListbox::bFocusLast

Last focus state // TODO: Merge with bGlowLast.

8.29.2.2 bGlowLast

bool gslc_tsXListbox::bGlowLast

Last glow state.

8.29.2.3 bltemAutoSizeH

bool gslc_tsXListbox::bItemAutoSizeH

Enable auto-sizing of items (in height)

8.29.2.4 bltemAutoSizeW

bool gslc_tsXListbox::bItemAutoSizeW

Enable auto-sizing of items (in width)

8.29.2.5 bNeedRecalc

bool gslc_tsXListbox::bNeedRecalc

Determine if sizing may need recalc.

8.29.2.6 colGap

gslc_tsColor gslc_tsXListbox::colGap

Gap color.

8.29.2.7 nBufltemsMax

uint16_t gslc_tsXListbox::nBufItemsMax

Max size of buffer containing items.

8.29.2.8 nBufltemsPos

uint16_t gslc_tsXListbox::nBufItemsPos

Current buffer position.

8.29.2.9 nCols

int8_t gslc_tsXListbox::nCols

Number of columns.

8.29.2.10 nltemCnt

int16_t gslc_tsXListbox::nItemCnt

Number of items in the list.

8.29.2.11 nltemCurSel

int16_t gslc_tsXListbox::nItemCurSel

Currently selected item (XLISTBOX_SEL_NONE for none)

8.29.2.12 nltemCurSelLast

int16_t gslc_tsXListbox::nItemCurSelLast

Old selected item to redraw (XLISTBOX_SEL_NONE for none)

8.29.2.13 nltemGap

int8_t gslc_tsXListbox::nItemGap

Gap between listbox items.

8.29.2.14 nltemH

int16_t gslc_tsXListbox::nItemH

Height of listbox item.

8.29.2.15 nltemSavedSel

int16_t gslc_tsXListbox::nItemSavedSel

Persistent selected item (ie. saved selection)

8.29.2.16 nltemTop

```
int16_t gslc_tsXListbox::nItemTop
```

Item to show at top of list after scrolling (0 is default)

8.29.2.17 nltemW

```
int16_t gslc_tsXListbox::nItemW
```

Width of listbox item.

8.29.2.18 nMarginH

```
int8_t gslc_tsXListbox::nMarginH
```

Margin inside main listbox area (Y offset)

8.29.2.19 nMarginW

```
int8_t gslc_tsXListbox::nMarginW
```

Margin inside main listbox area (X offset)

8.29.2.20 nRows

```
int8_t gslc_tsXListbox::nRows
```

Number of columns (or XLSITBOX_SIZE_AUTO to calculate)

8.29.2.21 pBufltems

```
uint8_t* gslc_tsXListbox::pBufItems
```

Buffer containing items.

8.29.2.22 pfuncXSel

GSLC_CB_XLISTBOX_SEL gslc_tsXListbox::pfuncXSel

Callback func ptr for selection update.

The documentation for this struct was generated from the following file:


src/elem/XListbox.h

8.30 gslc_tsXProgress Struct Reference

Extended data for Gauge element.

#include <XProgress.h>

Collaboration diagram for gslc_tsXProgress:

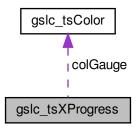

Data Fields

• int16_t nMin

Minimum control value.

int16_t nMax

Maximum control value.

• int16_t nVal

Current control value.

• int16_t nValLast

Last value.

bool bValLastValid

Last value valid?

• gslc_tsColor colGauge

Color of gauge fill bar.

bool bVert

Vertical if true, else Horizontal.

bool bFlip

Reverse direction of gauge.

8.30.1 Detailed Description

Extended data for Gauge element.

8.30.2 Field Documentation

8.30.2.1 bFlip

bool gslc_tsXProgress::bFlip

Reverse direction of gauge.

8.30.2.2 bValLastValid

bool gslc_tsXProgress::bValLastValid

Last value valid?

8.30.2.3 bVert

bool gslc_tsXProgress::bVert

Vertical if true, else Horizontal.

8.30.2.4 colGauge

gslc_tsColor gslc_tsXProgress::colGauge

Color of gauge fill bar.

8.30.2.5 nMax

int16_t gslc_tsXProgress::nMax

Maximum control value.

8.30.2.6 nMin

int16_t gslc_tsXProgress::nMin

Minimum control value.

8.30.2.7 nVal

int16_t gslc_tsXProgress::nVal

Current control value.

8.30.2.8 nValLast

int16_t gslc_tsXProgress::nValLast

Last value.

The documentation for this struct was generated from the following file:


• src/elem/XProgress.h

8.31 gslc_tsXRadial Struct Reference

Extended data for Gauge element.

#include <XRadial.h>

Collaboration diagram for gslc_tsXRadial:

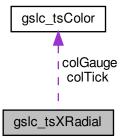

Data Fields

• int16_t nMin

Minimum control value.

int16_t nMax

Maximum control value.

• int16_t nVal

Current control value.

• int16 t nValLast

Last value.

bool bValLastValid

Last value valid?

• gslc_tsColor colGauge

Color of gauge fill bar.

gslc_tsColor colTick

Color of gauge tick marks.

uint16_t nTickCnt

Number of gauge tick marks.

• uint16_t nTickLen

Length of gauge tick marks.

bool bFlip

Reverse direction of gauge.

• uint16_t nIndicLen

Indicator length.

uint16_t nIndicTip

Size of tip at end of indicator.

bool blndicFill

Fill the indicator if true.

8.31.1 Detailed Description

Extended data for Gauge element.

8.31.2 Field Documentation

8.31.2.1 bFlip

bool gslc_tsXRadial::bFlip

Reverse direction of gauge.

8.31.2.2 blndicFill bool gslc_tsXRadial::bIndicFill Fill the indicator if true. 8.31.2.3 bValLastValid bool gslc_tsXRadial::bValLastValid Last value valid?

8.31.2.4 colGauge

```
gslc_tsColor gslc_tsXRadial::colGauge
```

Color of gauge fill bar.

8.31.2.5 colTick

```
gslc_tsColor gslc_tsXRadial::colTick
```

Color of gauge tick marks.

8.31.2.6 nIndicLen

uint16_t gslc_tsXRadial::nIndicLen

Indicator length.

8.31.2.7 nIndicTip

uint16_t gslc_tsXRadial::nIndicTip

Size of tip at end of indicator.

8.31.2.8 nMax

```
int16_t gslc_tsXRadial::nMax
```

Maximum control value.

8.31.2.9 nMin

```
int16_t gslc_tsXRadial::nMin
```

Minimum control value.

8.31.2.10 nTickCnt

```
uint16_t gslc_tsXRadial::nTickCnt
```

Number of gauge tick marks.

8.31.2.11 nTickLen

```
uint16_t gslc_tsXRadial::nTickLen
```

Length of gauge tick marks.

8.31.2.12 nVal

```
int16_t gslc_tsXRadial::nVal
```

Current control value.

8.31.2.13 nValLast

```
int16_t gslc_tsXRadial::nValLast
```

Last value.

The documentation for this struct was generated from the following file:

• src/elem/XRadial.h

8.32 gslc_tsXRamp Struct Reference

Extended data for Gauge element.

```
#include <XRamp.h>
```

Data Fields

• int16_t nMin

Minimum control value.

int16_t nMax

Maximum control value.

• int16_t nVal

Current control value.

• int16_t nValLast

Last value.

bool bValLastValid

Last value valid?

8.32.1 Detailed Description

Extended data for Gauge element.

8.32.2 Field Documentation

8.32.2.1 bValLastValid

bool gslc_tsXRamp::bValLastValid

Last value valid?

8.32.2.2 nMax

int16_t gslc_tsXRamp::nMax

Maximum control value.

8.32.2.3 nMin

int16_t gslc_tsXRamp::nMin

Minimum control value.

8.32.2.4 nVal

int16_t gslc_tsXRamp::nVal

Current control value.

8.32.2.5 nValLast

int16_t gslc_tsXRamp::nValLast

Last value.

The documentation for this struct was generated from the following file:


• src/elem/XRamp.h

8.33 gslc_tsXRingGauge Struct Reference

Extended data for XRingGauge element.

#include <XRingGauge.h>

Collaboration diagram for gslc_tsXRingGauge:

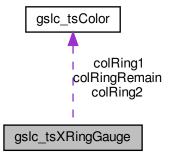

Data Fields

- int16_t nValMin
- int16 t nValMax
- int16_t nAngStart
- int16_t nAngRange
- int16_t nQuality
- int8 t nThickness
- bool bGradient
- uint8_t nSegGap
- gslc_tsColor colRing1
- gslc_tsColor colRing2
- gslc_tsColor colRingRemain
- int16_t nVal

Current position value.

• int16_t nValLast

Previous position value.

char acStrLast [XRING_STR_MAX]

8.33.1 Detailed Description

Extended data for XRingGauge element.

8.33.2 Field Documentation

8.33.2.1 acStrLast

char gslc_tsXRingGauge::acStrLast[XRING_STR_MAX]

8.33.2.2 bGradient

bool gslc_tsXRingGauge::bGradient

8.33.2.3 colRing1

gslc_tsColor gslc_tsXRingGauge::colRing1

8.33.2.4 colRing2

```
gslc_tsColor gslc_tsXRingGauge::colRing2
```

8.33.2.5 colRingRemain

gslc_tsColor gslc_tsXRingGauge::colRingRemain

8.33.2.6 nAngRange

int16_t gslc_tsXRingGauge::nAngRange

8.33.2.7 nAngStart

int16_t gslc_tsXRingGauge::nAngStart

8.33.2.8 nQuality

int16_t gslc_tsXRingGauge::nQuality

8.33.2.9 nSegGap

uint8_t gslc_tsXRingGauge::nSegGap

8.33.2.10 nThickness

int8_t gslc_tsXRingGauge::nThickness

8.33.2.11 nVal

int16_t gslc_tsXRingGauge::nVal

Current position value.

8.33.2.12 nValLast

int16_t gslc_tsXRingGauge::nValLast

Previous position value.

8.33.2.13 nValMax

int16_t gslc_tsXRingGauge::nValMax

8.33.2.14 nValMin

int16_t gslc_tsXRingGauge::nValMin

The documentation for this struct was generated from the following file:


• src/elem/XRingGauge.h

8.34 gslc_tsXSeekbar Struct Reference

Extended data for Seekbar element.

#include <XSeekbar.h>

Collaboration diagram for gslc_tsXSeekbar:

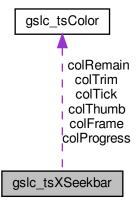

Data Fields

bool bVert

Orientation: true if vertical, else horizontal.

• uint8_t nProgressW

Width of progress track.

• uint8 t nRemainW

Width of remaining track.

• uint8_t nThumbSz

Size of the thumb control.

• int16_t nPosMin

Minimum position value of the slider.

int16_t nPosMax

Maximum position value of the slider.

• gslc_tsColor colProgress

Style: color of progress fill bar.

• gslc_tsColor colRemain

Style: color remaining fill bar.

• gslc_tsColor colThumb

Style: color of thumb.

uint16_t nTickDiv

Style: number of tickmark divisions (0 for none)

• int16_t nTickLen

Style: length of tickmarks.

• gslc_tsColor colTick

Style: color of ticks.

bool bTrimThumb

Style: show a trim color for thumb.

• gslc_tsColor colTrim

Style: color of trim.

bool bFrameThumb

Style: draw frame around thumb.

gslc_tsColor colFrame

Style: color of trim.

• int16_t nPos

Current position value of the slider.

GSLC_CB_XSEEKBAR_POS pfuncXPos

Callback func ptr for position update.

8.34.1 Detailed Description

Extended data for Seekbar element.

8.34.2 Field Documentation

8.34.2.1 bFrameThumb

 $\verb|bool gslc_tsXSeekbar::bFrameThumb|\\$

Style: draw frame around thumb.

8.34.2.2 bTrimThumb

bool gslc_tsXSeekbar::bTrimThumb

Style: show a trim color for thumb.

8.34.2.3 bVert

bool gslc_tsXSeekbar::bVert

Orientation: true if vertical, else horizontal.

8.34.2.4 colFrame

gslc_tsColor gslc_tsXSeekbar::colFrame

Style: color of trim.

8.34.2.5 colProgress

gslc_tsColor gslc_tsXSeekbar::colProgress

Style: color of progress fill bar.

8.34.2.6 colRemain

gslc_tsColor gslc_tsXSeekbar::colRemain

Style: color remaining fill bar.

8.34.2.7 colThumb

gslc_tsColor gslc_tsXSeekbar::colThumb

Style: color of thumb.

8.34.2.8 colTick

gslc_tsColor gslc_tsXSeekbar::colTick

Style: color of ticks.

8.34.2.9 colTrim

gslc_tsColor gslc_tsXSeekbar::colTrim

Style: color of trim.

8.34.2.10 nPos

int16_t gslc_tsXSeekbar::nPos

Current position value of the slider.

8.34.2.11 nPosMax

int16_t gslc_tsXSeekbar::nPosMax

Maximum position value of the slider.

8.34.2.12 nPosMin

int16_t gslc_tsXSeekbar::nPosMin

Minimum position value of the slider.

8.34.2.13 nProgressW

uint8_t gslc_tsXSeekbar::nProgressW

Width of progress track.

8.34.2.14 nRemainW

uint8_t gslc_tsXSeekbar::nRemainW

Width of remaining track.

8.34.2.15 nThumbSz

uint8_t gslc_tsXSeekbar::nThumbSz

Size of the thumb control.

8.34.2.16 nTickDiv

uint16_t gslc_tsXSeekbar::nTickDiv

Style: number of tickmark divisions (0 for none)

8.34.2.17 nTickLen

int16_t gslc_tsXSeekbar::nTickLen

Style: length of tickmarks.

8.34.2.18 pfuncXPos

GSLC_CB_XSEEKBAR_POS gslc_tsXSeekbar::pfuncXPos

Callback func ptr for position update.

The documentation for this struct was generated from the following file:


• src/elem/XSeekbar.h

8.35 gslc_tsXSelNum Struct Reference

Extended data for SelNum element.

#include <XSelNum.h>

Collaboration diagram for gslc_tsXSelNum:

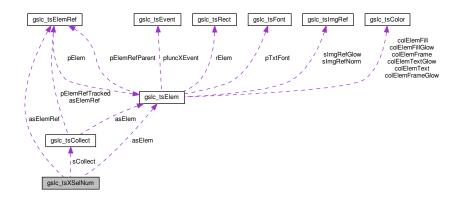

Data Fields

• int16_t nCounter

Counter for demo purposes.

gslc_tsCollect sCollect

Collection management for sub-elements.

• gslc_tsElemRef asElemRef [4]

Storage for sub-element references.

• gslc_tsElem asElem [4]

Storage for sub-elements.

char acElemTxt [4][SELNUM_STR_LEN]

Storage for strings.

8.35.1 Detailed Description

Extended data for SelNum element.

8.35.2 Field Documentation

8.35.2.1 acElemTxt

char gslc_tsXSelNum::acElemTxt[4][SELNUM_STR_LEN]

Storage for strings.

8.35.2.2 asElem

```
gslc_tsElem gslc_tsXSelNum::asElem[4]
```

Storage for sub-elements.

8.35.2.3 asElemRef

```
gslc_tsElemRef gslc_tsXSelNum::asElemRef[4]
```

Storage for sub-element references.

8.35.2.4 nCounter

```
int16_t gslc_tsXSelNum::nCounter
```

Counter for demo purposes.

8.35.2.5 sCollect

```
{\tt gslc\_tsCollect} \ {\tt gslc\_tsXSelNum::sCollect}
```

Collection management for sub-elements.

The documentation for this struct was generated from the following file:


• src/elem/XSelNum.h

8.36 gslc_tsXSlider Struct Reference

Extended data for Slider element.

```
#include <XSlider.h>
```

Collaboration diagram for gslc_tsXSlider:

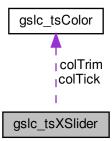

Data Fields

bool bVert

Orientation: true if vertical, else horizontal.

bool bSnapEn

Enable for touch snap behavior.

• int16 t nThumbSz

Size of the thumb control.

• int16_t nPosMin

Minimum position value of the slider.

• int16_t nPosMax

Maximum position value of the slider.

uint16 t nTickDiv

Style: number of tickmark divisions (0 for none)

• int16_t nTickLen

Style: length of tickmarks.

gslc_tsColor colTick

Style: color of ticks.

bool bTrim

Style: show a trim color.

• gslc_tsColor colTrim

Style: color of trim.

• int16_t nPos

Current position value of the slider.

• GSLC_CB_XSLIDER_POS pfuncXPos

Callback func ptr for position update.

8.36.1 Detailed Description

Extended data for Slider element.

8.36.2 Field Documentation

8.36.2.1 bSnapEn

bool gslc_tsXSlider::bSnapEn

Enable for touch snap behavior.

8.36.2.2 bTrim

bool gslc_tsXSlider::bTrim

Style: show a trim color.

8.36.2.3 bVert

bool gslc_tsXSlider::bVert

Orientation: true if vertical, else horizontal.

8.36.2.4 colTick

gslc_tsColor gslc_tsXSlider::colTick

Style: color of ticks.

8.36.2.5 colTrim

gslc_tsColor gslc_tsXSlider::colTrim

Style: color of trim.

8.36.2.6 nPos

int16_t gslc_tsXSlider::nPos

Current position value of the slider.

8.36.2.7 nPosMax

int16_t gslc_tsXSlider::nPosMax

Maximum position value of the slider.

8.36.2.8 nPosMin

int16_t gslc_tsXSlider::nPosMin

Minimum position value of the slider.

8.36.2.9 nThumbSz

int16_t gslc_tsXSlider::nThumbSz

Size of the thumb control.

8.36.2.10 nTickDiv

uint16_t gslc_tsXSlider::nTickDiv

Style: number of tickmark divisions (0 for none)

8.36.2.11 nTickLen

int16_t gslc_tsXSlider::nTickLen

Style: length of tickmarks.

8.36.2.12 pfuncXPos

GSLC_CB_XSLIDER_POS gslc_tsXSlider::pfuncXPos

Callback func ptr for position update.

The documentation for this struct was generated from the following file:


· src/elem/XSlider.h

8.37 gslc_tsXSpinner Struct Reference

Extended data for Spinner element.

#include <XSpinner.h>

Collaboration diagram for gslc_tsXSpinner:

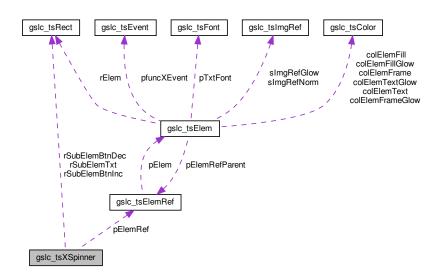

Data Fields

• int16_t nMin

Minimum control value.

int16_t nMax

Maximum control value.

• int16_t nIncr

Increment by value.

• int16 t nCounter

Current value.

GSLC_CB_INPUT pfuncXInput

Callback func ptr for input ready.

• gslc_tsElemRef * pElemRef

Save our ElemRef for the callback.

• int16 t nFontId

Configured font for Spinner.

gslc_tsRect rSubElemTxt

Our virtual Text Field.

gslc_tsRect rSubElemBtnInc

Our virtual Increment Text Button.

• gslc tsRect rSubElemBtnDec

Our virtual Decrement Text Button.

char acElemTxt [1][XSPINNER_STR_LEN]

Storage for strings.

• char aclncr [2]

Increment character string.

• char acDecr [2]

Decrement character string.

8.37.1 Detailed Description

Extended data for Spinner element.

8.37.2 Field Documentation

8.37.2.1 acDecr

char gslc_tsXSpinner::acDecr[2]

Decrement character string.

int16_t gslc_tsXSpinner::nMax

Maximum control value.

```
8.37.2.2 acElemTxt
char gslc_tsXSpinner::acElemTxt[1][XSPINNER_STR_LEN]
Storage for strings.
8.37.2.3 acIncr
char gslc_tsXSpinner::acIncr[2]
Increment character string.
8.37.2.4 nCounter
int16_t gslc_tsXSpinner::nCounter
Current value.
8.37.2.5 nFontId
int16_t gslc_tsXSpinner::nFontId
Configured font for Spinner.
8.37.2.6 nlncr
int16_t gslc_tsXSpinner::nIncr
Increment by value.
8.37.2.7 nMax
```

```
8.37.2.8 nMin
```

int16_t gslc_tsXSpinner::nMin

Minimum control value.

8.37.2.9 pElemRef

gslc_tsElemRef* gslc_tsXSpinner::pElemRef

Save our ElemRef for the callback.

8.37.2.10 pfuncXInput

GSLC_CB_INPUT gslc_tsXSpinner::pfuncXInput

Callback func ptr for input ready.

8.37.2.11 rSubElemBtnDec

gslc_tsRect gslc_tsXSpinner::rSubElemBtnDec

Our virtual Decrement Text Button.

8.37.2.12 rSubElemBtnInc

gslc_tsRect gslc_tsXSpinner::rSubElemBtnInc

Our virtual Increment Text Button.

8.37.2.13 rSubElemTxt

gslc_tsRect gslc_tsXSpinner::rSubElemTxt

Our virtual Text Field.

The documentation for this struct was generated from the following file:

• src/elem/XSpinner.h

8.38 gslc_tsXTemplate Struct Reference

Callback function for slider feedback.

```
#include <XTemplate.h>
```

8.38.1 Detailed Description

Callback function for slider feedback.

Extended data for Slider element

The documentation for this struct was generated from the following file:

• src/elem/XTemplate.h

8.39 gslc_tsXTextbox Struct Reference

Extended data for Textbox element.

```
#include <XTextbox.h>
```

Data Fields

char * pBuf

Ptr to the text buffer (circular buffer))

int8_t nMarginX

Margin for text area within element rect (X)

int8_t nMarginY

Margin for text area within element rect (Y)

bool bWrapEn

Enable for line wrapping.

• uint16_t nBufRows

Number of rows in buffer.

uint16_t nBufCols

Number of columns in buffer.

bool bScrollEn

Enable for scrollbar.

• uint16_t nScrollPos

Current scrollbar position.

uint8 t nChSizeX

Width of characters (pixels)

uint8_t nChSizeY

Height of characters (pixels)

• uint8 t nWndCols

Window X size.

• uint8_t nWndRows

Window Y size.

uint8_t nCurPosX

Cursor X position.

uint8_t nCurPosY

Cursor Y position.

uint8_t nBufPosX

Buffer X position.

• uint8_t nBufPosY

Buffer Y position.

• uint8_t nWndRowStart

First row of current window.

int16_t nRedrawRow

Specific row to update in redraw (if not -1)

8.39.1 Detailed Description

Extended data for Textbox element.

8.39.2 Field Documentation

8.39.2.1 bScrollEn

bool gslc_tsXTextbox::bScrollEn

Enable for scrollbar.

8.39.2.2 bWrapEn

bool gslc_tsXTextbox::bWrapEn

Enable for line wrapping.

8.39.2.3 nBufCols

uint16_t gslc_tsXTextbox::nBufCols

Number of columns in buffer.

Cursor X position.

8.39.2.4 nBufPosX uint8_t gslc_tsXTextbox::nBufPosX Buffer X position. 8.39.2.5 nBufPosY uint8_t gslc_tsXTextbox::nBufPosY Buffer Y position. 8.39.2.6 nBufRows uint16_t gslc_tsXTextbox::nBufRows Number of rows in buffer. 8.39.2.7 nChSizeX uint8_t gslc_tsXTextbox::nChSizeX Width of characters (pixels) 8.39.2.8 nChSizeY uint8_t gslc_tsXTextbox::nChSizeY Height of characters (pixels) 8.39.2.9 nCurPosX uint8_t gslc_tsXTextbox::nCurPosX

```
8.39.2.10 nCurPosY
uint8_t gslc_tsXTextbox::nCurPosY
Cursor Y position.
8.39.2.11 nMarginX
int8_t gslc_tsXTextbox::nMarginX
Margin for text area within element rect (X)
8.39.2.12 nMarginY
int8_t gslc_tsXTextbox::nMarginY
Margin for text area within element rect (Y)
8.39.2.13 nRedrawRow
int16_t gslc_tsXTextbox::nRedrawRow
Specific row to update in redraw (if not -1)
8.39.2.14 nScrollPos
uint16_t gslc_tsXTextbox::nScrollPos
Current scrollbar position.
8.39.2.15 nWndCols
uint8_t gslc_tsXTextbox::nWndCols
Window X size.
```

8.39.2.16 nWndRows

uint8_t gslc_tsXTextbox::nWndRows

Window Y size.

8.39.2.17 nWndRowStart

uint8_t gslc_tsXTextbox::nWndRowStart

First row of current window.

8.39.2.18 pBuf

char* gslc_tsXTextbox::pBuf

Ptr to the text buffer (circular buffer))

The documentation for this struct was generated from the following file:


• src/elem/XTextbox.h

8.40 gslc_tsXTogglebtn Struct Reference

Extended data for Togglebtn element.

#include <XTogglebtn.h>

Collaboration diagram for gslc_tsXTogglebtn:

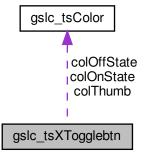

Data Fields

bool bOn

Indicates if button is ON or OFF.

· int16_t nMyPageId

We need to track our page in case of grouping elements on a non current layer, like base layer.

gslc_tsColor colThumb

Color of thumb.

• gslc_tsColor colOnState

Color of button in ON state.

• gslc_tsColor colOffState

Color of button in OFF state.

bool bCircular

Style of the toggle button circular or rectangular.

GSLC_CB_TOUCH pfunctUser

User's Callback event to say element has changed.

8.40.1 Detailed Description

Extended data for Togglebtn element.

8.40.2 Field Documentation

8.40.2.1 bCircular

bool gslc_tsXTogglebtn::bCircular

Style of the toggle button circular or rectangular.

8.40.2.2 bOn

bool gslc_tsXTogglebtn::bOn

Indicates if button is ON or OFF.

8.40.2.3 colOffState

gslc_tsColor gslc_tsXTogglebtn::colOffState

Color of button in OFF state.

8.40.2.4 colOnState

```
gslc_tsColor gslc_tsXTogglebtn::colOnState
```

Color of button in ON state.

8.40.2.5 colThumb

```
gslc_tsColor gslc_tsXTogglebtn::colThumb
```

Color of thumb.

8.40.2.6 nMyPageId

```
int16_t gslc_tsXTogglebtn::nMyPageId
```

We need to track our page in case of grouping elements on a non current layer, like base layer.

8.40.2.7 pfunctUser

```
GSLC_CB_TOUCH gslc_tsXTogglebtn::pfunctUser
```

User's Callback event to say element has changed.

The documentation for this struct was generated from the following file:

• src/elem/XTogglebtn.h

8.41 gslc_tsXToggleImgbtn Struct Reference

Extended data for ToggleImgbtn element.

```
#include <XToggleImgbtn.h>
```

Data Fields

bool bOn

Indicates if button is ON or OFF.

int16_t nMyPageId

We need to track our page in case of grouping elements on a non current layer, like base layer.

• GSLC_CB_TOUCH pfunctUser

User's Callback event to say element has changed.

8.41.1 Detailed Description

Extended data for ToggleImgbtn element.

8.41.2 Field Documentation

8.41.2.1 bOn

bool gslc_tsXToggleImgbtn::bOn

Indicates if button is ON or OFF.

8.41.2.2 nMyPageId

int16_t gslc_tsXToggleImgbtn::nMyPageId

We need to track our page in case of grouping elements on a non current layer, like base layer.

8.41.2.3 pfunctUser

GSLC_CB_TOUCH gslc_tsXToggleImgbtn::pfunctUser

User's Callback event to say element has changed.

The documentation for this struct was generated from the following file:

• src/elem/XToggleImgbtn.h

8.42 THPoint Class Reference

#include <GUIslice_th.h>

Public Member Functions

- THPoint (void)
- THPoint (uint16_t x, uint16_t y, uint16_t z)
- bool operator== (THPoint)
- bool operator!= (THPoint)

Data Fields

```
    uint16_t x
```

- uint16_t y
- uint16_t z

8.42.1 Constructor & Destructor Documentation

8.42.2 Member Function Documentation

```
8.42.2.1 operator"!=()
```

```
bool THPoint::operator!= (
          THPoint p1 )
```

8.42.2.2 operator==()

```
bool THPoint::operator== (
          THPoint p1 )
```

8.42.3 Field Documentation

8.42.3.1 x

uint16_t THPoint::x

8.42.3.2 y

uint16_t THPoint::y

8.42.3.3 z

uint16_t THPoint::z


The documentation for this class was generated from the following files:

- src/GUIslice_th.h
- src/GUIslice_th.cpp

8.43 TouchHandler Class Reference

#include <GUIslice_th.h>

Inheritance diagram for TouchHandler:

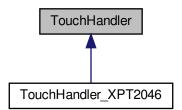

Public Member Functions

- TouchHandler ()
- void setSize (uint16_t _disp_xSize, uint16_t _disp_ySize)
- void setCalibration (uint16_t ts_xMin, uint16_t ts_xMax, uint16_t ts_yMin, uint16_t ts_yMax)
- void setSwapFlip (bool _swapXY, bool _flipX, bool _flipY)
- THPoint scale (THPoint pln)
- virtual void begin (void)
- virtual THPoint getPoint (void)

8.43.1 Constructor & Destructor Documentation

```
8.43.1.1 TouchHandler()
```

```
TouchHandler::TouchHandler ( ) [inline]
```

8.43.2 Member Function Documentation

```
8.43.2.1 begin()
```

Reimplemented in TouchHandler_XPT2046.

8.43.2.2 getPoint()

Reimplemented in TouchHandler_XPT2046.

8.43.2.3 scale()

8.43.2.4 setCalibration()

8.43.2.5 setSize()

8.43.2.6 setSwapFlip()

```
void TouchHandler::setSwapFlip (
    bool _swapXY,
    bool _flipX,
    bool _flipY )
```


The documentation for this class was generated from the following files:

- src/GUIslice_th.h
- src/GUIslice_th.cpp


8.44 TouchHandler_XPT2046 Class Reference

```
#include <GUIslice_th_XPT2046.h>
```

Inheritance diagram for TouchHandler_XPT2046:

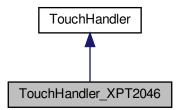

Collaboration diagram for TouchHandler_XPT2046:

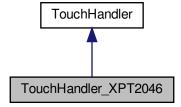

Public Member Functions

- TouchHandler_XPT2046 (SPIClass &spi, uint8_t spi_cs_pin)
- void begin (void)
- THPoint getPoint (void)

Data Fields

- SPIClass spi
- XPT2046_touch touchDriver

8.44.1 Constructor & Destructor Documentation

8.44.1.1 TouchHandler_XPT2046()

8.44.2 Member Function Documentation

8.44.2.1 begin()

Reimplemented from TouchHandler.

8.44.2.2 getPoint()

Reimplemented from TouchHandler.

8.44.3 Field Documentation

8.44.3.1 spi

SPIClass TouchHandler_XPT2046::spi

8.44.3.2 touchDriver

XPT2046_touch TouchHandler_XPT2046::touchDriver

The documentation for this class was generated from the following file:

• src/GUIslice_th_XPT2046.h

Chapter 9


File Documentation

9.1 README.md File Reference

9.2 src/elem/XCheckbox.c File Reference

```
#include "GUIslice.h"
#include "GUIslice_drv.h"
#include "elem/XCheckbox.h"
#include <stdio.h>
```

Include dependency graph for XCheckbox.c:

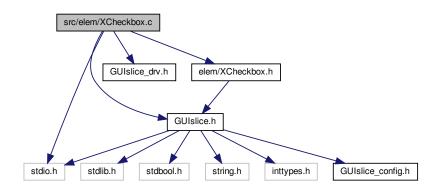

Functions

gslc_tsElemRef * gslc_ElemXCheckboxCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_
tsXCheckbox *pXData, gslc_tsRect rElem, bool bRadio, gslc_teXCheckboxStyle nStyle, gslc_tsColor col
Check, bool bChecked)

Create a Checkbox or Radio button Element.

• bool gslc ElemXCheckboxGetState (gslc tsGui *pGui, gslc tsElemRef *pElemRef)

Get a Checkbox element's current state.

• gslc_tsElemRef * gslc_ElemXCheckboxFindChecked (gslc_tsGui *pGui, int16_t nGroupId)

252 File Documentation

Find the checkbox within a group that has been checked.

 void gslc_ElemXCheckboxSetStateFunc (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, GSLC_CB_XCH← ECKBOX pfuncCb)

Assign the state callback function for a checkbox/radio button.

- void gslc_ElemXCheckboxSetStateHelp (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bChecked, bool bDoCb)
- void gslc_ElemXCheckboxSetState (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bChecked)

Set a Checkbox element's current state.

• void gslc_ElemXCheckboxToggleState (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Toggle a Checkbox element's current state.

• bool gslc_ElemXCheckboxDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

Draw a Checkbox element on the screen.

bool gslc_ElemXCheckboxTouch (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)

Handle touch events to Checkbox element.

Variables

- const char GSLC_PMEM ERRSTR_NULL []
- const char GSLC PMEM ERRSTR PXD NULL []

9.2.1 Function Documentation

9.2.1.1 gslc_ElemXCheckboxCreate()

Create a Checkbox or Radio button Element.

Parameters

in	pGui	Pointer to GUI	
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)	
in	nPage	Page ID to attach element to	
in	pXData	Ptr to extended element data structure	
in	rElem	Rectangle coordinates defining checkbox size	
in	bRadio	Radio-button functionality if true	
in	nStyle	Drawing style for checkbox / radio button	
in	colCheck	colCheck Color for inner fill when checked	
in	bChecked	Default state	

Returns

Pointer to Element reference or NULL if failure

9.2.1.2 gslc_ElemXCheckboxDraw()

Draw a Checkbox element on the screen.

• Called from gslc_ElemDraw()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.2.1.3 gslc_ElemXCheckboxFindChecked()

Find the checkbox within a group that has been checked.

Parameters

in	pGui	Pointer to GUI
in	n⊷	Group ID to search
	GroupId	

Returns

Element Ptr or NULL if none checked

254 File Documentation

9.2.1.4 gslc_ElemXCheckboxGetState()

Get a Checkbox element's current state.

Parameters

	in	pGui	Pointer to GUI
ſ	in	pElemRef	Pointer to Element reference

Returns

Current state

9.2.1.5 gslc_ElemXCheckboxSetState()

Set a Checkbox element's current state.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	bChecked	New state

Returns

none

9.2.1.6 gslc_ElemXCheckboxSetStateFunc()

Assign the state callback function for a checkbox/radio button.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	pfuncCb	Function pointer to callback routine (or NULL for none)

Returns

none

9.2.1.7 gslc_ElemXCheckboxSetStateHelp()

9.2.1.8 gslc_ElemXCheckboxToggleState()

Toggle a Checkbox element's current state.

Parameters

ſ	in	pGui	Pointer to GUI
ſ	in	pElemRef	Pointer to Element reference

Returns

none

9.2.1.9 gslc_ElemXCheckboxTouch()

Handle touch events to Checkbox element.

256 File Documentation

• Called from gslc_ElemSendEventTouch()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)	
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)	
in	eTouch	Touch event type	
in	nRelX	Touch X coord relative to element	
in	nRelY	Touch Y coord relative to element	

Returns

true if success, false otherwise

9.2.2 Variable Documentation

9.2.2.1 ERRSTR_NULL


const char ERRSTR_NULL

9.2.2.2 ERRSTR_PXD_NULL


const char GSLC_PMEM ERRSTR_PXD_NULL[]

9.3 src/elem/XCheckbox.h File Reference

#include "GUIslice.h"
Include dependency graph for XCheckbox.h:

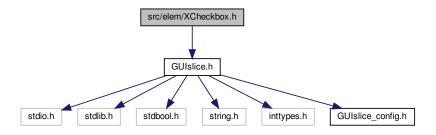

This graph shows which files directly or indirectly include this file:

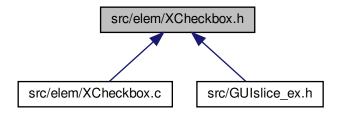

Data Structures

• struct gslc_tsXCheckbox

Extended data for Checkbox element.

Macros

- #define GSLC TYPEX CHECKBOX
- #define gslc_ElemXCheckboxCreate_P(pGui, nElemId, nPage, nX, nY, nW, nH, colFill, bFillEn, nGroup, b
 — Radio_, nStyle_, colCheck_, bChecked_)

Create a Checkbox or Radio button Element in Flash.

Typedefs

• typedef bool(* GSLC_CB_XCHECKBOX) (void *pvGui, void *pvElemRef, int16_t nSelld, bool bChecked)

Callback function for checkbox/radio element state change.

Enumerations

Checkbox drawing style.

Functions

gslc_tsElemRef * gslc_ElemXCheckboxCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_
tsXCheckbox *pXData, gslc_tsRect rElem, bool bRadio, gslc_teXCheckboxStyle nStyle, gslc_tsColor col
Check, bool bChecked)

Create a Checkbox or Radio button Element.

• bool gslc_ElemXCheckboxGetState (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get a Checkbox element's current state.

void gslc_ElemXCheckboxSetState (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bChecked)

Set a Checkbox element's current state.

258 File Documentation

• gslc_tsElemRef * gslc_ElemXCheckboxFindChecked (gslc_tsGui *pGui, int16_t nGroupId)

Find the checkbox within a group that has been checked.

• void gslc_ElemXCheckboxToggleState (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Toggle a Checkbox element's current state.

 void gslc_ElemXCheckboxSetStateFunc (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, GSLC_CB_XCH← ECKBOX pfuncCb)

Assign the state callback function for a checkbox/radio button.

bool gslc ElemXCheckboxDraw (void *pvGui, void *pvElemRef, gslc teRedrawType eRedraw)

Draw a Checkbox element on the screen.

bool gslc_ElemXCheckboxTouch (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16 t nRelY)

Handle touch events to Checkbox element.

9.3.1 Macro Definition Documentation

9.3.1.1 gslc_ElemXCheckboxCreate_P

Create a Checkbox or Radio button Element in Flash.

Parameters

in	pGui	Pointer to GUI	
in	nElemId	Unique element ID to assign	
in	nPage Page ID to attach element to		
in	nΧ	X coordinate of element	
in	nΥ	Y coordinate of element	
in	nW	Width of element	
in	nH	Height of element	
in	colFill	Color for the control background fill	
in	bFillEn	True if background filled, false otherwise (recommend True)	
in	nGroup	Group ID that radio buttons belong to (else GSLC_GROUP_NONE)	
in	bRadio_	Radio-button functionality if true	
in	nStyle_	Drawing style for checkbox / radio button	

in	col⊷	Color for inner fill when checked
	Check_	
in	b⇔	Default state
	Checked←	
	_	

Returns

none

9.3.1.2 GSLC_TYPEX_CHECKBOX

#define GSLC_TYPEX_CHECKBOX

9.3.2 Typedef Documentation

9.3.2.1 GSLC_CB_XCHECKBOX

typedef bool(* GSLC_CB_XCHECKBOX) (void *pvGui, void *pvElemRef, int16_t nSelId, bool bChecked)

Callback function for checkbox/radio element state change.

- nSelld: Selected element's ID or GSLC_ID_NONE
- · bChecked: Element was selected if true, false otherwise

9.3.3 Enumeration Type Documentation

9.3.3.1 gslc_teXCheckboxStyle

enum gslc_teXCheckboxStyle

Checkbox drawing style.

Enumerator

GSLCX_CHECKBOX_STYLE_BOX	Inner box.
GSLCX_CHECKBOX_STYLE_X	Crossed.
GSLCX_CHECKBOX_STYLE_ROUND	Circular.

9.3.4 Function Documentation

9.3.4.1 gslc_ElemXCheckboxCreate()

Create a Checkbox or Radio button Element.

Parameters

in	pGui	Pointer to GUI
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)
in	nPage	Page ID to attach element to
in	pXData	Ptr to extended element data structure
in	rElem	Rectangle coordinates defining checkbox size
in	bRadio	Radio-button functionality if true
in	nStyle	Drawing style for checkbox / radio button
in	colCheck	Color for inner fill when checked
in	bChecked	Default state

Returns

Pointer to Element reference or NULL if failure

9.3.4.2 gslc_ElemXCheckboxDraw()

Draw a Checkbox element on the screen.

• Called from gslc_ElemDraw()

	in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
	in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
Ī	in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.3.4.3 gslc_ElemXCheckboxFindChecked()

Find the checkbox within a group that has been checked.

Parameters

in	pGui	Pointer to GUI
in	n⊷	Group ID to search
	GroupId	

Returns

Element Ptr or NULL if none checked

9.3.4.4 gslc_ElemXCheckboxGetState()

Get a Checkbox element's current state.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference

Returns

Current state

9.3.4.5 gslc_ElemXCheckboxSetState()

Set a Checkbox element's current state.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	bChecked	New state

Returns

none

9.3.4.6 gslc_ElemXCheckboxSetStateFunc()

Assign the state callback function for a checkbox/radio button.

Parameters

	in	pGui	Pointer to GUI
ĺ	in	pElemRef	Pointer to Element reference
Ī	in	pfuncCb	Function pointer to callback routine (or NULL for none)

Returns

none

9.3.4.7 gslc_ElemXCheckboxToggleState()

Toggle a Checkbox element's current state.

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference

Returns

none

9.3.4.8 gslc_ElemXCheckboxTouch()

Handle touch events to Checkbox element.

Called from gslc_ElemSendEventTouch()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eTouch	Touch event type
in	nRelX	Touch X coord relative to element
in	nRelY	Touch Y coord relative to element


Returns

true if success, false otherwise

9.4 src/elem/XGauge.c File Reference

```
#include "GUIslice.h"
#include "GUIslice_drv.h"
#include "elem/XGauge.h"
#include <stdio.h>
#include <math.h>
```

Include dependency graph for XGauge.c:

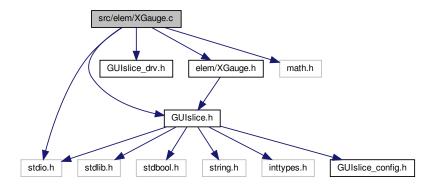

Functions

 gslc_tsElemRef * gslc_ElemXGaugeCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsX← Gauge *pXData, gslc_tsRect rElem, int16_t nMin, int16_t nMax, int16_t nVal, gslc_tsColor colGauge, bool bVert)

Create a Gauge Element.

- void gslc_ElemXGaugeSetStyle (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_teXGaugeStyle nStyle)

 Configure the style of a Gauge element.
- void gslc_ElemXGaugeSetIndicator (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colGauge, uint16_t nIndicLen, uint16_t nIndicTip, bool bIndicFill)

Configure the appearance of the Gauge indicator.

 void gslc_ElemXGaugeSetTicks (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colTick, uint16_t nTickCnt, uint16_t nTickLen)

Configure the appearance of the Gauge ticks.

- void gslc_ElemXGaugeUpdate (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nVal)
 - Update a Gauge element's current value.
- void gslc_ElemXGaugeSetFlip (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bFlip)

Set a Gauge element's fill direction.

- bool gslc_ElemXGaugeDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)
 - Draw a gauge element on the screen.
- bool gslc_ElemXGaugeDrawProgressBar (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_teRedraw←
 Type eRedraw)

Helper function to draw a gauge with style: progress bar.

Variables

- const char GSLC PMEM ERRSTR NULL[]
- const char GSLC_PMEM ERRSTR_PXD_NULL []

9.4.1 Function Documentation

9.4.1.1 gslc_ElemXGaugeCreate()

```
gslc_tsElemRef* gslc_ElemXGaugeCreate (
    gslc_tsGui * pGui,
    int16_t nElemId,
    int16_t nPage,
    gslc_tsXGauge * pXData,
    gslc_tsRect rElem,
    int16_t nMin,
    int16_t nMax,
    int16_t nVal,
    gslc_tsColor colGauge,
    bool bVert )
```

Create a Gauge Element.

- Draws a gauge element that represents a proportion (nVal) between nMin and nMax.
- · Support gauge sub-types:
 - GSLC_TYPEX_GAUGE_PROG_BAR: Horizontal or vertical box with filled region
 - GSLC_TYPEX_GAUGE_RADIAL: Radial / compass indicator
- Default appearance is a horizontal progress bar, but can be changed with gslc_ElemXGaugeSetStyle())

Parameters

in	pGui	Pointer to GUI
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)
in	nPage	Page ID to attach element to
in	pXData	Ptr to extended element data structure
in	rElem	Rectangle coordinates defining gauge size
in	nMin	Minimum value of gauge for nVal comparison
in	nMax	Maximum value of gauge for nVal comparison
in	nVal	Starting value of gauge
in	colGauge	Color for the gauge indicator
in	bVert	Flag to indicate vertical vs horizontal action (true = vertical, false = horizontal)

Returns

Pointer to Element reference or NULL if failure

9.4.1.2 gslc_ElemXGaugeDraw()

Draw a gauge element on the screen.

• Called from gslc_ElemDraw()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.4.1.3 gslc_ElemXGaugeDrawProgressBar()

Helper function to draw a gauge with style: progress bar.

• Called from gslc_ElemXGaugeDraw()

Parameters

in	pGui	Ptr to GUI
in	pElemRef	Ptr to Element reference
in	eRedraw	Redraw status

Returns

true if success, false otherwise

9.4.1.4 gslc_ElemXGaugeSetFlip()

Set a Gauge element's fill direction.

- · Setting bFlip reverses the default fill direction
- · Default fill direction for horizontal gauges: left-to-right
- · Default fill direction for vertical gauges: bottom-to-top

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	bFlip	If set, reverse direction of fill from default

Returns

none

9.4.1.5 gslc_ElemXGaugeSetIndicator()

Configure the appearance of the Gauge indicator.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	colGauge	Color of the indicator
in	nIndicLen	Length of the indicator
in	nIndicTip	Size of the indicator tip
in	bIndicFill	Fill in the indicator if true

Returns

none

9.4.1.6 gslc_ElemXGaugeSetStyle()

Configure the style of a Gauge element.

• This function is used to select between one of several gauge types (eg. progress bar, radial dial, etc.)

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	пТуре	Gauge style enumeration

Returns

none

9.4.1.7 gslc_ElemXGaugeSetTicks()

Configure the appearance of the Gauge ticks.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	colTick	Color of the gauge ticks
in	nTickCnt	Number of ticks to draw around / along gauge
in	nTickLen	Length of the tick marks to draw

Returns

none

9.4.1.8 gslc_ElemXGaugeUpdate()

Update a Gauge element's current value.

• Note that min & max values are assigned in create()

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nVal	New value to show in gauge

Returns

none

9.4.2 Variable Documentation

9.4.2.1 ERRSTR_NULL


const char GSLC_PMEM ERRSTR_NULL[]

9.4.2.2 ERRSTR_PXD_NULL


const char GSLC_PMEM ERRSTR_PXD_NULL[]

9.5 src/elem/XGauge.h File Reference

#include "GUIslice.h"
Include dependency graph for XGauge.h:

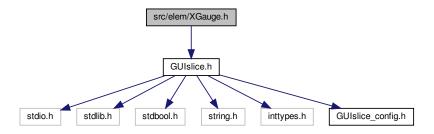

This graph shows which files directly or indirectly include this file:

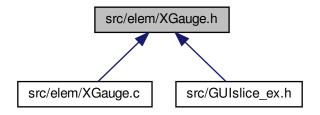

Data Structures

struct gslc_tsXGauge

Extended data for Gauge element.

Macros

- #define GSLC TYPEX GAUGE
- #define gslc_ElemXGaugeCreate_P(pGui, nElemId, nPage, nX, nY, nW, nH, nMin_, nMax_, nVal_, col
 Frame_, colFill_, colGauge_, bVert_)

Create a Gauge Element in Flash.

Enumerations

 enum gslc_teXGaugeStyle { GSLCX_GAUGE_STYLE_PROG_BAR, GSLCX_GAUGE_STYLE_RADIAL, GSLCX GAUGE STYLE RAMP}

Gauge drawing style.

Functions

 gslc_tsElemRef * gslc_ElemXGaugeCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsX← Gauge *pXData, gslc_tsRect rElem, int16_t nMin, int16_t nMax, int16_t nVal, gslc_tsColor colGauge, bool bVert)

Create a Gauge Element.

- void gslc_ElemXGaugeSetStyle (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_teXGaugeStyle nType)

 Configure the style of a Gauge element.
- void gslc_ElemXGaugeSetIndicator (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colGauge, uint16_t nIndicLen, uint16_t nIndicTip, bool bIndicFill)

Configure the appearance of the Gauge indicator.

 void gslc_ElemXGaugeSetTicks (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colTick, uint16_t nTickCnt, uint16_t nTickLen)

Configure the appearance of the Gauge ticks.

• void gslc_ElemXGaugeUpdate (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nVal)

Update a Gauge element's current value.

- void gslc_ElemXGaugeSetFlip (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bFlip)

 Set a Gauge element's fill direction.
- bool gslc_ElemXGaugeDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

 Draw a gauge element on the screen.

Helper function to draw a gauge with style: progress bar.

9.5.1 Macro Definition Documentation

9.5.1.1 gslc_ElemXGaugeCreate_P

Create a Gauge Element in Flash.

Parameters

in	pGui	Pointer to GUI
in	nElemId	Unique element ID to assign
in	nPage	Page ID to attach element to
in	nΧ	X coordinate of element
in	nY	Y coordinate of element
in	nW	Width of element
in	nH	Height of element
in	nMin_	Minimum value of gauge for nVal comparison
in	nMax_	Maximum value of gauge for nVal comparison
in	nVal_	Starting value of gauge
in	col⊷	Color for the gauge frame
	Frame_	
in	colFill_	Color for the gauge background fill
in	col⊷	Color for the gauge indicator
	Gauge_	
in	bVert_	Flag to indicate vertical vs horizontal action (true = vertical, false = horizontal)

Returns

none

9.5.1.2 GSLC_TYPEX_GAUGE

```
#define GSLC_TYPEX_GAUGE
```

9.5.2 Enumeration Type Documentation

9.5.2.1 gslc_teXGaugeStyle

```
enum gslc_teXGaugeStyle
```

Gauge drawing style.

Enumerator

GSLCX_GAUGE_STYLE_PROG_BAR	Progress bar.
GSLCX_GAUGE_STYLE_RADIAL	Radial indicator.
GSLCX_GAUGE_STYLE_RAMP	Ramp indicator.

9.5.3 Function Documentation

9.5.3.1 gslc_ElemXGaugeCreate()

```
gslc_tsElemRef* gslc_ElemXGaugeCreate (
    gslc_tsGui * pGui,
    int16_t nElemId,
    int16_t nPage,
    gslc_tsXGauge * pXData,
    gslc_tsRect rElem,
    int16_t nMin,
    int16_t nMax,
    int16_t nVal,
    gslc_tsColor colGauge,
    bool bVert )
```

Create a Gauge Element.

- Draws a gauge element that represents a proportion (nVal) between nMin and nMax.
- Support gauge sub-types:
 - GSLC_TYPEX_GAUGE_PROG_BAR: Horizontal or vertical box with filled region
 - GSLC_TYPEX_GAUGE_RADIAL: Radial / compass indicator
- Default appearance is a horizontal progress bar, but can be changed with gslc_ElemXGaugeSetStyle())

in	pGui	Pointer to GUI
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)
in	nPage	Page ID to attach element to
in	pXData	Ptr to extended element data structure
in	rElem	Rectangle coordinates defining gauge size
in	nMin	Minimum value of gauge for nVal comparison
in	nMax	Maximum value of gauge for nVal comparison
in	nVal	Starting value of gauge
in	colGauge	Color for the gauge indicator
in	bVert	Flag to indicate vertical vs horizontal action (true = vertical, false = horizontal)

Returns

Pointer to Element reference or NULL if failure

9.5.3.2 gslc_ElemXGaugeDraw()

Draw a gauge element on the screen.

• Called from gslc_ElemDraw()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.5.3.3 gslc_ElemXGaugeDrawProgressBar()

Helper function to draw a gauge with style: progress bar.

• Called from gslc_ElemXGaugeDraw()

Parameters

in	pGui	Ptr to GUI
in	pElemRef	Ptr to Element reference
in	eRedraw	Redraw status

Returns

true if success, false otherwise

9.5.3.4 gslc_ElemXGaugeSetFlip()

Set a Gauge element's fill direction.

- Setting bFlip reverses the default fill direction
- Default fill direction for horizontal gauges: left-to-right
- Default fill direction for vertical gauges: bottom-to-top

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	bFlip	If set, reverse direction of fill from default

Returns

none

9.5.3.5 gslc_ElemXGaugeSetIndicator()

Configure the appearance of the Gauge indicator.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	colGauge	Color of the indicator
in	nIndicLen	Length of the indicator
in	nIndicTip	Size of the indicator tip
in	bIndicFill	Fill in the indicator if true

Returns

none

9.5.3.6 gslc_ElemXGaugeSetStyle()

Configure the style of a Gauge element.

• This function is used to select between one of several gauge types (eg. progress bar, radial dial, etc.)

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	пТуре	Gauge style enumeration

Returns

none

9.5.3.7 gslc_ElemXGaugeSetTicks()

Configure the appearance of the Gauge ticks.

Parameters

in	pGui	Pointer to GUI
in	pElemRef Pointer to Element reference	
in	colTick	Color of the gauge ticks
in	nTickCnt	Number of ticks to draw around / along gauge
in	nTickLen	Length of the tick marks to draw

Returns

none

9.5.3.8 gslc_ElemXGaugeUpdate()

Update a Gauge element's current value.

• Note that min & max values are assigned in create()

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nVal	New value to show in gauge

Returns


none

9.6 src/elem/XGlowball.c File Reference

```
#include "GUIslice.h"
```

```
#include "GUIslice_drv.h"
#include "elem/XGlowball.h"
#include <stdio.h>
```

Include dependency graph for XGlowball.c:

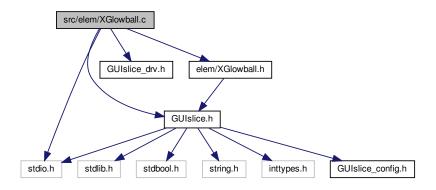

Functions

 gslc_tsElemRef * gslc_ElemXGlowballCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsX← Glowball *pXData, int16_t nMidX, int16_t nMidY, gslc_tsXGlowballRing *pRings, uint8_t nNumRings)

Create a XGlowball element.

- void drawXGlowballArc (gslc_tsGui *pGui, gslc_tsXGlowball *pGlowball, int16_t nMidX, int16_t nMidX, int16_t nRad1, int16_t nRad2, gslc_tsColor cArc, uint16_t nAngStart, uint16_t nAngEnd)
- void drawXGlowballRing (gslc_tsGui *pGui, gslc_tsXGlowball *pGlowball, int16_t nMidX, int16_t nMidX, int16_t nAngStart, uint16_t nAngEnd, bool bErase)
- void drawXGlowball (gslc_tsGui *pGui, gslc_tsXGlowball *pGlowball, int16_t nMidX, int16_t nMidY, int16_t nVal, uint16_t nAngStart, uint16_t nAngEnd)
- void gslc_ElemXGlowballSetVal (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nVal)
- void gslc_ElemXGlowballSetAngles (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nAngStart, int16_t nAngEnd)
- void gslc_ElemXGlowballSetQuality (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, uint16_t nQuality)
- void gslc_ElemXGlowballSetColorBack (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colBg)
- bool gslc_ElemXGlowballDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

Draw the XGlowball element on the screen.

Variables

- const char GSLC PMEM ERRSTR NULL[]
- const char GSLC PMEM ERRSTR PXD NULL []

9.6.1 Function Documentation

9.6.1.1 drawXGlowball()

9.6.1.2 drawXGlowballArc()

```
void drawXGlowballArc (
    gslc_tsGui * pGui,
    gslc_tsXGlowball * pGlowball,
    int16_t nMidX,
    int16_t nRad1,
    int16_t nRad2,
    gslc_tsColor cArc,
    uint16_t nAngStart,
    uint16_t nAngEnd )
```

9.6.1.3 drawXGlowballRing()

```
void drawXGlowballRing (
    gslc_tsGui * pGui,
    gslc_tsXGlowball * pGlowball,
    int16_t nMidX,
    int16_t nVal,
    uint16_t nAngStart,
    uint16_t nAngEnd,
    bool bErase )
```

9.6.1.4 gslc_ElemXGlowballCreate()

Create a XGlowball element.

in	pGui	Pointer to GUI	
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)	
in	nPage	Page ID to attach element to	
in	pXData	Ptr to extended element data structure	
in	nMidX	Center X coordinate	
in	nMidY	Center Y coordinate	
in	pRings	Pointer to tsXGlowballRing structure array defining appearance	
in	nNumRings	Number of rings in pRings array	

Returns

Pointer to Element reference or NULL if failure

9.6.1.5 gslc_ElemXGlowballDraw()

Draw the XGlowball element on the screen.

• Called from gslc_ElemDraw()

Parameters

	in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
	in	pvElemRef	Void ptr to Element (typecast to gslc_tsElemRef*)
Γ	in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.6.1.6 gslc_ElemXGlowballSetAngles()

9.6.1.7 gslc_ElemXGlowballSetColorBack()

9.6.1.8 gslc_ElemXGlowballSetQuality()

9.6.1.9 gslc_ElemXGlowballSetVal()

9.6.2 Variable Documentation

9.6.2.1 ERRSTR_NULL


```
const char GSLC_PMEM ERRSTR_NULL[]
```

9.6.2.2 ERRSTR_PXD_NULL


```
{\tt const\ char\ GSLC\_PMEM\ ERRSTR\_PXD\_NULL[\ ]}
```

9.7 src/elem/XGlowball.h File Reference

#include "GUIslice.h"
Include dependency graph for XGlowball.h:

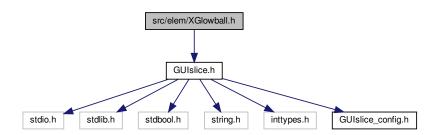

This graph shows which files directly or indirectly include this file:

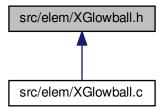

Data Structures

- struct gslc_tsXGlowballRing
- struct gslc_tsXGlowball

Extended data for Slider element.

Macros

• #define GSLC_TYPEX_GLOW

Functions

- gslc_tsElemRef * gslc_ElemXGlowballCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsX
 Glowball *pXData, int16_t nMidX, int16_t nMidY, gslc_tsXGlowballRing *pRings, uint8_t nNumRings)
 - Create a XGlowball element.
- bool gslc_ElemXGlowballDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

Draw the XGlowball element on the screen.

void drawXGlowballArc (gslc_tsGui *pGui, gslc_tsXGlowball *pGlowball, int16_t nMidX, int16_t nMidX, int16_t nRad1, int16_t nRad2, gslc_tsColor cArc, uint16_t nAngStart, uint16_t nAngEnd)

- void drawXGlowballRing (gslc_tsGui *pGui, gslc_tsXGlowball *pGlowball, int16_t nMidX, int16_t nMidX, int16_t nMidX, int16_t nAngStart, uint16_t nAngEnd, bool bErase)
- void drawXGlowball (gslc_tsGui *pGui, gslc_tsXGlowball *pGlowball, int16_t nMidX, int16_t nMidY, int16_t nVal, uint16 t nAngStart, uint16 t nAngEnd)
- void gslc_ElemXGlowballSetAngles (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nAngStart, int16 t nAngEnd)
- void gslc_ElemXGlowballSetVal (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nVal)
- void gslc_ElemXGlowballSetQuality (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, uint16_t nQuality)
- void gslc_ElemXGlowballSetColorBack (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colBg)

9.7.1 Macro Definition Documentation

9.7.1.1 GSLC TYPEX GLOW

```
#define GSLC_TYPEX_GLOW
```

9.7.2 Function Documentation

9.7.2.1 drawXGlowball()

9.7.2.2 drawXGlowballArc()

```
void drawXGlowballArc (
    gslc_tsGui * pGui,
    gslc_tsXGlowball * pGlowball,
    int16_t nMidX,
    int16_t nRadl,
    int16_t nRad2,
    gslc_tsColor cArc,
    uint16_t nAngStart,
    uint16_t nAngEnd )
```

9.7.2.3 drawXGlowballRing()

9.7.2.4 gslc_ElemXGlowballCreate()

Create a XGlowball element.

Parameters

in	pGui	Pointer to GUI	
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)	
in	nPage	Page ID to attach element to	
in	pXData	Ptr to extended element data structure	
in	nMidX	Center X coordinate	
in	nMidY	Center Y coordinate	
in	pRings	Pointer to tsXGlowballRing structure array defining appearance	
in	nNumRings	Number of rings in pRings array	

Returns

Pointer to Element reference or NULL if failure

9.7.2.5 gslc_ElemXGlowballDraw()

Draw the XGlowball element on the screen.

• Called from gslc_ElemDraw()

Parameters

in	in pvGui Void ptr to GUI (typecast to gslc_tsGui	
in	pvElemRef	Void ptr to Element (typecast to gslc_tsElemRef*)
in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.7.2.6 gslc_ElemXGlowballSetAngles()

9.7.2.7 gslc_ElemXGlowballSetColorBack()


9.7.2.8 gslc_ElemXGlowballSetQuality()

9.7.2.9 gslc_ElemXGlowballSetVal()

9.8 src/elem/XGraph.c File Reference

```
#include "GUIslice.h"
#include "GUIslice_drv.h"
#include "elem/XGraph.h"
#include <stdio.h>
```

Include dependency graph for XGraph.c:

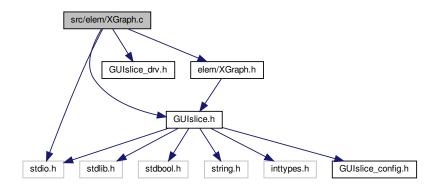

Functions

- gslc_tsElemRef * gslc_ElemXGraphCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsX
 Graph *pXData, gslc_tsRect rElem, int16_t nFontId, int16_t *pBuf, uint16_t nBufMax, gslc_tsColor colGraph)
 Create a Graph Element.
- void gslc_ElemXGraphSetStyle (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_teXGraphStyle eStyle, uint8_t nMargin)

Set the graph's additional drawing characteristics.

void gslc_ElemXGraphSetRange (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nYMin, int16_t n← YMax)

Set the graph's drawing range.

void gslc_ElemXGraphScrollSet (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, uint8_t nScrollPos, uint8_t nScrollMax)

Set the graph scroll position (nScrollPos) as a fraction of nScrollMax.

• void gslc_ElemXGraphAdd (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nVal)

Add a value to the graph at the latest position.

void gslc_ElemXGraphReset (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Reset the graphs values.

bool gslc_ElemXGraphDraw (void *pvElemRef, gslc_teRedrawType eRedraw)

Draw a Graph element on the screen.

Variables

- const char GSLC PMEM ERRSTR NULL []
- const char GSLC_PMEM ERRSTR_PXD_NULL []

9.8.1 Function Documentation

9.8.1.1 gslc_ElemXGraphAdd()

Add a value to the graph at the latest position.

Parameters

-	in	pGui	Pointer to GUI
	in	pElemRef	Pointer to Element reference
	in	nVal	Data value to add

Returns

none

9.8.1.2 gslc_ElemXGraphCreate()

Create a Graph Element.

Parameters

in	pGui	Pointer to GUI	
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)	
in	nPage	Page ID to attach element to	
in	pXData	Ptr to extended element data structure	
in	rElem	Rectangle coordinates defining checkbox size	
in	nFontId	Font ID to use for graph area	
in	pBuf	Ptr to data buffer (already allocated) with size (nBufMax)	
		int16_t	
in	nBufRows	Maximum number of points in buffer	
in	colGraph	Color of the graph	

Returns

Pointer to Element reference or NULL if failure

9.8.1.3 gslc_ElemXGraphDraw()

Draw a Graph element on the screen.

• Called from gslc_ElemDraw()

Parameters

in	void ptr to GUI (typecast to gslc_tsGui*)	
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.8.1.4 gslc_ElemXGraphReset()

Reset the graphs values.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference

Returns

none

9.8.1.5 gslc_ElemXGraphScrollSet()

Set the graph scroll position (nScrollPos) as a fraction of nScrollMax.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nScrollPos	New scroll position
in	nScrollMax	Maximum scroll position

Returns

none

9.8.1.6 gslc_ElemXGraphSetRange()

Set the graph's drawing range.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nYMin	Minimum Y value to draw
in	nYMax	Maximum Y value to draw

Returns

none

9.8.1.7 gslc_ElemXGraphSetStyle()

```
void gslc_ElemXGraphSetStyle ( {\tt gslc\_tsGui} \ * \ p{\tt Gui},
```

```
gslc_tsElemRef * pElemRef,
gslc_teXGraphStyle eStyle,
uint8_t nMargin )
```

Set the graph's additional drawing characteristics.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	eStyle	Drawing style for the graph
in	nMargin	Margin to provide around graph area inside frame

Returns

none

9.8.2 Variable Documentation

9.8.2.1 ERRSTR_NULL


```
const char GSLC_PMEM ERRSTR_NULL[]
```

9.8.2.2 ERRSTR_PXD_NULL


```
const char GSLC_PMEM ERRSTR_PXD_NULL[]
```

9.9 src/elem/XGraph.h File Reference

```
#include "GUIslice.h"
Include dependency graph for XGraph.h:
```

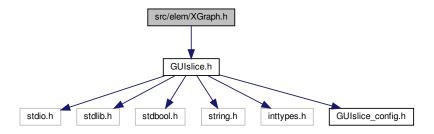

This graph shows which files directly or indirectly include this file:

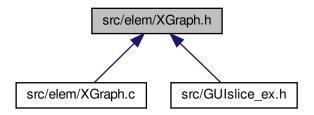

Data Structures

struct gslc_tsXGraph

Extended data for Graph element.

Macros

• #define GSLC_TYPEX_GRAPH

Enumerations

enum gslc_teXGraphStyle { GSLCX_GRAPH_STYLE_DOT, GSLCX_GRAPH_STYLE_LINE, GSLCX_GRAPH_STYLE_FILL }

Gauge drawing style.

Functions

gslc_tsElemRef * gslc_ElemXGraphCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsX←
 Graph *pXData, gslc_tsRect rElem, int16_t nFontId, int16_t *pBuf, uint16_t nBufRows, gslc_tsColor col←
 Graph)

Create a Graph Element.

void gslc_ElemXGraphSetStyle (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_teXGraphStyle eStyle, uint8 t nMargin)

Set the graph's additional drawing characteristics.

Set the graph's drawing range.

bool gslc_ElemXGraphDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

Draw a Graph element on the screen.

void gslc ElemXGraphAdd (gslc tsGui *pGui, gslc tsElemRef *pElemRef, int16 t nVal)

Add a value to the graph at the latest position.

void gslc_ElemXGraphReset (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Reset the graphs values.

void gslc_ElemXGraphScrollSet (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, uint8_t nScrollPos, uint8_t nScrollMax)

Set the graph scroll position (nScrollPos) as a fraction of nScrollMax.

9.9.1 Macro Definition Documentation

9.9.1.1 GSLC_TYPEX_GRAPH

```
#define GSLC_TYPEX_GRAPH
```

9.9.2 Enumeration Type Documentation

9.9.2.1 gslc_teXGraphStyle

```
enum gslc_teXGraphStyle
```

Gauge drawing style.

Enumerator

GSLCX_GRAPH_STYLE_DOT	Dot.
GSLCX_GRAPH_STYLE_LINE	Line.
GSLCX_GRAPH_STYLE_FILL	Filled.

9.9.3 Function Documentation

9.9.3.1 gslc_ElemXGraphAdd()

Add a value to the graph at the latest position.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nVal	Data value to add

Returns

none

9.9.3.2 gslc_ElemXGraphCreate()

Create a Graph Element.

Parameters

in	pGui	Pointer to GUI
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)
in	nPage	Page ID to attach element to
in	pXData	Ptr to extended element data structure
in	rElem	Rectangle coordinates defining checkbox size
in	nFontId	Font ID to use for graph area
in	pBuf	Ptr to data buffer (already allocated) with size (nBufMax)
		int16_t
in	nBufRows	Maximum number of points in buffer
in	colGraph	Color of the graph

Returns

Pointer to Element reference or NULL if failure

9.9.3.3 gslc_ElemXGraphDraw()

Draw a Graph element on the screen.

• Called from gslc_ElemDraw()

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.9.3.4 gslc_ElemXGraphReset()

Reset the graphs values.

Parameters

in	pGui	Pointer to GUI
in <i>pElemRef</i>		Pointer to Element reference

Returns

none

9.9.3.5 gslc_ElemXGraphScrollSet()

Set the graph scroll position (nScrollPos) as a fraction of nScrollMax.

Parameters

_			
	in	pGui	Pointer to GUI
	in	pElemRef	Pointer to Element reference
	in	nScrollPos	New scroll position
Ī	in	nScrollMax	Maximum scroll position

Returns

none

9.9.3.6 gslc_ElemXGraphSetRange()

Set the graph's drawing range.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nYMin	Minimum Y value to draw
in	nYMax	Maximum Y value to draw

Returns

none

9.9.3.7 gslc_ElemXGraphSetStyle()

Set the graph's additional drawing characteristics.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	eStyle	Drawing style for the graph
in	nMargin	Margin to provide around graph area inside frame


Returns

none

9.10 src/elem/XKeyPad.c File Reference

```
#include "GUIslice.h"
#include "GUIslice_drv.h"
#include "elem/XKeyPad.h"
#include <stdio.h>
```

Include dependency graph for XKeyPad.c:

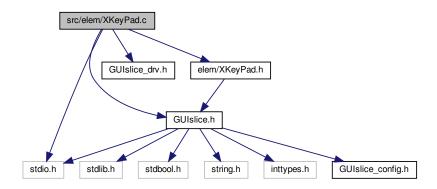

Functions

- void gslc_ElemXKeyPadReset (gslc_tsXKeyPad *pKeyPad)
- void gslc_ElemXKeyPadCfgInit (gslc_tsXKeyPadCfg *pConfig)

Provide default initialization for the base XKeyPad.

• int16_t gslc_XKeyPadLookupId (gslc_tsKey *pKeys, uint8_t nKeyId)

Find a key ID within a KeyPad label array and return it's index into the array.

int16_t gslc_XKeyPadLookupSpecialId (gslc_tsLabelSpecial *pLabels, uint8_t nKeyId)

Find a key ID within a KeyPad special label array and return it's index into the array.

- void gslc_XKeyPadDrawLayout (gslc_tsGui *pGui, void *pXData)
- void gslc_XKeyPadDrawKey (gslc_tsGui *pGui, gslc_tsXKeyPad *pXData, gslc_tsKey *pKey, bool bGlow, bool bFocus)

Draw a key to the screen.

gslc_tsElemRef * gslc_XKeyPadCreateBase (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsX←
 KeyPad *pXData, int16_t nX0, int16_t nY0, int8_t nFontId, gslc_tsXKeyPadCfg *pConfig)

Create a KeyPad Element.

- void gslc_XKeyPadAdjustScroll (gslc_tsXKeyPad *pKeyPad)
- bool gslc_XKeyPadLayoutSet (gslc_tsXKeyPadCfg *pConfig, int8_t eLayoutSel)

Select a new KeyPad layout.

void gslc_ElemXKeyPadValSet (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, const char *pStrBuf)

Set the current value for the editable text field.

void gslc_ElemXKeyPadTargetRefSet (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsElemRef *p←
TxtRef)

Set target element reference for KeyPad return value.

int16 t gslc ElemXKeyPadDataTargetIdGet (gslc tsGui *pGui, void *pvData)

Fetch the element target ID associated with this KeyPad.

char * gslc ElemXKeyPadDataValGet (gslc tsGui *pGui, void *pvData)

Fetch the final value string of the KeyPad from a callback.

bool gslc_ElemXKeyPadValGet (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, char *pStrBuf, uint8_t nStr
 —
 BufLen)

Fetch the current value string associated with KeyPad element.

bool gslc_XKeyPadDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

Draw a KeyPad element on the screen.

void gslc_ElemXKeyPadValSetCb (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, GSLC_CB_INPUT pfuncCb)

Set the callback function associated with the KeyPad.

void gslc_XKeyPadSizeAllGet (gslc_tsKey **pLayouts, uint8_t nNumLayouts, uint8_t *pnRows, uint8_t *pnCols)

Calculate the overall dimensions of the KeyPad control encompassing all available layouts for the KeyPad, leveraging the computation in gslc_XKeyPadSizeGet().

void gslc_XKeyPadSizeGet (gslc_tsKey *pLayout, uint8_t *pnRows, uint8_t *pnCols, int8_t *pnIndFirst, int8 t *pnIndLast)

Calculate the overall dimensions of the KeyPad control encompassing the text field and key buttons.

- int16_t gslc_XKeyPadMapEvent (gslc_tsGui *pGui, void *pXData, int16_t nRelX, int16_t nRelY, int16_t *pn←
 Ind)
- void gslc XKeyPadPendRedrawReset (gslc tsXKeyPadResult *pResult)
- void gslc_XKeyPadPendRedrawAddTxt (gslc_tsXKeyPadResult *pResult)
- void gslc_XKeyPadPendRedrawAddKey (gslc_tsXKeyPadResult *pResult, int16_t nld)
- void gslc_XKeyPadRedrawUpdate (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)
- void gslc_XKeyPadFocusSetDefault (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)
- bool gslc_XKeyPadTouch (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nX, int16_t nY)

Handle touch (up,down,move) events to KeyPad element.

bool gslc_XKeyPadTxtDelCh (gslc_tsXKeyPad *pKeyPad, uint8_t nPos)

Remove a character from the KeyPad text field at the specified offset (nPos).

bool gslc_XKeyPadTxtAddCh (gslc_tsXKeyPad *pKeyPad, char ch, uint8_t nPos)

Add a character to the KeyPad text field at the specified offset (nPos).

• bool gslc XKeyPadTxtAddStr (gslc tsXKeyPad *pKeyPad, const char *pStr, uint8 t nPos)

Add a string to the KeyPad text field at the specified offset (nPos).

void gslc_ElemXKeyPadCfgSetButtonSz (gslc_tsXKeyPadCfg *pConfig, int8_t nButtonSzW, int8_t nButton↔
SzH)

Update the KeyPad configuration to define the KeyPad button sizing.

- void gslc_ElemXKeyPadCfgSetButtonSpace (gslc_tsXKeyPadCfg *pConfig, int8_t nSpaceX, int8_t nSpaceY)

 Update the KeyPad configuration to define the KeyPad button spacing.
- void gslc_ElemXKeyPadCfgSetRoundEn (gslc_tsXKeyPadCfg *pConfig, bool bEn)

Update the KeyPad configuration to enable rounded button corners.

void gslc_XKeyPadDrawVirtualTxt (gslc_tsGui *pGui, gslc_tsRect rElem, gslc_tsXKeyPad *pKeyPad, gslc
_tsColor cColFrame, gslc_tsColor cColFill, gslc_tsColor cColTxt)

Draw a virtual Text Element.

void gslc_XKeyPadDrawVirtualBtn (gslc_tsGui *pGui, gslc_tsRect rElem, char *pStrBuf, uint8_t nStrBuf

 Max, int16_t nFontId, gslc_tsColor cColFrame, gslc_tsColor cColFill, gslc_tsColor cColFillGlow, gslc_tsColor

 cColText, bool bRoundedEn, bool bGlow, bool bFocus)

Draw a virtual textual Button Element.

void gslc_ElemXKeyPadInputAsk (gslc_tsGui *pGui, gslc_tsElemRef *pKeyPadRef, int16_t nPgPopup, gslc_tsElemRef *pTxtRef)

Trigger a KeyPad popup and associate it with a text element.

• char * gslc ElemXKeyPadInputGet (gslc tsGui *pGui, gslc tsElemRef *pTxtRef, void *pvCbData)

Complete a KeyPad popup by retrieving the input data and storing it in the text element.

Variables

- const char GSLC_PMEM ERRSTR_NULL []
- const char GSLC_PMEM ERRSTR_PXD_NULL []

9.10.1 Function Documentation

9.10.1.1 gslc_ElemXKeyPadCfgInit()

```
void gslc_ElemXKeyPadCfgInit ( {\tt gslc\_tsXKeyPadCfg} \ * \ pConfig \ )
```

Provide default initialization for the base XKeyPad.

• These defaults will be overwritten by variant-specific initialization or through user configuration APIs.

Parameters

	in	pConfig	Ptr to the KeyPad base config structure	
--	----	---------	---	--

Returns

none

9.10.1.2 gslc_ElemXKeyPadCfgSetButtonSpace()

Update the KeyPad configuration to define the KeyPad button spacing.

- This defines the inset amount (X and Y) from the Button Size
- A spacing of (1,1) will mean that the button is drawn with a 1 pixel margin around the grid defined by the Button Size

Parameters

in,out	pConfig	Pointer to the XKeyPad base config structure
in	nSpaceX	Amount to inset button in horizontal direction (pixels)
in	nSpaceY	Amount to inset button in vertical direction (pixels)

Returns

none

9.10.1.3 gslc_ElemXKeyPadCfgSetButtonSz()

Update the KeyPad configuration to define the KeyPad button sizing.

Parameters

in,out	pConfig	Pointer to the XKeyPad base config structure
in	nButtonSzW	Width of buttons in pixels
in	nButtonSzH	Height of buttons in pixels

Returns

none

9.10.1.4 gslc_ElemXKeyPadCfgSetRoundEn()

Update the KeyPad configuration to enable rounded button corners.

Parameters

in, out	pConfig	Pointer to the XKeyPad base config structure
in	bEn	Enable rounded corners

Returns

none

9.10.1.5 gslc_ElemXKeyPadDataTargetIdGet()

Fetch the element target ID associated with this KeyPad.

Parameters

iı	n	pGui	Pointer to GUI
iı	n	pvData	: Void ptr to callback data structure

Returns

Target Element ID or GSLC_ID_NONE if unspecified

9.10.1.6 gslc_ElemXKeyPadDataValGet()

Fetch the final value string of the KeyPad from a callback.

Parameters

in	pGui	Pointer to GUI
out	pvData	: Void ptr to callback data structure

Returns

Pointer to edited character string

9.10.1.7 gslc_ElemXKeyPadInputAsk()

Trigger a KeyPad popup and associate it with a text element.

• This function also updates the maximum KeyPad buffer length to match that of the target text element, up to the maximum XKEYPAD_BUF_MAX.

Parameters

in	pGui	Pointer to GUI
in	pKeyPadRef	Pointer to KeyPad element reference
Gehêrat	eq <i>u</i> BBBBBH P	Page enum that contains the popup to show
in	pTxtRef	Pointer to associated text field element reference

Returns

none

9.10.1.8 gslc_ElemXKeyPadInputGet()

Complete a KeyPad popup by retrieving the input data and storing it in the text element.

Parameters

in	pGui	Pointer to GUI
in	pTxtRef	Pointer to associated text field element reference
in	pvCbData	Void pointer to callback function's pvData

Returns

The text string that was fetched from the KeyPad (NULL terminated)

9.10.1.9 gslc_ElemXKeyPadReset()

```
void gslc_ElemXKeyPadReset ( {\tt gslc\_tsXKeyPad} \ * \ pKeyPad \ )
```

9.10.1.10 gslc_ElemXKeyPadTargetRefSet()

Set target element reference for KeyPad return value.

- The Target Reference is used in the GSLC_CB_INPUT callback so that the user has the context needed to determine which field should be edited with the contents of the KeyPad edit field
- · It is expected that the user will call this function when showing the KeyPad popup dialog

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Ptr to KeyPad Element reference
in	pTargetRef	Element reference for target of KeyPad value

Returns

none

9.10.1.11 gslc_ElemXKeyPadValGet()

Fetch the current value string associated with KeyPad element.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Ptr to KeyPad Element reference
out	pStrBuf	String buffer
in	nStrBufMax	Maximum length of string buffer (pStrBuf) including terminator

Returns

true if success, false otherwise

9.10.1.12 gslc_ElemXKeyPadValSet()

Set the current value for the editable text field.

Parameters

	in	pGui	Pointer to GUI
	in <i>pElemRef</i>		Ptr to KeyPad Element reference
Г	in	pStrBuf	String to copy into keypad

Returns

none

9.10.1.13 gslc_ElemXKeyPadValSetCb()

Set the callback function associated with the KeyPad.

• This function will be called during updates and OK / Cancel

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element Reference for KeyPad
in	pfuncCb	Callback function pointer

Returns

none

9.10.1.14 gslc_XKeyPadAdjustScroll()

```
void gslc_XKeyPadAdjustScroll ( {\tt gslc\_tsXKeyPad} \ * \ pKeyPad \ )
```

9.10.1.15 gslc_XKeyPadCreateBase()

Create a KeyPad Element.

Parameters

in	pGui	Pointer to GUI
in	n⊷	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)
	ElemId	
in	nPage	Page ID to attach element to
in	pXData	Ptr to extended element data structure
in	nX0	X KeyPad Starting Coordinate
in	nY0	Y KeyPad Starting Coordinate
in	nFontId	Font ID to use for drawing the element
in	pConfig	Pointer to base Config options

Returns

Pointer to Element or NULL if failure

9.10.1.16 gslc_XKeyPadDraw()

Draw a KeyPad element on the screen.

· Called during redraw

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.10.1.17 gslc_XKeyPadDrawKey()

```
bool bGlow,
bool bFocus )
```

Draw a key to the screen.

Parameters

in	pGui	Pointer to GUI
in	pXData	Ptr to extended element data structure
in	pKey	Ptr to key being drawn
in	bGlow	Indicate if key is in glow state
in	bFocus	Indicate if key is in focus state

Returns

none

9.10.1.18 gslc_XKeyPadDrawLayout()

9.10.1.19 gslc_XKeyPadDrawVirtualBtn()

Draw a virtual textual Button Element.

Parameters

in	pGui	Pointer to GUI
in	rElem	Rectangle coordinates defining element size
in	pStrBuf	String to copy into element
in	nStrBufMax	Maximum length of string buffer (pStrBuf).
in	nFontId	Font ID to use for text display
in	cColFrame	Frame color for element
in	cColFill	Fill color for element
in	cColFillGlow	Fill color for element when glowing/focused
in	cColTxt	Text color for element
in	bRoundedEn	Use Rounded Corners?
in	bGlow	Indicate btn is in glow state
in	bFocus	Indicate btn is in focus state

Returns

none

9.10.1.20 gslc_XKeyPadDrawVirtualTxt()

Draw a virtual Text Element.

· Creates a text string with filled background

Parameters

in	pGui	Pointer to GUI
in	rElem	Rectangle coordinates defining element size
in	pKeyPad	Pointer to KeyPad struct
in	cColFrame	Frame color for element
in	cColFill	Fill color for element
in	cColTxt	Text color for element

Returns

none

9.10.1.21 gslc_XKeyPadFocusSetDefault()

Todo Doc

9.10.1.22 gslc_XKeyPadLayoutSet()

Select a new KeyPad layout.

- · Multiple KeyPad layouts can share the same key key definition array (eg. KEYPAD LAYOUT)
- This function returns an indication of whether a full KeyPad control redraw is required, ie. the KeyPad layout definition has changed. With changes in the KeyPad definition, there may be a different number of visible keys or arrangements, necessitating a background redraw.

Parameters

in	pConfig	Ptr to the KeyPad configuration
in	eLayoutSel	Layout index to select

Returns

true if a full redraw should be performed

9.10.1.23 gslc_XKeyPadLookupld()

Find a key ID within a KeyPad label array and return it's index into the array.

• It is expected that the KeyPad label array is terminated with KEYPAD_ID__END

Parameters

in	pKeys	Ptr to the Keypad label array
in	n⊷	Key ID to look for
	Keyld	

Returns

the index into the array if the ID was found or -1 if the key ID was not found

9.10.1.24 gslc_XKeyPadLookupSpecialId()

Find a key ID within a KeyPad special label array and return it's index into the array.

• It is expected that the KeyPad label array is terminated with KEYPAD ID END

Parameters

in	pLabels	Ptr to the Keypad special label array
in	nKeyld	Key ID to look for

Returns

the index into the array if the ID was found or -1 if the key ID was not found

9.10.1.25 gslc_XKeyPadMapEvent()

9.10.1.26 gslc_XKeyPadPendRedrawAddKey()

Todo Doc

9.10.1.27 gslc_XKeyPadPendRedrawAddTxt()

Todo Doc

9.10.1.28 gslc_XKeyPadPendRedrawReset()

```
void gslc_XKeyPadPendRedrawReset ( gslc\_tsXKeyPadResult * pResult ) \label{eq:gslc_xKeyPadResult}
```

Todo Doc

9.10.1.29 gslc_XKeyPadRedrawUpdate()

Todo Doc

9.10.1.30 gslc_XKeyPadSizeAllGet()

Calculate the overall dimensions of the KeyPad control encompassing all available layouts for the KeyPad, leveraging the computation in gslc_XKeyPadSizeGet().

Parameters

in	pLayouts	Ptr to the array of KeyPad layouts
in	nNumLayouts	Number of layouts in pLayouts
out	pnRows	Ptr for the number of rows
out	pnCols	Ptr for the number of columns

Returns

none

9.10.1.31 gslc_XKeyPadSizeGet()

```
uint8_t * pnRows,
uint8_t * pnCols,
int8_t * pnIndFirst,
int8_t * pnIndLast )
```

Calculate the overall dimensions of the KeyPad control encompassing the text field and key buttons.

The dimension is calculated in units of the configured key size (width and height), and accounts for any column spans. It also returns the index of the first and last keys on the keypad.

Parameters

in	pLayout	Ptr to the KeyPad layout
out	pnRows	Ptr for the number of rows
out	pnCols	Ptr for the number of columns
out	pnIndFirst	Ptr for the index of first key
out	pnIndLast	Ptr for the index of last key

Returns

none

9.10.1.32 gslc_XKeyPadTouch()

Handle touch (up,down,move) events to KeyPad element.

Called from gslc_ElemSendEventTouch()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eTouch	Touch event type
in	nRelX	Touch X coord relative to element
in	nRelY	Touch Y coord relative to element

Returns

true if success, false otherwise

9.10.1.33 gslc_XKeyPadTrackSet()

Todo Doc

9.10.1.34 gslc_XKeyPadTxtAddCh()

Add a character to the KeyPad text field at the specified offset (nPos).

Providing an offset equal to the end of the existing buffer length will cause the addition to the end, whereas an offset within the buffer will cause an insert.

- An addition that causes the buffer length to exceed the maximum allowed will result in the end of the resulting buffer to be truncated.
- Typically the addition will be done at the current cursor position.
- If the insertion is ahead of the cursor, then the cursor position may be increased.

Parameters

in	pKeyPad	Ptr to the KeyPad
in	ch	Character to add
in	nPos	Buffer position for the insertion

Returns

true if the text field should be redrawn, false if no redraw is needed (ie. no change)

9.10.1.35 gslc_XKeyPadTxtAddStr()

Add a string to the KeyPad text field at the specified offset (nPos).

Providing an offset equal to the end of the existing buffer length will cause the addition to the end, whereas an offset within the buffer will cause an insert.

- An addition that causes the buffer length to exceed the maximum allowed will result in the end of the resulting buffer to be truncated.
- Typically the addition will be done at the current cursor position.
- If the insertion is ahead of the cursor, then the cursor position may be increased.
- · This routine may be useful when adding multi-byte characters for future support of foreign characters.

Parameters

in	pKeyPad	Ptr to the KeyPad
in	pStr	String to add
in	nPos	Buffer position for the insertion

Returns

true if the text field should be redrawn, false if no redraw is needed (ie. no change)

9.10.1.36 gslc_XKeyPadTxtDelCh()

Remove a character from the KeyPad text field at the specified offset (nPos).

- Typically the addition will be done at the current cursor position.
- If the removal is ahead of the cursor, then the cursor position may be decreased.

Parameters

in	pKeyPad	Ptr to the KeyPad
in	nPos	Buffer position for the removal

Returns

true if the text field should be redrawn, false if no redraw is needed (ie. no change)

9.10.2 Variable Documentation

9.10.2.1 ERRSTR_NULL


const char GSLC_PMEM ERRSTR_NULL[]

9.10.2.2 ERRSTR_PXD_NULL


const char GSLC_PMEM ERRSTR_PXD_NULL[]

9.11 src/elem/XKeyPad.h File Reference

#include "GUIslice.h"
Include dependency graph for XKeyPad.h:

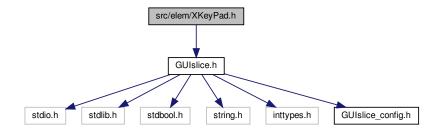

This graph shows which files directly or indirectly include this file:

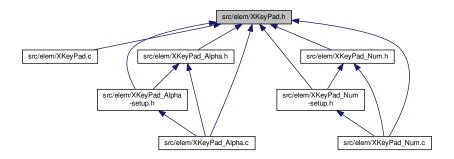

Data Structures

struct gslc_tsXKeyPadResult

Return status for XKeyPad.

struct gslc_tsKey

Key information. Defines everything we need to know about a particular key.

• struct gslc_tsLabelSpecial

Key Label strings for special buttons.

struct gslc_tsXKeyPadCfg

Configuration for the KeyPad.

struct gslc_tsXKeyPadData

Input callback data structure.

struct gslc_tsXKeyPad

Extended data for KeyPad element.

Macros

- #define XKEYPAD BUF MAX
- #define XKEYPAD_KEY_LEN
- #define XKEYPAD_CURSOR_ENHANCED
- #define XKEYPAD CURSOR CH
- #define GSLC_TYPEX_KEYPAD
- #define XKEYPAD_CB_STATE_DONE
- #define XKEYPAD CB STATE CANCEL
- #define XKEYPAD_CB_STATE_UPDATE
- #define XKEYPAD_REDRAW_NONE
- #define XKEYPAD_REDRAW_TXT
- #define XKEYPAD_REDRAW_KEY
- #define XKEYPAD_REDRAW_ALL
- #define XKEYPAD_REDRAW_FULL
- #define DEBUG XKEYPAD

Debug message for XKeyPad (1=enabled, 0=disabled)

Typedefs

typedef struct gslc_tsKey gslc_tsKey

Key information. Defines everything we need to know about a particular key.

- typedef void(* GSLC_CB_XKEYPAD_RESET) (void *pvKeyPadConfig)
- typedef void(* GSLC_CB_XKEYPAD_TXT_INIT) (void *pvKeyPad)
- typedef void(* GSLC_CB_XKEYPAD_LABEL_GET) (void *pvKeyPad, uint8_t nld, uint8_t nStrMax, char *pStr)
- typedef void(* GSLC_CB_XKEYPAD_SYTLE_GET) (void *pvKeyPad, uint8_t nld, bool *bVisible, gslc_ts
 — Color *pcolTxt, gslc_tsColor *pcolFrame, gslc_tsColor *pcolFill, gslc_tsColor *pcolGlow)
- typedef void(* GSLC_CB_XKEYPAD_BTN_EVT) (void *pvKeyPad, uint8_t nld, gslc_tsXKeyPadResult *ps↔ Result)

Enumerations

• enum {

KEYPAD_ID_BACKSPACE, KEYPAD_ID_SPACE, KEYPAD_ID_ESC, KEYPAD_ID_ENTER, KEYPAD_ID_SWAP_PAD, KEYPAD_ID_SCROLL_LEFT, KEYPAD_ID_SCROLL_RIGHT, KEYPAD_ID_ \leftrightarrow BASIC_START,

KEYPAD_ID_TXT, KEYPAD_ID__END }

enum {

E_XKEYPAD_TYPE_BASIC, E_XKEYPAD_TYPE_SPECIAL, E_XKEYPAD_TYPE_TXT, E_XKEYPAD_T↔ YPE_UNUSED, E_XKEYPAD_TYPE_END}

enum gslc_tsXKeyPadAttrib { E_XKEYPAD_ATTRIB_FOCUS, E_XKEYPAD_ATTRIB_GLOW }

Functions

void gslc_ElemXKeyPadCfgInit (gslc_tsXKeyPadCfg *pConfig)

Provide default initialization for the base XKeyPad.

int16_t gslc_XKeyPadLookupId (gslc_tsKey *pKeys, uint8_t nKeyId)

Find a key ID within a KeyPad label array and return it's index into the array.

int16_t gslc_XKeyPadLookupSpecialId (gslc_tsLabelSpecial *pLabels, uint8_t nKeyId)

Find a key ID within a KeyPad special label array and return it's index into the array.

bool gslc_XKeyPadTxtAddCh (gslc_tsXKeyPad *pKeyPad, char ch, uint8_t nPos)

Add a character to the KeyPad text field at the specified offset (nPos).

bool gslc XKeyPadTxtAddStr (gslc tsXKeyPad *pKeyPad, const char *pStr, uint8 t nPos)

Add a string to the KeyPad text field at the specified offset (nPos).

bool gslc XKeyPadTxtDelCh (gslc tsXKeyPad *pKeyPad, uint8 t nPos)

Remove a character from the KeyPad text field at the specified offset (nPos).

bool gslc XKeyPadLayoutSet (gslc tsXKeyPadCfg *pConfig, int8 t eLayoutSel)

Select a new KeyPad layout.

void gslc_XKeyPadSizeAllGet (gslc_tsKey **pLayouts, uint8_t nNumLayouts, uint8_t *pnRows, uint8_t *pnCols)

Calculate the overall dimensions of the KeyPad control encompassing all available layouts for the KeyPad, leveraging the computation in gslc_XKeyPadSizeGet().

void gslc_XKeyPadSizeGet (gslc_tsKey *pLayout, uint8_t *pnRows, uint8_t *pnCols, int8_t *pnIndFirst, int8 t *pnIndLast)

Calculate the overall dimensions of the KeyPad control encompassing the text field and key buttons.

void gslc_XKeyPadDrawKey (gslc_tsGui *pGui, gslc_tsXKeyPad *pXData, gslc_tsKey *pKey, bool bGlow, bool bFocus)

Draw a key to the screen.

gslc_tsElemRef * gslc_XKeyPadCreateBase (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsX←
 KeyPad *pXData, int16_t nX0, int16_t nY0, int8_t nFontId, gslc_tsXKeyPadCfg *pConfig)

Create a KeyPad Element.

void gslc_ElemXKeyPadValSet (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, const char *pStrBuf)
 Set the current value for the editable text field.

 void gslc_ElemXKeyPadTargetRefSet (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsElemRef *p← TargetRef)

Set target element reference for KeyPad return value.

bool gslc_ElemXKeyPadValGet (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, char *pStrBuf, uint8_t nStr
 —
 BufMax)

Fetch the current value string associated with KeyPad element.

char * gslc ElemXKeyPadDataValGet (gslc tsGui *pGui, void *pvData)

Fetch the final value string of the KeyPad from a callback.

• int16_t gslc_ElemXKeyPadDataTargetIdGet (gslc_tsGui *pGui, void *pvData)

Fetch the element target ID associated with this KeyPad.

- void gslc XKeyPadPendRedrawReset (gslc tsXKeyPadResult *pResult)
- void gslc_XKeyPadPendRedrawAddKey (gslc_tsXKeyPadResult *pResult, int16_t nld)
- void gslc_XKeyPadPendRedrawAddTxt (gslc_tsXKeyPadResult *pResult)
- void gslc_XKeyPadFocusSetDefault (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)
- void gslc XKeyPadRedrawUpdate (gslc tsGui *pGui, gslc tsElemRef *pElemRef)
- bool gslc XKeyPadDraw (void *pvGui, void *pvElemRef, gslc teRedrawType eRedraw)

Draw a KeyPad element on the screen.

bool gslc_XKeyPadTouch (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t n←
 RelY)

Handle touch (up,down,move) events to KeyPad element.

void gslc_ElemXKeyPadValSetCb (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, GSLC_CB_INPUT pfuncCb)

Set the callback function associated with the KeyPad.

void gslc ElemXKeyPadCfgSetRoundEn (gslc tsXKeyPadCfg *pConfig, bool bEn)

Update the KeyPad configuration to enable rounded button corners.

void gslc_ElemXKeyPadCfgSetButtonSz (gslc_tsXKeyPadCfg *pConfig, int8_t nButtonSzW, int8_t nButton ← SzH)

Update the KeyPad configuration to define the KeyPad button sizing.

- void gslc_ElemXKeyPadCfgSetButtonSpace (gslc_tsXKeyPadCfg *pConfig, int8_t nSpaceX, int8_t nSpaceY)
 Update the KeyPad configuration to define the KeyPad button spacing.
- void gslc_XKeyPadDrawVirtualTxt (gslc_tsGui *pGui, gslc_tsRect rElem, gslc_tsXKeyPad *pKeyPad, gslc_tsColor cColFrame, gslc_tsColor cColFill, gslc_tsColor cColTxt)

Draw a virtual Text Element.

Draw a virtual textual Button Element.

void gslc_ElemXKeyPadInputAsk (gslc_tsGui *pGui, gslc_tsElemRef *pKeyPadRef, int16_t nPgPopup, gslc_tsElemRef *pTxtRef)

Trigger a KeyPad popup and associate it with a text element.

char * gslc_ElemXKeyPadInputGet (gslc_tsGui *pGui, gslc_tsElemRef *pTxtRef, void *pvCbData)

Complete a KeyPad popup by retrieving the input data and storing it in the text element.

Variables

- · static const int RBIT TXT
- static const int RBIT_KEYONE
- · static const int RBIT KEYALL
- · static const int RBIT CTRL

9.11.1 Macro Definition Documentation

9.11.1.1 DEBUG_XKEYPAD

#define DEBUG_XKEYPAD

Debug message for XKeyPad (1=enabled, 0=disabled)

9.11.1.2 GSLC_TYPEX_KEYPAD

#define GSLC_TYPEX_KEYPAD

9.11.1.3 XKEYPAD_BUF_MAX

#define XKEYPAD_BUF_MAX

9.11.1.4 XKEYPAD_CB_STATE_CANCEL

#define XKEYPAD_CB_STATE_CANCEL

9.11.1.5 XKEYPAD_CB_STATE_DONE

#define XKEYPAD_CB_STATE_DONE

9.11.1.6 XKEYPAD_CB_STATE_UPDATE

#define XKEYPAD_CB_STATE_UPDATE

9.11.1.7 XKEYPAD_CURSOR_CH

#define XKEYPAD_CURSOR_CH

9.11.1.8 XKEYPAD_CURSOR_ENHANCED

#define XKEYPAD_CURSOR_ENHANCED

9.11.1.9 XKEYPAD_KEY_LEN

#define XKEYPAD_KEY_LEN

9.11.1.10 XKEYPAD_REDRAW_ALL

#define XKEYPAD_REDRAW_ALL

9.11.1.11 XKEYPAD_REDRAW_FULL

#define XKEYPAD_REDRAW_FULL

9.11.1.12 XKEYPAD_REDRAW_KEY

#define XKEYPAD_REDRAW_KEY

9.11.1.13 XKEYPAD_REDRAW_NONE

#define XKEYPAD_REDRAW_NONE

9.11.1.14 XKEYPAD_REDRAW_TXT

#define XKEYPAD_REDRAW_TXT

9.11.2 Typedef Documentation

9.11.2.1 GSLC_CB_XKEYPAD_BTN_EVT

typedef void(* GSLC_CB_XKEYPAD_BTN_EVT) (void *pvKeyPad, uint8_t nId, gslc_tsXKeyPadResult
*psResult)

9.11.2.2 GSLC_CB_XKEYPAD_LABEL_GET

typedef void(* GSLC_CB_XKEYPAD_LABEL_GET) (void *pvKeyPad, uint8_t nId, uint8_t nStrMax, char
*pStr)

9.11.2.3 GSLC_CB_XKEYPAD_RESET

typedef void(* GSLC_CB_XKEYPAD_RESET) (void *pvKeyPadConfig)

9.11.2.4 GSLC_CB_XKEYPAD_SYTLE_GET

 $typedef\ void(*\ GSLC_CB_XKEYPAD_SYTLE_GET)\ (void\ *pvKeyPad,\ uint8_t\ nId,\ bool\ *bVisible,\ gslc_t tsColor\ *pcolFrame,\ gslc_tsColor\ *pcolFill,\ gslc_tsColor\ *pcolGlow)$

9.11.2.5 GSLC_CB_XKEYPAD_TXT_INIT

typedef void(* GSLC_CB_XKEYPAD_TXT_INIT) (void *pvKeyPad)

9.11.2.6 gslc_tsKey

 ${\tt typedef \ struct \ gslc_tsKey \ gslc_tsKey}$

Key information. Defines everything we need to know about a particular key.

9.11.3 Enumeration Type Documentation

9.11.3.1 anonymous enum

anonymous enum

Enumerator

KEYPAD_ID_BACKSPACE	
KEYPAD_ID_SPACE	
KEYPAD_ID_ESC	
KEYPAD_ID_ENTER	
KEYPAD_ID_SWAP_PAD	
KEYPAD_ID_SCROLL_LEFT	
KEYPAD_ID_SCROLL_RIGHT	
KEYPAD_ID_BASIC_START	
KEYPAD_ID_TXT	
KEYPAD_IDEND	

9.11.3.2 anonymous enum

anonymous enum

Enumerator

E_XKEYPAD_TYPE_BASIC	
E_XKEYPAD_TYPE_SPECIAL	
E_XKEYPAD_TYPE_TXT	
E_XKEYPAD_TYPE_UNUSED	
E_XKEYPAD_TYPE_END	

9.11.3.3 gslc_tsXKeyPadAttrib

enum gslc_tsXKeyPadAttrib

Enumerator

E_XKEYPAD_ATTRIB_FOCUS	
E_XKEYPAD_ATTRIB_GLOW	

9.11.4 Function Documentation

9.11.4.1 gslc_ElemXKeyPadCfgInit()

```
void gslc_ElemXKeyPadCfgInit ( {\tt gslc\_tsXKeyPadCfg} \ * \ pConfig \ )
```

Provide default initialization for the base XKeyPad.

· These defaults will be overwritten by variant-specific initialization or through user configuration APIs.

Parameters

```
in pConfig Ptr to the KeyPad base config structure
```

Returns

none

9.11.4.2 gslc_ElemXKeyPadCfgSetButtonSpace()

Update the KeyPad configuration to define the KeyPad button spacing.

- This defines the inset amount (X and Y) from the Button Size
- A spacing of (1,1) will mean that the button is drawn with a 1 pixel margin around the grid defined by the Button Size

Parameters

in,o	ut	pConfig	Pointer to the XKeyPad base config structure
in		nSpaceX	Amount to inset button in horizontal direction (pixels)
in		nSpaceY	Amount to inset button in vertical direction (pixels)

Returns

none

9.11.4.3 gslc_ElemXKeyPadCfgSetButtonSz()

Update the KeyPad configuration to define the KeyPad button sizing.

Parameters

in,out	pConfig	Pointer to the XKeyPad base config structure
in	nButtonSzW	Width of buttons in pixels
in	nButtonSzH	Height of buttons in pixels

Returns

none

9.11.4.4 gslc_ElemXKeyPadCfgSetRoundEn()

Update the KeyPad configuration to enable rounded button corners.

Parameters

in,out	pConfig	Pointer to the XKeyPad base config structure
in	bEn	Enable rounded corners

Returns

none

9.11.4.5 gslc_ElemXKeyPadDataTargetIdGet()

```
int16_t gslc_ElemXKeyPadDataTargetIdGet (  \frac{\text{gslc\_tsGui} * pGui,}{\text{void} * pvData} )
```

Fetch the element target ID associated with this KeyPad.

Parameters

in	pGui	Pointer to GUI
in	pvData	: Void ptr to callback data structure

Returns

Target Element ID or GSLC_ID_NONE if unspecified

9.11.4.6 gslc_ElemXKeyPadDataValGet()

Fetch the final value string of the KeyPad from a callback.

Parameters

in	pGui	Pointer to GUI
out	pvData	: Void ptr to callback data structure

Returns

Pointer to edited character string

9.11.4.7 gslc_ElemXKeyPadInputAsk()

Trigger a KeyPad popup and associate it with a text element.

• This function also updates the maximum KeyPad buffer length to match that of the target text element, up to the maximum XKEYPAD_BUF_MAX.

Parameters

in	pGui	Pointer to GUI
in	pKeyPadRef	Pointer to KeyPad element reference
in	nPgPopup	Page enum that contains the popup to show
in	pTxtRef	Pointer to associated text field element reference

Returns

none

9.11.4.8 gslc_ElemXKeyPadInputGet()

```
gslc_tsElemRef * pTxtRef,
void * pvCbData )
```

Complete a KeyPad popup by retrieving the input data and storing it in the text element.

Parameters

in	pGui	Pointer to GUI
in	pTxtRef	Pointer to associated text field element reference
in	pvCbData	Void pointer to callback function's pvData

Returns

The text string that was fetched from the KeyPad (NULL terminated)

9.11.4.9 gslc_ElemXKeyPadTargetRefSet()

Set target element reference for KeyPad return value.

- The Target Reference is used in the GSLC_CB_INPUT callback so that the user has the context needed to determine which field should be edited with the contents of the KeyPad edit field
- It is expected that the user will call this function when showing the KeyPad popup dialog

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Ptr to KeyPad Element reference
in	pTargetRef	Element reference for target of KeyPad value

Returns

none

9.11.4.10 gslc_ElemXKeyPadValGet()

```
char * pStrBuf,
uint8_t nStrBufMax )
```

Fetch the current value string associated with KeyPad element.

Parameters

in	pGui	Pointer to GUI	
in	pElemRef	Per to KeyPad Element reference	
out	pStrBuf	String buffer	
in	nStrBufMax Maximum length of string buffer (pStrBuf) including terminate		

Returns

true if success, false otherwise

9.11.4.11 gslc_ElemXKeyPadValSet()

Set the current value for the editable text field.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Ptr to KeyPad Element reference
in	pStrBuf	String to copy into keypad

Returns

none

9.11.4.12 gslc_ElemXKeyPadValSetCb()

Set the callback function associated with the KeyPad.

• This function will be called during updates and OK / Cancel

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element Reference for KeyPad
in	pfuncCb	Callback function pointer

Returns

none

9.11.4.13 gslc_XKeyPadCreateBase()

Create a KeyPad Element.

Parameters

in	pGui	Pointer to GUI	
in	n⊷	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)	
	ElemId		
in	nPage	Page ID to attach element to	
in	pXData	Ptr to extended element data structure	
in	nX0	X KeyPad Starting Coordinate	
in	nY0	Y KeyPad Starting Coordinate	
in	nFontld	Font ID to use for drawing the element	
in	pConfig	Pointer to base Config options	

Returns

Pointer to Element or NULL if failure

9.11.4.14 gslc_XKeyPadDraw()

Draw a KeyPad element on the screen.

· Called during redraw

Parameters

	in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)	
	in	n pvElemRef Void ptr to Element reference (typecast to gslc_tsEle		
Ī	in	eRedraw	Redraw mode	

Returns

true if success, false otherwise

9.11.4.15 gslc_XKeyPadDrawKey()

Draw a key to the screen.

Parameters

in	pGui	Pointer to GUI	
in	pXData	Ptr to extended element data structure	
in	pKey	Ptr to key being drawn	
in	bGlow Indicate if key is in glow state		
in	bFocus Indicate if key is in focus state		

Returns

none

9.11.4.16 gslc_XKeyPadDrawVirtualBtn()

```
bool bRoundedEn,
bool bGlow,
bool bFocus )
```

Draw a virtual textual Button Element.

Parameters

in	pGui	Pointer to GUI
in	rElem	Rectangle coordinates defining element size
in	pStrBuf	String to copy into element
in	nStrBufMax	Maximum length of string buffer (pStrBuf).
in	nFontId	Font ID to use for text display
in	cColFrame	Frame color for element
in	cColFill	Fill color for element
in	cColFillGlow	Fill color for element when glowing/focused
in	cColTxt	Text color for element
in	bRoundedEn	Use Rounded Corners?
in	bGlow	Indicate btn is in glow state
in	bFocus	Indicate btn is in focus state

Returns

none

9.11.4.17 gslc_XKeyPadDrawVirtualTxt()

Draw a virtual Text Element.

· Creates a text string with filled background

Parameters

in	pGui	Pointer to GUI
in	rElem	Rectangle coordinates defining element size
in	pKeyPad	Pointer to KeyPad struct
in	cColFrame	Frame color for element
in	cColFill	Fill color for element
in	cColTxt	Text color for element

Returns

none

9.11.4.18 gslc_XKeyPadFocusSetDefault()

Todo Doc

9.11.4.19 gslc_XKeyPadLayoutSet()

Select a new KeyPad layout.

- · Multiple KeyPad layouts can share the same key key definition array (eg. KEYPAD_LAYOUT)
- This function returns an indication of whether a full KeyPad control redraw is required, ie. the KeyPad layout definition has changed. With changes in the KeyPad definition, there may be a different number of visible keys or arrangements, necessitating a background redraw.

Parameters

in	pConfig	Ptr to the KeyPad configuration
in	eLayoutSel	Layout index to select

Returns

true if a full redraw should be performed

9.11.4.20 gslc_XKeyPadLookupld()

Find a key ID within a KeyPad label array and return it's index into the array.

• It is expected that the KeyPad label array is terminated with KEYPAD_ID__END

Parameters

in	pKeys	Ptr to the Keypad label array
in	n⊷	Key ID to look for
	Keyld	

Returns

the index into the array if the ID was found or -1 if the key ID was not found

9.11.4.21 gslc_XKeyPadLookupSpecialId()

Find a key ID within a KeyPad special label array and return it's index into the array.

• It is expected that the KeyPad label array is terminated with KEYPAD_ID__END

Parameters

in	pLabels	Ptr to the Keypad special label array
in	nKeyld	Key ID to look for

Returns

the index into the array if the ID was found or -1 if the key ID was not found

9.11.4.22 gslc_XKeyPadPendRedrawAddKey()

Todo Doc

9.11.4.23 gslc_XKeyPadPendRedrawAddTxt()

```
void gslc_XKeyPadPendRedrawAddTxt ( gslc_tsXKeyPadResult * pResult ) \\
```

Todo Doc

9.11.4.24 gslc_XKeyPadPendRedrawReset()

```
void gslc_XKeyPadPendRedrawReset ( {\tt gslc\_tsXKeyPadResult} \ * \ pResult \ )
```

Todo Doc

9.11.4.25 gslc_XKeyPadRedrawUpdate()

Todo Doc

9.11.4.26 gslc_XKeyPadSizeAllGet()

Calculate the overall dimensions of the KeyPad control encompassing all available layouts for the KeyPad, leveraging the computation in gslc_XKeyPadSizeGet().

Parameters

in	pLayouts	Ptr to the array of KeyPad layouts
in	nNumLayouts	Number of layouts in pLayouts
out	pnRows	Ptr for the number of rows
out	pnCols	Ptr for the number of columns

Returns

none

9.11.4.27 gslc_XKeyPadSizeGet()

Calculate the overall dimensions of the KeyPad control encompassing the text field and key buttons.

The dimension is calculated in units of the configured key size (width and height), and accounts for any column spans. It also returns the index of the first and last keys on the keypad.

Parameters

in	pLayout	Ptr to the KeyPad layout
out	pnRows	Ptr for the number of rows
out	pnCols	Ptr for the number of columns
out	pnIndFirst	Ptr for the index of first key
out	pnIndLast	Ptr for the index of last key

Returns

none

9.11.4.28 gslc_XKeyPadTouch()

Handle touch (up,down,move) events to KeyPad element.

Called from gslc_ElemSendEventTouch()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
Generat T	ed by Boxygen	Touch event type
in	nRelX	Touch X coord relative to element
in	nRelY	Touch Y coord relative to element

Returns

true if success, false otherwise

9.11.4.29 gslc_XKeyPadTrackSet()

Todo Doc

9.11.4.30 gslc_XKeyPadTxtAddCh()

Add a character to the KeyPad text field at the specified offset (nPos).

Providing an offset equal to the end of the existing buffer length will cause the addition to the end, whereas an offset within the buffer will cause an insert.

- An addition that causes the buffer length to exceed the maximum allowed will result in the end of the resulting buffer to be truncated.
- Typically the addition will be done at the current cursor position.
- If the insertion is ahead of the cursor, then the cursor position may be increased.

Parameters

in	pKeyPad	Ptr to the KeyPad
in	ch	Character to add
in	nPos	Buffer position for the insertion

Returns

true if the text field should be redrawn, false if no redraw is needed (ie. no change)

9.11.4.31 gslc_XKeyPadTxtAddStr()

Add a string to the KeyPad text field at the specified offset (nPos).

Providing an offset equal to the end of the existing buffer length will cause the addition to the end, whereas an offset within the buffer will cause an insert.

- An addition that causes the buffer length to exceed the maximum allowed will result in the end of the resulting buffer to be truncated.
- Typically the addition will be done at the current cursor position.
- If the insertion is ahead of the cursor, then the cursor position may be increased.
- · This routine may be useful when adding multi-byte characters for future support of foreign characters.

Parameters

in	pKeyPad	Ptr to the KeyPad
in	pStr	String to add
in	nPos	Buffer position for the insertion

Returns

true if the text field should be redrawn, false if no redraw is needed (ie. no change)

9.11.4.32 gslc_XKeyPadTxtDelCh()

Remove a character from the KeyPad text field at the specified offset (nPos).

- Typically the addition will be done at the current cursor position.
- If the removal is ahead of the cursor, then the cursor position may be decreased.

Parameters

in	pKeyPad	Ptr to the KeyPad
in	nPos	Buffer position for the removal

Returns

true if the text field should be redrawn, false if no redraw is needed (ie. no change)

9.11.5 Variable Documentation

9.11.5.1 RBIT_CTRL

```
const int RBIT_CTRL [static]
```

9.11.5.2 RBIT_KEYALL

```
const int RBIT_KEYALL [static]
```

9.11.5.3 RBIT_KEYONE

```
const int RBIT_KEYONE [static]
```


9.11.5.4 RBIT_TXT

const int RBIT_TXT [static]


9.12 src/elem/XKeyPad_Alpha-setup.h File Reference

```
#include "elem/XKeyPad.h"
#include "elem/XKeyPad_Alpha.h"
```

Include dependency graph for XKeyPad_Alpha-setup.h:

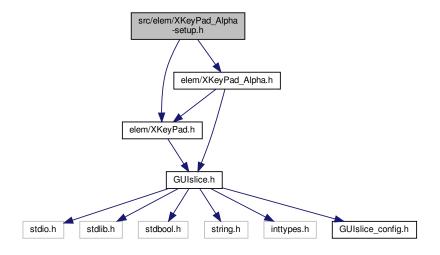

This graph shows which files directly or indirectly include this file:

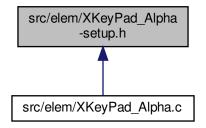

Macros

- #define XKEYPAD_EXTEND_CHAR
- #define XKEYPAD LABEL MAX
- #define XKEYPAD_DISP_MAX
- #define XKEYPAD KEY W
- #define XKEYPAD_KEY_H
- #define XKEYPAD SPACING X
- #define XKEYPAD_SPACING_Y
- #define XKEYPAD COL DISABLE TXT
- #define XKEYPAD_COL_DISABLE_FILL
- #define XKEYPAD_COL_DEF_TXT
- #define XKEYPAD_COL_DEF_FRAME
- #define XKEYPAD COL DEF FILL
- #define XKEYPAD_COL_DEF_GLOW
- #define XKEYPAD_COL_BASIC_FILL
- #define XKEYPAD_COL_BASIC_GLOW
- #define XKEYPAD_COL_TEXT_TXT
- #define XKEYPAD_COL_TEXT_FILL
- #define XKEYPAD_COL_TEXT_GLOW
- #define XKEYPAD COL SPACE FILL
- #define XKEYPAD COL SPACE GLOW
- #define XKEYPAD_COL_ESC_FILL
- #define XKEYPAD_COL_ESC_GLOW
- #define XKEYPAD_COL_ENTER_FILL
- #define XKEYPAD_COL_ENTER_GLOW
- #define XKEYPAD_COL_SCROLL_L_FILL
- #define XKEYPAD_COL_SCROLL_L_GLOW
- #define XKEYPAD_COL_SCROLL_R_FILL
- #define XKEYPAD_COL_SCROLL_R_GLOW

Enumerations

```
    enum gslc_teXKeyPadSel {
        E_XKEYPAD_SET_UPPER, E_XKEYPAD_SET_LOWER, E_XKEYPAD_SET_NUM, E_XKEYPAD_SET
        __MAX,
        E_XKEYPAD_SET_NUM, E_XKEYPAD_SET__MAX }
```

Variables

- static const char * XKEYPAD_LABEL_SPACE
- static const int8_t XKEYPAD_LAYOUT_DEFAULT
- static gslc_tsLabelSpecial KEYPAD_SPECIAL_LABEL []
- static const char * KEYPAD_SET_LABEL []
- static const char * KEYPAD_SPECIAL_SELECT []
- static gslc_tsKey KEYPAD_LAYOUT []
- static gslc_tsKey * KEYPAD_LAYOUTS [E_XKEYPAD_SET__MAX]

9.12.1 Macro Definition Documentation

9.12.1.1 XKEYPAD_COL_BASIC_FILL

#define XKEYPAD_COL_BASIC_FILL

9.12.1.2 XKEYPAD_COL_BASIC_GLOW

#define XKEYPAD_COL_BASIC_GLOW

9.12.1.3 XKEYPAD_COL_DEF_FILL

#define XKEYPAD_COL_DEF_FILL

9.12.1.4 XKEYPAD_COL_DEF_FRAME

#define XKEYPAD_COL_DEF_FRAME

9.12.1.5 XKEYPAD_COL_DEF_GLOW

#define XKEYPAD_COL_DEF_GLOW

9.12.1.6 XKEYPAD_COL_DEF_TXT

#define XKEYPAD_COL_DEF_TXT

9.12.1.7 XKEYPAD_COL_DISABLE_FILL

#define XKEYPAD_COL_DISABLE_FILL

9.12.1.8 XKEYPAD_COL_DISABLE_TXT

#define XKEYPAD_COL_DISABLE_TXT

9.12.1.9 XKEYPAD_COL_ENTER_FILL

#define XKEYPAD_COL_ENTER_FILL

9.12.1.10 XKEYPAD_COL_ENTER_GLOW

#define XKEYPAD_COL_ENTER_GLOW

9.12.1.11 XKEYPAD_COL_ESC_FILL

#define XKEYPAD_COL_ESC_FILL

9.12.1.12 XKEYPAD_COL_ESC_GLOW

#define XKEYPAD_COL_ESC_GLOW

9.12.1.13 XKEYPAD_COL_SCROLL_L_FILL

#define XKEYPAD_COL_SCROLL_L_FILL

9.12.1.14 XKEYPAD_COL_SCROLL_L_GLOW

#define XKEYPAD_COL_SCROLL_L_GLOW

9.12.1.15 XKEYPAD_COL_SCROLL_R_FILL

#define XKEYPAD_COL_SCROLL_R_FILL

9.12.1.16 XKEYPAD_COL_SCROLL_R_GLOW

#define XKEYPAD_COL_SCROLL_R_GLOW

9.12.1.17 XKEYPAD_COL_SPACE_FILL

#define XKEYPAD_COL_SPACE_FILL

9.12.1.18 XKEYPAD_COL_SPACE_GLOW

#define XKEYPAD_COL_SPACE_GLOW

9.12.1.19 XKEYPAD_COL_TEXT_FILL

#define XKEYPAD_COL_TEXT_FILL

9.12.1.20 XKEYPAD_COL_TEXT_GLOW

#define XKEYPAD_COL_TEXT_GLOW

9.12.1.21 XKEYPAD_COL_TEXT_TXT

#define XKEYPAD_COL_TEXT_TXT

9.12.1.22 XKEYPAD_DISP_MAX

#define XKEYPAD_DISP_MAX

9.12.1.23 XKEYPAD_EXTEND_CHAR

#define XKEYPAD_EXTEND_CHAR

9.12.1.24 XKEYPAD_KEY_H

#define XKEYPAD_KEY_H

9.12.1.25 XKEYPAD_KEY_W

#define XKEYPAD_KEY_W

9.12.1.26 XKEYPAD_LABEL_MAX

#define XKEYPAD_LABEL_MAX

9.12.1.27 XKEYPAD_SPACING_X

#define XKEYPAD_SPACING_X

9.12.1.28 XKEYPAD_SPACING_Y

#define XKEYPAD_SPACING_Y

9.12.2 Enumeration Type Documentation

9.12.2.1 gslc_teXKeyPadSel

enum gslc_teXKeyPadSel

Enumerator

E_XKEYPAD_SET_UPPER	
E_XKEYPAD_SET_LOWER	
E_XKEYPAD_SET_NUM	
E_XKEYPAD_SETMAX	
E_XKEYPAD_SET_NUM	
E_XKEYPAD_SETMAX	

9.12.3 Variable Documentation

9.12.3.1 KEYPAD_LAYOUT

```
gslc_tsKey KEYPAD_LAYOUT[] [static]
```

9.12.3.2 KEYPAD_LAYOUTS

```
gslc_tsKey* KEYPAD_LAYOUTS[E_XKEYPAD_SET__MAX] [static]
```

9.12.3.3 KEYPAD_SET_LABEL

```
const char* KEYPAD_SET_LABEL[] [static]
```

9.12.3.4 KEYPAD_SPECIAL_LABEL

```
gslc_tsLabelSpecial KEYPAD_SPECIAL_LABEL[] [static]
```

9.12.3.5 KEYPAD_SPECIAL_SELECT

```
const char* KEYPAD_SPECIAL_SELECT[] [static]
```

9.12.3.6 XKEYPAD_LABEL_SPACE


```
const char* XKEYPAD_LABEL_SPACE [static]
```

9.12.3.7 XKEYPAD_LAYOUT_DEFAULT

```
const int8_t XKEYPAD_LAYOUT_DEFAULT [static]
```

9.13 src/elem/XKeyPad_Alpha.c File Reference

```
#include "GUIslice.h"
#include "GUIslice_drv.h"
#include "elem/XKeyPad.h"
#include "elem/XKeyPad_Alpha.h"
#include <stdio.h>
#include "elem/XKeyPad_Alpha-setup.h"
Include dependency graph for XKeyPad_Alpha.c:
```

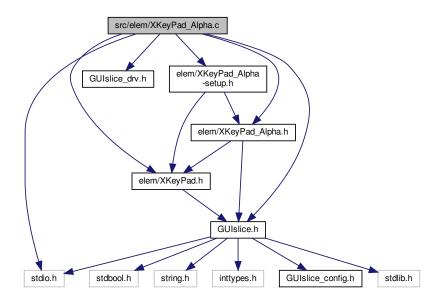

Functions

- void gslc_ElemXKeyPadReset_Alpha (void *pvConfig)
 - Callback function to reset internal state.
- void gslc_ElemXKeyPadTxtInit_Alpha (void *pvKeyPad)
 - Callback function to update internal state whenever the text field is manually set via gslc_ElemXKeyPadValSet().
- void gslc_ElemXKeyPadLabelGet_Alpha (void *pvKeyPad, uint8_t nld, uint8_t nStrMax, char *pStr)

 Callback function to retrieve the label associated with a KeyPad button.

void gslc_ElemXKeyPadStyleGet_Alpha (void *pvKeyPad, uint8_t nld, bool *pbVisible, gslc_tsColor *pcol
 — Txt, gslc_tsColor *pcolFrame, gslc_tsColor *pcolFill, gslc_tsColor *pcolGlow)

Callback function to retrieve the style associated with a KeyPad button.

- void gslc_ElemXKeyPadBtnEvt_Alpha (void *pvKeyPad, uint8_t nld, gslc_tsXKeyPadResult *psResult)

 Callback function activated when a key has been pressed.
- gslc_tsXKeyPadCfg_Alpha gslc_ElemXKeyPadCfgInit_Alpha ()

Initialize the KeyPad config structure.

gslc_tsElemRef * gslc_ElemXKeyPadCreate_Alpha (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsXKeyPad *pXData, int16_t nX0, int16_t nY0, int8_t nFontId, gslc_tsXKeyPadCfg_Alpha *pConfig)
 Create a KeyPad Element.

Variables

- const char GSLC_PMEM ERRSTR_NULL []
- const char GSLC PMEM ERRSTR PXD NULL []

9.13.1 Function Documentation

9.13.1.1 gslc_ElemXKeyPadBtnEvt_Alpha()

Callback function activated when a key has been pressed.

This callback is used to enable the KeyPad variant to handle any events associated with the key press and update any internal state.

• The callback is also used to determine whether any redraw actions need to be taken.

Parameters

in	pvKeyPad	Void ptr to the KeyPad
in	nld	KeyPad key ID
out	psResult	The returned state vector (including redraw)

Returns

none

9.13.1.2 gslc_ElemXKeyPadCfgInit_Alpha()

```
gslc_tsXKeyPadCfg_Alpha gslc_ElemXKeyPadCfgInit_Alpha ( )
```

Initialize the KeyPad config structure.

• This routine should be called to initialize the configuration data structure before calling any of the KeyPad config APIs

Returns

Initialized KeyPad config structure

9.13.1.3 gslc_ElemXKeyPadCreate_Alpha()

Create a KeyPad Element.

Parameters

in	pGui	Pointer to GUI
in	n⊷	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)
	ElemId	
in	nPage	Page ID to attach element to
in	pXData	Ptr to extended element data structure
in	nX0	X KeyPad Starting Coordinate
in	nY0	Y KeyPad Starting Coordinate
in	nFontld	Font ID to use for drawing the element
in	pConfig	Ptr to config options

Returns

Pointer to Element or NULL if failure

9.13.1.4 gslc_ElemXKeyPadLabelGet_Alpha()

Callback function to retrieve the label associated with a KeyPad button.

This is called during the drawing of the KeyPad layout.

Parameters

in	pvKeyPad	Void ptr to the KeyPad
in	nld	KeyPad key ID
in	nStrMax	Maximum length of return string (including NULL)
out	pStr	Buffer for the returned label

Returns

none

9.13.1.5 gslc_ElemXKeyPadReset_Alpha()

```
void gslc_ElemXKeyPadReset_Alpha ( void \ *\ pvConfig\ )
```

Callback function to reset internal state.

Parameters

-	in	pvConfig	Void ptr to the KeyPad config	
---	----	----------	-------------------------------	--

Returns

none

9.13.1.6 gslc_ElemXKeyPadStyleGet_Alpha()

```
gslc_tsColor * pcolFrame,
gslc_tsColor * pcolFill,
gslc_tsColor * pcolGlow )
```

Callback function to retrieve the style associated with a KeyPad button.

This is called during the drawing of the KeyPad layout.

- This function is used to assign the color and visibility state of the keys at runtime.
- This function can also be used to change the appearance dynamically, according to internal state (eg. dimmed buttons).

Parameters

in	pvKeyPad	Void ptr to the KeyPad
in	nld	KeyPad key ID
out	pbVisible	The returned visibility state
out	pcolTxt	The returned text color
out	pcolFrame	The returned key's frame color
out	pcolFill	The returned key's fill color
out	pcolGlow	The returned key's fill color when highlighted

Returns

none

9.13.1.7 gslc_ElemXKeyPadTxtInit_Alpha()

```
void gslc_ElemXKeyPadTxtInit_Alpha (  void * pvKeyPad )
```

Callback function to update internal state whenever the text field is manually set via gslc_ElemXKeyPadValSet().

- This is used to ensure any KeyPad variant state can be kept in sync with the text string.
- For example, if a numeric KeyPad is initiaized with a string that contains a minus sign, an internal negation flag might be set.

Parameters

in	pvKeyPad	Void ptr to the KeyPad
----	----------	------------------------

Returns

none

9.13.2 Variable Documentation

9.13.2.1 ERRSTR_NULL


```
const char GSLC_PMEM ERRSTR_NULL[]
```

9.13.2.2 ERRSTR_PXD_NULL


```
const char GSLC_PMEM ERRSTR_PXD_NULL[]
```

9.14 src/elem/XKeyPad_Alpha.h File Reference

```
#include "GUIslice.h"
#include "elem/XKeyPad.h"
Include dependency graph for XKeyPad_Alpha.h:
```

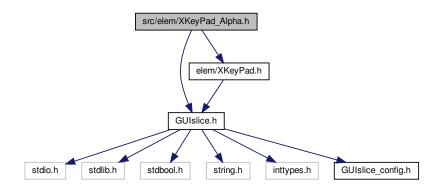

This graph shows which files directly or indirectly include this file:

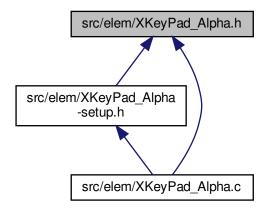

Data Structures

• struct gslc_tsXKeyPadCfg_Alpha

Functions

- gslc_tsElemRef * gslc_ElemXKeyPadCreate_Alpha (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsXKeyPad *pXData, int16_t nX0, int16_t nY0, int8_t nFontId, gslc_tsXKeyPadCfg_Alpha *pConfig)
 - Create a KeyPad Element.
- gslc_tsXKeyPadCfg_Alpha gslc_ElemXKeyPadCfgInit_Alpha ()
 - Initialize the KeyPad config structure.
- void gslc_ElemXKeyPadReset_Alpha (void *pvConfig)
 - Callback function to reset internal state.
- void gslc_ElemXKeyPadTxtInit_Alpha (void *pvKeyPad)
 - Callback function to update internal state whenever the text field is manually set via gslc_ElemXKeyPadValSet().
- void gslc_ElemXKeyPadLabelGet_Alpha (void *pvKeyPad, uint8_t nld, uint8_t nStrMax, char *pStr)
 - Callback function to retrieve the label associated with a KeyPad button.
- void gslc_ElemXKeyPadStyleGet_Alpha (void *pvKeyPad, uint8_t nld, bool *pbVisible, gslc_tsColor *pcol
 — Txt, gslc_tsColor *pcolFrame, gslc_tsColor *pcolFill, gslc_tsColor *pcolGlow)
 - Callback function to retrieve the style associated with a KeyPad button.
- void gslc_ElemXKeyPadBtnEvt_Alpha (void *pvKeyPad, uint8_t nld, gslc_tsXKeyPadResult *psResult)
 - Callback function activated when a key has been pressed.

9.14.1 Function Documentation

9.14.1.1 gslc_ElemXKeyPadBtnEvt_Alpha()

Callback function activated when a key has been pressed.

This callback is used to enable the KeyPad variant to handle any events associated with the key press and update any internal state.

• The callback is also used to determine whether any redraw actions need to be taken.

Parameters

in	pvKeyPad	Void ptr to the KeyPad
in	nld	KeyPad key ID
out	psResult	The returned state vector (including redraw)

Returns

none

9.14.1.2 gslc_ElemXKeyPadCfgInit_Alpha()

```
gslc_tsXKeyPadCfg_Alpha gslc_ElemXKeyPadCfgInit_Alpha ( )
```

Initialize the KeyPad config structure.

• This routine should be called to initialize the configuration data structure before calling any of the KeyPad config APIs

Returns

Initialized KeyPad config structure

9.14.1.3 gslc_ElemXKeyPadCreate_Alpha()

Create a KeyPad Element.

Parameters

in	pGui	Pointer to GUI
in	n⊷	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)
	ElemId	
in	nPage	Page ID to attach element to
in	pXData	Ptr to extended element data structure
in	nX0	X KeyPad Starting Coordinate
in	nY0	Y KeyPad Starting Coordinate
in	nFontId	Font ID to use for drawing the element
in	pConfig	Ptr to config options

Returns

Pointer to Element or NULL if failure

9.14.1.4 gslc_ElemXKeyPadLabelGet_Alpha()

Callback function to retrieve the label associated with a KeyPad button.

This is called during the drawing of the KeyPad layout.

Parameters

in	pvKeyPad	Void ptr to the KeyPad
in	nld	KeyPad key ID
in	nStrMax	Maximum length of return string (including NULL)
out	pStr	Buffer for the returned label

Returns

none

9.14.1.5 gslc_ElemXKeyPadReset_Alpha()

```
void gslc_ElemXKeyPadReset_Alpha ( \label{eq:config} \mbox{void} \ * \ pvConfig \ )
```

Callback function to reset internal state.

Parameters

in pvConfig Void ptr to the KeyPad con
--

Returns

none

9.14.1.6 gslc_ElemXKeyPadStyleGet_Alpha()

Callback function to retrieve the style associated with a KeyPad button.

This is called during the drawing of the KeyPad layout.

- This function is used to assign the color and visibility state of the keys at runtime.
- This function can also be used to change the appearance dynamically, according to internal state (eg. dimmed buttons).

Parameters

in	pvKeyPad	Void ptr to the KeyPad
in	nld	KeyPad key ID
out	pbVisible	The returned visibility state
out	pcolTxt	The returned text color
out	pcolFrame	The returned key's frame color
out	pcolFill	The returned key's fill color
out	pcolGlow	The returned key's fill color when highlighted

Returns

none

9.14.1.7 gslc_ElemXKeyPadTxtInit_Alpha()

```
void gslc_ElemXKeyPadTxtInit_Alpha (  void * pvKeyPad )
```

Callback function to update internal state whenever the text field is manually set via gslc_ElemXKeyPadValSet().

- This is used to ensure any KeyPad variant state can be kept in sync with the text string.
- For example, if a numeric KeyPad is initiaized with a string that contains a minus sign, an internal negation flag might be set.

Parameters


i	n	pvKeyPad	Void ptr to the KeyPad
---	---	----------	------------------------

Returns


none

9.15 src/elem/XKeyPad_Num-setup.h File Reference

```
#include "elem/XKeyPad.h"
#include "elem/XKeyPad_Num.h"
Include dependency graph for XKeyPad_Num-setup.h:
```

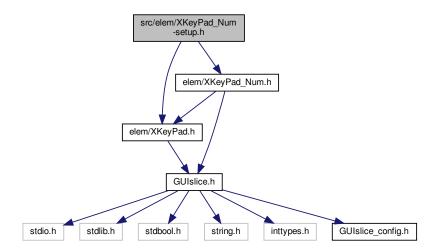

This graph shows which files directly or indirectly include this file:

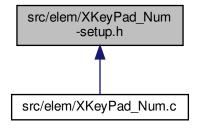

Macros

- #define XKEYPAD_EXTEND_CHAR
- #define XKEYPAD_LABEL_MAX
- #define XKEYPAD_DISP_MAX
- #define XKEYPAD_KEY_W
- #define XKEYPAD_KEY_H
- #define XKEYPAD SPACING X
- #define XKEYPAD_SPACING_Y
- #define XKEYPAD_COL_DISABLE_TXT
- #define XKEYPAD_COL_DISABLE_FILL
- #define XKEYPAD COL DEF TXT
- #define XKEYPAD_COL_DEF_FRAME
- #define XKEYPAD_COL_DEF_FILL
- #define XKEYPAD_COL_DEF_GLOW
- #define XKEYPAD COL BASIC FILL
- #define XKEYPAD_COL_BASIC_GLOW
- #define XKEYPAD_COL_TEXT_TXT
- #define XKEYPAD_COL_TEXT_FILL
- #define XKEYPAD COL TEXT GLOW
- #define XKEYPAD_COL_SPACE_FILL
- #define XKEYPAD_COL_SPACE_GLOW
- #define XKEYPAD_COL_ESC_FILL
- #define XKEYPAD_COL_ESC_GLOW
- #define XKEYPAD_COL_ENTER_FILL
- #define XKEYPAD_COL_ENTER_GLOW
- #define XKEYPAD_COL_SCROLL_L_FILL
- #define XKEYPAD_COL_SCROLL_L_GLOW
- #define XKEYPAD_COL_SCROLL_R_FILL
- #define XKEYPAD_COL_SCROLL_R_GLOW
- #define XKEYPAD_COL_DECIMAL_FILL
- #define XKEYPAD COL DECIMAL GLOW
- #define XKEYPAD_COL_MINUS_FILL
- #define XKEYPAD_COL_MINUS_GLOW

Enumerations

Variables

- static const char * KEYPAD_LABEL_NEGATIVE
- static const char * KEYPAD_LABEL_DECIMAL_PT
- static const int8_t XKEYPAD_LAYOUT_DEFAULT
- static gslc_tsLabelSpecial KEYPAD_SPECIAL_LABEL []
- static const char * KEYPAD_SET_LABEL []
- static gslc_tsKey KEYPAD_LAYOUT []
- static gslc_tsKey * KEYPAD_LAYOUTS [E_XKEYPAD_SET__MAX]

9.15.1 Macro Definition Documentation

9.15.1.1 XKEYPAD_COL_BASIC_FILL

#define XKEYPAD_COL_BASIC_FILL

9.15.1.2 XKEYPAD_COL_BASIC_GLOW

#define XKEYPAD_COL_BASIC_GLOW

9.15.1.3 XKEYPAD_COL_DECIMAL_FILL

#define XKEYPAD_COL_DECIMAL_FILL

9.15.1.4 XKEYPAD_COL_DECIMAL_GLOW

#define XKEYPAD_COL_DECIMAL_GLOW

9.15.1.5 XKEYPAD_COL_DEF_FILL

#define XKEYPAD_COL_DEF_FILL

9.15.1.6 XKEYPAD_COL_DEF_FRAME

#define XKEYPAD_COL_DEF_FRAME

9.15.1.7 XKEYPAD_COL_DEF_GLOW

#define XKEYPAD_COL_DEF_GLOW

9.15.1.8 XKEYPAD_COL_DEF_TXT

#define XKEYPAD_COL_DEF_TXT

9.15.1.9 XKEYPAD_COL_DISABLE_FILL

#define XKEYPAD_COL_DISABLE_FILL

9.15.1.10 XKEYPAD_COL_DISABLE_TXT

#define XKEYPAD_COL_DISABLE_TXT

9.15.1.11 XKEYPAD_COL_ENTER_FILL

#define XKEYPAD_COL_ENTER_FILL

9.15.1.12 XKEYPAD_COL_ENTER_GLOW

#define XKEYPAD_COL_ENTER_GLOW

9.15.1.13 XKEYPAD_COL_ESC_FILL

#define XKEYPAD_COL_ESC_FILL

9.15.1.14 XKEYPAD_COL_ESC_GLOW

#define XKEYPAD_COL_ESC_GLOW

9.15.1.15 XKEYPAD_COL_MINUS_FILL

#define XKEYPAD_COL_MINUS_FILL

9.15.1.16 XKEYPAD_COL_MINUS_GLOW

#define XKEYPAD_COL_MINUS_GLOW

9.15.1.17 XKEYPAD_COL_SCROLL_L_FILL

#define XKEYPAD_COL_SCROLL_L_FILL

9.15.1.18 XKEYPAD_COL_SCROLL_L_GLOW

#define XKEYPAD_COL_SCROLL_L_GLOW

9.15.1.19 XKEYPAD_COL_SCROLL_R_FILL

#define XKEYPAD_COL_SCROLL_R_FILL

9.15.1.20 XKEYPAD_COL_SCROLL_R_GLOW

#define XKEYPAD_COL_SCROLL_R_GLOW

9.15.1.21 XKEYPAD_COL_SPACE_FILL

#define XKEYPAD_COL_SPACE_FILL

9.15.1.22 XKEYPAD_COL_SPACE_GLOW

#define XKEYPAD_COL_SPACE_GLOW

9.15.1.23 XKEYPAD_COL_TEXT_FILL

#define XKEYPAD_COL_TEXT_FILL

9.15.1.24 XKEYPAD_COL_TEXT_GLOW

#define XKEYPAD_COL_TEXT_GLOW

9.15.1.25 XKEYPAD_COL_TEXT_TXT

#define XKEYPAD_COL_TEXT_TXT

9.15.1.26 XKEYPAD_DISP_MAX

#define XKEYPAD_DISP_MAX

9.15.1.27 XKEYPAD_EXTEND_CHAR

#define XKEYPAD_EXTEND_CHAR

9.15.1.28 XKEYPAD_KEY_H

#define XKEYPAD_KEY_H

9.15.1.29 XKEYPAD_KEY_W

#define XKEYPAD_KEY_W

9.15.1.30 XKEYPAD_LABEL_MAX

#define XKEYPAD_LABEL_MAX

9.15.1.31 XKEYPAD_SPACING_X

#define XKEYPAD_SPACING_X

9.15.1.32 XKEYPAD_SPACING_Y

#define XKEYPAD_SPACING_Y

9.15.2 Enumeration Type Documentation

9.15.2.1 anonymous enum

anonymous enum

Enumerator

KEYPAD_IDV_DECIMAL KEYPAD_IDV_MINUS

9.15.2.2 gslc_teXKeyPadSel

enum gslc_teXKeyPadSel

Enumerator

E_XKEYPAD_SET_UPPER

Enumerator

E_XKEYPAD_SET_LOWER	
E_XKEYPAD_SET_NUM	
E_XKEYPAD_SETMAX	
E_XKEYPAD_SET_NUM	
E_XKEYPAD_SETMAX	

9.15.3 Variable Documentation

9.15.3.1 KEYPAD_LABEL_DECIMAL_PT

```
const char* KEYPAD_LABEL_DECIMAL_PT [static]
```

9.15.3.2 KEYPAD_LABEL_NEGATIVE

```
const char* KEYPAD_LABEL_NEGATIVE [static]
```

9.15.3.3 KEYPAD_LAYOUT

```
gslc_tsKey KEYPAD_LAYOUT[] [static]
```

9.15.3.4 KEYPAD_LAYOUTS

```
gslc_tsKey* KEYPAD_LAYOUTS[E_XKEYPAD_SET__MAX] [static]
```

9.15.3.5 KEYPAD_SET_LABEL

```
const char* KEYPAD_SET_LABEL[] [static]
```

9.15.3.6 KEYPAD_SPECIAL_LABEL


```
gslc_tsLabelSpecial KEYPAD_SPECIAL_LABEL[] [static]
```

9.15.3.7 XKEYPAD_LAYOUT_DEFAULT

```
const int8_t XKEYPAD_LAYOUT_DEFAULT [static]
```

9.16 src/elem/XKeyPad_Num.c File Reference

```
#include "GUIslice.h"
#include "GUIslice_drv.h"
#include "elem/XKeyPad.h"
#include "elem/XKeyPad_Num.h"
#include <stdio.h>
#include "elem/XKeyPad_Num-setup.h"
Include dependency graph for XKeyPad_Num.c:
```

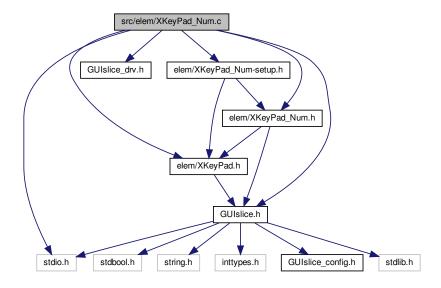

Functions

- void gslc_XKeyPadValSetSign_Num (gslc_tsXKeyPad *pXKeyPad, bool bPositive)
- void gslc_ElemXKeyPadReset_Num (void *pvConfig)

Callback function to reset internal state.

- void gslc_ElemXKeyPadTxtInit_Num (void *pvKeyPad)
 - Callback function to update internal state whenever the text field is manually set via gslc_ElemXKeyPadValSet().
- void gslc_ElemXKeyPadLabelGet_Num (void *pvKeyPad, uint8_t nld, uint8_t nStrMax, char *pStr)

 Callback function to retrieve the label associated with a KeyPad button.

void gslc_ElemXKeyPadStyleGet_Num (void *pvKeyPad, uint8_t nld, bool *pbVisible, gslc_tsColor *pcolTxt, gslc_tsColor *pcolFrame, gslc_tsColor *pcolFill, gslc_tsColor *pcolGlow)

Callback function to retrieve the style associated with a KeyPad button.

- void gslc_ElemXKeyPadBtnEvt_Num (void *pvKeyPad, uint8_t nld, gslc_tsXKeyPadResult *psResult)
 Callback function activated when a key has been pressed.
- gslc_tsXKeyPadCfg_Num gslc_ElemXKeyPadCfgInit_Num ()

Initialize the KeyPad config structure.

gslc_tsElemRef * gslc_ElemXKeyPadCreate_Num (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc
 _tsXKeyPad *pXData, int16_t nX0, int16_t nY0, int8_t nFontId, gslc_tsXKeyPadCfg_Num *pConfig)

Create a KeyPad Element.

• void gslc_ElemXKeyPadCfgSetFloatEn_Num (gslc_tsXKeyPadCfg_Num *pConfig, bool bEn)

Update the KeyPad configuration to enable floating point numbers.

void gslc_ElemXKeyPadCfgSetSignEn_Num (gslc_tsXKeyPadCfg_Num *pConfig, bool bEn)

Update the KeyPad configuration to enable negative numbers.

Variables

- const char GSLC_PMEM ERRSTR_NULL []
- const char GSLC_PMEM ERRSTR_PXD_NULL[]

9.16.1 Function Documentation

9.16.1.1 gslc_ElemXKeyPadBtnEvt_Num()

Callback function activated when a key has been pressed.

This callback is used to enable the KeyPad variant to handle any events associated with the key press and update any internal state.

• The callback is also used to determine whether any redraw actions need to be taken.

Parameters

in	pvKeyPad	Void ptr to the KeyPad
in	nld	KeyPad key ID
out	psResult	The returned state vector (including redraw)

Returns

none

9.16.1.2 gslc_ElemXKeyPadCfgInit_Num()

```
{\tt gslc\_tsXKeyPadCfg\_Num~gslc\_ElemXKeyPadCfgInit\_Num~(~)}
```

Initialize the KeyPad config structure.

• This routine should be called to initialize the configuration data structure before calling any of the KeyPad config APIs

Returns

Initialized KeyPad config structure

9.16.1.3 gslc_ElemXKeyPadCfgSetFloatEn_Num()

Update the KeyPad configuration to enable floating point numbers.

· Effectively disables/enables the decimal point button & handling

Parameters

in	pConfig	Pointer to the XKeyPad variant config structure
in	bEn	Enable flag (true if floating point enabled)

Returns

none

9.16.1.4 gslc_ElemXKeyPadCfgSetSignEn_Num()

Update the KeyPad configuration to enable negative numbers.

· Effectively disables/enables the sign button & handling

Parameters

in	pConfig	Pointer to the XKeyPad variant config structure
in	bEn	Enable flag (true if negative numbers enabled)

Returns

none

9.16.1.5 gslc_ElemXKeyPadCreate_Num()

Create a KeyPad Element.

Parameters

in	pGui	Pointer to GUI	
in	n⊷	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)	
	ElemId		
in	nPage	Page ID to attach element to	
in	pXData	Ptr to extended element data structure	
in	nX0	X KeyPad Starting Coordinate	
in	nY0	Y KeyPad Starting Coordinate	
in	nFontId	nFontId Font ID to use for drawing the element	
in	pConfig	Ptr to config options	

Returns

Pointer to Element or NULL if failure

9.16.1.6 gslc_ElemXKeyPadLabelGet_Num()

```
uint8_t nStrMax,
char * pStr )
```

Callback function to retrieve the label associated with a KeyPad button.

This is called during the drawing of the KeyPad layout.

Parameters

in	pvKeyPad Void ptr to the KeyPad nld KeyPad key ID	
in		
in	nStrMax Maximum length of return string (including N	
out	out <i>pStr</i> Buffer for the returned label	

Returns

none

9.16.1.7 gslc_ElemXKeyPadReset_Num()

```
void gslc_ElemXKeyPadReset_Num (  void * pvConfig ) \\
```

Callback function to reset internal state.

Parameters

in	pvConfig	Void ptr to the KeyPad config

Returns

none

9.16.1.8 gslc_ElemXKeyPadStyleGet_Num()

Callback function to retrieve the style associated with a KeyPad button.

This is called during the drawing of the KeyPad layout.

- This function is used to assign the color and visibility state of the keys at runtime.
- This function can also be used to change the appearance dynamically, according to internal state (eg. dimmed buttons).

Parameters

in	pvKeyPad	Void ptr to the KeyPad
in	nld	KeyPad key ID
out	pbVisible	The returned visibility state
out	pcolTxt	The returned text color
out	pcolFrame The returned key's frame color	
out	pcolFill The returned key's fill color	
out	out pcolGlow The returned key's fill color when highlighted	

Returns

none

9.16.1.9 gslc_ElemXKeyPadTxtInit_Num()

```
void gslc_ElemXKeyPadTxtInit_Num (  void * pvKeyPad ) \\
```

Callback function to update internal state whenever the text field is manually set via gslc_ElemXKeyPadValSet().

- This is used to ensure any KeyPad variant state can be kept in sync with the text string.
- For example, if a numeric KeyPad is initiaized with a string that contains a minus sign, an internal negation flag might be set.

Parameters

in	pvKeyPad	Void ptr to the KeyPad
----	----------	------------------------

Returns

none

9.16.1.10 gslc_XKeyPadValSetSign_Num()

9.16.2 Variable Documentation

9.16.2.1 ERRSTR_NULL


```
const char GSLC_PMEM ERRSTR_NULL[]
```

9.16.2.2 ERRSTR_PXD_NULL


```
const char GSLC_PMEM ERRSTR_PXD_NULL[]
```

9.17 src/elem/XKeyPad_Num.h File Reference

```
#include "GUIslice.h"
#include "elem/XKeyPad.h"
Include dependency graph for XKeyPad_Num.h:
```

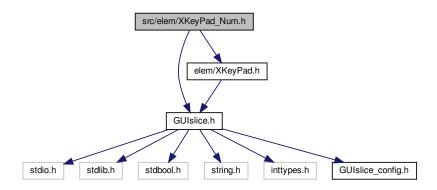

This graph shows which files directly or indirectly include this file:

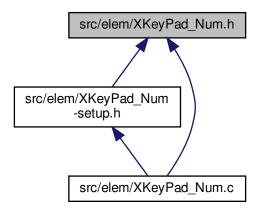

Data Structures

• struct gslc_tsXKeyPadCfg_Num

Functions

- gslc_tsElemRef * gslc_ElemXKeyPadCreate_Num (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc
 _tsXKeyPad *pXData, int16_t nX0, int16_t nY0, int8_t nFontId, gslc_tsXKeyPadCfg_Num *pConfig)
 Create a KeyPad Element.
- gslc_tsXKeyPadCfg_Num gslc_ElemXKeyPadCfgInit_Num ()

Initialize the KeyPad config structure.

void gslc_ElemXKeyPadReset_Num (void *pvConfig)

Callback function to reset internal state.

void gslc_ElemXKeyPadTxtInit_Num (void *pvKeyPad)

Callback function to update internal state whenever the text field is manually set via gslc ElemXKeyPadValSet().

- void gslc_ElemXKeyPadLabelGet_Num (void *pvKeyPad, uint8_t nld, uint8_t nStrMax, char *pStr)
 - Callback function to retrieve the label associated with a KeyPad button.
- void gslc_ElemXKeyPadStyleGet_Num (void *pvKeyPad, uint8_t nld, bool *pbVisible, gslc_tsColor *pcolTxt, gslc_tsColor *pcolFrame, gslc_tsColor *pcolFill, gslc_tsColor *pcolGlow)

Callback function to retrieve the style associated with a KeyPad button.

- void gslc_ElemXKeyPadBtnEvt_Num (void *pvKeyPad, uint8_t nld, gslc_tsXKeyPadResult *psResult)
 Callback function activated when a key has been pressed.
- void gslc_ElemXKeyPadCfgSetFloatEn_Num (gslc_tsXKeyPadCfg_Num *pConfig, bool bEn)

Update the KeyPad configuration to enable floating point numbers.

• void gslc_ElemXKeyPadCfgSetSignEn_Num (gslc_tsXKeyPadCfg_Num *pConfig, bool bEn)

Update the KeyPad configuration to enable negative numbers.

9.17.1 Function Documentation

9.17.1.1 gslc_ElemXKeyPadBtnEvt_Num()

Callback function activated when a key has been pressed.

This callback is used to enable the KeyPad variant to handle any events associated with the key press and update any internal state.

• The callback is also used to determine whether any redraw actions need to be taken.

Parameters

in	pvKeyPad	Void ptr to the KeyPad
in	nld	KeyPad key ID
out	psResult	The returned state vector (including redraw)

Returns

none

9.17.1.2 gslc_ElemXKeyPadCfgInit_Num()

```
gslc_tsXKeyPadCfg_Num gslc_ElemXKeyPadCfgInit_Num ( )
```

Initialize the KeyPad config structure.

• This routine should be called to initialize the configuration data structure before calling any of the KeyPad config APIs

Returns

Initialized KeyPad config structure

9.17.1.3 gslc_ElemXKeyPadCfgSetFloatEn_Num()

Update the KeyPad configuration to enable floating point numbers.

• Effectively disables/enables the decimal point button & handling

Parameters

in	pConfig	Pointer to the XKeyPad variant config structure
in	bEn	Enable flag (true if floating point enabled)

Returns

none

9.17.1.4 gslc_ElemXKeyPadCfgSetSignEn_Num()

Update the KeyPad configuration to enable negative numbers.

• Effectively disables/enables the sign button & handling

Parameters

in	pConfig	Pointer to the XKeyPad variant config structure
in	bEn	Enable flag (true if negative numbers enabled)

Returns

none

9.17.1.5 gslc_ElemXKeyPadCreate_Num()

Create a KeyPad Element.

Parameters

in	pGui	Pointer to GUI	
in	n⊷	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)	
	ElemId		
in	nPage	Page ID to attach element to	
in	pXData	Ptr to extended element data structure	
in	nX0	X KeyPad Starting Coordinate	
in	nY0	Y KeyPad Starting Coordinate	
in	nFontId	Font ID to use for drawing the element	
in	pConfig	Ptr to config options	

Returns

Pointer to Element or NULL if failure

9.17.1.6 gslc_ElemXKeyPadLabelGet_Num()

Callback function to retrieve the label associated with a KeyPad button.

This is called during the drawing of the KeyPad layout.

Parameters

in	pvKeyPad	Void ptr to the KeyPad
in	nld	KeyPad key ID
in	nStrMax	Maximum length of return string (including NULL)
out	pStr	Buffer for the returned label

Returns

none

9.17.1.7 gslc_ElemXKeyPadReset_Num()

```
void gslc_ElemXKeyPadReset_Num (  {\tt void} \ * \ pvConfig \ )
```

Callback function to reset internal state.

Parameters

in pvConfig Void ptr to the KeyPad con
--

Returns

none

9.17.1.8 gslc_ElemXKeyPadStyleGet_Num()

Callback function to retrieve the style associated with a KeyPad button.

This is called during the drawing of the KeyPad layout.

- This function is used to assign the color and visibility state of the keys at runtime.
- This function can also be used to change the appearance dynamically, according to internal state (eg. dimmed buttons).

Parameters

	14 5 1	V 11
in	pvKeyPad	Void ptr to the KeyPad
in	nld	KeyPad key ID
out	pbVisible	The returned visibility state
out	pcolTxt	The returned text color
out	pcolFrame	The returned key's frame color
out	pcolFill	The returned key's fill color
out	pcolGlow	The returned key's fill color when highlighted

Returns

none

9.17.1.9 gslc_ElemXKeyPadTxtInit_Num()

Callback function to update internal state whenever the text field is manually set via gslc_ElemXKeyPadValSet().

- · This is used to ensure any KeyPad variant state can be kept in sync with the text string.
- For example, if a numeric KeyPad is initiaized with a string that contains a minus sign, an internal negation flag might be set.

Parameters

in	pvKeyPad	Void ptr to the KeyPad
----	----------	------------------------


Returns

none

9.18 src/elem/XListbox.c File Reference

```
#include "GUIslice.h"
#include "GUIslice_drv.h"
#include "elem/XListbox.h"
#include <stdio.h>
```

Include dependency graph for XListbox.c:

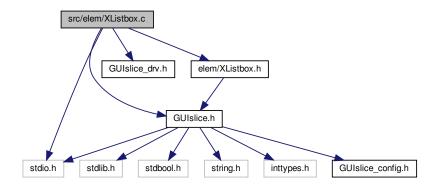

Macros

#define XLISTBOX_MAX_STR

Functions

- char * gslc_ElemXListboxGetItemAddr (gslc_tsXListbox *pListbox, int16_t nItemCurSel)
- bool gslc_ElemXListboxRecalcSize (gslc_tsXListbox *pListbox, gslc_tsRect rElem)
- void gslc_ElemXListboxSetSize (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int8_t nRows, int8_t nCols)

 Configure the number of rows & columns to display in the listbox.

void gslc_ElemXListboxSetMargin (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int8_t nMarginW, int8_t nMarginH)

Configure the margin inside the listbox.

void gslc_ElemXListboxItemsSetSize (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nItemW, int16

_t nItemH)

Configure the size of the listbox items.

void gslc_ElemXListboxItemsSetGap (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int8_t nGap, gslc_ts↔
 Color colGap)

Configure the gap between listbox items.

void gslc_ElemXListboxReset (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Empty the listbox of all items.

 $\bullet \ \ bool\ gslc_ElemXListboxAddItem\ (gslc_tsGui\ *pGui,\ gslc_tsElemRef\ *pElemRef,\ const\ char\ *pStrItem)$

Add an item to the listbox.

bool gslc_ElemXListboxInsertItemAt (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, uint16_t nInsertPos, const char *pStrItem)

Insert an item in the listbox at a specific position.

- bool gslc_ElemXListboxDeleteItemAt (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, uint16_t nDeletePos)

 Insert an item in the listbox at a specific position.
- bool gslc_ElemXListboxGetItem (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nItemCurSel, char *pStrItem, uint8_t nStrItemLen)

Get the indexed listbox item.

int16_t gslc_ElemXListboxGetItemCnt (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get the number of items in the listbox.

gslc_tsElemRef * gslc_ElemXListboxCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_ts

 XListbox *pXData, gslc_tsRect rElem, int16_t nFontId, uint8_t *pBufItems, uint16_t nBufItemsMax, int16_t nItemDefault)

Create a Listbox Element.

bool gslc_ElemXListboxDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

Draw a Listbox element on the screen.

bool gslc_ElemXListboxTouch (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)

Handle touch events to Listbox element.

int16_t gslc_ElemXListboxGetSel (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get a Listbox element's current selection.

• bool gslc_ElemXListboxSetSel (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nltemCurSel)

Set a Listbox element's current selection.

- bool gslc_ElemXListboxSetScrollPos (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, uint16_t nScrollPos)

 Set the Listbox scroll position.

Assign the selection callback function for a Listbox.

Variables

- const char GSLC_PMEM ERRSTR_NULL []
- const char GSLC PMEM ERRSTR PXD NULL []

9.18.1 Macro Definition Documentation

9.18.1.1 XLISTBOX_MAX_STR

```
#define XLISTBOX_MAX_STR
```

9.18.2 Function Documentation

9.18.2.1 gslc_ElemXListboxAddItem()

Add an item to the listbox.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Ptr to Element Reference to update
in	pStrItem	String to use when creating the listbox item

Returns

true if OK, false if fail (eg. insufficient buffer storage)

9.18.2.2 gslc_ElemXListboxCreate()

Create a Listbox Element.

Parameters

in	pGui	Pointer to GUI
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)
in	n Page Page ID to attach element to	

Parameters

in	pXData	Ptr to extended element data structure
in	n rElem Rectangle coordinates defining checkbox size	
in	nFontld	Font ID for item display
in	pBufItems	Pointer to buffer that will contain list of items
in	nBufltemsMax	Max size of buffer for list of items (pBufItems)
in	nSelDefault	Default item to select

Returns

Pointer to Element reference or NULL if failure

9.18.2.3 gslc_ElemXListboxDeleteItemAt()

Insert an item in the listbox at a specific position.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Ptr to Element Reference to update
in	nDeletePos	Position to delete

Returns

true if OK, false if fail

9.18.2.4 gslc_ElemXListboxDraw()

Draw a Listbox element on the screen.

• Called from gslc_ElemDraw()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.18.2.5 gslc_ElemXListboxGetItem()

Get the indexed listbox item.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Ptr to Element Reference to update
in	nItemCurSel	Item index to fetch
out	pStrItem	Ptr to the string buffer to receive the item
in	nStrItemLen	Maximum buffer length of pStrItem

Returns

true if success, false if fail (eg. can't locate item)

9.18.2.6 gslc_ElemXListboxGetItemAddr()

9.18.2.7 gslc_ElemXListboxGetItemCnt()

Get the number of items in the listbox.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Ptr to Element Reference to update

Returns

Number of items

9.18.2.8 gslc_ElemXListboxGetSel()

Get a Listbox element's current selection.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference

Returns

Current Listbox selection (or -1 if none)

9.18.2.9 gslc_ElemXListboxInsertItemAt()

Insert an item in the listbox at a specific position.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Ptr to Element Reference to update
in	nInsertPos	Insertion position
in	pStrItem	String to use when creating the listbox item

Returns

true if OK, false if fail (eg. insufficient buffer storage)

9.18.2.10 gslc_ElemXListboxItemsSetGap()

Configure the gap between listbox items.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Ptr to Element Reference to update
in	nGap	Set the gap between listbox items (0 for none)
in	colGap	Set the color of the gap between listbox items

Returns

none

9.18.2.11 gslc_ElemXListboxItemsSetSize()

Configure the size of the listbox items.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Ptr to Element Reference to update
in	nltemW	Set the width of a listbox item (or -1 to auto-size)
in	nltemH	Set the height of a listbox item

Returns

none

9.18.2.12 gslc_ElemXListboxRecalcSize()

9.18.2.13 gslc_ElemXListboxReset()

Empty the listbox of all items.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Ptr to Element Reference to update

Returns

none

9.18.2.14 gslc_ElemXListboxSetMargin()

Configure the margin inside the listbox.

• Defines the region bewteen the element rect and the inner listbox items

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Ptr to Element Reference to update
in	nMarginW	Set the margin (horizontal) inside the listbox (0 for none)
in	nMarginH	Set the margin (horizontal) inside the listbox (0 for none)

Returns

none

9.18.2.15 gslc_ElemXListboxSetScrollPos()

Set the Listbox scroll position.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nScrollPos	Scroll the listbox so that the nScrollPos item is at the top (0 default)

Returns

true if success, false if fail

9.18.2.16 gslc_ElemXListboxSetSel()

Set a Listbox element's current selection.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nItemCurSel	Listbox item to select (or -1 for none)

Returns

true if success, false if fail

9.18.2.17 gslc_ElemXListboxSetSelFunc()

Assign the selection callback function for a Listbox.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	funcCb	Function pointer to selection routine (or NULL for none)

Returns

none

9.18.2.18 gslc_ElemXListboxSetSize()

Configure the number of rows & columns to display in the listbox.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Ptr to Element Reference to update
in	nRows	Number of rows (>= 1, or XLISTBOX_SIZE_AUTO to base on content)
in	nCols	Number of columns (>= 1)

Returns

none

9.18.2.19 gslc_ElemXListboxTouch()

```
void * pvElemRef,
gslc_teTouch eTouch,
int16_t nRelX,
int16_t nRelY )
```

Handle touch events to Listbox element.

Called from gslc_ElemSendEventTouch()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eTouch	Touch event type
in	nRelX	Touch X coord relative to element
in	nRelY	Touch Y coord relative to element

Returns

true if success, false otherwise

9.18.3 Variable Documentation

9.18.3.1 ERRSTR_NULL


```
const char GSLC_PMEM ERRSTR_NULL[]
```

9.18.3.2 ERRSTR_PXD_NULL


```
const char GSLC_PMEM ERRSTR_PXD_NULL[]
```

9.19 src/elem/XListbox.h File Reference

```
#include "GUIslice.h"
Include dependency graph for XListbox.h:
```

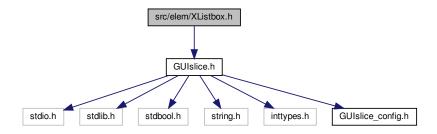

This graph shows which files directly or indirectly include this file:

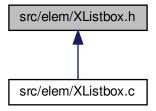

Data Structures

• struct gslc_tsXListbox

Extended data for Listbox element.

Macros

- #define GSLC TYPEX LISTBOX
- #define XLISTBOX SEL NONE
- #define XLISTBOX_SIZE_AUTO
- #define XLISTBOX_BUF_OH_R

Typedefs

typedef bool(* GSLC_CB_XLISTBOX_SEL) (void *pvGui, void *pvElem, int16_t nSel)
 Callback function for Listbox feedback.

Functions

gslc_tsElemRef * gslc_ElemXListboxCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_ts
 XListbox *pXData, gslc_tsRect rElem, int16_t nFontId, uint8_t *pBufItems, uint16_t nBufItemsMax, int16_t nSelDefault)

Create a Listbox Element.

- void gslc_ElemXListboxSetSize (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int8_t nRows, int8_t nCols)

 Configure the number of rows & columns to display in the listbox.
- void gslc_ElemXListboxSetMargin (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int8_t nMarginW, int8_t nMarginH)

Configure the margin inside the listbox.

void gslc_ElemXListboxItemsSetSize (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nItemW, int16

_t nItemH)

Configure the size of the listbox items.

void gslc_ElemXListboxItemsSetGap (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int8_t nGap, gslc_ts↔
 Color colGap)

Configure the gap between listbox items.

- void gslc_ElemXListboxReset (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)
 Empty the listbox of all items.
- bool gslc_ElemXListboxAddItem (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, const char *pStrItem)

 Add an item to the listbox.
- bool gslc_ElemXListboxInsertItemAt (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, uint16_t nInsertPos, const char *pStrItem)

Insert an item in the listbox at a specific position.

- bool gslc_ElemXListboxDeleteItemAt (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, uint16_t nDeletePos)

 Insert an item in the listbox at a specific position.
- bool gslc_ElemXListboxGetItem (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nItemCurSel, char *pStrItem, uint8 t nStrItemLen)

Get the indexed listbox item.

• int16_t gslc_ElemXListboxGetItemCnt (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get the number of items in the listbox.

bool gslc_ElemXListboxDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

Draw a Listbox element on the screen.

bool gslc_ElemXListboxTouch (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)

Handle touch events to Listbox element.

• int16 t gslc ElemXListboxGetSel (gslc tsGui *pGui, gslc tsElemRef *pElemRef)

Get a Listbox element's current selection.

• bool gslc_ElemXListboxSetSel (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nltemCurSel)

Set a Listbox element's current selection.

- bool gslc_ElemXListboxSetScrollPos (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, uint16_t nScrollPos) Set the Listbox scroll position.
- void gslc_ElemXListboxSetSelFunc (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, GSLC_CB_XLISTBO

 X SEL funcCb)

Assign the selection callback function for a Listbox.

9.19.1 Macro Definition Documentation

9.19.1.1 GSLC_TYPEX_LISTBOX

#define GSLC_TYPEX_LISTBOX

9.19.1.2 XLISTBOX_BUF_OH_R

#define XLISTBOX_BUF_OH_R

9.19.1.3 XLISTBOX_SEL_NONE

#define XLISTBOX_SEL_NONE

9.19.1.4 XLISTBOX_SIZE_AUTO

```
#define XLISTBOX_SIZE_AUTO
```

9.19.2 Typedef Documentation

9.19.2.1 GSLC_CB_XLISTBOX_SEL

```
typedef bool(* GSLC_CB_XLISTBOX_SEL) (void *pvGui, void *pvElem, int16_t nSel)
```

Callback function for Listbox feedback.

9.19.3 Function Documentation

9.19.3.1 gslc_ElemXListboxAddItem()

Add an item to the listbox.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Ptr to Element Reference to update
in	pStrItem	String to use when creating the listbox item

Returns

true if OK, false if fail (eg. insufficient buffer storage)

9.19.3.2 gslc_ElemXListboxCreate()

```
gslc_tsXListbox * pXData,
gslc_tsRect rElem,
int16_t nFontId,
uint8_t * pBufItems,
uint16_t nBufItemsMax,
int16_t nSelDefault )
```

Create a Listbox Element.

Parameters

in	pGui	Pointer to GUI
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)
in	nPage	Page ID to attach element to
in	pXData	Ptr to extended element data structure
in	rElem	Rectangle coordinates defining checkbox size
in	nFontId	Font ID for item display
in	pBufItems	Pointer to buffer that will contain list of items
in	nBufltemsMax	Max size of buffer for list of items (pBufItems)
in	nSelDefault	Default item to select

Returns

Pointer to Element reference or NULL if failure

9.19.3.3 gslc_ElemXListboxDeleteItemAt()

Insert an item in the listbox at a specific position.

Parameters

	in	pGui	Pointer to GUI
	in	pElemRef	Ptr to Element Reference to update
ſ	in	nDeletePos	Position to delete

Returns

true if OK, false if fail

9.19.3.4 gslc_ElemXListboxDraw()

Draw a Listbox element on the screen.

• Called from gslc_ElemDraw()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.19.3.5 gslc_ElemXListboxGetItem()

Get the indexed listbox item.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Ptr to Element Reference to update
in	nItemCurSel	Item index to fetch
out	pStrItem	Ptr to the string buffer to receive the item
in	nStrItemLen	Maximum buffer length of pStrItem

Returns

true if success, false if fail (eg. can't locate item)

9.19.3.6 gslc_ElemXListboxGetItemCnt()

Get the number of items in the listbox.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Ptr to Element Reference to update

Returns

Number of items

9.19.3.7 gslc_ElemXListboxGetSel()

Get a Listbox element's current selection.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference

Returns

Current Listbox selection (or -1 if none)

9.19.3.8 gslc_ElemXListboxInsertItemAt()

Insert an item in the listbox at a specific position.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Ptr to Element Reference to update
in	nInsertPos	Insertion position
in	pStrItem	String to use when creating the listbox item

Returns

true if OK, false if fail (eg. insufficient buffer storage)

9.19.3.9 gslc_ElemXListboxItemsSetGap()

Configure the gap between listbox items.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Ptr to Element Reference to update
in	nGap	Set the gap between listbox items (0 for none)
in	colGap	Set the color of the gap between listbox items

Returns

none

9.19.3.10 gslc_ElemXListboxItemsSetSize()

Configure the size of the listbox items.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Ptr to Element Reference to update
in	nltemW	Set the width of a listbox item (or -1 to auto-size)
in	nltemH	Set the height of a listbox item

Returns

none

9.19.3.11 gslc_ElemXListboxReset()

Empty the listbox of all items.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Ptr to Element Reference to update

Returns

none

9.19.3.12 gslc_ElemXListboxSetMargin()

Configure the margin inside the listbox.

• Defines the region bewteen the element rect and the inner listbox items

Parameters

in	pGui	pGui Pointer to GUI	
in	pElemRef Ptr to Element Reference to update		
in	in nMarginW Set the margin (horizontal) inside the listbox (0 for i		
in nMarginH Set the margin (horizontal) inside the listbox (0 fo		Set the margin (horizontal) inside the listbox (0 for none)	

Returns

none

9.19.3.13 gslc_ElemXListboxSetScrollPos()

Set the Listbox scroll position.

Parameters

	in	pGui	Pointer to GUI	
Ī	in	pElemRef	Pointer to Element reference	
in nScrollPos Scroll the listbox so that the nScrollPos item is at the top (0 det				

Returns

true if success, false if fail

9.19.3.14 gslc_ElemXListboxSetSel()

Set a Listbox element's current selection.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nItemCurSel	Listbox item to select (or -1 for none)

Returns

true if success, false if fail

9.19.3.15 gslc_ElemXListboxSetSelFunc()

Assign the selection callback function for a Listbox.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in funcCb Function pointer to se		Function pointer to selection routine (or NULL for none)

Returns

none

9.19.3.16 gslc_ElemXListboxSetSize()

Configure the number of rows & columns to display in the listbox.

Parameters

in	pGui	Pointer to GUI	
in	pElemRef Ptr to Element Reference to update		
in	nRows	Number of rows (>= 1, or XLISTBOX_SIZE_AUTO to base on content)	
in	nCols Number of columns (>= 1)		

Returns

none

9.19.3.17 gslc_ElemXListboxTouch()

Handle touch events to Listbox element.

• Called from gslc_ElemSendEventTouch()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	n pvElemRef Void ptr to Element reference (typecast to gslc_tsElemRef	
in	eTouch	Touch event type
in	nRelX Touch X coord relative to element	
in	nRelY Touch Y coord relative to element	


Returns

true if success, false otherwise

9.20 src/elem/XProgress.c File Reference

```
#include "GUIslice.h"
#include "GUIslice_drv.h"
#include "elem/XProgress.h"
#include <stdio.h>
```

Include dependency graph for XProgress.c:

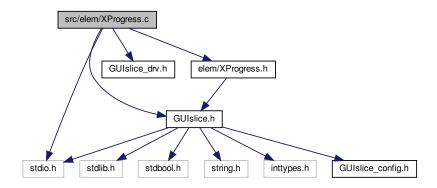

Functions

Create a Progress Bar Element.

- void gslc_ElemXProgressSetVal (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nVal)
 - Update a Gauge element's current value.
- void gslc_ElemXProgressSetFlip (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bFlip)

 Set a Gauge element's fill direction.
- void gslc_ElemXProgressSetGaugeCol (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor col ← Gauge)

Set the gauge color.

- bool gslc_ElemXProgressDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

 Draw a gauge element on the screen.

Helper function to draw a gauge with style: progress bar.

Variables

- const char GSLC_PMEM ERRSTR_NULL []
- const char GSLC_PMEM ERRSTR_PXD_NULL []

9.20.1 Function Documentation

9.20.1.1 gslc_ElemXProgressCreate()

Create a Progress Bar Element.

• Draws a gauge element that represents a proportion (nVal) between nMin and nMax.

Parameters

in	pGui	Pointer to GUI	
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)	
in	nPage	Page ID to attach element to	
in	pXData	Ptr to extended element data structure	
in	rElem	Rectangle coordinates defining gauge size	
in	nMin	Minimum value of gauge for nVal comparison	
in	nMax	Maximum value of gauge for nVal comparison	
in	nVal	Starting value of gauge	
in	colGauge	e Color for the gauge indicator	
in	bVert	Flag to indicate vertical vs horizontal action (true = vertical, false = horizontal)	

Returns

Pointer to Element reference or NULL if failure

9.20.1.2 gslc_ElemXProgressDraw()

Draw a gauge element on the screen.

• Called from gslc_ElemDraw()

Parameters

in	pvGui Void ptr to GUI (typecast to gslc_tsGui*)	
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.20.1.3 gslc_ElemXProgressDrawHelp()

Helper function to draw a gauge with style: progress bar.

• Called from gslc_ElemXProgressDraw()

Parameters

in	pGui	Ptr to GUI
in	pElemRef	Ptr to Element reference
in	eRedraw	Redraw status

Returns

true if success, false otherwise

9.20.1.4 gslc_ElemXProgressSetFlip()

Set a Gauge element's fill direction.

- · Setting bFlip reverses the default fill direction
- · Default fill direction for horizontal gauges: left-to-right
- Default fill direction for vertical gauges: bottom-to-top

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	bFlip	If set, reverse direction of fill from default

Returns

none

9.20.1.5 gslc_ElemXProgressSetGaugeCol()

Set the gauge color.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	colGauge	Color for the gauge's fill

Returns

none

9.20.1.6 gslc_ElemXProgressSetVal()

Update a Gauge element's current value.

• Note that min & max values are assigned in create()

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nVal	New value to show in gauge

Returns

none

9.20.2 Variable Documentation

9.20.2.1 ERRSTR_NULL


```
const char GSLC_PMEM ERRSTR_NULL[]
```

9.20.2.2 ERRSTR_PXD_NULL


```
const char GSLC_PMEM ERRSTR_PXD_NULL[]
```

9.21 src/elem/XProgress.h File Reference

```
#include "GUIslice.h"
Include dependency graph for XProgress.h:
```

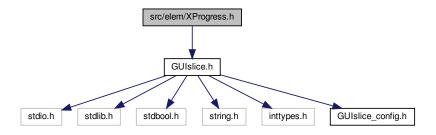

This graph shows which files directly or indirectly include this file:

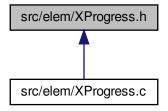

Data Structures

• struct gslc_tsXProgress

Extended data for Gauge element.

Macros

- #define GSLC_TYPEX_PROGRESS
- #define gslc_ElemXProgressCreate_P(pGui, nElemId, nPage, nX, nY, nW, nH, nMin_, nMax_, nVal_, col
 Frame_, colFill_, colGauge_, bVert_)

Create a Gauge Element in Flash.

Functions

 gslc_tsElemRef * gslc_ElemXProgressCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsX← Progress *pXData, gslc_tsRect rElem, int16_t nMin, int16_t nMax, int16_t nVal, gslc_tsColor colGauge, bool bVert)

Create a Progress Bar Element.

- void gslc_ElemXProgressSetVal (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nVal)
 Update a Gauge element's current value.
- void gslc_ElemXProgressSetFlip (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bFlip)

Set a Gauge element's fill direction.

void gslc_ElemXProgressSetGaugeCol (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor col
Gauge)

Set the gauge color.

bool gslc_ElemXProgressDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

Draw a gauge element on the screen.

Helper function to draw a gauge with style: progress bar.

9.21.1 Macro Definition Documentation

9.21.1.1 gslc_ElemXProgressCreate_P

Create a Gauge Element in Flash.

Parameters

in	pGui	Pointer to GUI	
in	nElemId	Unique element ID to assign	
in	nPage	Page ID to attach element to	
in	nΧ	X coordinate of element	
in	nY	Y coordinate of element	
in	nW	Width of element	
in	nH	Height of element	
in	nMin_	Minimum value of gauge for nVal comparison	
in	nMax_	Maximum value of gauge for nVal comparison	
in	nVal_	Starting value of gauge	
in	col⊷	Color for the gauge frame	
	Frame_		
in	colFill_	Color for the gauge background fill	
in	col⊷	Color for the gauge indicator	
	Gauge_		
in	bVert_	Flag to indicate vertical vs horizontal action (true = vertical, false = horizontal)	

Returns

none

9.21.1.2 GSLC_TYPEX_PROGRESS

#define GSLC_TYPEX_PROGRESS

9.21.2 Function Documentation

9.21.2.1 gslc_ElemXProgressCreate()

Create a Progress Bar Element.

• Draws a gauge element that represents a proportion (nVal) between nMin and nMax.

Parameters

in	pGui	Pointer to GUI	
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)	
in	nPage	Page ID to attach element to	
in	pXData	Ptr to extended element data structure	
in	rElem	Rectangle coordinates defining gauge size	
in	nMin	Minimum value of gauge for nVal comparison	
in	nMax	Maximum value of gauge for nVal comparison	
in	nVal	Starting value of gauge	
in	colGauge	e Color for the gauge indicator	
in	bVert	Flag to indicate vertical vs horizontal action (true = vertical, false = horizontal)	

Returns

Pointer to Element reference or NULL if failure

9.21.2.2 gslc_ElemXProgressDraw()

Draw a gauge element on the screen.

• Called from gslc_ElemDraw()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)	
in	n pvElemRef Void ptr to Element reference (typecast to gslc_		
in	eRedraw	Redraw mode	

Returns

true if success, false otherwise

9.21.2.3 gslc_ElemXProgressDrawHelp()

Helper function to draw a gauge with style: progress bar.

• Called from gslc_ElemXProgressDraw()

Parameters

in <i>pGui</i>		Ptr to GUI
in	pElemRef	Ptr to Element reference
in	eRedraw	Redraw status

Returns

true if success, false otherwise

9.21.2.4 gslc_ElemXProgressSetFlip()

Set a Gauge element's fill direction.

- · Setting bFlip reverses the default fill direction
- Default fill direction for horizontal gauges: left-to-right
- Default fill direction for vertical gauges: bottom-to-top

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	bFlip	If set, reverse direction of fill from default

Returns

none

9.21.2.5 gslc_ElemXProgressSetGaugeCol()

Set the gauge color.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	colGauge	Color for the gauge's fill

Returns

none

9.21.2.6 gslc_ElemXProgressSetVal()

Update a Gauge element's current value.

• Note that min & max values are assigned in create()

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in Generat	nVal	New value to show in gauge


Returns

none

9.22 src/elem/XRadial.c File Reference

```
#include "GUIslice.h"
#include "GUIslice_drv.h"
#include "elem/XRadial.h"
#include <stdio.h>
#include <math.h>
```

Include dependency graph for XRadial.c:

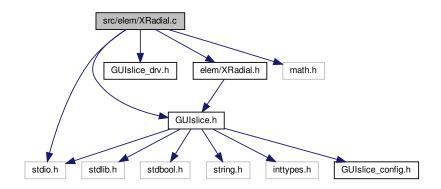

Functions

• gslc_tsElemRef * gslc_ElemXRadialCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsX← Radial *pXData, gslc_tsRect rElem, int16_t nMin, int16_t nMax, int16_t nVal, gslc_tsColor colGauge)

Create a Radial Gauge Element.

• void gslc_ElemXRadialSetIndicator (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colGauge, uint16_t nIndicLen, uint16_t nIndicTip, bool bIndicFill)

Configure the appearance of the Gauge indicator.

 void gslc_ElemXRadialSetTicks (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colTick, uint16_t nTickCnt, uint16_t nTickLen)

Configure the appearance of the Gauge ticks.

- void gslc_ElemXRadialSetVal (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nVal)
 - Update a Gauge element's current value.
- $\bullet \ \ void \ gslc_ElemXRadialSetFlip \ (gslc_tsGui \ *pGui, \ gslc_tsElemRef \ *pElemRef, \ bool \ bFlip)$

Set a Gauge element's rotation direction.

bool gslc_ElemXRadialDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

Draw a gauge element on the screen.

- void gslc_ElemXRadialDrawRadialHelp (gslc_tsGui *pGui, int16_t nX, int16_t nY, uint16_t nArrowLen, uint16_t nArrowSz, int16_t n64Ang, bool bFill, gslc_tsColor colFrame)

Helper function to draw a gauge with style: radial.

Variables

- const char GSLC_PMEM ERRSTR_NULL []
- const char GSLC_PMEM ERRSTR_PXD_NULL []

9.22.1 Function Documentation

9.22.1.1 gslc_ElemXRadialCreate()

```
gslc_tsElemRef* gslc_ElemXRadialCreate (
    gslc_tsGui * pGui,
    int16_t nElemId,
    int16_t nPage,
    gslc_tsXRadial * pXData,
    gslc_tsRect rElem,
    int16_t nMin,
    int16_t nMax,
    int16_t nVal,
    gslc_tsColor colGauge )
```

Create a Radial Gauge Element.

• Draws a gauge element that represents a proportion (nVal) between nMin and nMax.

Parameters

in	pGui	Pointer to GUI
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)
in	nPage	Page ID to attach element to
in	pXData	Ptr to extended element data structure
in	rElem	Rectangle coordinates defining gauge size
in	nMin	Minimum value of gauge for nVal comparison
in	nMax	Maximum value of gauge for nVal comparison
in	nVal	Starting value of gauge
in	colGauge	Color for the gauge indicator

Returns

Pointer to Element reference or NULL if failure

9.22.1.2 gslc_ElemXRadialDraw()

```
void * pvElemRef,
gslc_teRedrawType eRedraw )
```

Draw a gauge element on the screen.

• Called from gslc_ElemDraw()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.22.1.3 gslc_ElemXRadialDrawRadial()

Helper function to draw a gauge with style: radial.

• Called from gslc_ElemXRadialDraw()

Parameters

in	pGui	Ptr to GUI
in	pElemRef	Ptr to Element reference
in	eRedraw	Redraw status

Returns

true if success, false otherwise

9.22.1.4 gslc_ElemXRadialDrawRadialHelp()

```
void gslc_ElemXRadialDrawRadialHelp ( {\tt gslc\_tsGui} \ * \ p{\tt Gui},
```

```
int16_t nX,
int16_t nY,
uint16_t nArrowLen,
uint16_t nArrowSz,
int16_t n64Ang,
bool bFill,
gslc_tsColor colFrame )
```

9.22.1.5 gslc_ElemXRadialSetFlip()

Set a Gauge element's rotation direction.

- · Setting bFlip reverses the rotation direction
- · Default rotation is clockwise. When bFlip is set, uses counter-clockwise

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	bFlip	If set, reverse direction of rotation from default

Returns

none

9.22.1.6 gslc_ElemXRadialSetIndicator()

Configure the appearance of the Gauge indicator.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference

Parameters

in	colGauge	Color of the indicator
in	nIndicLen	Length of the indicator
in	nIndicTip	Size of the indicator tip
in	bIndicFill	Fill in the indicator if true

Returns

none

9.22.1.7 gslc_ElemXRadialSetTicks()

Configure the appearance of the Gauge ticks.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	colTick	Color of the gauge ticks
in	nTickCnt	Number of ticks to draw around / along gauge
in	nTickLen	Length of the tick marks to draw

Returns

none

9.22.1.8 gslc_ElemXRadialSetVal()

Update a Gauge element's current value.

• Note that min & max values are assigned in create()

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nVal	New value to show in gauge

Returns

none

9.22.2 Variable Documentation

9.22.2.1 ERRSTR_NULL


const char GSLC_PMEM ERRSTR_NULL[]

9.22.2.2 ERRSTR_PXD_NULL


const char GSLC_PMEM ERRSTR_PXD_NULL[]

9.23 src/elem/XRadial.h File Reference

#include "GUIslice.h"
Include dependency graph for XRadial.h:

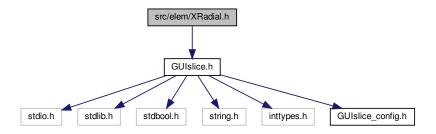

This graph shows which files directly or indirectly include this file:

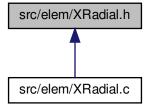

Data Structures

· struct gslc tsXRadial

Extended data for Gauge element.

Macros

- #define GSLC TYPEX RADIAL
- #define gslc_ElemXRadialCreate_P(pGui, nElemId, nPage, nX, nY, nW, nH, nMin_, nMax_, nVal_, col ← Frame_, colFill_, colGauge_)

Create a Gauge Element in Flash.

Functions

 gslc_tsElemRef * gslc_ElemXRadialCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsX← Radial *pXData, gslc_tsRect rElem, int16_t nMin, int16_t nMax, int16_t nVal, gslc_tsColor colGauge)

Create a Radial Gauge Element.

 void gslc_ElemXRadialSetIndicator (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colGauge, uint16_t nIndicLen, uint16_t nIndicTip, bool bIndicFill)

Configure the appearance of the Gauge indicator.

 void gslc_ElemXRadialSetTicks (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colTick, uint16_t nTickCnt, uint16_t nTickLen)

Configure the appearance of the Gauge ticks.

void gslc_ElemXRadialSetVal (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nVal)

Update a Gauge element's current value.

• void gslc_ElemXRadialSetFlip (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bFlip)

Set a Gauge element's rotation direction.

• bool gslc_ElemXRadialDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

Draw a gauge element on the screen.

Helper function to draw a gauge with style: radial.

9.23.1 Macro Definition Documentation

9.23.1.1 gslc_ElemXRadialCreate_P

Create a Gauge Element in Flash.

Parameters

in	pGui	Pointer to GUI	
in	nElemId	Unique element ID to assign	
in	nPage	Page ID to attach element to	
in	nΧ	X coordinate of element	
in	nΥ	Y coordinate of element	
in	nW	Width of element	
in	nΗ	Height of element	
in	nMin_	Minimum value of gauge for nVal comparison	
in	nMax_	Maximum value of gauge for nVal comparison	
in	nVal_	Starting value of gauge	
in	col⊷	Color for the gauge frame	
	Frame_		
in	colFill_	Color for the gauge background fill	
in	col⊷	Color for the gauge indicator	
	Gauge_		

Returns

none

9.23.1.2 GSLC_TYPEX_RADIAL

#define GSLC_TYPEX_RADIAL

9.23.2 Function Documentation

9.23.2.1 gslc_ElemXRadialCreate()

Create a Radial Gauge Element.

• Draws a gauge element that represents a proportion (nVal) between nMin and nMax.

Parameters

in	pGui	Pointer to GUI
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)
in	nPage	Page ID to attach element to
in	pXData	Ptr to extended element data structure
in	rElem	Rectangle coordinates defining gauge size
in	nMin	Minimum value of gauge for nVal comparison
in	nMax	Maximum value of gauge for nVal comparison
in	nVal	Starting value of gauge
in	colGauge	Color for the gauge indicator

Returns

Pointer to Element reference or NULL if failure

9.23.2.2 gslc_ElemXRadialDraw()

Draw a gauge element on the screen.

• Called from gslc_ElemDraw()

Parameters

	in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
	in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
Ī	in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.23.2.3 gslc_ElemXRadialDrawRadial()

Helper function to draw a gauge with style: radial.

• Called from gslc_ElemXRadialDraw()

Parameters

in	pGui	Ptr to GUI
in	pElemRef	Ptr to Element reference
in	eRedraw	Redraw status

Returns

true if success, false otherwise

9.23.2.4 gslc_ElemXRadialSetFlip()

Set a Gauge element's rotation direction.

- · Setting bFlip reverses the rotation direction
- · Default rotation is clockwise. When bFlip is set, uses counter-clockwise

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	bFlip	If set, reverse direction of rotation from default

Returns

none

9.23.2.5 gslc_ElemXRadialSetIndicator()

Configure the appearance of the Gauge indicator.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	colGauge	Color of the indicator
in	nIndicLen	Length of the indicator
in	nIndicTip	Size of the indicator tip
in	bIndicFill	Fill in the indicator if true

Returns

none

9.23.2.6 gslc_ElemXRadialSetTicks()

Configure the appearance of the Gauge ticks.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	colTick	Color of the gauge ticks
in	nTickCnt	Number of ticks to draw around / along gauge
in	nTickLen	Length of the tick marks to draw

Returns

none

9.23.2.7 gslc_ElemXRadialSetVal()

Update a Gauge element's current value.

• Note that min & max values are assigned in create()

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nVal	New value to show in gauge


Returns

none

9.24 src/elem/XRamp.c File Reference

```
#include "GUIslice.h"
#include "GUIslice_drv.h"
#include "elem/XRamp.h"
#include <stdio.h>
```

Include dependency graph for XRamp.c:

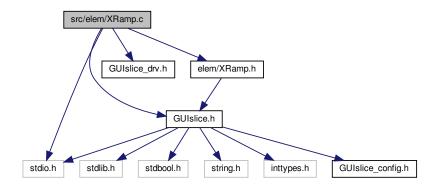

Functions

 gslc_tsElemRef * gslc_ElemXRampCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsX← Ramp *pXData, gslc_tsRect rElem, int16_t nMin, int16_t nMax, int16_t nVal, gslc_tsColor colGauge, bool bVert)

Create a Ramp Gauge Element.

- void gslc_ElemXRampSetVal (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nVal)

 Update a Gauge element's current value.
- bool gslc_ElemXRampDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

 Draw a gauge element on the screen.

Helper function to draw a gauge with style: ramp.

Variables

- const char GSLC_PMEM ERRSTR_NULL []
- const char GSLC_PMEM ERRSTR_PXD_NULL []

9.24.1 Function Documentation

9.24.1.1 gslc_ElemXRampCreate()

```
gslc_tsElemRef* gslc_ElemXRampCreate (
    gslc_tsGui * pGui,
    int16_t nElemId,
    int16_t nPage,
    gslc_tsXRamp * pXData,
    gslc_tsRect rElem,
    int16_t nMin,
```

```
int16_t nMax,
int16_t nVal,
gslc_tsColor colGauge,
bool bVert )
```

Create a Ramp Gauge Element.

• Draws a gauge element that represents a proportion (nVal) between nMin and nMax.

Parameters

in	pGui	Pointer to GUI
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)
in	nPage	Page ID to attach element to
in	pXData	Ptr to extended element data structure
in	rElem	Rectangle coordinates defining gauge size
in	nMin	Minimum value of gauge for nVal comparison
in	nMax	Maximum value of gauge for nVal comparison
in	nVal	Starting value of gauge
in	colGauge	Color for the gauge indicator
in	bVert	Flag to indicate vertical vs horizontal action (true = vertical, false = horizontal)

Returns

Pointer to Element reference or NULL if failure

9.24.1.2 gslc_ElemXRampDraw()

Draw a gauge element on the screen.

• Called from gslc_ElemDraw()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.24.1.3 gslc_ElemXRampDrawHelp()

Helper function to draw a gauge with style: ramp.

• Called from gslc_ElemXRampDraw()

Parameters

in	pGui	Ptr to GUI
in	pElemRef	Ptr to Element reference
in	eRedraw	Redraw status

Returns

true if success, false otherwise

9.24.1.4 gslc_ElemXRampSetVal()

Update a Gauge element's current value.

• Note that min & max values are assigned in create()

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nVal	New value to show in gauge

Returns

none

9.24.2 Variable Documentation

9.24.2.1 ERRSTR_NULL


```
const char GSLC_PMEM ERRSTR_NULL[]
```

9.24.2.2 ERRSTR_PXD_NULL


```
const char GSLC_PMEM ERRSTR_PXD_NULL[]
```

9.25 src/elem/XRamp.h File Reference

#include "GUIslice.h"
Include dependency graph for XRamp.h:

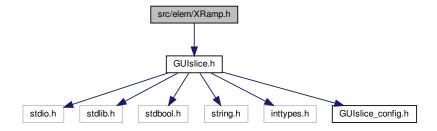

This graph shows which files directly or indirectly include this file:

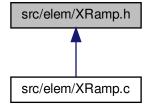

Data Structures

struct gslc_tsXRamp

Extended data for Gauge element.

Macros

- #define GSLC_TYPEX_RAMP
- #define gslc_ElemXRampCreate_P(pGui, nElemId, nPage, nX, nY, nW, nH, nMin_, nMax_, nVal_, col
 Frame_, colFill_)

Create a Gauge Element in Flash.

Functions

 gslc_tsElemRef * gslc_ElemXRampCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsX← Ramp *pXData, gslc_tsRect rElem, int16_t nMin, int16_t nMax, int16_t nVal, gslc_tsColor colGauge, bool bVert)

Create a Ramp Gauge Element.

- $\bullet \ \ void \ gslc_ElemXRampSetVal \ (gslc_tsGui \ *pGui, \ gslc_tsElemRef \ *pElemRef, \ int 16_t \ nVal) \\$
 - Update a Gauge element's current value.
- bool gslc_ElemXRampDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

Draw a gauge element on the screen.

Helper function to draw a gauge with style: ramp.

9.25.1 Macro Definition Documentation

9.25.1.1 gslc_ElemXRampCreate_P

Create a Gauge Element in Flash.

Parameters

in	pGui	Pointer to GUI
in	nElemId	Unique element ID to assign
in	nPage	Page ID to attach element to
in	nΧ	X coordinate of element
in	nΥ	Y coordinate of element
in	nW	Width of element
in	nΗ	Height of element
in	nMin_	Minimum value of gauge for nVal comparison
in	nMax_	Maximum value of gauge for nVal comparison
in	nVal_	Starting value of gauge
in	col⊷	Color for the gauge frame
	Frame_	
in	colFill_	Color for the gauge background fill

Returns

none

9.25.1.2 GSLC_TYPEX_RAMP

```
#define GSLC_TYPEX_RAMP
```

9.25.2 Function Documentation

9.25.2.1 gslc_ElemXRampCreate()

Create a Ramp Gauge Element.

• Draws a gauge element that represents a proportion (nVal) between nMin and nMax.

Parameters

in	pGui	Pointer to GUI	
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)	
in	nPage	Page ID to attach element to	
in	pXData	Ptr to extended element data structure	
in	rElem	Rectangle coordinates defining gauge size	
in	nMin	Minimum value of gauge for nVal comparison	
in	nMax	Maximum value of gauge for nVal comparison	
in	nVal	Starting value of gauge	
in	colGauge	Color for the gauge indicator	
in	bVert	Flag to indicate vertical vs horizontal action (true = vertical, false = horizontal)	

Returns

Pointer to Element reference or NULL if failure

9.25.2.2 gslc_ElemXRampDraw()

Draw a gauge element on the screen.

• Called from gslc_ElemDraw()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.25.2.3 gslc_ElemXRampDrawHelp()

```
bool gslc_ElemXRampDrawHelp ( {\tt gslc\_tsGui} \ * \ p{\tt Gui},
```

```
gslc_tsElemRef * pElemRef,
gslc_teRedrawType eRedraw )
```

Helper function to draw a gauge with style: ramp.

• Called from gslc_ElemXRampDraw()

Parameters

l	in	pGui	Ptr to GUI
ſ	in	pElemRef	Ptr to Element reference
ſ	in	eRedraw	Redraw status

Returns

true if success, false otherwise

9.25.2.4 gslc_ElemXRampSetVal()

Update a Gauge element's current value.

· Note that min & max values are assigned in create()

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nVal	New value to show in gauge

Returns


none

9.26 src/elem/XRingGauge.c File Reference

```
#include "GUIslice.h"
#include "GUIslice_drv.h"
#include "elem/XRingGauge.h"
```

#include <stdio.h>

Include dependency graph for XRingGauge.c:

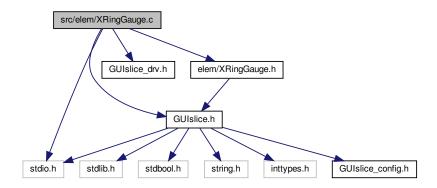

Functions

- gslc_tsElemRef * gslc_ElemXRingGaugeCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_
 tsXRingGauge *pXData, gslc_tsRect rElem, char *pStrBuf, uint8_t nStrBufMax, int16_t nFontId)
 - Create an XRingGauge element.
- bool gslc_ElemXRingGaugeDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

 Draw the template element on the screen.
- void gslc_ElemXRingGaugeSetVal (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nVal)
 Set an Ring Gauge current indicator value.
- void gslc_ElemXRingGaugeSetValRange (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nValMin, int16 t nValMax)
 - Defines the range of values that may be passed into SetVal(), used to scale the input to SetVal().
- void gslc_ElemXRingGaugeSetAngleRange (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nStart, int16_t nRange, bool bClockwise)
 - Defines the angular range of the gauge, including both the active and inactive regions.
- void gslc_ElemXRingGaugeSetThickness (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int8_t nThickness)

 Defines the thickness of the ring arcs.
- void gslc_ElemXRingGaugeSetColorActiveFlat (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colActive)
 - Defines the color of the active region to be a flat (constant) color.
- void gslc_ElemXRingGaugeSetColorActiveGradient (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_
 tsColor colStart, gslc_tsColor colEnd)
 - Defines the color of the active region to be a gradient using two color stops.
- void gslc_ElemXRingGaugeSetColorInactive (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colInactive)
 - Defines the color of the inactive region to be a flat (constant) color.
- void gslc_ElemXRingGaugeSetQuality (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, uint16_t nSegments)

 Sets the quality of the ring drawing by defining the number of segments that are used when rendering a 360 degree gauge. The larger the number, the more segments are used and the smoother the curve.

Variables

- const char GSLC_PMEM ERRSTR_NULL []
- const char GSLC_PMEM ERRSTR_PXD_NULL[]

9.26.1 Function Documentation

9.26.1.1 gslc_ElemXRingGaugeCreate()

Create an XRingGauge element.

Parameters

in	pGui	Pointer to GUI	
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)	
in	nPage	Page ID to attach element to	
in	pXData	Ptr to extended element data structure	
in	rElem	The square box that bounds the ring element. If a rectangular region is provided, then the ring control will be centered in the long axis.	
in	pStrBuf	String buffer to use for gauge inner text	
in	nStrBufMax	Maximum length of string buffer (pStrBuf)	
in	nFontld	Font ID to use for text display	

Returns

Pointer to Element reference or NULL if failure

9.26.1.2 gslc_ElemXRingGaugeDraw()

Draw the template element on the screen.

• Called from gslc_ElemDraw()

Parameters

	in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
	in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
Ī	in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.26.1.3 gslc_ElemXRingGaugeSetAngleRange()

Defines the angular range of the gauge, including both the active and inactive regions.

- nStart defines the angle at the beginning of the active region.
- The current position marks the end of the active region and the beginning of the inactive region.
- nRange defines the angular range from the start of the active region to the end of the inactive region. In most cases, a range of 360 degrees is used.
- All angles are measured in units of degrees.
- Angles are measured with 0 at the top, 90 towards the right, 180 towards the bottom, 270 towards the left, etc.

Parameters

in	pGui	Pointer to GUI	
in	pElemRef	Pointer to Element reference	
in	nStart	Define angle of start of active region (measured in degrees)	
in	nRange	Define angular range from strt of active region to end of the inactive region (measured in degrees)	
in	bClockwise	Defines the direction in which the active region grows (true for clockwise) [FORCED TRUE, FOR FUTURE IMPLEMENTATION]	

Returns

9.26.1.4 gslc_ElemXRingGaugeSetColorActiveFlat()

Defines the color of the active region to be a flat (constant) color.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	colActive	Color of active region

Returns

none

9.26.1.5 gslc_ElemXRingGaugeSetColorActiveGradient()

Defines the color of the active region to be a gradient using two color stops.

The active region will be filled according to the proportion between nMin and nMax. The gradient is defined by a linear RGB blend between the two color stops(colStart and colEnd)

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	colStart	Starting color of gradient fill
in	colEnd	Ending color of gradient fill

Returns

none

9.26.1.6 gslc_ElemXRingGaugeSetColorInactive()

```
void gslc_ElemXRingGaugeSetColorInactive ( {\tt gslc\_tsGui*pGui,}
```

```
gslc_tsElemRef * pElemRef,
gslc_tsColor colInactive )
```

Defines the color of the inactive region to be a flat (constant) color.

The inactive color is often set to be the same as the background but it can be set to a different color to indicate the remainder of the value range that is yet to be filled.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	collnactive	Color of inactive region

Returns

none

9.26.1.7 gslc_ElemXRingGaugeSetQuality()

Sets the quality of the ring drawing by defining the number of segments that are used when rendering a 360 degree gauge. The larger the number, the more segments are used and the smoother the curve.

A larger ring gauge may need a higher quality number to maintain a smoothed curve appearance.

Parameters

in	pGui	Pointer to GUI	
in	pElemRef	emRef Pointer to Element reference	
in	nSegments	Number of arc segments to render a complete circle. The higher the value, the smoother the ring. Note that 360/nSegments should be an integer result, thus the allowable quality settings are: 360 (max quality), 180, 120, 90, 72, 60, 45, 40, 36 (low quality), etc.	

Returns

none

9.26.1.8 gslc_ElemXRingGaugeSetThickness()

```
gslc_tsElemRef * pElemRef,
int8_t nThickness )
```

Defines the thickness of the ring arcs.

More specifically, it defines the reduction in radius from the outer radius to the inner radius in pixels.

· Default thickness is 10 pixels

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nThickness	Thickness of ring

Returns

none

9.26.1.9 gslc_ElemXRingGaugeSetVal()

Set an Ring Gauge current indicator value.

Updates the current value of the ring gauge. The active region will be drawn up to the position defined by nVal within the value range defined by SetValRange(nMin,nMax). A SetVal() close to nMin will cause a very small active region to be drawn and a large remainder drawn in the inactive color, whereas a SetVal() close to nMax will cause a more complete active region to be drawn. When SetVal() equals nMax, the entire angular range will be drawn in the active color (and no inactive region).

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nVal	New position value

Returns

9.26.1.10 gslc_ElemXRingGaugeSetValRange()

Defines the range of values that may be passed into SetVal(), used to scale the input to SetVal().

• Default is 0..100.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nValMin	Minimum value
in	nValMax	Maximum value

Returns

none

9.26.2 Variable Documentation

9.26.2.1 ERRSTR_NULL


```
const char GSLC_PMEM ERRSTR_NULL[]
```

9.26.2.2 ERRSTR_PXD_NULL


```
{\tt const\ char\ GSLC\_PMEM\ ERRSTR\_PXD\_NULL[\ ]}
```

9.27 src/elem/XRingGauge.h File Reference

#include "GUIslice.h"
Include dependency graph for XRingGauge.h:

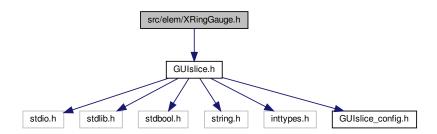

This graph shows which files directly or indirectly include this file:

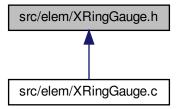

Data Structures

• struct gslc_tsXRingGauge

Extended data for XRingGauge element.

Macros

- #define GSLC_TYPEX_RING
- #define XRING_STR_MAX

Functions

- gslc_tsElemRef * gslc_ElemXRingGaugeCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_
 tsXRingGauge *pXData, gslc_tsRect rElem, char *pStrBuf, uint8_t nStrBufMax, int16_t nFontId)
 - Create an XRingGauge element.
- bool gslc_ElemXRingGaugeDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

Draw the template element on the screen.

• void gslc_ElemXRingGaugeSetVal (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nVal)

Set an Ring Gauge current indicator value.

• void gslc_ElemXRingGaugeSetAngleRange (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nStart, int16_t nRange, bool bClockwise)

Defines the angular range of the gauge, including both the active and inactive regions.

void gslc_ElemXRingGaugeSetValRange (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nValMin, int16 t nValMax)

Defines the range of values that may be passed into SetVal(), used to scale the input to SetVal().

- void gslc_ElemXRingGaugeSetThickness (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int8_t nThickness)

 Defines the thickness of the ring arcs.
- void gslc_ElemXRingGaugeSetQuality (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, uint16_t nSegments)

 Sets the quality of the ring drawing by defining the number of segments that are used when rendering a 360 degree gauge. The larger the number, the more segments are used and the smoother the curve.
- void gslc_ElemXRingGaugeSetColorInactive (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colInactive)

Defines the color of the inactive region to be a flat (constant) color.

void gslc_ElemXRingGaugeSetColorActiveFlat (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colActive)

Defines the color of the active region to be a flat (constant) color.

void gslc_ElemXRingGaugeSetColorActiveGradient (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_
tsColor colStart, gslc_tsColor colEnd)

Defines the color of the active region to be a gradient using two color stops.

9.27.1 Macro Definition Documentation

9.27.1.1 GSLC_TYPEX_RING

```
#define GSLC_TYPEX_RING
```

9.27.1.2 XRING_STR_MAX

#define XRING_STR_MAX

9.27.2 Function Documentation

9.27.2.1 gslc_ElemXRingGaugeCreate()

Create an XRingGauge element.

Parameters

in	pGui	Pointer to GUI	
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)	
in	nPage	Page ID to attach element to	
in	pXData	Ptr to extended element data structure	
in	rElem	The square box that bounds the ring element. If a rectangular region is provided, then the ring control will be centered in the long axis.	
in	pStrBuf	String buffer to use for gauge inner text	
in	nStrBufMax	Max Maximum length of string buffer (pStrBuf)	
in	nFontId Font ID to use for text display		

Returns

Pointer to Element reference or NULL if failure

9.27.2.2 gslc_ElemXRingGaugeDraw()

Draw the template element on the screen.

• Called from gslc_ElemDraw()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)	
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)	
in	eRedraw	Redraw mode	

Returns

true if success, false otherwise

9.27.2.3 gslc_ElemXRingGaugeSetAngleRange()

```
int16_t nRange,
bool bClockwise )
```

Defines the angular range of the gauge, including both the active and inactive regions.

- nStart defines the angle at the beginning of the active region.
- The current position marks the end of the active region and the beginning of the inactive region.
- nRange defines the angular range from the start of the active region to the end of the inactive region. In most cases, a range of 360 degrees is used.
- · All angles are measured in units of degrees.
- Angles are measured with 0 at the top, 90 towards the right, 180 towards the bottom, 270 towards the left, etc.

Parameters

in	pGui	Pointer to GUI	
in	pElemRef	Pointer to Element reference	
in	nStart	Define angle of start of active region (measured in degrees)	
in	nRange	Define angular range from strt of active region to end of the inactive region (measured in degrees)	
in	bClockwise	Defines the direction in which the active region grows (true for clockwise) [FORCED TRUE, FOR FUTURE IMPLEMENTATION]	

Returns

none

9.27.2.4 gslc_ElemXRingGaugeSetColorActiveFlat()

Defines the color of the active region to be a flat (constant) color.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	colActive	Color of active region

Returns

9.27.2.5 gslc_ElemXRingGaugeSetColorActiveGradient()

Defines the color of the active region to be a gradient using two color stops.

The active region will be filled according to the proportion between nMin and nMax. The gradient is defined by a linear RGB blend between the two color stops(colStart and colEnd)

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	colStart	Starting color of gradient fill
in	colEnd	Ending color of gradient fill

Returns

none

9.27.2.6 gslc_ElemXRingGaugeSetColorInactive()

Defines the color of the inactive region to be a flat (constant) color.

The inactive color is often set to be the same as the background but it can be set to a different color to indicate the remainder of the value range that is yet to be filled.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	collnactive	Color of inactive region

Returns

9.27.2.7 gslc_ElemXRingGaugeSetQuality()

Sets the quality of the ring drawing by defining the number of segments that are used when rendering a 360 degree gauge. The larger the number, the more segments are used and the smoother the curve.

A larger ring gauge may need a higher quality number to maintain a smoothed curve appearance.

Parameters

in	pGui	Pointer to GUI	
in	pElemRef	Pointer to Element reference	
in	nSegments	Number of arc segments to render a complete circle. The higher the value, the smoother the ring. Note that 360/nSegments should be an integer result, thus the allowable quality settings are: 360 (max quality), 180, 120, 90, 72, 60, 45, 40, 36 (low quality), etc.	

Returns

none

9.27.2.8 gslc_ElemXRingGaugeSetThickness()

Defines the thickness of the ring arcs.

More specifically, it defines the reduction in radius from the outer radius to the inner radius in pixels.

· Default thickness is 10 pixels

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nThickness	Thickness of ring

Returns

9.27.2.9 gslc_ElemXRingGaugeSetVal()

Set an Ring Gauge current indicator value.

Updates the current value of the ring gauge. The active region will be drawn up to the position defined by nVal within the value range defined by SetValRange(nMin,nMax). A SetVal() close to nMin will cause a very small active region to be drawn and a large remainder drawn in the inactive color, whereas a SetVal() close to nMax will cause a more complete active region to be drawn. When SetVal() equals nMax, the entire angular range will be drawn in the active color (and no inactive region).

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nVal	New position value

Returns

none

9.27.2.10 gslc_ElemXRingGaugeSetValRange()

Defines the range of values that may be passed into SetVal(), used to scale the input to SetVal().

• Default is 0..100.

Parameters


in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nValMin	Minimum value
in	nValMax	Maximum value

Returns

9.28 src/elem/XSeekbar.c File Reference

```
#include "GUIslice.h"
#include "GUIslice_drv.h"
#include "elem/XSeekbar.h"
#include <stdio.h>
```

Include dependency graph for XSeekbar.c:

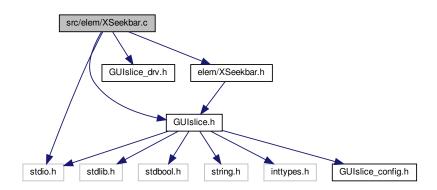

Functions

 gslc_tsElemRef * gslc_ElemXSeekbarCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsX← Seekbar *pXData, gslc_tsRect rElem, int16_t nPosMin, int16_t nPosMax, int16_t nPos, uint8_t nProgressW, uint8_t nRemainW, uint8_t nThumbSz, gslc_tsColor colProgress, gslc_tsColor colRemain, gslc_tsColor col← Thumb, bool bVert)

Create a Seekbar Element.

void gslc_ElemXSeekbarSetStyle (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bTrimThumb, gslc_tsColor colTrim, bool bFrameThumb, gslc_tsColor colFrame, uint16_t nTickDiv, int16_t nTickLen, gslc_tsColor colTick)

Set a Seekbar element's style, this includes thumb customizations and tick marks.

• int gslc_ElemXSeekbarGetPos (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get a Seekbar element's current position.

- void gslc_ElemXSeekbarSetPos (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nPos)
 - Set a Seekbar element's current position.
- void gslc_ElemXSeekbarSetPosFunc (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, GSLC_CB_XSEEK
 BAR POS funcCb)

Assign the position callback function for a slider.

- bool gslc_ElemXSeekbarDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)
 - Draw a Seekbar element on the screen.
- bool gslc_ElemXSeekbarTouch (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16

 _t nRelY)

Handle touch events to Seekbar element.

Variables

- const char GSLC_PMEM ERRSTR_NULL []
- const char GSLC_PMEM ERRSTR_PXD_NULL []

9.28.1 Function Documentation

9.28.1.1 gslc_ElemXSeekbarCreate()

```
gslc_tsElemRef* gslc_ElemXSeekbarCreate (
            gslc_tsGui * pGui,
             int16_t nElemId,
             int16_t nPage,
             gslc_tsXSeekbar * pXData,
             gslc_tsRect rElem,
             int16_t nPosMin,
             int16_t nPosMax,
             int16_t nPos,
             uint8_t nProgressW,
             uint8_t nRemainW,
             uint8_t nThumbSz,
             gslc_tsColor colProgress,
             gslc_tsColor colRemain,
             gslc_tsColor colThumb,
             bool bVert )
```

Create a Seekbar Element.

Parameters

in	pGui	Pointer to GUI
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)
in	nPage	Page ID to attach element to
in	pXData	Ptr to extended element data structure
in	rElem	Rectangle coordinates defining checkbox size
in	nPosMin	Minimum position value
in	nPosMax	Maximum position value
in	nPos	Starting position value
in	nProgressW	Width of progress track
in	nRemainW	Width of remaining track
in	nThumbSz	Size of the thumb control
in	colProgress	Color of progress fill bar
in	colRemain	Color remaining fill bar
in	colThumb	Color for the thumb indicator
in	bVert	Orientation (true for vertical)

Returns

Pointer to Element reference or NULL if failure

9.28.1.2 gslc_ElemXSeekbarDraw()

Draw a Seekbar element on the screen.

• Called from gslc_ElemDraw()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.28.1.3 gslc_ElemXSeekbarGetPos()

Get a Seekbar element's current position.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference

Returns

Current slider position

9.28.1.4 gslc_ElemXSeekbarSetPos()

Set a Seekbar element's current position.

Parameters

in	pGui	Pointer to GUI
in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nPos	New position value

Returns

none

9.28.1.5 gslc_ElemXSeekbarSetPosFunc()

Assign the position callback function for a slider.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	funcCb	Function pointer to position routine (or NULL for none)

Returns

none

9.28.1.6 gslc_ElemXSeekbarSetStyle()

Set a Seekbar element's style, this includes thumb customizations and tick marks.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	bTrimThumb	Show a colored trim for thumb?
in	colTrim	Color of thumb trim
in	bFrameThumb	Show a frame around thumb?
in	colFrame	Color of thumb frame
in	nTickDiv	Number of tick divisions to show (0 for none)
in	nTickLen	Length of tick marks
in	colTick	Color of ticks

Returns

none

9.28.1.7 gslc_ElemXSeekbarTouch()

Handle touch events to Seekbar element.

• Called from gslc_ElemSendEventTouch()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eTouch	Touch event type
in	nRelX	Touch X coord relative to element
in	nRelY	Touch Y coord relative to element

Returns

true if success, false otherwise

9.28.2 Variable Documentation

9.28.2.1 ERRSTR_NULL


const char GSLC_PMEM ERRSTR_NULL[]

9.28.2.2 ERRSTR_PXD_NULL


const char GSLC_PMEM ERRSTR_PXD_NULL[]

9.29 src/elem/XSeekbar.h File Reference

#include "GUIslice.h"
Include dependency graph for XSeekbar.h:

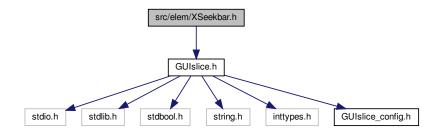

This graph shows which files directly or indirectly include this file:

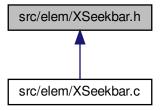

Data Structures

• struct gslc_tsXSeekbar

Extended data for Seekbar element.

Macros

- #define GSLC TYPEX SEEKBAR
- #define gslc_ElemXSeekbarCreate_P(pGui, nElemId, nPage, nX, nY, nW, nH, nPosMin_, nPosMax_, nPos
 , nProgressW, nRemainW_, nThumbSz_, colProgress_, colRemain_, colThumb_, bVert_, colFrame_
 , colFill)

Create a Seekbar Element in Flash.

Typedefs

• typedef bool(* GSLC CB XSEEKBAR POS) (void *pvGui, void *pvElem, int16 t nPos)

Callback function for slider feedback.

Functions

 gslc_tsElemRef * gslc_ElemXSeekbarCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsX← Seekbar *pXData, gslc_tsRect rElem, int16_t nPosMin, int16_t nPosMax, int16_t nPos, uint8_t nProgressW, uint8_t nRemainW, uint8_t nThumbSz, gslc_tsColor colProgress, gslc_tsColor colRemain, gslc_tsColor col← Thumb, bool bVert)

Create a Seekbar Element.

void gslc_ElemXSeekbarSetStyle (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bTrimThumb, gslc_
tsColor colTrim, bool bFrameThumb, gslc_tsColor colFrame, uint16_t nTickDiv, int16_t nTickLen, gslc_tsColor
colTick)

Set a Seekbar element's style, this includes thumb customizations and tick marks.

int gslc_ElemXSeekbarGetPos (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get a Seekbar element's current position.

void gslc_ElemXSeekbarSetPos (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nPos)

Set a Seekbar element's current position.

void gslc_ElemXSeekbarSetPosFunc (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, GSLC_CB_XSEEK←
 BAR POS funcCb)

Assign the position callback function for a slider.

bool gslc_ElemXSeekbarDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

Draw a Seekbar element on the screen.

bool gslc_ElemXSeekbarTouch (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16

_t nRelY)

Handle touch events to Seekbar element.

9.29.1 Macro Definition Documentation

9.29.1.1 gslc_ElemXSeekbarCreate_P

```
#define gslc_ElemXSeekbarCreate_P(
             pGui,
              nElemId,
              nPage,
              nX,
              nY,
              nW,
              nH,
              nPosMin_,
              nPosMax_,
              nPos_,
              nProgressW_,
              nRemainW_{-},
              nThumbSz_{-},
              colProgress_,
              colRemain_,
              colThumb_,
              bVert_,
              colFrame_,
              colFill_ )
```

Create a Seekbar Element in Flash.

Parameters

in	pGui	Pointer to GUI
in	nElemId	Unique element ID to assign
in	nPage	Page ID to attach element to
in	nX	X coordinate of element
in	nY	Y coordinate of element
in	nW	Width of element
in	nH	Height of element
in	nPosMin_	Minimum position value
in	nPosMax_	Maximum position value
in	nPos_	Starting position value
in	nProgress↔ W_	Width of progress track
in	nRemainW↔ _	Width of remaining track
in	nThumbSz⊷ _	Size of the thumb control
in	col← Progress_	Color of progress fill bar
in	colRemain⊷	Color remaining fill bar
in	colThumb	Color for the thumb indicator
in	bVert_	Orientation (true for vertical)
in	colFrame_	Color of the element frame
in	colFill_	Color of the element fill

Returns

none

9.29.1.2 GSLC_TYPEX_SEEKBAR

```
#define GSLC_TYPEX_SEEKBAR
```

9.29.2 Typedef Documentation

9.29.2.1 GSLC_CB_XSEEKBAR_POS

```
typedef bool(* GSLC_CB_XSEEKBAR_POS) (void *pvGui, void *pvElem, int16_t nPos)
```

Callback function for slider feedback.

9.29.3 Function Documentation

9.29.3.1 gslc_ElemXSeekbarCreate()

```
gslc_tsElemRef* gslc_ElemXSeekbarCreate (
            gslc_tsGui * pGui,
             int16_t nElemId,
             int16_t nPage,
             gslc_tsXSeekbar * pXData,
             gslc_tsRect rElem,
             int16_t nPosMin,
             int16_t nPosMax,
             int16_t nPos,
             uint8_t nProgressW,
             uint8_t nRemainW,
             uint8_t nThumbSz,
             gslc_tsColor colProgress,
             gslc_tsColor colRemain,
             gslc_tsColor colThumb,
             bool bVert )
```

Create a Seekbar Element.

Parameters

i	n	pGui	Pointer to GUI
i	.n	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)

Parameters

in	nPage	Page ID to attach element to
in	pXData	Ptr to extended element data structure
in	rElem	Rectangle coordinates defining checkbox size
in	nPosMin	Minimum position value
in	nPosMax	Maximum position value
in	nPos	Starting position value
in	nProgressW	Width of progress track
in	nRemainW	Width of remaining track
in	nThumbSz	Size of the thumb control
in	colProgress	Color of progress fill bar
in	colRemain	Color remaining fill bar
in	colThumb	Color for the thumb indicator
in	bVert	Orientation (true for vertical)

Returns

Pointer to Element reference or NULL if failure

9.29.3.2 gslc_ElemXSeekbarDraw()

Draw a Seekbar element on the screen.

• Called from gslc_ElemDraw()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.29.3.3 gslc_ElemXSeekbarGetPos()

Get a Seekbar element's current position.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference

Returns

Current slider position

9.29.3.4 gslc_ElemXSeekbarSetPos()

Set a Seekbar element's current position.

Parameters

in	pGui	Pointer to GUI
in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nPos	New position value

Returns

none

9.29.3.5 gslc_ElemXSeekbarSetPosFunc()

Assign the position callback function for a slider.

Parameters

ir	pGui	Pointer to GUI
ir	pElemRef	Pointer to Element reference
ir	funcCb	Function pointer to position routine (or NULL for none)

Returns

none

9.29.3.6 gslc_ElemXSeekbarSetStyle()

Set a Seekbar element's style, this includes thumb customizations and tick marks.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	bTrimThumb	Show a colored trim for thumb?
in	colTrim	Color of thumb trim
in	bFrameThumb	Show a frame around thumb?
in	colFrame	Color of thumb frame
in	nTickDiv	Number of tick divisions to show (0 for none)
in	nTickLen	Length of tick marks
in	colTick	Color of ticks

Returns

none

9.29.3.7 gslc_ElemXSeekbarTouch()

```
bool gslc_ElemXSeekbarTouch ( \label{eq:condition} \mbox{void} \ * \ pvGui,
```

```
void * pvElemRef,
gslc_teTouch eTouch,
int16_t nRelX,
int16_t nRelY )
```

Handle touch events to Seekbar element.

Called from gslc_ElemSendEventTouch()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eTouch	Touch event type
in	nRelX	Touch X coord relative to element
in	nRelY	Touch Y coord relative to element


Returns

true if success, false otherwise

9.30 src/elem/XSelNum.c File Reference

```
#include "GUIslice.h"
#include "GUIslice_drv.h"
#include "elem/XSelNum.h"
#include <stdio.h>
```

Include dependency graph for XSelNum.c:

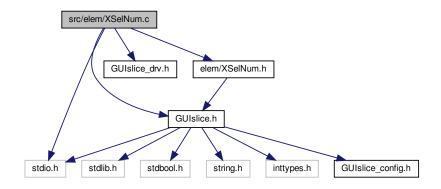

Functions

gslc_tsElemRef * gslc_ElemXSelNumCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsX←
 SelNum *pXData, gslc_tsRect rElem, int8_t nFontId)

Create a SelNum Element.

• bool gslc_ElemXSelNumDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

Draw a SelNum element on the screen.

- $\bullet \ \ int \ gslc_ElemXSelNumGetCounter \ (gslc_tsGui \ *pGui, \ gslc_tsXSelNum \ *pSelNum)\\$
 - Get the current counter associated with SelNum.
- void gslc_ElemXSelNumSetCounter (gslc_tsGui *pGui, gslc_tsXSelNum *pSelNum, int16_t nCount)
 Set the current counter associated with SelNum.
- bool gslc_ElemXSelNumClick (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nX, int16_t nY)

 Handle a click event within the SelNum.
- bool gslc_ElemXSelNumTouch (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)

Handle touch (up,down,move) events to SelNum element.

Variables

- const char GSLC_PMEM ERRSTR_NULL []
- const char GSLC_PMEM ERRSTR_PXD_NULL []
- static const int16_t SELNUM_ID_BTN_INC
- static const int16_t SELNUM_ID_BTN_DEC
- static const int16_t SELNUM_ID_TXT

9.30.1 Function Documentation

9.30.1.1 gslc_ElemXSelNumClick()

Handle a click event within the SelNum.

· This is called internally by the SelNum touch handler

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eTouch	Touch event type
in	nΧ	Touch X coord
in	nΥ	Touch Y coord

Returns

none

9.30.1.2 gslc_ElemXSelNumCreate()

```
gslc_tsElemRef* gslc_ElemXSelNumCreate (
    gslc_tsGui * pGui,
    int16_t nElemId,
    int16_t nPage,
    gslc_tsXSelNum * pXData,
    gslc_tsRect rElem,
    int8_t nFontId )
```

Create a SelNum Element.

Parameters

in	pGui	Pointer to GUI
in	n⊷	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)
	ElemId	
in	nPage	Page ID to attach element to
in	pXData	Ptr to extended element data structure
in	rElem	Rectangle coordinates defining element size
in	nFontId	Font ID to use for drawing the element

Returns

Pointer to Element or NULL if failure

9.30.1.3 gslc_ElemXSelNumDraw()

Draw a SelNum element on the screen.

· Called during redraw

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.30.1.4 gslc_ElemXSelNumGetCounter()

Get the current counter associated with SelNum.

Parameters

in	pGui	Ptr to GUI
in	pSelNum	Ptr to Element

Returns

Current counter value

9.30.1.5 gslc_ElemXSelNumSetCounter()

Set the current counter associated with SelNum.

Parameters

in	pGui	Pointer to GUI
in	pSelNum	Ptr to Element
in	nCount	New counter value

Returns

none

9.30.1.6 gslc_ElemXSelNumTouch()

```
bool gslc_ElemXSelNumTouch ( void * pvGui,
```

```
void * pvElemRef,
gslc_teTouch eTouch,
int16_t nRelX,
int16_t nRelY )
```

Handle touch (up,down,move) events to SelNum element.

Called from gslc_ElemSendEventTouch()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eTouch	Touch event type
in	nRelX	Touch X coord relative to element
in	nRelY	Touch Y coord relative to element

Returns

true if success, false otherwise

9.30.2 Variable Documentation

9.30.2.1 ERRSTR_NULL

```
const char GSLC_PMEM ERRSTR_NULL[]
```

9.30.2.2 ERRSTR_PXD_NULL

```
const char GSLC_PMEM ERRSTR_PXD_NULL[]
```

9.30.2.3 SELNUM_ID_BTN_DEC

```
const int16_t SELNUM_ID_BTN_DEC [static]
```

9.30.2.4 SELNUM_ID_BTN_INC


```
const int16_t SELNUM_ID_BTN_INC [static]
```

9.30.2.5 SELNUM_ID_TXT


const int16_t SELNUM_ID_TXT [static]

9.31 src/elem/XSelNum.h File Reference

#include "GUIslice.h"
Include dependency graph for XSelNum.h:

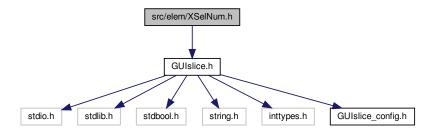

This graph shows which files directly or indirectly include this file:

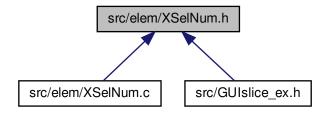

Data Structures

struct gslc_tsXSelNum

Extended data for SelNum element.

Macros

- #define GSLC_TYPEX_SELNUM
- #define SELNUM_STR_LEN

Functions

gslc_tsElemRef * gslc_ElemXSelNumCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsX←
 SelNum *pXData, gslc_tsRect rElem, int8_t nFontId)

Create a SelNum Element.

• bool gslc_ElemXSelNumDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

Draw a SelNum element on the screen.

• int gslc_ElemXSelNumGetCounter (gslc_tsGui *pGui, gslc_tsXSelNum *pSelNum)

Get the current counter associated with SelNum.

- void gslc_ElemXSelNumSetCounter (gslc_tsGui *pGui, gslc_tsXSelNum *pSelNum, int16_t nCount)
 Set the current counter associated with SelNum.
- bool gslc_ElemXSelNumClick (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nX, int16_t nY)

 Handle a click event within the SelNum.
- bool gslc_ElemXSelNumTouch (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)

Handle touch (up,down,move) events to SelNum element.

9.31.1 Macro Definition Documentation

```
9.31.1.1 GSLC_TYPEX_SELNUM
```

```
#define GSLC_TYPEX_SELNUM
```

9.31.1.2 SELNUM_STR_LEN

```
#define SELNUM_STR_LEN
```

9.31.2 Function Documentation

9.31.2.1 gslc_ElemXSelNumClick()

Handle a click event within the SelNum.

· This is called internally by the SelNum touch handler

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eTouch	Touch event type
in	nΧ	Touch X coord
in	nΥ	Touch Y coord

Returns

none

9.31.2.2 gslc_ElemXSelNumCreate()

Create a SelNum Element.

Parameters

in	pGui	Pointer to GUI
in	n⊷	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)
	ElemId	
in	nPage	Page ID to attach element to
in	pXData	Ptr to extended element data structure
in	rElem	Rectangle coordinates defining element size
in	nFontId	Font ID to use for drawing the element

Returns

Pointer to Element or NULL if failure

9.31.2.3 gslc_ElemXSelNumDraw()

Draw a SelNum element on the screen.

· Called during redraw

Parameters

	in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
	in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
Ī	in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.31.2.4 gslc_ElemXSelNumGetCounter()

Get the current counter associated with SelNum.

Parameters

in	pGui	Ptr to GUI
in	pSelNum	Ptr to Element

Returns

Current counter value

9.31.2.5 gslc_ElemXSelNumSetCounter()

Set the current counter associated with SelNum.

Parameters

in	pGui	Pointer to GUI
in	pSelNum	Ptr to Element
in	nCount	New counter value

Returns

none

9.31.2.6 gslc_ElemXSelNumTouch()

Handle touch (up,down,move) events to SelNum element.

• Called from gslc_ElemSendEventTouch()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui∗)	
in	pvElemRef	Ref Void ptr to Element reference (typecast to gslc_tsElemRef	
in	eTouch	Touch event type	
in	nRelX	Touch X coord relative to element	
in	nRelY	Touch Y coord relative to element	


Returns

true if success, false otherwise

9.32 src/elem/XSlider.c File Reference

```
#include "GUIslice.h"
#include "GUIslice_drv.h"
#include "elem/XSlider.h"
#include <stdio.h>
```

Include dependency graph for XSlider.c:

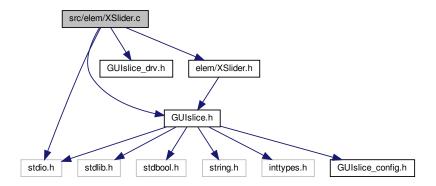

Functions

gslc_tsElemRef * gslc_ElemXSliderCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsX
 Slider *pXData, gslc_tsRect rElem, int16_t nPosMin, int16_t nPosMax, int16_t nPos, uint16_t nThumbSz, bool bVert)

Create a Slider Element.

void gslc_ElemXSliderSetStyle (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bTrim, gslc_tsColor col
 —
 Trim, uint16_t nTickDiv, int16_t nTickLen, gslc_tsColor colTick)

Set a Slider element's current position.

 $\bullet \ \ void \ gslc_Elem XSlider Set Snap En \ (gslc_ts Gui \ *pGui, \ gslc_ts Elem Ref \ *pElem Ref, \ bool \ bSnap En)$

Enable touch to snap to the nearest tick mark.

• int gslc_ElemXSliderGetPos (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get a Slider element's current position.

void gslc_ElemXSliderSetPos (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nPos)

Set a Slider element's current position.

 void gslc_ElemXSliderSetPosFunc (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, GSLC_CB_XSLIDER_← POS funcCb)

Assign the position callback function for a slider.

bool gslc_ElemXSliderDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

Draw a Slider element on the screen.

bool gslc_ElemXSliderTouch (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)

Handle touch events to Slider element.

Variables

- const char GSLC_PMEM ERRSTR_NULL []
- const char GSLC_PMEM ERRSTR_PXD_NULL []

9.32.1 Function Documentation

9.32.1.1 gslc_ElemXSliderCreate()

```
gslc_tsElemRef* gslc_ElemXSliderCreate (
    gslc_tsGui * pGui,
    int16_t nElemId,
    int16_t nPage,
    gslc_tsXSlider * pXData,
    gslc_tsRect rElem,
    int16_t nPosMin,
    int16_t nPosMax,
    int16_t nPos,
    uint16_t nThumbSz,
    bool bVert )
```

Create a Slider Element.

Parameters

in	pGui	Pointer to GUI
in	nElemId Element ID to assign (016383 or GSLC_ID_AUTO to autoge	
in	n nPage Page ID to attach element to	
in	pXData	Ptr to extended element data structure
in	n rElem Rectangle coordinates defining checkbox size	
in	n nPosMin Minimum position value	
in	nPosMax	Maximum position value
in	nPos	Starting position value
in	nThumbSz	Size of the thumb control
in	bVert	Orientation (true for vertical)

Returns

Pointer to Element reference or NULL if failure

9.32.1.2 gslc_ElemXSliderDraw()

Draw a Slider element on the screen.

• Called from gslc_ElemDraw()

Parameters

in	pvGui Void ptr to GUI (typecast to gslc_tsGui*)	
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.32.1.3 gslc_ElemXSliderGetPos()

Get a Slider element's current position.

Parameters

ĺ	in	pGui	Pointer to GUI
	in	pElemRef	Pointer to Element reference

Returns

Current slider position

9.32.1.4 gslc_ElemXSliderSetPos()

Set a Slider element's current position.

Parameters

in	pGui	Pointer to GUI
in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nPos	New position value

Returns

none

9.32.1.5 gslc_ElemXSliderSetPosFunc()

Assign the position callback function for a slider.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	funcCb	Function pointer to position routine (or NULL for none)

Returns

none

9.32.1.6 gslc_ElemXSliderSetSnapEn()

Enable touch to snap to the nearest tick mark.

• nTickDiv (in SetStyle) must be non-zero for snap to be active

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	bSnapEn	Enable snap function if true

Returns

none

9.32.1.7 gslc_ElemXSliderSetStyle()

```
void gslc_ElemXSliderSetStyle ( gslc\_tsGui \ * pGui,
```

```
gslc_tsElemRef * pElemRef,
bool bTrim,
gslc_tsColor colTrim,
uint16_t nTickDiv,
int16_t nTickLen,
gslc_tsColor colTick)
```

Set a Slider element's current position.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	bTrim	Show a colored trim?
in	colTrim	Color of trim
in	nTickDiv	Number of tick divisions to show (0 for none)
in	nTickLen	Length of tickmarks
in	colTick	Color of ticks

Returns

none

9.32.1.8 gslc_ElemXSliderTouch()

Handle touch events to Slider element.

• Called from gslc_ElemSendEventTouch()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)	
in	pvElemRef	**ElemRef Void ptr to Element reference (typecast to gslc_tsElemRef*)	
in	eTouch	Touch event type	
in	nRelX	Touch X coord relative to element	
in	nRelY	Touch Y coord relative to element	

Returns

true if success, false otherwise

9.32.2 Variable Documentation

9.32.2.1 ERRSTR_NULL


const char GSLC_PMEM ERRSTR_NULL[]

9.32.2.2 ERRSTR_PXD_NULL


const char GSLC_PMEM ERRSTR_PXD_NULL[]

9.33 src/elem/XSlider.h File Reference

#include "GUIslice.h"
Include dependency graph for XSlider.h:

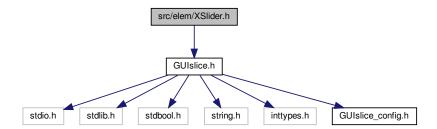

This graph shows which files directly or indirectly include this file:

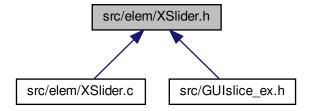

Data Structures

· struct gslc tsXSlider

Extended data for Slider element.

Macros

- #define GSLC TYPEX SLIDER
- #define gslc_ElemXSliderCreate_P(pGui, nElemId, nPage, nX, nY, nW, nH, nPosMin_, nPosMax_, nPos_, nThumbSz_, bVert_, colFrame_, colFill_)

Create a Slider Element in Flash.

Typedefs

• typedef bool(* GSLC_CB_XSLIDER_POS) (void *pvGui, void *pvElem, int16_t nPos)

Callback function for slider feedback.

Functions

gslc_tsElemRef * gslc_ElemXSliderCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsX
 Slider *pXData, gslc_tsRect rElem, int16_t nPosMin, int16_t nPosMax, int16_t nPos, uint16_t nThumbSz, bool bVert)

Create a Slider Element.

void gslc_ElemXSliderSetStyle (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bTrim, gslc_tsColor col
 —
 Trim, uint16_t nTickDiv, int16_t nTickLen, gslc_tsColor colTick)

Set a Slider element's current position.

• void gslc_ElemXSliderSetSnapEn (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bSnapEn)

Enable touch to snap to the nearest tick mark.

int gslc_ElemXSliderGetPos (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get a Slider element's current position.

• void gslc_ElemXSliderSetPos (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nPos)

Set a Slider element's current position.

 void gslc_ElemXSliderSetPosFunc (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, GSLC_CB_XSLIDER_← POS funcCb)

Assign the position callback function for a slider.

bool gslc_ElemXSliderDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

Draw a Slider element on the screen.

bool gslc_ElemXSliderTouch (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)

Handle touch events to Slider element.

9.33.1 Macro Definition Documentation

9.33.1.1 gslc_ElemXSliderCreate_P

Create a Slider Element in Flash.

Parameters

in	pGui	Pointer to GUI
in	nElemId	Unique element ID to assign
in	nPage	Page ID to attach element to
in	nΧ	X coordinate of element
in	nΥ	Y coordinate of element
in	nW	Width of element
in	nH	Height of element
in	nPosMin⊷	Minimum position value
	-	
in	nPosMax⊷	Maximum position value
	_	
in	nPos_	Starting position value
in	nThumb⇔	Size of the thumb control
	Sz_	
in	bVert_	Orientation (true for vertical)
in	colFrame←	Color of the element frame
	_	
in	colFill_	Color of the element fill

Returns

none

9.33.1.2 GSLC_TYPEX_SLIDER

 $\#define\ GSLC_TYPEX_SLIDER$

9.33.2 Typedef Documentation

9.33.2.1 GSLC_CB_XSLIDER_POS

```
typedef bool(* GSLC_CB_XSLIDER_POS) (void *pvGui, void *pvElem, int16_t nPos)
```

Callback function for slider feedback.

9.33.3 Function Documentation

9.33.3.1 gslc_ElemXSliderCreate()

```
gslc_tsElemRef* gslc_ElemXSliderCreate (
    gslc_tsGui * pGui,
    int16_t nElemId,
    int16_t nPage,
    gslc_tsXSlider * pXData,
    gslc_tsRect rElem,
    int16_t nPosMin,
    int16_t nPosMax,
    int16_t nPos,
    uint16_t nThumbSz,
    bool bVert )
```

Create a Slider Element.

Parameters

in	pGui	Pointer to GUI
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)
in	nPage	Page ID to attach element to
in	pXData	Ptr to extended element data structure
in	rElem	Rectangle coordinates defining checkbox size
in	nPosMin	Minimum position value
in	nPosMax	Maximum position value
in	nPos	Starting position value
in	nThumbSz	Size of the thumb control
in	bVert	Orientation (true for vertical)

Returns

Pointer to Element reference or NULL if failure

9.33.3.2 gslc_ElemXSliderDraw()

Draw a Slider element on the screen.

• Called from gslc_ElemDraw()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.33.3.3 gslc_ElemXSliderGetPos()

Get a Slider element's current position.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference

Returns

Current slider position

9.33.3.4 gslc_ElemXSliderSetPos()

Set a Slider element's current position.

Parameters

in	pGui	Pointer to GUI
in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nPos	New position value

Returns

none

9.33.3.5 gslc_ElemXSliderSetPosFunc()

Assign the position callback function for a slider.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	funcCb	Function pointer to position routine (or NULL for none)

Returns

none

9.33.3.6 gslc_ElemXSliderSetSnapEn()

Enable touch to snap to the nearest tick mark.

• nTickDiv (in SetStyle) must be non-zero for snap to be active

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	bSnapEn	Enable snap function if true

Returns

none

9.33.3.7 gslc_ElemXSliderSetStyle()

Set a Slider element's current position.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	bTrim	Show a colored trim?
in	colTrim	Color of trim
in	nTickDiv	Number of tick divisions to show (0 for none)
in	nTickLen	Length of tickmarks
in	colTick	Color of ticks

Returns

none

9.33.3.8 gslc_ElemXSliderTouch()

Handle touch events to Slider element.

Called from gslc_ElemSendEventTouch()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eTouch	Touch event type
in	nRelX	Touch X coord relative to element
in	nRelY	Touch Y coord relative to element

Returns


true if success, false otherwise

9.34 src/elem/XSpinner.c File Reference

Author: Paul Conti Date: 2022-04-06 Modified to use Virtual Elements instead of Compound.

```
#include "GUIslice.h"
#include "GUIslice_drv.h"
#include "elem/XSpinner.h"
#include <stdio.h>
```

Include dependency graph for XSpinner.c:

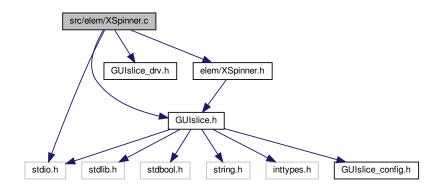

Functions

Create a Spinner Element.

- bool gslc_ElemXSpinnerSetChars (void *pvGui, gslc_tsElemRef *pElemRef, uint8_t clncr, uint8_t cDecr)

 Set Up and Down characters for the Spinner element.
- void gslc_XSpinnerDrawVirtualTxt (gslc_tsGui *pGui, gslc_tsRect rElem, int16_t nFontId, char *pValStr, int8_t eTxtAlign, gslc_tsColor cColFrame, gslc_tsColor cColFill, gslc_tsColor cColTxt)

- void gslc_XSpinnerDrawVirtualBtn (gslc_tsGui *pGui, gslc_tsRect rElem, char *pStrBuf, uint8_t nStrBuf

 Max, int16_t nFontId, gslc_tsColor cColFrame, gslc_tsColor cColFill, gslc_tsColor cColFillGlow, gslc_tsColor
 cColText, bool bRoundedEn, bool bGlow, bool bFocus)
- bool gslc_ElemXSpinnerDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

Draw a Spinner element on the screen.

int gslc_ElemXSpinnerGetCounter (gslc_tsGui *pGui, gslc_tsXSpinner *pSpinner)

Get the current counter associated with Spinner.

- void gslc_ElemXSpinnerSetCounter (gslc_tsGui *pGui, gslc_tsXSpinner *pSpinner, int16_t nCount)
 Set the current counter associated with Spinner.
- int16_t gslc_XSpinnerMapEvent (gslc_tsGui *pGui, gslc_tsXSpinner *pConfig, int16_t nRelX, int16_t nRelY)
- bool gslc_ElemXSpinnerTouch (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)

Handle touch (up,down,move) events to Spinner element.

Variables

- const char GSLC_PMEM ERRSTR_NULL []
- const char GSLC_PMEM ERRSTR_PXD_NULL []
- static const int16_t SPINNER_ID_BTN_INC
- static const int16_t SPINNER_ID_BTN_DEC
- static const int16_t SPINNER_ID_TXT

9.34.1 Detailed Description

Author: Paul Conti Date: 2022-04-06 Modified to use Virtual Elements instead of Compound.

9.34.2 Function Documentation

9.34.2.1 qslc ElemXSpinnerCreate()

Create a Spinner Element.

Parameters

in	pGui	Pointer to GUI
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)
in	nPage	Page ID to attach element to
in	pXData	Ptr to extended element data structure
in	rElem	Rectangle coordinates defining overall size
in	nMin	Minimum value of Spinner
in	nMax	Maximum value of Spinner
in	nVal	Starting value of Spinner
in	nIncr	Increment Spinner by this value
in	nFontId	Font ID to use for drawing the element
in	nButtonSz	Size of individual buttons
in	cbInput	Callback for touch events

Returns

Pointer to Element or NULL if failure

9.34.2.2 gslc_ElemXSpinnerDraw()

Draw a Spinner element on the screen.

Called during redraw

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.34.2.3 gslc_ElemXSpinnerGetCounter()

Get the current counter associated with Spinner.

Parameters

in	pGui	Ptr to GUI
in	pSpinner	Ptr to Element

Returns

Current counter value

9.34.2.4 gslc_ElemXSpinnerSetChars()

Set Up and Down characters for the Spinner element.

· Called during redraw

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pElemRef	Ptr to ElementRef
in	clncr	Character to use to indicate incrementing the spinner
in	cDecr	Character to use to indicate decrementing the spinner

Returns

true if success, false otherwise

9.34.2.5 gslc_ElemXSpinnerSetCounter()

Set the current counter associated with Spinner.

Parameters

	in	pGui	Pointer to GUI
	in	pSpinner	Ptr to Element
ĺ	in	nCount	New counter value

Returns

none

9.34.2.6 gslc_ElemXSpinnerTouch()

Handle touch (up,down,move) events to Spinner element.

Called from gslc_ElemSendEventTouch()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eTouch	Touch event type
in	nRelX	Touch X coord relative to element
in	nRelY	Touch Y coord relative to element

Returns

true if success, false otherwise

9.34.2.7 gslc_XSpinnerDrawVirtualBtn()

```
gslc_tsColor cColFrame,
gslc_tsColor cColFill,
gslc_tsColor cColFillGlow,
gslc_tsColor cColText,
bool bRoundedEn,
bool bGlow,
bool bFocus )
```

9.34.2.8 gslc_XSpinnerDrawVirtualTxt()

9.34.2.9 gslc_XSpinnerMapEvent()

9.34.3 Variable Documentation

9.34.3.1 ERRSTR NULL

```
const char GSLC_PMEM ERRSTR_NULL[]
```

9.34.3.2 ERRSTR_PXD_NULL

```
const char GSLC_PMEM ERRSTR_PXD_NULL[]
```

9.34.3.3 SPINNER_ID_BTN_DEC

```
const int16_t SPINNER_ID_BTN_DEC [static]
```

9.34.3.4 SPINNER_ID_BTN_INC

```
const int16_t SPINNER_ID_BTN_INC [static]
```

9.34.3.5 SPINNER_ID_TXT

```
const int16_t SPINNER_ID_TXT [static]
```

9.35 src/elem/XSpinner.h File Reference

Author: Paul Conti Date: 2022-04-06 Modified to use Virtual Elements instead of Compound.

stdbool.h

#include "GUIslice.h"
Include dependency graph for XSpinner.h:

src/elem/XSpinner.h

GUIslice.h

string.h


inttypes.h

GUIslice_config.h

This graph shows which files directly or indirectly include this file:

stdlib.h

stdio.h

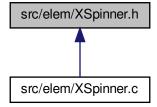

Data Structures

struct gslc_tsXSpinner

Extended data for Spinner element.

Macros

- #define GSLC_TYPEX_SPINNER
- #define XSPINNER_COMP_CNT
- #define XSPINNER_STR_LEN
- #define XSPINNER_CB_STATE_UPDATE

Functions

Create a Spinner Element.

- bool gslc_ElemXSpinnerSetChars (void *pvGui, gslc_tsElemRef *pElemRef, uint8_t clncr, uint8_t cDecr)

 Set Up and Down characters for the Spinner element.
- bool gslc_ElemXSpinnerDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

 Draw a Spinner element on the screen.
- int gslc_ElemXSpinnerGetCounter (gslc_tsGui *pGui, gslc_tsXSpinner *pSpinner)

Get the current counter associated with Spinner.

- void gslc_ElemXSpinnerSetCounter (gslc_tsGui *pGui, gslc_tsXSpinner *pSpinner, int16_t nCount) Set the current counter associated with Spinner.
- bool gslc_ElemXSpinnerClick (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nX, int16_t nY)

 Handle a click event within the Spinner.
- bool gslc_ElemXSpinnerTouch (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)

Handle touch (up,down,move) events to Spinner element.

9.35.1 Detailed Description

Author: Paul Conti Date: 2022-04-06 Modified to use Virtual Elements instead of Compound.

9.35.2 Macro Definition Documentation

9.35.2.1 GSLC_TYPEX_SPINNER

#define GSLC_TYPEX_SPINNER

9.35.2.2 XSPINNER_CB_STATE_UPDATE

```
#define XSPINNER_CB_STATE_UPDATE
```

9.35.2.3 XSPINNER_COMP_CNT

```
#define XSPINNER_COMP_CNT
```

9.35.2.4 XSPINNER_STR_LEN

```
#define XSPINNER_STR_LEN
```

9.35.3 Function Documentation

9.35.3.1 gslc_ElemXSpinnerClick()

Handle a click event within the Spinner.

• This is called internally by the Spinner touch handler

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eTouch	Touch event type
in	nX	Touch X coord
in	nY	Touch Y coord

Returns

none

9.35.3.2 gslc_ElemXSpinnerCreate()

Create a Spinner Element.

Parameters

in	pGui	Pointer to GUI
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)
in	nPage	Page ID to attach element to
in	pXData	Ptr to extended element data structure
in	rElem	Rectangle coordinates defining overall size
in	nMin	Minimum value of Spinner
in	nMax	Maximum value of Spinner
in	nVal	Starting value of Spinner
in	nIncr	Increment Spinner by this value
in	nFontId	Font ID to use for drawing the element
in	nButtonSz	Size of individual buttons
in	cbInput	Callback for touch events

Returns

Pointer to Element or NULL if failure

9.35.3.3 gslc_ElemXSpinnerDraw()

Draw a Spinner element on the screen.

· Called during redraw

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.35.3.4 gslc_ElemXSpinnerGetCounter()

Get the current counter associated with Spinner.

Parameters

in	pGui	Ptr to GUI	
in	pSpinner	Ptr to Element	

Returns

Current counter value

9.35.3.5 gslc_ElemXSpinnerSetChars()

Set Up and Down characters for the Spinner element.

· Called during redraw

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pElemRef	Ptr to ElementRef
in	clncr	Character to use to indicate incrementing the spinner
in	cDecr	Character to use to indicate decrementing the spinner

Returns

true if success, false otherwise

9.35.3.6 gslc_ElemXSpinnerSetCounter()

Set the current counter associated with Spinner.

Parameters

in	pGui	Pointer to GUI
in	pSpinner	Ptr to Element
in	nCount	New counter value

Returns

none

9.35.3.7 gslc_ElemXSpinnerTouch()

Handle touch (up,down,move) events to Spinner element.

Called from gslc_ElemSendEventTouch()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc tsGui*)
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
T11	pvLieitiitei	void pti to Liement reference (typecast to gsic_tsLieminer*)
in	eTouch	Touch event type
in	nRelX	Touch X coord relative to element
in	nRelY	Touch Y coord relative to element


Returns

true if success, false otherwise

9.36 src/elem/XTemplate.c File Reference

```
#include "GUIslice.h"
#include "GUIslice_drv.h"
#include "elem/XTemplate.h"
#include <stdio.h>
```

Include dependency graph for XTemplate.c:

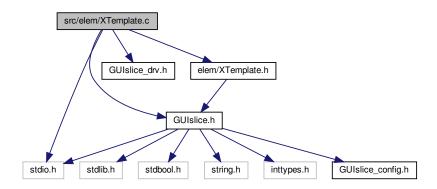

Functions

gslc_tsElemRef * gslc_ElemXTemplateCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_ts

 XTemplate *pXData, gslc_tsRect rElem, char *pStrBuf, uint8_t nStrBufMax, int16_t nFontId)

Create an Extended Text Field Element.

- bool gslc_ElemXTemplateDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)
 - Draw the template element on the screen.
- bool gslc_ElemXTemplateTouch (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16← t nRelY)

Handle touch events to template element.

Variables

- const char GSLC_PMEM ERRSTR_NULL []
- const char GSLC_PMEM ERRSTR_PXD_NULL []

9.36.1 Function Documentation

9.36.1.1 gslc_ElemXTemplateCreate()

Create an Extended Text Field Element.

Parameters

in	pGui	Pointer to GUI
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)
in	nPage	Page ID to attach element to
in	pXData	Ptr to extended element data structure
in	rElem	Rectangle coordinates defining element size
in	pStrBuf	Ptr to string buffer
in	nStrBufMax	Maximum buffer alength allocated to pStrBuf
in	nFontId	ID of font to use for text output

Returns

Pointer to Element reference or NULL if failure

9.36.1.2 gslc_ElemXTemplateDraw()

Draw the template element on the screen.

• Called from gslc_ElemDraw()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)	
in	pvElemRef	lemRef Void ptr to Element reference (typecast to gslc_tsElemRef*)	
in	eRedraw	edraw Redraw mode	

Returns

true if success, false otherwise

9.36.1.3 gslc_ElemXTemplateTouch()

Handle touch events to template element.

• Called from gslc_ElemSendEventTouch()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)	
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)	
in	eTouch	Touch event type	
in	nRelX	Touch X coord relative to element	
in	nRelY	Touch Y coord relative to element	

Returns

true if success, false otherwise

9.36.2 Variable Documentation

9.36.2.1 ERRSTR_NULL


```
const char GSLC_PMEM ERRSTR_NULL[]
```

9.36.2.2 ERRSTR_PXD_NULL


```
{\tt const\ char\ GSLC\_PMEM\ ERRSTR\_PXD\_NULL[\ ]}
```

9.37 src/elem/XTemplate.h File Reference

#include "GUIslice.h"
Include dependency graph for XTemplate.h:

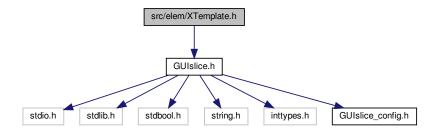

This graph shows which files directly or indirectly include this file:

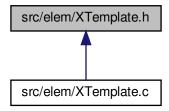

Data Structures

struct gslc_tsXTemplate
 Callback function for slider feedback.

Macros

• #define GSLC TYPEX TEMPLATE

Functions

• gslc_tsElemRef * gslc_ElemXTemplateCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_ts↔ XTemplate *pXData, gslc_tsRect rElem, char *pStrBuf, uint8_t nStrBufMax, int16_t nFontId)

Create an Extended Text Field Element.

- bool gslc_ElemXTemplateDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)
 Draw the template element on the screen.
- bool gslc_ElemXTemplateTouch (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16
 t nRelY)

Handle touch events to template element.

9.37.1 Macro Definition Documentation

9.37.1.1 GSLC_TYPEX_TEMPLATE

```
#define GSLC_TYPEX_TEMPLATE
```

9.37.2 Function Documentation

9.37.2.1 gslc_ElemXTemplateCreate()

Create an Extended Text Field Element.

Parameters

in	pGui	Pointer to GUI	
in	nElemId	ElemId Element ID to assign (016383 or GSLC_ID_AUTO to autogen)	
in	nPage	Page ID to attach element to	
in	pXData	Ptr to extended element data structure	
in	rElem	Rectangle coordinates defining element size	
in	pStrBuf	Puf Ptr to string buffer	
in	nStrBufMax	rBufMax Maximum buffer alength allocated to pStrBuf	
in	nFontld	ID of font to use for text output	

Returns

Pointer to Element reference or NULL if failure

9.37.2.2 gslc_ElemXTemplateDraw()

```
bool gslc_ElemXTemplateDraw ( \label{eq:condition} \mbox{void} \ * \ pvGui,
```

```
void * pvElemRef,
gslc_teRedrawType eRedraw )
```

Draw the template element on the screen.

• Called from gslc_ElemDraw()

Parameters

	in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)	
Ī	in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)	
	in	eRedraw	Redraw mode	

Returns

true if success, false otherwise

9.37.2.3 gslc_ElemXTemplateTouch()

Handle touch events to template element.

Called from gslc_ElemSendEventTouch()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)	
in	pvElemRef	Ref Void ptr to Element reference (typecast to gslc_tsElemRef*)	
in	eTouch	Touch event type	
in	nRelX	Touch X coord relative to element	
in	nRelY	Touch Y coord relative to element	

Returns


true if success, false otherwise

9.38 src/elem/XTextbox.c File Reference

```
#include "GUIslice.h"
#include "GUIslice_drv.h"
```

#include "elem/XTextbox.h"
#include <stdio.h>

Include dependency graph for XTextbox.c:

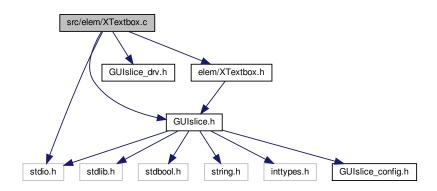

Functions

- gslc_tsElemRef * gslc_ElemXTextboxCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsX

 Textbox *pXData, gslc_tsRect rElem, int16_t nFontId, char *pBuf, uint16_t nBufRows, uint16_t nBufCols)

 Create a Textbox Element.
- void gslc_ElemXTextboxReset (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Reset the contents of the textbox.

- void gslc_ElemXTextboxLineWrAdv (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)
- void gslc_ElemXTextboxScrollSet (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, uint8_t nScrollPos, uint8←
 _t nScrollMax)

Set the textbox scroll position (nScrollPos) as a fraction of nScrollMax.

- void gslc_ElemXTextboxBufAdd (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, unsigned char chNew, bool bAdvance)
- void gslc_ElemXTextboxColSet (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor nCol)
 Insert a color set code into the current buffer position.
- void gslc ElemXTextboxColReset (gslc tsGui *pGui, gslc tsElemRef *pElemRef)

Insert a color reset code into the current buffer position.

- void gslc_ElemXTextboxWrapSet (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bWrapEn)
 Enable or disable line wrap within textbox.
- $\bullet \ \ void \ gslc_ElemXTextboxAdd \ (gslc_tsGui \ *pGui, \ gslc_tsElemRef \ *pElemRef, \ char \ *pTxt)\\$
- bool gslc_ElemXTextboxDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

Draw a Textbox element on the screen.

Add a text string to the textbox.

Variables

- const char GSLC_PMEM ERRSTR_NULL []
- const char GSLC PMEM ERRSTR PXD NULL []

9.38.1 Function Documentation

9.38.1.1 gslc_ElemXTextboxAdd()

Add a text string to the textbox.

- · If it includes a newline then the buffer will advance to the next row
- · If wrap has been enabled, then a newline will be forced

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	pTxt	Pointer to text string (null-terminated)

Returns

none

9.38.1.2 gslc_ElemXTextboxBufAdd()

9.38.1.3 gslc_ElemXTextboxColReset()

Insert a color reset code into the current buffer position.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference

Returns

none

9.38.1.4 gslc_ElemXTextboxColSet()

Insert a color set code into the current buffer position.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nCol	Color to assign for next text written to textbox

Returns

none

9.38.1.5 gslc_ElemXTextboxCreate()

Create a Textbox Element.

- The textbox is a scrolling window designed for displaying multi-line text using a monospaced font. A character buffer is defined by nBufRows*nBufCols to capture the added text. If the allocation buffer is larger than the display size (defined by rElem), then a scrollbar will be shown.
- Support for changing color within a row can be enabled with GSLC_FEATURE_XTEXTBOX_EMBED 1
- Note that each color change command will consume 4 of the available "column" bytes.

Parameters

in	pGui	Pointer to GUI	
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)	
in	nPage	Page ID to attach element to	
in	pXData	Ptr to extended element data structure	
in	rElem	Rectangle coordinates defining textbox size	
in	nFontId	Font ID to use for text area	
in	pBuf	Ptr to text buffer (already allocated) with size (nBufRows*nBufCols) chars	
in	nBufRows	Number of rows in buffer	
in	nBufCols	Number of columns in buffer (incl special codes)	

Returns

Pointer to Element reference or NULL if failure

9.38.1.6 gslc_ElemXTextboxDraw()

Draw a Textbox element on the screen.

• Called from gslc_ElemDraw()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)	
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)	
in	eRedraw	Redraw mode	

Returns

true if success, false otherwise

9.38.1.7 gslc_ElemXTextboxLineWrAdv()

9.38.1.8 gslc_ElemXTextboxReset()

Reset the contents of the textbox.

· Clears the buffer and resets the position

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference

Returns

none

9.38.1.9 gslc_ElemXTextboxScrollSet()

Set the textbox scroll position (nScrollPos) as a fraction of nScrollMax.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nScrollPos	New scroll position
in	nScrollMax	Maximum scroll position

Returns

none

9.38.1.10 gslc_ElemXTextboxWrapSet()

```
gslc_tsElemRef * pElemRef,
bool bWrapEn )
```

Enable or disable line wrap within textbox.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	bWrapEn	Enable line wrap if true

Returns

none

9.38.2 Variable Documentation

9.38.2.1 ERRSTR_NULL


```
const char GSLC_PMEM ERRSTR_NULL[]
```

9.38.2.2 ERRSTR_PXD_NULL


```
const char GSLC_PMEM ERRSTR_PXD_NULL[]
```

9.39 src/elem/XTextbox.h File Reference

```
#include "GUIslice.h"
Include dependency graph for XTextbox.h:
```

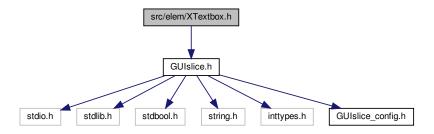

This graph shows which files directly or indirectly include this file:

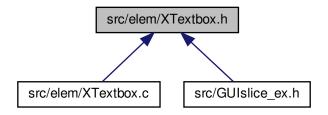

Data Structures

struct gslc tsXTextbox

Extended data for Textbox element.

Macros

- #define GSLC TYPEX TEXTBOX
- #define GSLC_XTEXTBOX_CODE_COL_SET

Definitions for textbox special inline codes.

- #define GSLC XTEXTBOX CODE COL RESET
- #define XTEXTBOX_REDRAW_NONE
- #define XTEXTBOX_REDRAW_ALL

Functions

- gslc_tsElemRef * gslc_ElemXTextboxCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsX

 Textbox *pXData, gslc_tsRect rElem, int16_t nFontId, char *pBuf, uint16_t nBufRows, uint16_t nBufCols)
 Create a Textbox Element.
- void gslc_ElemXTextboxReset (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Reset the contents of the textbox.

bool gslc_ElemXTextboxDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

Draw a Textbox element on the screen.

void gslc_ElemXTextboxAdd (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, char *pTxt)

Add a text string to the textbox.

void gslc_ElemXTextboxColSet (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor nCol)

Insert a color set code into the current buffer position.

• void gslc_ElemXTextboxColReset (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Insert a color reset code into the current buffer position.

void gslc_ElemXTextboxWrapSet (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bWrapEn)

Enable or disable line wrap within textbox.

 void gslc_ElemXTextboxScrollSet (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, uint8_t nScrollPos, uint8← t nScrollMax)

Set the textbox scroll position (nScrollPos) as a fraction of nScrollMax.

9.39.1 Macro Definition Documentation

9.39.1.1 GSLC_TYPEX_TEXTBOX

#define GSLC_TYPEX_TEXTBOX

9.39.1.2 GSLC_XTEXTBOX_CODE_COL_RESET

#define GSLC_XTEXTBOX_CODE_COL_RESET

9.39.1.3 GSLC_XTEXTBOX_CODE_COL_SET

#define GSLC_XTEXTBOX_CODE_COL_SET

Definitions for textbox special inline codes.

9.39.1.4 XTEXTBOX_REDRAW_ALL

#define XTEXTBOX_REDRAW_ALL

9.39.1.5 XTEXTBOX_REDRAW_NONE

#define XTEXTBOX_REDRAW_NONE

9.39.2 Function Documentation

9.39.2.1 gslc_ElemXTextboxAdd()

Add a text string to the textbox.

- · If it includes a newline then the buffer will advance to the next row
- · If wrap has been enabled, then a newline will be forced

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	pTxt	Pointer to text string (null-terminated)

Returns

none

9.39.2.2 gslc_ElemXTextboxColReset()

Insert a color reset code into the current buffer position.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference

Returns

none

9.39.2.3 gslc_ElemXTextboxColSet()

Insert a color set code into the current buffer position.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nCol	Color to assign for next text written to textbox

Returns

none

9.39.2.4 gslc_ElemXTextboxCreate()

Create a Textbox Element.

- The textbox is a scrolling window designed for displaying multi-line text using a monospaced font. A character buffer is defined by nBufRows*nBufCols to capture the added text. If the allocation buffer is larger than the display size (defined by rElem), then a scrollbar will be shown.
- Support for changing color within a row can be enabled with GSLC_FEATURE_XTEXTBOX_EMBED 1
- Note that each color change command will consume 4 of the available "column" bytes.

Parameters

in	pGui	Pointer to GUI
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)
in	nPage	Page ID to attach element to
in	pXData	Ptr to extended element data structure
in	rElem	Rectangle coordinates defining textbox size
in	nFontId	Font ID to use for text area
in	pBuf	Ptr to text buffer (already allocated) with size (nBufRows*nBufCols) chars
in	nBufRows	Number of rows in buffer
in	nBufCols	Number of columns in buffer (incl special codes)

Returns

Pointer to Element reference or NULL if failure

9.39.2.5 gslc_ElemXTextboxDraw()

```
bool gslc_ElemXTextboxDraw ( \label{eq:condition} \mbox{void} \ *\ pvGui,
```

```
void * pvElemRef,
gslc_teRedrawType eRedraw )
```

Draw a Textbox element on the screen.

• Called from gslc_ElemDraw()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.39.2.6 gslc_ElemXTextboxReset()

Reset the contents of the textbox.

· Clears the buffer and resets the position

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference

Returns

none

9.39.2.7 gslc_ElemXTextboxScrollSet()

Set the textbox scroll position (nScrollPos) as a fraction of nScrollMax.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nScrollPos	New scroll position
in	nScrollMax	Maximum scroll position

Returns

none

9.39.2.8 gslc_ElemXTextboxWrapSet()

Enable or disable line wrap within textbox.

Parameters

in	pGui	Pointer to GUI	
in	pElemRef	Pointer to Element reference	
in	bWrapEn	Enable line wrap if true	


Returns

none

9.40 src/elem/XTogglebtn.c File Reference

```
#include "GUIslice.h"
#include "GUIslice_drv.h"
#include "XTogglebtn.h"
#include <stdio.h>
```

Include dependency graph for XTogglebtn.c:

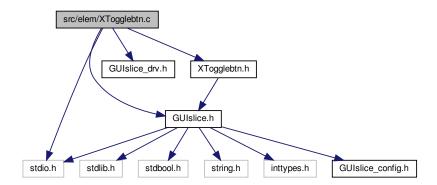

Functions

gslc_tsElemRef * gslc_ElemXTogglebtnCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_
tsXTogglebtn *pXData, gslc_tsRect rElem, gslc_tsColor colThumb, gslc_tsColor colOnState, gslc_tsColor
colOffState, bool bCircular, bool bChecked, GSLC_CB_TOUCH cbTouch)

Create a Togglebtn button Element.

- bool gslc ElemXTogglebtnGetState (gslc tsGui *pGui, gslc tsElemRef *pElemRef)
 - Get a Togglebtn element's current state.
- void gslc_ElemXTogglebtnSetStateHelp (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bOn)
- void gslc_ElemXTogglebtnSetState (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bOn)
 - Set a Togglebtn element's current state.
- void gslc_ElemXTogglebtnToggleState (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)
 - Toggle a Togglebtn element's current state.
- void gslc_ElemXTogglebtnDrawCircularHelp (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsX

 Togglebtn *pTogglebtn)
- void gslc_ElemXTogglebtnDrawRectangularHelp (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsX

 Togglebtn *pTogglebtn)
- bool gslc_ElemXTogglebtnDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)
 - Draw a Togglebtn element on the screen.
- bool gslc_ElemXTogglebtnTouch (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)

Handle touch events to Togglebtn element.

• gslc_tsElemRef * gslc_ElemXTogglebtnFindSelected (gslc_tsGui *pGui, int16_t nGroupId)

Find the togglebtn within a group that has been selected.

Variables

- const char GSLC PMEM ERRSTR NULL []
- const char GSLC PMEM ERRSTR PXD NULL []

9.40.1 Function Documentation

9.40.1.1 gslc_ElemXTogglebtnCreate()

Create a Togglebtn button Element.

Parameters

in	pGui	Pointer to GUI
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)
in	nPage	Page ID to attach element to
in	pXData	Ptr to extended element data structure
in	rElem	Rectangle coordinates defining togglebtn size
in	colThumb	Color of thumb
in	colOnState	Color to indicate on position
in	colOffState	Color to indicate off position
in	bCircular	Style of the toggle button circular or rectangular
in	bChecked	Default state
in	cbTouch	Callback for touch events

Returns

Pointer to Element reference or NULL if failure

9.40.1.2 gslc_ElemXTogglebtnDraw()

Draw a Togglebtn element on the screen.

• Called from gslc_ElemDraw()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)	
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)	
in	eRedraw Redraw mode		

Returns

true if success, false otherwise

9.40.1.3 gslc_ElemXTogglebtnDrawCircularHelp()

9.40.1.4 gslc_ElemXTogglebtnDrawRectangularHelp()

9.40.1.5 gslc_ElemXTogglebtnFindSelected()

Find the togglebtn within a group that has been selected.

Parameters

in	pGui	Pointer to GUI
in	n⊷	Group ID to search
	GroupId	

Returns

Element Ptr or NULL if none selected

9.40.1.6 gslc_ElemXTogglebtnGetState()

Get a Togglebtn element's current state.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference

Returns

Current state

9.40.1.7 gslc_ElemXTogglebtnSetState()

Set a Togglebtn element's current state.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	bOn	New state

Returns

none

9.40.1.8 gslc_ElemXTogglebtnSetStateHelp()

9.40.1.9 gslc_ElemXTogglebtnToggleState()

Toggle a Togglebtn element's current state.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference

Returns

none

9.40.1.10 gslc_ElemXTogglebtnTouch()

Handle touch events to Togglebtn element.

• Called from gslc_ElemSendEventTouch()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eTouch	Touch event type
in	nRelX	Touch X coord relative to element
in	nRelY	Touch Y coord relative to element

Returns

true if success, false otherwise

9.40.2 Variable Documentation

9.40.2.1 ERRSTR_NULL


```
const char GSLC_PMEM ERRSTR_NULL[]
```

9.40.2.2 ERRSTR_PXD_NULL


```
const char GSLC_PMEM ERRSTR_PXD_NULL[]
```

9.41 src/elem/XTogglebtn.h File Reference

```
#include "GUIslice.h"
Include dependency graph for XTogglebtn.h:
```

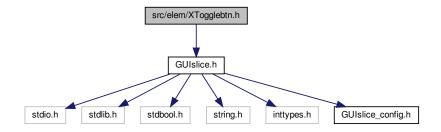

This graph shows which files directly or indirectly include this file:

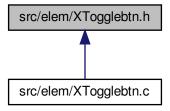

Data Structures

• struct gslc_tsXTogglebtn

Extended data for Togglebtn element.

Macros

- #define GSLC_TYPEX_TOGGLEBTN
- #define gslc_ElemXTogglebtnCreate_P(pGui, nElemId, nPage, nX, nY, nW, nH, colThumb_, colOnState_, colOffState_, bCircular_, bChecked_, cbTouch)

Create a Togglebtn button Element.

Functions

gslc_tsElemRef * gslc_ElemXTogglebtnCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_
tsXTogglebtn *pXData, gslc_tsRect rElem, gslc_tsColor colThumb, gslc_tsColor colOnState, gslc_tsColor
colOffState, bool bCircular, bool bChecked, GSLC_CB_TOUCH cbTouch)

Create a Togglebtn button Element.

• bool gslc_ElemXTogglebtnGetState (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get a Togglebtn element's current state.

void gslc_ElemXTogglebtnSetState (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bOn)

Set a Togglebtn element's current state.

• void gslc_ElemXTogglebtnToggleState (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Toggle a Togglebtn element's current state.

bool gslc_ElemXTogglebtnDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

Draw a Togglebtn element on the screen.

bool gslc_ElemXTogglebtnTouch (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)

Handle touch events to Togglebtn element.

gslc_tsElemRef * gslc_ElemXTogglebtnFindSelected (gslc_tsGui *pGui, int16_t nGroupId)

Find the togglebtn within a group that has been selected.

9.41.1 Macro Definition Documentation

9.41.1.1 gslc_ElemXTogglebtnCreate_P

Create a Togglebtn button Element.

Parameters

in	pGui	Pointer to GUI
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)
in	nPage	Page ID to attach element to
in	nΧ	X coordinate of element
in	nΥ	Y coordinate of element
in	nW	Width of element
in	nH	Height of element
in	colThumb⇔	Color of thumb
	_	
in	colOn⊷	Color to indicate on position
	State_	
in	colOff⇔	Color to indicate off position
	State_	
in	bCircular←	Style of the toggle button circular or rectangular
	_	
in	bChecked←	Default state
in	cbTouch	Callback for touch events

Returns

none

9.41.1.2 GSLC_TYPEX_TOGGLEBTN

```
#define GSLC_TYPEX_TOGGLEBTN
```

9.41.2 Function Documentation

9.41.2.1 gslc_ElemXTogglebtnCreate()

Create a Togglebtn button Element.

Parameters

in	pGui	Pointer to GUI
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)
in	nPage	Page ID to attach element to
in	pXData	Ptr to extended element data structure
in	rElem	Rectangle coordinates defining togglebtn size
in	colThumb	Color of thumb
in	colOnState	Color to indicate on position
in	colOffState	Color to indicate off position
in	bCircular	Style of the toggle button circular or rectangular
in	bChecked	Default state
in	cbTouch	Callback for touch events

Returns

Pointer to Element reference or NULL if failure

9.41.2.2 gslc_ElemXTogglebtnDraw()

Draw a Togglebtn element on the screen.

• Called from gslc_ElemDraw()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.41.2.3 gslc_ElemXTogglebtnFindSelected()

Find the togglebtn within a group that has been selected.

Parameters

in	pGui	Pointer to GUI
in	n⊷	Group ID to search
	GroupId	

Returns

Element Ptr or NULL if none selected

9.41.2.4 gslc_ElemXTogglebtnGetState()

Get a Togglebtn element's current state.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference

Returns

Current state

9.41.2.5 gslc_ElemXTogglebtnSetState()

Set a Togglebtn element's current state.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	bOn	New state

Returns

none

9.41.2.6 gslc_ElemXTogglebtnToggleState()

Toggle a Togglebtn element's current state.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference

Returns

none

9.41.2.7 gslc_ElemXTogglebtnTouch()

Handle touch events to Togglebtn element.

• Called from gslc_ElemSendEventTouch()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eTouch	Touch event type
in	nRelX	Touch X coord relative to element
in	nRelY	Touch Y coord relative to element


Returns

true if success, false otherwise

9.42 src/elem/XToggleImgbtn.c File Reference

```
#include "GUIslice.h"
#include "GUIslice_drv.h"
#include "elem/XToggleImgbtn.h"
#include <stdio.h>
```

Include dependency graph for XToggleImgbtn.c:

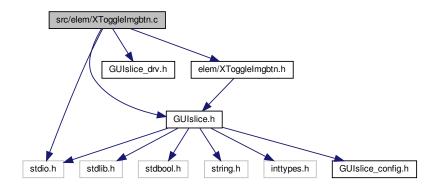

Functions

gslc_tsElemRef * gslc_ElemXToggleImgbtnCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc
 _tsXToggleImgbtn *pXData, gslc_tsRect rElem, gslc_tsImgRef sImgRef, gslc_tsImgRef sImgRefSel, bool
 bOn, GSLC_CB_TOUCH cbTouch)

Create a ToggleImgbtn button Element.

• bool gslc ElemXToggleImgbtnGetState (gslc tsGui *pGui, gslc tsElemRef *pElemRef)

Get a ToggleImgbtn element's current state.

- void gslc_ElemXToggleImgbtnSetStateHelp (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bOn)
- void gslc_ElemXToggleImgbtnSetState (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bOn)

Set a ToggleImgbtn element's current state.

void gslc_ElemXToggleImgbtnToggleState (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Toggle a ToggleImgbtn element's current state.

• bool gslc_ElemXToggleImgbtnDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

Draw a ToggleImgbtn element on the screen.

bool gslc_ElemXToggleImgbtnTouch (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)

Handle touch events to ToggleImgbtn element.

• gslc_tsElemRef * gslc_ElemXToggleImgbtnFindSelected (gslc_tsGui *pGui, int16_t nGroupId)

Find the togglebtn within a group that has been selected.

Variables

- const char GSLC_PMEM ERRSTR_NULL []
- const char GSLC_PMEM ERRSTR_PXD_NULL []

9.42.1 Function Documentation

9.42.1.1 gslc_ElemXToggleImgbtnCreate()

Create a ToggleImgbtn button Element.

Parameters

in	pGui	Pointer to GUI	
in	nElemId	nElemId Element ID to assign (016383 or GSLC_ID_AUTO to autogen)	
in	nPage	Page ID to attach element to	
in	pXData	Ptr to extended element data structure	
in	rElem	Rectangle coordinates defining togglebtn size	
in	sImgRef	Image reference to load (unselected state)	
in	sImgRefSel	Image reference to load (selected state)	
in	bOn	Default state, On or Off	
in	cbTouch	Callback for touch events	

Returns

Pointer to Element reference or NULL if failure

9.42.1.2 gslc_ElemXToggleImgbtnDraw()

Draw a ToggleImgbtn element on the screen.

• Called from gslc_ElemDraw()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.42.1.3 gslc_ElemXToggleImgbtnFindSelected()

```
 \begin{tabular}{ll} gslc\_tsElemRef* & gslc\_ElemXToggleImgbtnFindSelected ( \\ & gslc\_tsGui * pGui, \\ & int16\_t & nGroupId ) \end{tabular}
```

Find the togglebtn within a group that has been selected.

Parameters

in	pGui	Pointer to GUI
in	n⊷	Group ID to search
	GroupId	

Returns

Element Ptr or NULL if none selected

$9.42.1.4 \quad gslc_Elem X Toggle Imgbtn Get State ()$

Get a ToggleImgbtn element's current state.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference

Returns

Current state

9.42.1.5 gslc_ElemXToggleImgbtnSetState()

Set a ToggleImgbtn element's current state.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	bOn	New state

Returns

none

9.42.1.6 gslc_ElemXToggleImgbtnSetStateHelp()

9.42.1.7 gslc_ElemXToggleImgbtnToggleState()

Toggle a ToggleImgbtn element's current state.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference

Returns

none

9.42.1.8 gslc_ElemXToggleImgbtnTouch()

Handle touch events to ToggleImgbtn element.

Called from gslc_ElemSendEventTouch()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eTouch	Touch event type
in	nRelX	Touch X coord relative to element
in	nRelY	Touch Y coord relative to element

Returns

true if success, false otherwise

9.42.2 Variable Documentation

9.42.2.1 ERRSTR_NULL

```
const char GSLC_PMEM ERRSTR_NULL[]
```


9.42.2.2 ERRSTR_PXD_NULL

```
{\tt const\ char\ GSLC\_PMEM\ ERRSTR\_PXD\_NULL[\ ]}
```


9.43 src/elem/XToggleImgbtn.h File Reference

#include "GUIslice.h"

Include dependency graph for XToggleImgbtn.h:

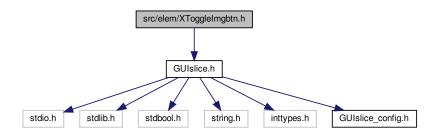

This graph shows which files directly or indirectly include this file:

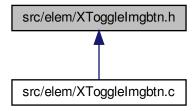

Data Structures

• struct gslc_tsXToggleImgbtn

Extended data for ToggleImgbtn element.

Macros

- #define GSLC_TYPEX_TOGGLEIMGBTN
- #define gslc_ElemXToggleImgbtnCreate_P(pGui, nElemId, nPage, nX, nY, nW, nH, sImgRef_, sImgRefSel ← _, bOn_, cbTouch)

Create a ToggleImgbtn button Element.

Functions

gslc_tsElemRef * gslc_ElemXToggleImgbtnCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc
 _tsXToggleImgbtn *pXData, gslc_tsRect rElem, gslc_tsImgRef sImgRef, gslc_tsImgRef sImgRefSel, bool
 bOn, GSLC_CB_TOUCH cbTouch)

Create a ToggleImgbtn button Element.

bool gslc_ElemXToggleImgbtnGetState (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get a ToggleImgbtn element's current state.

void gslc ElemXToggleImgbtnSetState (gslc tsGui *pGui, gslc tsElemRef *pElemRef, bool bOn)

Set a ToggleImgbtn element's current state.

void gslc ElemXToggleImgbtnToggleState (gslc tsGui *pGui, gslc tsElemRef *pElemRef)

Toggle a ToggleImgbtn element's current state.

bool gslc ElemXToggleImgbtnDraw (void *pvElemRef, gslc teRedrawType eRedraw)

Draw a ToggleImgbtn element on the screen.

bool gslc_ElemXToggleImgbtnTouch (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)

Handle touch events to ToggleImgbtn element.

gslc_tsElemRef * gslc_ElemXToggleImgbtnFindSelected (gslc_tsGui *pGui, int16_t nGroupId)

Find the togglebtn within a group that has been selected.

9.43.1 Macro Definition Documentation

9.43.1.1 gslc_ElemXToggleImgbtnCreate_P

Create a ToggleImgbtn button Element.

Parameters

in	pGui	Pointer to GUI
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)
in	nPage	Page ID to attach element to
in	nΧ	X coordinate of element
in	nY	Y coordinate of element
in	nW	Width of element
in	nH	Height of element
in	sImgRef_	Image reference to load (unselected state)
in	sImgRef⊷	Image reference to load (selected state)
	Sel_	
in	bOn_	Default state, On or Off
in	cbTouch	Callback for touch events

Generated by Doxygen

Returns

none

9.43.1.2 GSLC_TYPEX_TOGGLEIMGBTN

```
#define GSLC_TYPEX_TOGGLEIMGBTN
```

9.43.2 Function Documentation

9.43.2.1 gslc_ElemXToggleImgbtnCreate()

Create a ToggleImgbtn button Element.

Parameters

in	pGui	Pointer to GUI
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)
in	nPage	Page ID to attach element to
in	pXData	Ptr to extended element data structure
in	rElem	Rectangle coordinates defining togglebtn size
in	sImgRef	Image reference to load (unselected state)
in	sImgRefSel	Image reference to load (selected state)
in	bOn	Default state, On or Off
in	cbTouch	Callback for touch events

Returns

Pointer to Element reference or NULL if failure

9.43.2.2 gslc_ElemXToggleImgbtnDraw()

Draw a ToggleImgbtn element on the screen.

• Called from gslc_ElemDraw()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.43.2.3 gslc_ElemXToggleImgbtnFindSelected()

```
\label{eq:gslc_tselemRef*} $\operatorname{gslc\_ElemXToggleImgbtnFindSelected} \ ( \\ \operatorname{gslc\_tsGui} \ * \ pGui, \\ \operatorname{int16\_t} \ nGroupId \ )
```

Find the togglebtn within a group that has been selected.

Parameters

in	pGui	Pointer to GUI
in	n⊷	Group ID to search
	GroupId	

Returns

Element Ptr or NULL if none selected

9.43.2.4 gslc_ElemXToggleImgbtnGetState()

Get a ToggleImgbtn element's current state.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference

Returns

Current state

9.43.2.5 gslc_ElemXToggleImgbtnSetState()

Set a ToggleImgbtn element's current state.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	bOn	New state

Returns

none

9.43.2.6 gslc_ElemXToggleImgbtnToggleState()

Toggle a ToggleImgbtn element's current state.

Parameters

iı	า	pGui	Pointer to GUI
iı	า	pElemRef	Pointer to Element reference

Returns

none

9.43.2.7 gslc_ElemXToggleImgbtnTouch()

Handle touch events to ToggleImgbtn element.

Called from gslc_ElemSendEventTouch()

Parameters


in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eTouch	Touch event type
in	nRelX	Touch X coord relative to element
in	nRelY	Touch Y coord relative to element

Returns

true if success, false otherwise

9.44 src/GUIslice.c File Reference

```
#include "GUIslice_config.h"
#include "GUIslice.h"
#include "GUIslice_drv.h"
#include <stdio.h>
#include <stdarg.h>
#include "GUIslice_version.h"
Include dependency graph for GUIslice.c:
```

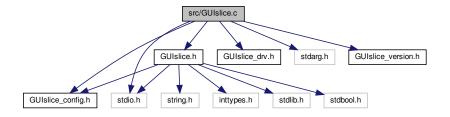

Enumerations

enum gslc_teDebugPrintState {
 GSLC_S_DEBUG_PRINT_NORM, GSLC_S_DEBUG_PRINT_TOKEN, GSLC_S_DEBUG_PRINT_UINT16,
 GSLC_S_DEBUG_PRINT_CHAR,
 GSLC_S_DEBUG_PRINT_STR, GSLC_S_DEBUG_PRINT_STR_P}

Functions

char * gslc GetVer (gslc tsGui *pGui)

Get the GUIslice version number.

const char * gslc_GetNameDisp (gslc_tsGui *pGui)

Get the GUIslice display driver name.

const char * gslc_GetNameTouch (gslc_tsGui *pGui)

Get the GUIslice touch driver name.

void * gslc_GetDriverDisp (gslc_tsGui *pGui)

Get the native display driver instance.

void * gslc GetDriverTouch (gslc tsGui *pGui)

Get the native touch driver instance.

bool gslc_Init (gslc_tsGui *pGui, void *pvDriver, gslc_tsPage *asPage, uint8_t nMaxPage, gslc_tsFont *as←
 Font, uint8_t nMaxFont)

Initialize the GUIslice library.

void gslc SetPinPollFunc (gslc tsGui *pGui, GSLC CB PIN POLL pfunc)

Specify the callback function that is used to collect the state of any external inputs (eg.

void gslc InitInputMap (gslc tsGui *pGui, gslc tsInputMap *asInputMap, uint8 t nInputMapMax)

Specify the mapping between external pin inputs (fetched by the SetPinPollFunc() callback and the GUI actions.

Add an entry into the external input mapping table.

- bool gslc_InputMapLookup (gslc_tsGui *pGui, gslc_teInputRawEvent eInputEvent, int16_t nInputVal, gslc
 teAction *peAction, int16 t *pnActionVal)
- void gslc_InitDebug (GSLC_CB_DEBUG_OUT pfunc)

Initialize debug output.

void gslc_DebugPrintf (const char *pFmt,...)

Optimized printf routine for GUIslice debug/error output.

void gslc_Quit (gslc_tsGui *pGui)

Exit the GUIslice environment.

void gslc_Update (gslc_tsGui *pGui)

Perform main GUIslice handling functions.

gslc_tsEvent gslc_EventCreate (gslc_tsGui *pGui, gslc_teEventType eType, uint8_t nSubType, void *pv←
 Scope, void *pvData)

Create an event structure.

bool gslc_lsInRect (int16_t nSelX, int16_t nSelY, gslc_tsRect rRect)

Determine if a coordinate is inside of a rectangular region.

• bool gslc_lslnWH (int16_t nSelX, int16_t nSelY, uint16_t nWidth, uint16_t nHeight)

Determine if a coordinate is inside of a width x height region.

- void gslc_OrderCoord (int16_t *pnX0, int16_t *pnY0, int16_t *pnX1, int16_t *pnY1)
- bool gslc_ClipPt (gslc_tsRect *pClipRect, int16_t nX, int16_t nY)

Perform basic clipping of a single point to a clipping region.

• bool gslc_ClipLine (gslc_tsRect *pClipRect, int16_t *pnX0, int16_t *pnY0, int16_t *pnX1, int16_t *pnY1)

Perform basic clipping of a line to a clipping region.

• bool gslc_ClipRect (gslc_tsRect *pClipRect, gslc_tsRect *pRect)

Perform basic clipping of a rectangle to a clipping region.

gslc_tslmgRef gslc_ResetImage ()

Create a blank image reference structure.

gslc_tslmgRef gslc_GetImageFromFile (const char *pFname, gslc_teImgRefFlags eFmt)

Create an image reference to a bitmap file in LINUX filesystem.

• gslc_tslmgRef gslc_GetlmageFromSD (const char *pFname, gslc_telmgRefFlags eFmt)

Create an image reference to a bitmap file in SD card.

gslc_tslmgRef gslc_GetImageFromRam (unsigned char *pImgBuf, gslc_teImgRefFlags eFmt)

Create an image reference to a bitmap in SRAM.

gslc_tslmgRef gslc_GetImageFromProg (const unsigned char *pImgBuf, gslc_teImgRefFlags eFmt)

Create an image reference to a bitmap in program memory (PROGMEM)

int16_t gslc_sinFX (int16_t n64Ang)

Calculate fixed-point sine function from fractional degrees.

int16_t gslc_cosFX (int16_t n64Ang)

Calculate fixed-point cosine function from fractional degrees.

void gslc_PolarToXY (uint16_t nRad, int16_t n64Ang, int16_t *nDX, int16_t *nDY)

Convert polar coordinate to cartesian.

gslc_tsColor gslc_ColorBlend2 (gslc_tsColor colStart, gslc_tsColor colEnd, uint16_t nMidAmt, uint16_t n

BlendAmt)

Create a color based on a blend between two colors.

gslc_tsColor gslc_ColorBlend3 (gslc_tsColor colStart, gslc_tsColor colMid, gslc_tsColor colEnd, uint16_t n
 MidAmt, uint16 t nBlendAmt)

Create a color based on a blend between three colors.

bool gslc_ColorEqual (gslc_tsColor a, gslc_tsColor b)

Check whether two colors are equal.

void gslc DrawSetPixel (gslc tsGui *pGui, int16 t nX, int16 t nY, gslc tsColor nCol)

Set a pixel on the active screen to the given color with lock.

- void gslc_DrawLine (gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, gslc_tsColor nCol)

 Draw an arbitrary line using Bresenham's algorithm.
- void gslc_DrawLineH (gslc_tsGui *pGui, int16_t nX, int16_t nY, uint16_t nW, gslc_tsColor nCol)

Draw a horizontal line.

• void gslc_DrawLineV (gslc_tsGui *pGui, int16_t nX, int16_t nY, uint16_t nH, gslc_tsColor nCol)

Draw a vertical line.

void gslc_DrawLinePolar (gslc_tsGui *pGui, int16_t nX, int16_t nY, uint16_t nRadStart, uint16_t nRadEnd, int16_t n64Ang, gslc_tsColor nCol)

Draw a polar ray segment.

void gslc DrawFrameRect (gslc tsGui *pGui, gslc tsRect rRect, gslc tsColor nCol)

Draw a framed rectangle.

• void gslc_DrawFrameRoundRect (gslc_tsGui *pGui, gslc_tsRect rRect, int16_t nRadius, gslc_tsColor nCol)

Draw a framed rounded rectangle.

void gslc DrawFillRect (gslc tsGui *pGui, gslc tsRect rRect, gslc tsColor nCol)

Draw a filled rectangle.

void gslc_DrawFillRoundRect (gslc_tsGui *pGui, gslc_tsRect rRect, int16_t nRadius, gslc_tsColor nCol)

Draw a filled rounded rectangle.

gslc_tsRect gslc_ExpandRect (gslc_tsRect rRect, int16_t nExpandW, int16_t nExpandH)

Expand or contract a rectangle in width and/or height (equal amounts on both side), based on the centerpoint of the rectangle.

void gslc_UnionRect (gslc_tsRect *pRect, gslc_tsRect rAddRect)

Expand a rect to include another rect.

void gslc_InvalidateRgnReset (gslc_tsGui *pGui)

Reset the invalidation region.

void gslc_InvalidateRgnScreen (gslc_tsGui *pGui)

Mark the entire screen as invalidated.

void gslc_InvalidateRgnPage (gslc_tsGui *pGui, gslc_tsPage *pPage)

Include an entire page (eg.

void gslc InvalidateRgnAdd (gslc tsGui *pGui, gslc tsRect rAddRect)

Add a rectangular region to the invalidation region.

void gslc_DrawFrameCircle (gslc_tsGui *pGui, int16_t nMidX, int16_t nMidY, uint16_t nRadius, gslc_tsColor nCol)

Draw a framed circle.

void gslc_DrawFillCircle (gslc_tsGui *pGui, int16_t nMidX, int16_t nMidY, uint16_t nRadius, gslc_tsColor n←
 Col)

Draw a filled circle.

void gslc_DrawFrameTriangle (gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int16_t nX2, int16_t nY2, gslc_tsColor nCol)

Draw a framed triangle.

- void gslc SwapCoords (int16 t*pnXa, int16 t*pnYa, int16 t*pnXb, int16 t*pnYb)
- void gslc_DrawFillTriangle (gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int16_t nX2, int16_t nY2, gslc_tsColor nCol)

Draw a filled triangle.

void gslc_DrawFrameQuad (gslc_tsGui *pGui, gslc_tsPt *psPt, gslc_tsColor nCol)

Draw a framed quadrilateral.

void gslc_DrawFillQuad (gslc_tsGui *pGui, gslc_tsPt *psPt, gslc_tsColor nCol)

Draw a filled quadrilateral.

- void gslc_DrawFillSectorBase (gslc_tsGui *pGui, int16_t nQuality, int16_t nMidX, int16_t nMidY, int16_t n←
 Rad1, int16_t nRad2, gslc_tsColor cArcStart, gslc_tsColor cArcEnd, bool bGradient, int16_t nAngGradStart, int16_t nAngGradRange, int16_t nAngSecStart, int16_t nAngSecEnd)
- void gslc_DrawFillGradSector (gslc_tsGui *pGui, int16_t nQuality, int16_t nMidX, int16_t nMidY, int16_t n←
 Rad1, int16_t nRad2, gslc_tsColor cArcStart, gslc_tsColor cArcEnd, int16_t nAngSecStart, int16_t nAng←
 SecEnd, int16_t nAngGradStart, int16_t nAngGradRange)

Draw a gradient filled sector of a circle with support for inner and outer radius.

void gslc_DrawFillSector (gslc_tsGui *pGui, int16_t nQuality, int16_t nMidX, int16_t nMidY, int16_t nRad1, int16_t nRad2, gslc_tsColor cArc, int16_t nAngSecStart, int16_t nAngSecEnd)

Draw a flat filled sector of a circle with support for inner and outer radius.

- bool gslc_FontSetBase (gslc_tsGui *pGui, uint8_t nFontInd, int16_t nFontId, gslc_teFontRefType eFontRef
 —
 Type, const void *pvFontRef, uint16_t nFontSz)
- bool gslc_FontSet (gslc_tsGui *pGui, int16_t nFontId, gslc_teFontRefType eFontRefType, const void *pv←
 FontRef, uint16_t nFontSz)

Load a font into the local font cache and store as font ID (nFontId)

bool gslc_FontAdd (gslc_tsGui *pGui, int16_t nFontId, gslc_teFontRefType eFontRefType, const void *pv←
FontRef, uint16_t nFontSz)

Load a font into the local font cache and assign font ID (nFontId).

gslc tsFont * gslc FontGet (gslc tsGui *pGui, int16 t nFontId)

Fetch a font from its ID value.

bool gslc_FontSetMode (gslc_tsGui *pGui, int16_t nFontId, gslc_teFontRefMode eFontMode)

Set the font operating mode.

bool gslc_PageEvent (void *pvGui, gslc_tsEvent sEvent)

Common event handler function for a page.

void gslc_PageAdd (gslc_tsGui *pGui, int16_t nPageId, gslc_tsElem *psElem, uint16_t nMaxElem, gslc_
tsElemRef *psElemRef, uint16_t nMaxElemRef)

Add a page to the GUI.

int gslc_GetPageCur (gslc_tsGui *pGui)

Fetch the current page ID.

void gslc_SetStackPage (gslc_tsGui *pGui, uint8_t nStackPos, int16_t nPageId)

Assign a page to the page stack.

void gslc SetStackState (gslc tsGui *pGui, uint8 t nStackPos, bool bActive, bool bDoDraw)

Change the status of a page in a page stack.

void gslc_SetPageBase (gslc_tsGui *pGui, int16_t nPageId)

Assigns a page for the base layer in the page stack.

void gslc_SetPageCur (gslc_tsGui *pGui, int16_t nPageId)

Select a page for the current layer in the page stack.

void gslc_SetPageOverlay (gslc_tsGui *pGui, int16_t nPageId)

Select a page for the overlay layer in the page stack.

void gslc PopupShow (gslc tsGui *pGui, int16 t nPageId, bool bModal)

Show a popup dialog.

void gslc_PopupHide (gslc_tsGui *pGui)

Hides the currently active popup dialog.

void gslc_PageRedrawSet (gslc_tsGui *pGui, bool bRedraw)

Update the need-redraw status for the current page.

bool gslc_PageRedrawGet (gslc_tsGui *pGui)

Get the need-redraw status for the current page.

void gslc_PageRedrawCalc (gslc_tsGui *pGui)

Perform a redraw calculation on the page to determine if additional elements should also be redrawn.

void gslc_PageRedrawGo (gslc_tsGui *pGui)

Redraw all elements on the active page.

void gslc_PageFlipSet (gslc_tsGui *pGui, bool bNeeded)

Indicate whether the screen requires page flip.

bool gslc_PageFlipGet (gslc_tsGui *pGui)

Get state of pending page flip state.

void gslc_PageFlipGo (gslc_tsGui *pGui)

Update the visible screen if page has been marked for flipping.

gslc_tsPage * gslc_PageFindById (gslc_tsGui *pGui, int16_t nPageId)

Find a page in the GUI by its ID.

• gslc_tsElemRef * gslc_PageFindElemById (gslc_tsGui *pGui, int16_t nPageId, int16_t nElemId)

Find an element in the GUI by its Page ID and Element ID.

int gslc_ElemGetId (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get an Element ID from an element structure.

• uint8_t gslc_GetElemRefFlag (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, uint8_t nFlagMask)

Get the flags associated with an element reference.

void gslc_SetElemRefFlag (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, uint8_t nFlagMask, uint8_t n← FlagVal)

Set the flags associated with an element reference.

gslc_tsElem * gslc_GetElemFromRef (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Returns a pointer to an element from an element reference, copying from FLASH to RAM if element is stored in PROGMEM.

 $\bullet \ gslc_tsElem* gslc_GetElemFromRefD \ (gslc_tsGui*pGui, gslc_tsElemRef* pElemRef, int 16_t \ nLineNum) \\$

Returns a pointer to an element from an element reference.

void * gslc_GetXDataFromRef (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nType, int16_t nLine ← Num)

Returns a pointer to the data structure associated with an extended element.

• void gslc_SetRoundRadius (gslc_tsGui *pGui, uint8_t nRadius)

Set the global rounded radius.

void gslc_SetFocusCol (gslc_tsGui *pGui, gslc_tsColor colFocusNone, gslc_tsColor colFocus, gslc_tsColor colFocusEdit)

Set the global focus color choices.

 gslc_tsElemRef * gslc_ElemCreateTxt (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsRect rElem, char *pStrBuf, uint8_t nStrBufMax, int16_t nFontId)

Create a Text Element.

• gslc_tsElemRef * gslc_ElemCreateBtnTxt (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsRect rElem, char *pStrBuf, uint8_t nStrBufMax, int16_t nFontId, GSLC_CB_TOUCH cbTouch)

Create a textual Button Element.

• gslc_tsElemRef * gslc_ElemCreateBtnImg (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsRect rElem, gslc_tsImgRef sImgRef, gslc_tsImgRef sImgRefSel, GSLC_CB_TOUCH cbTouch)

Create a graphical Button Element.

gslc_tsElemRef * gslc_ElemCreateBox (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsRect r← Elem)

Create a Box Element.

gslc_tsElemRef * gslc_ElemCreateLine (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1)

Create a Line Element.

gslc_tsElemRef * gslc_ElemCreateImg (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsRect r
 Elem, gslc_tsImgRef sImgRef)

Create an image Element.

bool gslc_ElemEvent (void *pvGui, gslc_tsEvent sEvent)

Common event handler function for an element.

void gslc_ElemDraw (gslc_tsGui *pGui, int16_t nPageId, int16_t nElemId)

Draw an element to the active display.

void gslc_DrawTxtBase (gslc_tsGui *pGui, char *pStrBuf, gslc_tsRect rTxt, gslc_tsFont *pTxtFont, gslc
 _teTxtFlags eTxtFlags, int8_t eTxtAlign, gslc_tsColor colTxt, gslc_tsColor colBg, int16_t nMarginW, int16_t nMarginH)

Draw text with full text justification.

 $\bullet \ \ bool\ gslc_ElemDrawByRef\ (gslc_tsGui\ *pGui,\ gslc_tsElemRef\ *pElemRef,\ gslc_teRedrawType\ eRedraw)$

Draw an element to the active display.

• void gslc_ElemSetFillEn (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bFillEn)

Set the fill state for an Element.

void gslc_ElemSetFrameEn (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bFrameEn)

Set the frame state for an Element.

• void gslc_ElemSetRoundEn (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bRoundEn)

Set the rounded frame/fill state for an Element.

void gslc_ElemSetCol (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colFrame, gslc_tsColor colFill, gslc_tsColor colFillGlow)

Update the common color selection for an Element.

void gslc_ElemSetGlowCol (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colFrameGlow, gslc_tsColor colFillGlow, gslc_tsColor colTxtGlow)

Update the common color selection for glowing state of an Element.

• void gslc_ElemSetGroup (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int nGroupId)

Set the group ID for an element.

int gslc_ElemGetGroup (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get the group ID for an element.

void gslc ElemSetRect (gslc tsGui *pGui, gslc tsElemRef *pElemRef, gslc tsRect rElem)

Set the position and size for an element.

• gslc_tsRect gslc_ElemGetRect (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get the rectangular region for an element.

void gslc ElemSetTxtAlign (gslc tsGui *pGui, gslc tsElemRef *pElemRef, unsigned nAlign)

Set the alignment of a textual element (horizontal and vertical)

void gslc_ElemSetTxtMargin (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, unsigned nMargin)

Set the margin around of a textual element.

void gslc_ElemSetTxtMarginXY (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int8_t nMarginX, int8_t n
 MarginY)

Set the margin around of a textual element (X & Y offsets can be different)

void gslc_StrCopy (char *pDstStr, const char *pSrcStr, uint16_t nDstLen)

Helper routine to perform string deep copy.

• void gslc_ElemSetTxtStr (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, const char *pStr)

Update the text string associated with an Element.

char * gslc ElemGetTxtStr (gslc tsGui *pGui, gslc tsElemRef *pElemRef)

Fetch the current text string associated with an Element.

• void gslc_ElemSetTxtCol (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colVal)

Update the text string color associated with an Element ID.

void gslc ElemSetTxtMem (gslc tsGui *pGui, gslc tsElemRef *pElemRef, gslc teTxtFlags eFlags)

Update the text string location in memory.

void gslc_ElemSetTxtEnc (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_teTxtFlags eFlags)

Update the text string encoding mode.

void gslc_ElemUpdateFont (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int nFontId)

Update the Font selected for an Element's text.

void gslc_ElemSetRedraw (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_teRedrawType eRedraw)

Update the need-redraw status for an element.

gslc_teRedrawType gslc_ElemGetRedraw (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get the need-redraw status for an element.

void gslc_ElemSetGlow (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bGlowing)

Update the glowing indicator for an element.

bool gslc_ElemGetGlow (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get the glowing indicator for an element.

void gslc ElemSetFocus (gslc tsGui *pGui, gslc tsElemRef *pElemRef, bool bFocused)

Update the focused indicator for an element.

bool gslc_ElemGetFocus (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get the focused indicator for an element.

- bool gslc_ElemGetEditEn (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)
- void gslc_ElemSetEdit (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bEditing)

Update the editing indicator for an element.

bool gslc_ElemGetEdit (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get the editing indicator for an element.

void gslc_ElemSetVisible (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bVisible)

Update the visibility status for an element.

bool gslc_ElemGetVisible (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get the visibility status for an element.

• bool gslc_ElemGetOnScreen (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Determine whether an element is visible on the screen.

void gslc_ElemSetGlowEn (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bGlowEn)

Update the glowing enable for an element.

• bool gslc_ElemGetGlowEn (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get the glowing enable for an element.

bool gslc_ElemGetFocusEn (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get the focus enable for an element.

void gslc ElemSetFocusEn (gslc tsGui *pGui, gslc tsElemRef *pElemRef, bool bFocusEn)

Set the focus enable for an element.

• void gslc ElemSetClickEn (gslc tsGui *pGui, gslc tsElemRef *pElemRef, bool bClickEn)

Update the click enable for an element.

- void gslc_ElemSetTouchFunc (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, GSLC_CB_TOUCH funcCb)

 Update the touch function callback for an element.
- void gslc_ElemSetStyleFrom (gslc_tsGui *pGui, gslc_tsElemRef *pElemRefSrc, gslc_tsElemRef *pElem←
 RefDest)

Copy style settings from one element to another.

• int8_t gslc_ElemCalcResizeForFocus (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Calculate the change in dimensions of an element to account for any change in focus and/or frame attributes.

void gslc_ElemGrowRect (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int8_t nDelta)

Increase or decrease the size of an element's region.

void gslc_ResetRectState (gslc_tsRectState *pState)

Reset the element region state struct.

- void gslc_ElemCalcRectState (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsRectState *pState)

 Calculate the element region state struct.
- void gslc_ElemSetDrawFunc (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, GSLC_CB_DRAW funcCb)

 Assign the drawing callback function for an element.
- void gslc_ElemSetTickFunc (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, GSLC_CB_TICK funcCb)
 Assign the tick callback function for an element.
- bool gslc_ElemOwnsCoord (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nX, int16_t nY, bool b
 OnlyClickEn)

Determine if a coordinate is inside of an element.

- void gslc_CollectInput (gslc_tsGui *pGui, gslc_tsCollect *pCollect, gslc_tsEventTouch *pEventTouch)

 Handle direct input events within the element collection.
- void gslc_CollectTouch (gslc_tsGui *pGui, gslc_tsCollect *pCollect, gslc_tsEventTouch *pEventTouch)

 Handle touch events within the element collection.
- bool gslc_CollectTouchCompound (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16 t nRelY, gslc tsCollect *pCollect)

Handle dispatch of touch (up,down,move) events to compound elements sub elements.

- bool gslc_ElemCanFocus (gslc_tsGui *pGui, gslc_tsCollect *pCollect, int16_t nElemInd)
- gslc_tsElemRef * gslc_FocusElemGet (gslc_tsGui *pGui)

Find the currently focused element.

• void gslc_FocusElemIndSet (gslc_tsGui *pGui, int16_t nPageInd, int16_t nElemInd, bool bFocus)

Change the focus to the indexed element on the specified page.

void gslc_FocusSetToTrackedElem (gslc_tsGui *pGui, gslc_tsCollect *pCollect)

Change the focus to the currently-tracked element.

void gslc_FocusPageStep (gslc_tsGui *pGui, bool bNext)

Advance the focus to the next page in the page stack.

• int16 t gslc FocusElemStep (gslc tsGui *pGui, bool bNext)

Advance the focus to the next element in the focused page.

void gslc_TrackInput (gslc_tsGui *pGui, gslc_teInputRawEvent eInputEvent, int16_t nInputVal)

Handles a direct input event and performs the necessary tracking, glowing and selection actions depending on the state.

void gslc_TrackTouch (gslc_tsGui *pGui, gslc_tsPage *pPage, int16_t nX, int16_t nY, uint16_t nPress)

Handles a touch event and performs the necessary tracking, glowing and selection actions depending on the press state.

• bool gslc_InitTouch (gslc_tsGui *pGui, const char *acDev)

Initialize the touchscreen device driver.

 bool gslc_GetTouch (gslc_tsGui *pGui, int16_t *pnX, int16_t *pnY, uint16_t *pnPress, gslc_teInputRawEvent *peInputEvent, int16_t *pnInputVal)

Initialize the touchscreen device driver.

void gslc_SetTouchRemapEn (gslc_tsGui *pGui, bool bEn)

Configure touchscreen remapping.

void gslc_SetTouchRemapCal (gslc_tsGui *pGui, uint16_t nXMin, uint16_t nXMax, uint16_t nYMin, uint16_t nYMax)

Configure touchscreen calibration remapping values.

void gslc SetTouchPressCal (gslc tsGui *pGui, uint16 t nPressMin, uint16 t nPressMax)

Configure touchscreen calibration pressure values.

void gslc SetTouchRemapYX (gslc tsGui *pGui, bool bSwap)

Configure touchscreen XY swap.

void gslc_SetTouchEn (gslc_tsGui *pGui, bool bEn)

Make touchscreen sensitive (GUI reacts to touch events) or insensitive (GUI ignores touch events)

• bool gslc GetTouchEn (gslc tsGui *pGui)

Get whether the GUI will react to touch events or not.

gslc_tsElem gslc_ElemCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPageId, int16_t nType, gslc_ts←
 Rect rElem, char *pStrBuf, uint8 t nStrBufMax, int16 t nFontId)

Create a new element with default styling.

bool gslc CollectEvent (void *pvGui, gslc tsEvent sEvent)

Common event handler function for an element collection.

gslc_tsElemRef * gslc_CollectElemAdd (gslc_tsGui *pGui, gslc_tsCollect *pCollect, const gslc_tsElem *p←
 Elem, gslc_teElemRefFlags eFlags)

Add an element to a collection.

bool gslc_CollectGetRedraw (gslc_tsGui *pGui, gslc_tsCollect *pCollect)

Determine if any elements in a collection need redraw.

gslc_tsElemRef * gslc_ElemAdd (gslc_tsGui *pGui, int16_t nPageId, gslc_tsElem *pElem, gslc_teElem←
 RefFlags eFlags)

Add the Element to the list of generated elements in the GUI environment.

gslc_tsRect gslc_GetClipRect (gslc_tsGui *pGui)

Get the current the clipping rectangle.

bool gslc_SetClipRect (gslc_tsGui *pGui, gslc_tsRect *pRect)

Set the clipping rectangle for further drawing.

- bool gslc_lmgRefEqual (gslc_tslmgRef *plmgRef1, gslc_tslmgRef *plmgRef2)
- void gslc_ElemSetImage (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsImgRef sImgRef, gslc_ts⇔ ImgRef sImgRefSel)

Set an element to use a bitmap image.

• bool gslc_SetBkgndImage (gslc_tsGui *pGui, gslc_tsImgRef sImgRef)

Configure the background to use a bitmap image.

bool gslc SetBkgndColor (gslc tsGui *pGui, gslc tsColor nCol)

Configure the background to use a solid color.

• bool gslc_SetTransparentColor (gslc_tsGui *pGui, gslc_tsColor nCol)

Configure the color to use for image transparency.

• bool gslc GuiRotate (gslc tsGui *pGui, uint8 t nRotation)

Dynamically change rotation, automatically adapt touchscreen axes swap/flip.

bool gslc_ElemSendEventTouch (gslc_tsGui *pGui, gslc_tsElemRef *pElemRefTracked, gslc_teTouch e
 — Touch, int16_t nX, int16_t nY)

Trigger an element's touch event.

void gslc_ResetElem (gslc_tsElem *pElem)

Initialize an Element struct.

void gslc_ResetFont (gslc_tsFont *pFont)

Initialize a Font struct.

void gslc_ElemDestruct (gslc_tsElem *pElem)

Free up any members associated with an element.

void gslc_CollectDestruct (gslc_tsGui *pGui, gslc_tsCollect *pCollect)

Free up any members associated with an element collection.

void gslc_PageDestruct (gslc_tsGui *pGui, gslc_tsPage *pPage)

Free up any members associated with a page.

void gslc_GuiDestruct (gslc_tsGui *pGui)

Free up any surfaces associated with the GUI, pages, collections and elements.

void gslc_CollectReset (gslc_tsCollect *pCollect, gslc_tsElem *asElem, uint16_t nElemMax, gslc_tsElemRef
 *asElemRef, uint16_t nElemRefMax)

Reset the members of an element collection.

• gslc_tsElemRef * gslc_CollectFindElemById (gslc_tsGui *pGui, gslc_tsCollect *pCollect, int16_t nElemId)

Find an element in a collection by its Element ID.

int gslc_CollectGetNextId (gslc_tsGui *pGui, gslc_tsCollect *pCollect)

Allocate the next available Element ID in a collection.

gslc_tsElemRef * gslc_CollectGetElemRefTracked (gslc_tsGui *pGui, gslc_tsCollect *pCollect)

Get the element within a collection that is currently being tracked.

void gslc_CollectSetElemTracked (gslc_tsGui *pGui, gslc_tsCollect *pCollect, gslc_tsElemRef *pElemRef, int16 t nElemInd)

Set the element within a collection that is currently being tracked.

gslc_tsElemRef * gslc_CollectFindElemFromCoord (gslc_tsGui *pGui, gslc_tsCollect *pCollect, int16_t nX, int16_t nY, int16_t *pnElemInd)

Find an element in a collection by a coordinate coordinate.

• void gslc_CollectSetParent (gslc_tsGui *pGui, gslc_tsCollect *pCollect, gslc_tsElemRef *pElemRefParent)

Assign the parent element reference to all elements within a collection.

Variables

GSLC_CB_DEBUG_OUT g_pfDebugOut

Global debug output function.

- const uint16_t m_nLUTSinF0X16 [257]
- const char GSLC_PMEM ERRSTR_NULL []
- const char GSLC_PMEM ERRSTR_PXD_NULL []

9.44.1 Enumeration Type Documentation

9.44.1.1 gslc teDebugPrintState

enum gslc_teDebugPrintState

Enumerator

GSLC_S_DEBUG_PRINT_NORM	
GSLC_S_DEBUG_PRINT_TOKEN	
GSLC_S_DEBUG_PRINT_UINT16	
GSLC_S_DEBUG_PRINT_CHAR	
GSLC_S_DEBUG_PRINT_STR	
GSLC_S_DEBUG_PRINT_STR_P	

9.44.2 Function Documentation

9.44.2.1 gslc_DrawFillSectorBase()

```
void gslc_DrawFillSectorBase (
    gslc_tsGui * pGui,
    int16_t nQuality,
    int16_t nMidX,
    int16_t nMidY,
    int16_t nRad1,
    int16_t nRad2,
    gslc_tsColor cArcStart,
    gslc_tsColor cArcEnd,
    bool bGradient,
    int16_t nAngGradStart,
    int16_t nAngGradRange,
    int16_t nAngSecStart,
    int16_t nAngSecEnd )
```

9.44.2.2 gslc_ElemCanFocus()

9.44.2.3 gslc_ElemGetEditEn()

Todo Doc

9.44.2.4 gslc_FontSetBase()

9.44.2.5 gslc_lmgRefEqual()

9.44.2.6 gslc_OrderCoord()

```
void gslc_OrderCoord (
    int16_t * pnX0,
    int16_t * pnY0,
    int16_t * pnX1,
    int16_t * pnY1)
```

9.44.2.7 gslc_SwapCoords()

```
void gslc_SwapCoords (
    int16_t * pnXa,
    int16_t * pnYa,
    int16_t * pnXb,
    int16_t * pnYb )
```

9.44.3 Variable Documentation

9.44.3.1 ERRSTR_NULL

```
const char ERRSTR_NULL[]
```

9.44.3.2 ERRSTR_PXD_NULL

```
const char GSLC_PMEM ERRSTR_PXD_NULL[]
```

9.44.3.3 g_pfDebugOut

```
GSLC_CB_DEBUG_OUT g_pfDebugOut
```

Global debug output function.


• The user assigns this function via gslc_InitDebug()

9.44.3.4 m_nLUTSinF0X16

const uint16_t m_nLUTSinF0X16

9.45 src/GUIslice.h File Reference

```
#include <stdio.h>
#include <stdlib.h>
#include <stdbool.h>
#include <string.h>
#include <inttypes.h>
#include "GUIslice_config.h"
Include dependency graph for GUIslice.h:
```

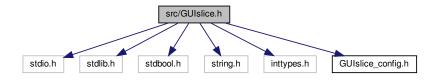

This graph shows which files directly or indirectly include this file:



Data Structures

struct gslc_tsRect

Rectangular region. Defines X,Y corner coordinates plus dimensions.

struct gslc_tsPt

Define point coordinates.

struct gslc_tsColor

Color structure. Defines RGB triplet.

• struct gslc_tsRectState

State associated with an element's region.

struct gslc_tsEvent

Event structure.

struct gslc_tsEventTouch

Structure used to pass touch data through event.

struct gslc_tsFont

Font reference structure.

struct gslc_tslmgRef

Image reference structure.

struct gslc_tsElemRef

Element reference structure.

struct gslc_tsElem

Element Struct.

struct gslc_tsCollect

Element collection struct.

struct gslc_tsPage

Page structure.

struct gslc_tsInputMap

Input mapping.

· struct gslc_tsGui

GUI structure.

Macros

- #define GSLC PMEM
- #define GSLC_FEATURE_FOCUS_ON_TOUCH
- #define GSLC_2PI
- #define GSLC_ELEM_FEA_NOSHRINK

Element features type.

• #define GSLC_ELEM_FEA_VALID

Element record is valid.

• #define GSLC ELEM FEA FOCUS EN

Element can accept focus.

#define GSLC_ELEM_FEA_EDIT_EN

Element supports edit.

• #define GSLC_ELEM_FEA_ROUND_EN

Element is drawn with a rounded profile.

• #define GSLC_ELEM_FEA_CLICK_EN

Element accepts touch presses.

• #define GSLC_ELEM_FEA_GLOW_EN

Element supports glowing state.

• #define GSLC_ELEM_FEA_FRAME_EN

Element is drawn with a frame.

• #define GSLC_ELEM_FEA_FILL_EN

Element is drawn with a fill.

• #define GSLC_ELEM_FEA_NONE

Element default (no features set))

• #define GSLC_ALIGNV_TOP

Element text alignment.

• #define GSLC_ALIGNV_MID

Vertical align to middle.

#define GSLC_ALIGNV_BOT

Vertical align to bottom.

• #define GSLC ALIGNH LEFT

Horizontal align to left.

• #define GSLC_ALIGNH_MID

Horizontal align to middle.

• #define GSLC ALIGNH RIGHT

Horizontal align to right.

#define GSLC_ALIGN_TOP_LEFT

Align to top-left.

#define GSLC_ALIGN_TOP_MID

Align to middle of top.

• #define GSLC ALIGN TOP RIGHT

Align to top-right.

#define GSLC_ALIGN_MID_LEFT

Align to middle of left side.

#define GSLC_ALIGN_MID_MID

Align to center.

• #define GSLC_ALIGN_MID_RIGHT

Align to middle of right side.

• #define GSLC_ALIGN_BOT_LEFT

Align to bottom-left.

• #define GSLC_ALIGN_BOT_MID

Align to middle of bottom.

• #define GSLC_ALIGN_BOT_RIGHT

Align to bottom-right.

• #define GSLC_COL_RED_DK4

Basic color definition.

#define GSLC_COL_RED_DK3

Red (dark3)

#define GSLC_COL_RED_DK2

Red (dark2)

• #define GSLC_COL_RED_DK1

Red (dark1)

• #define GSLC_COL_RED

Red.

#define GSLC_COL_RED_LT1

Red (light1)

• #define GSLC COL RED LT2

Red (light2)

• #define GSLC_COL_RED_LT3

Red (light3)

#define GSLC_COL_RED_LT4

Red (light4)

#define GSLC_COL_GREEN_DK4

Green (dark4)

• #define GSLC_COL_GREEN_DK3

Green (dark3)

#define GSLC_COL_GREEN_DK2

Green (dark2)

• #define GSLC COL GREEN DK1

Green (dark1)

#define GSLC_COL_GREEN

Green.

• #define GSLC_COL_GREEN_LT1

Green (light1)

• #define GSLC_COL_GREEN_LT2

Green (light2)

• #define GSLC_COL_GREEN_LT3

Green (light3)

```
    #define GSLC_COL_GREEN_LT4

     Green (light4)
• #define GSLC_COL_BLUE_DK4
     Blue (dark4)
• #define GSLC_COL_BLUE_DK3
     Blue (dark3)
• #define GSLC_COL_BLUE_DK2
     Blue (dark2)

    #define GSLC_COL_BLUE_DK1

     Blue (dark1)

    #define GSLC_COL_BLUE

     Blue.

    #define GSLC_COL_BLUE_LT1

     Blue (light1)
• #define GSLC_COL_BLUE_LT2
     Blue (light2)

    #define GSLC_COL_BLUE_LT3

     Blue (light3)
• #define GSLC_COL_BLUE_LT4
     Blue (light4)

    #define GSLC_COL_BLACK

     Black.

    #define GSLC_COL_GRAY_DK4

     Gray (dark4)

    #define GSLC_COL_GRAY_DK3

     Gray (dark3)

    #define GSLC_COL_GRAY_DK2

     Gray (dark2)

    #define GSLC_COL_GRAY_DK1

     Gray (dark1)

    #define GSLC_COL_GRAY

     Gray.
• #define GSLC_COL_GRAY_LT1
     Gray (light1)

    #define GSLC_COL_GRAY_LT2

     Gray (light2)

    #define GSLC COL GRAY LT3

     Gray (light3)

    #define GSLC_COL_GRAY_LT4

     Gray (light4)

    #define GSLC_COL_WHITE

     White.

    #define GSLC_COL_YELLOW

     Yellow.
• #define GSLC_COL_YELLOW_DK
     Yellow (dark)

    #define GSLC_COL_PURPLE

     Purple.

    #define GSLC_COL_CYAN

     Cyan.

    #define GSLC_COL_MAGENTA
```

Magenta.

• #define GSLC_COL_TEAL

Teal.

#define GSLC_COL_ORANGE

Orange.

#define GSLC COL BROWN

Brown.

• #define GSLC_COLMONO_BLACK

Black

#define GSLC COLMONO WHITE

White.

#define TOUCH_ROTATION_DATA

Additional definitions for Touch Handling These macros define the transforms used in remapping the touchscreen inputs on the basis of the GUI nRotation setting.

- #define TOUCH ROTATION SWAPXY(rotation)
- #define TOUCH ROTATION FLIPX(rotation)
- #define TOUCH_ROTATION_FLIPY(rotation)
- #define GSLC ELEMREF DEFAULT

Define the default element reference flags for new elements.

- #define GSLC_MIN(a, b)
- #define GSLC MAX(a, b)
- #define TOUCH ROTATION DATA

Additional definitions for Touch Handling These macros define the transforms used in remapping the touchscreen inputs on the basis of the GUI nRotation setting.

- #define TOUCH_ROTATION_SWAPXY(rotation)
- #define TOUCH_ROTATION_FLIPX(rotation)
- #define TOUCH_ROTATION_FLIPY(rotation)
- #define GSLC_DEBUG_PRINT(sFmt, ...)

Macro to enable optional debug output.

- #define GSLC DEBUG2 PRINT(sFmt, ...)
- #define GSLC_DEBUG_PRINT_CONST(sFmt, ...)
- #define GSLC_DEBUG2_PRINT_CONST(sFmt, ...)
- #define gslc_ElemCreateTxt_P(pGui, nElemId, nPage, nX, nY, nW, nH, strTxt, pFont, colTxt, colFrame, col
 Fill, nAlignTxt, bFrameEn, bFillEn)

Create a read-only text element.

• #define gslc_ElemCreateTxt_P_R(pGui, nElemId, nPage, nX, nY, nW, nH, strTxt, strLength, pFont, colTxt, colFrame, colFill, nAlignTxt, bFrameEn, bFillEn)

Create a read-write text element (element in Flash, string in RAM)

#define gslc_ElemCreateTxt_P_R_ext(pGui, nElemId, nPage, nX, nY, nW, nH, strTxt, strLength, pFont, col
 — Txt, colTxtGlow, colFrame, colFill, nAlignTxt, nMarginX, nMarginY, bFrameEn, bFillEn, bClickEn, bGlowEn,
 pfuncXEvent, pfuncXDraw, pfuncXTouch, pfuncXTick)

Create a read-write text element (element in Flash, string in RAM) with extended customization options.

#define gslc_ElemCreateBox_P(pGui, nElemId, nPage, nX, nY, nW, nH, colFrame, colFill, bFrameEn, bFillEn, pfuncXDraw, pfuncXTick)

Create a read-only box element.

• #define gslc ElemCreateLine P(pGui, nElemId, nPage, nX0, nY0, nX1, nY1, colFill)

Create a read-only line element.

#define gslc_ElemCreateBtnTxt_P(pGui, nElemId, nPage, nX, nY, nW, nH, strTxt, pFont, colTxt, colFrame, colFill, colFrameGlow, colFillGlow, nAlignTxt, bFrameEn, bFillEn, callFunc, extraData)

Create a text button element.

Typedefs

```
    typedef int16_t(* GSLC_CB_DEBUG_OUT) (char ch)
```

• typedef struct gslc_tsElem gslc_tsElem

Element Struct.

typedef struct gslc tsEvent gslc tsEvent

Event structure.

typedef bool(* GSLC_CB_EVENT) (void *pvGui, gslc_tsEvent sEvent)

Callback function for element drawing.

typedef bool(* GSLC_CB_DRAW) (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

Callback function for element drawing.

 typedef bool(* GSLC_CB_TOUCH) (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nX, int16← t nY)

Callback function for element touch tracking.

typedef bool(* GSLC_CB_TICK) (void *pvGui, void *pvElemRef)

Callback function for element tick.

typedef bool(* GSLC_CB_PIN_POLL) (void *pvGui, int16_t *pnPinInd, int16_t *pnPinVal)

Callback function for pin polling.

typedef bool(* GSLC_CB_INPUT) (void *pvGui, void *pvElemRef, int16_t nStatus, void *pvData)

Callback function for element input ready.

typedef struct gslc_tsRect gslc_tsRect

Rectangular region. Defines X,Y corner coordinates plus dimensions.

typedef struct gslc_tsPt gslc_tsPt

Define point coordinates.

typedef struct gslc_tsColor gslc_tsColor

Color structure. Defines RGB triplet.

• typedef struct gslc_tsRectState gslc_tsRectState

State associated with an element's region.

typedef struct gslc_tsEventTouch gslc_tsEventTouch

Structure used to pass touch data through event.

Enumerations

```
    enum gslc_teElemId {
        GSLC_ID_USER_BASE, GSLC_ID_NONE, GSLC_ID_AUTO, GSLC_ID_TEMP,
        GSLC_ID_AUTO_BASE }
```

Element ID enumerations.

enum gslc_tePageId { GSLC_PAGE_USER_BASE, GSLC_PAGE_NONE }

Page ID enumerations.

 enum gslc_teStackPage { GSLC_STACK_BASE, GSLC_STACK_CUR, GSLC_STACK_OVERLAY, GSLC _STACK__MAX }

Define page stack.

enum gslc_teGroupId { GSLC_GROUP_ID_USER_BASE, GSLC_GROUP_ID_NONE }

Group ID enumerations.

enum gslc_teFontId { GSLC_FONT_USER_BASE, GSLC_FONT_NONE }

Font ID enumerations.

enum gslc_teElemInd { GSLC_IND_NONE, GSLC_IND_FIRST }

Element Index enumerations.

```
    enum gslc_teTypeCore {
        GSLC_TYPE_NONE, GSLC_TYPE_BKGND, GSLC_TYPE_BTN, GSLC_TYPE_TXT,
        GSLC_TYPE_BOX, GSLC_TYPE_LINE, GSLC_TYPE_BASE_EXTEND }
```

Element type.

enum gslc_teInputRawEvent {
 GSLC_INPUT_NONE, GSLC_INPUT_TOUCH, GSLC_INPUT_KEY_DOWN, GSLC_INPUT_KEY_UP,
 GSLC_INPUT_PIN_ASSERT, GSLC_INPUT_PIN_DEASSERT }

Raw input event types: touch, key, GPIOs.

enum gslc telnputMode { GSLC INPUTMODE NAV, GSLC INPUTMODE EDIT }

External input mode.

enum gslc_teAction {

GSLC_ACTION_UNDEF, GSLC_ACTION_NONE, GSLC_ACTION_FOCUS_PREV, GSLC_ACTION_FO \leftarrow CUS_NEXT,

GSLC_ACTION_PRESELECT, GSLC_ACTION_SELECT, GSLC_ACTION_SET_REL, GSLC_ACTION_ \hookleftarrow SET ABS,

GSLC ACTION DEBUG }

GUI Action Requested These actions are usually the result of an InputMap lookup.

enum gslc tePin {

GSLC_PIN_BTN_A, GSLC_PIN_BTN_A_LONG, GSLC_PIN_BTN_B, GSLC_PIN_BTN_B_LONG, GSLC_PIN_BTN_C, GSLC_PIN_BTN_C_LONG, GSLC_PIN_BTN_D, GSLC_PIN_BTN_D_LONG, GSLC_PIN_BTN_E, GSLC_PIN_BTN_E_LONG, GSLC_PIN_BTN_UP, GSLC_PIN_BTN_DOWN, GSLC_PIN_BTN_LEFT, GSLC_PIN_BTN_RIGHT, GSLC_PIN_BTN_SEL }

General purpose pin/button constants.

enum gslc teTouch {

GSLC_TOUCH_NONE, GSLC_TOUCH_TYPE_MASK, GSLC_TOUCH_COORD, GSLC_TOUCH_DIRECT, GSLC_TOUCH_SUBTYPE_MASK, GSLC_TOUCH_DOWN, GSLC_TOUCH_DOWN_IN, GSLC_TOUCH \leftarrow _DOWN_OUT,

GSLC_TOUCH_UP, GSLC_TOUCH_UP_IN, GSLC_TOUCH_UP_OUT, GSLC_TOUCH_MOVE, GSLC_TOUCH_MOVE_IN, GSLC_TOUCH_MOVE_OUT, GSLC_TOUCH_FOCUS_ON, GSLC_TOUCH← FOCUS_OFF.

GSLC_TOUCH_FOCUS_PRESELECT, GSLC_TOUCH_FOCUS_SELECT, GSLC_TOUCH_SET_REL, GSLC_TOUCH_SET_ABS }

Processed event from input raw events and actions.

 enum gslc_telnitStat { GSLC_INITSTAT_UNDEF, GSLC_INITSTAT_INACTIVE, GSLC_INITSTAT_FAIL, GSLC_INITSTAT_ACTIVE }

Status of a module's initialization.

enum gslc teEventType {

GSLC_EVT_NONE, GSLC_EVT_DRAW, GSLC_EVT_TOUCH, GSLC_EVT_TICK, GSLV_EVT_CUSTOM }

Event types.

enum gslc_teEventSubType { GSLC_EVTSUB_NONE, GSLC_EVTSUB_DRAW_NEEDED, GSLC_EVTS
 UB_DRAW_FORCE }

Event sub-types.

Redraw types.

enum gslc teFontRefType { GSLC FONTREF FNAME, GSLC FONTREF PTR }

Font Reference types.

enum gslc_teFontRefMode { GSLC_FONTREF_MODE_DEFAULT, GSLC_FONTREF_MODE_1, GSLC_←
FONTREF_MODE_2, GSLC_FONTREF_MODE_3 }

Font Reference modes.

• enum gslc_teElemRefFlags {

GSLC_ELEMREF_NONE, GSLC_ELEMREF_SRC_RAM, GSLC_ELEMREF_SRC_PROG, GSLC_ELEM ← REF_SRC_CONST.

GSLC_ELEMREF_REDRAW_NONE, GSLC_ELEMREF_REDRAW_FULL, GSLC_ELEMREF_REDRAW → _INC, GSLC_ELEMREF_REDRAW_FOCUS,

GSLC_ELEMREF_EDITING, GSLC_ELEMREF_FOCUSED, GSLC_ELEMREF_GLOWING, GSLC_ELE

MREF_VISIBLE,

GSLC_ELEMREF_SRC, GSLC_ELEMREF_REDRAW_MASK }

Element reference flags: Describes characteristics of an element.

enum gslc_telmgRefFlags {

GSLC_IMGREF_SRC_PROG, GSLC_IMGREF_FMT_BMP24, GSLC_IMGREF_FMT_BMP16, GSLC_IM↔ GREF_FMT_RAW1,

GSLC IMGREF FMT JPG, GSLC IMGREF SRC, GSLC IMGREF FMT }

Image reference flags: Describes characteristics of an image reference.

enum gslc_teTxtFlags {

 $\label{eq:gslc_txt_mem_ram, gslc_txt_mem_prog, gslc_txt_alloc_none, gslc_txt_alloc_int, gslc_txt_alloc_ext, gslc_txt_enc_plain, gslc_txt_enc_utf8, gslc_txt_mem, gslc_txt_alloc, gslc_txt_enc, gslc_txt_default \}$

Text reference flags: Describes the characteristics of a text string (ie.

Functions

char * gslc GetVer (gslc tsGui *pGui)

Get the GUIslice version number.

const char * gslc GetNameDisp (gslc tsGui *pGui)

Get the GUIslice display driver name.

const char * gslc GetNameTouch (gslc tsGui *pGui)

Get the GUIslice touch driver name.

void * gslc GetDriverDisp (gslc tsGui *pGui)

Get the native display driver instance.

void * gslc_GetDriverTouch (gslc_tsGui *pGui)

Get the native touch driver instance.

bool gslc_Init (gslc_tsGui *pGui, void *pvDriver, gslc_tsPage *asPage, uint8_t nMaxPage, gslc_tsFont *as←
 Font, uint8_t nMaxFont)

Initialize the GUIslice library.

void gslc_InitDebug (GSLC_CB_DEBUG_OUT pfunc)

Initialize debug output.

• void gslc DebugPrintf (const char *pFmt,...)

Optimized printf routine for GUIslice debug/error output.

bool gslc_GuiRotate (gslc_tsGui *pGui, uint8_t nRotation)

Dynamically change rotation, automatically adapt touchscreen axes swap/flip.

void gslc_Quit (gslc_tsGui *pGui)

Exit the GUIslice environment.

void gslc_Update (gslc_tsGui *pGui)

Perform main GUIslice handling functions.

bool gslc_SetBkgndImage (gslc_tsGui *pGui, gslc_tsImgRef sImgRef)

Configure the background to use a bitmap image.

• bool gslc_SetBkgndColor (gslc_tsGui *pGui, gslc_tsColor nCol)

Configure the background to use a solid color.

bool gslc_SetTransparentColor (gslc_tsGui *pGui, gslc_tsColor nCol)

Configure the color to use for image transparency.

gslc tsRect gslc GetClipRect (gslc tsGui *pGui)

Get the current the clipping rectangle.

bool gslc_SetClipRect (gslc_tsGui *pGui, gslc_tsRect *pRect)

Set the clipping rectangle for further drawing.

• bool gslc_lsInRect (int16_t nSelX, int16_t nSelY, gslc_tsRect rRect)

Determine if a coordinate is inside of a rectangular region.

• gslc_tsRect gslc_ExpandRect (gslc_tsRect rRect, int16_t nExpandW, int16_t nExpandH)

Expand or contract a rectangle in width and/or height (equal amounts on both side), based on the centerpoint of the rectangle.

bool gslc IsInWH (int16 t nSeIX, int16 t nSeIY, uint16 t nWidth, uint16 t nHeight)

Determine if a coordinate is inside of a width x height region.

void gslc_UnionRect (gslc_tsRect *pRect, gslc_tsRect rAddRect)

Expand a rect to include another rect.

void gslc_InvalidateRgnReset (gslc_tsGui *pGui)

Reset the invalidation region.

void gslc_InvalidateRgnPage (gslc_tsGui *pGui, gslc_tsPage *pPage)

Include an entire page (eg.

void gslc InvalidateRgnScreen (gslc tsGui *pGui)

Mark the entire screen as invalidated.

void gslc_InvalidateRgnAdd (gslc_tsGui *pGui, gslc_tsRect rAddRect)

Add a rectangular region to the invalidation region.

bool gslc ClipPt (gslc tsRect *pClipRect, int16 t nX, int16 t nY)

Perform basic clipping of a single point to a clipping region.

• bool gslc_ClipLine (gslc_tsRect *pClipRect, int16_t *pnX0, int16_t *pnY0, int16_t *pnX1, int16_t *pnY1)

Perform basic clipping of a line to a clipping region.

bool gslc ClipRect (gslc tsRect *pClipRect, gslc tsRect *pRect)

Perform basic clipping of a rectangle to a clipping region.

gslc_tslmgRef gslc_GetImageFromFile (const char *pFname, gslc_teImgRefFlags eFmt)

Create an image reference to a bitmap file in LINUX filesystem.

gslc_tsImgRef gslc_GetImageFromSD (const char *pFname, gslc_teImgRefFlags eFmt)

Create an image reference to a bitmap file in SD card.

gslc_tsImgRef gslc_GetImageFromRam (unsigned char *pImgBuf, gslc_teImgRefFlags eFmt)

Create an image reference to a bitmap in SRAM.

gslc_tslmgRef gslc_GetImageFromProg (const unsigned char *pImgBuf, gslc_teImgRefFlags eFmt)

Create an image reference to a bitmap in program memory (PROGMEM)

void gslc_PolarToXY (uint16_t nRad, int16_t n64Ang, int16_t *nDX, int16_t *nDY)

Convert polar coordinate to cartesian.

int16_t gslc_sinFX (int16_t n64Ang)

Calculate fixed-point sine function from fractional degrees.

int16_t gslc_cosFX (int16_t n64Ang)

Calculate fixed-point cosine function from fractional degrees.

gslc_tsColor gslc_ColorBlend2 (gslc_tsColor colStart, gslc_tsColor colEnd, uint16_t nMidAmt, uint16_t n
 BlendAmt)

Create a color based on a blend between two colors.

gslc_tsColor gslc_ColorBlend3 (gslc_tsColor colStart, gslc_tsColor colMid, gslc_tsColor colEnd, uint16_t n
 MidAmt, uint16_t nBlendAmt)

Create a color based on a blend between three colors.

bool gslc ColorEqual (gslc tsColor a, gslc tsColor b)

Check whether two colors are equal.

void gslc_DrawSetPixel (gslc_tsGui *pGui, int16_t nX, int16_t nY, gslc_tsColor nCol)

Set a pixel on the active screen to the given color with lock.

void gslc_DrawLine (gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, gslc_tsColor nCol)

Draw an arbitrary line using Bresenham's algorithm.

• void gslc_DrawLineH (gslc_tsGui *pGui, int16_t nX, int16_t nY, uint16_t nW, gslc_tsColor nCol)

Draw a horizontal line.

void gslc_DrawLineV (gslc_tsGui *pGui, int16_t nX, int16_t nY, uint16_t nH, gslc_tsColor nCol)

Draw a vertical line.

void gslc_DrawLinePolar (gslc_tsGui *pGui, int16_t nX, int16_t nY, uint16_t nRadStart, uint16_t nRadEnd, int16_t n64Ang, gslc_tsColor nCol)

Draw a polar ray segment.

void gslc DrawFrameRect (gslc tsGui *pGui, gslc tsRect rRect, gslc tsColor nCol)

Draw a framed rectangle.

• void gslc_DrawFrameRoundRect (gslc_tsGui *pGui, gslc_tsRect rRect, int16_t nRadius, gslc_tsColor nCol)

Draw a framed rounded rectangle.

void gslc DrawFillRect (gslc tsGui *pGui, gslc tsRect rRect, gslc tsColor nCol)

Draw a filled rectangle.

void gslc_DrawFillRoundRect (gslc_tsGui *pGui, gslc_tsRect rRect, int16_t nRadius, gslc_tsColor nCol)
 Draw a filled rounded rectangle.

void gslc_DrawFrameCircle (gslc_tsGui *pGui, int16_t nMidX, int16_t nMidY, uint16_t nRadius, gslc_tsColor nCol)

Draw a framed circle.

void gslc_DrawFillCircle (gslc_tsGui *pGui, int16_t nMidX, int16_t nMidY, uint16_t nRadius, gslc_tsColor n←
 Col)

Draw a filled circle.

• void gslc_DrawFrameTriangle (gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int16_t nX2, int16_t nY2, gslc_tsColor nCol)

Draw a framed triangle.

void gslc_DrawFillTriangle (gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int16_t nX2, int16_t nY2, gslc_tsColor nCol)

Draw a filled triangle.

void gslc_DrawFrameQuad (gslc_tsGui *pGui, gslc_tsPt *psPt, gslc_tsColor nCol)

Draw a framed quadrilateral.

void gslc_DrawFillQuad (gslc_tsGui *pGui, gslc_tsPt *psPt, gslc_tsColor nCol)

Draw a filled quadrilateral.

void gslc_DrawFillGradSector (gslc_tsGui *pGui, int16_t nQuality, int16_t nMidX, int16_t nMidY, int16_t n←
 Rad1, int16_t nRad2, gslc_tsColor cArcStart, gslc_tsColor cArcEnd, int16_t nAngSecStart, int16_t nAng←
 SecEnd, int16_t nAngGradStart, int16_t nAngGradRange)

Draw a gradient filled sector of a circle with support for inner and outer radius.

void gslc_DrawFillSector (gslc_tsGui *pGui, int16_t nQuality, int16_t nMidX, int16_t nMidY, int16_t nRad1, int16_t nRad2, gslc_tsColor cArc, int16_t nAngSecStart, int16_t nAngSecEnd)

Draw a flat filled sector of a circle with support for inner and outer radius.

bool gslc_FontAdd (gslc_tsGui *pGui, int16_t nFontId, gslc_teFontRefType eFontRefType, const void *pv←
FontRef, uint16_t nFontSz)

Load a font into the local font cache and assign font ID (nFontId).

bool gslc_FontSet (gslc_tsGui *pGui, int16_t nFontId, gslc_teFontRefType eFontRefType, const void *pv←
FontRef, uint16_t nFontSz)

Load a font into the local font cache and store as font ID (nFontId)

gslc_tsFont * gslc_FontGet (gslc_tsGui *pGui, int16_t nFontId)

Fetch a font from its ID value.

bool gslc_FontSetMode (gslc_tsGui *pGui, int16_t nFontId, gslc_teFontRefMode eFontMode)

Set the font operating mode.

• int gslc GetPageCur (gslc tsGui *pGui)

Fetch the current page ID.

void gslc_SetStackPage (gslc_tsGui *pGui, uint8_t nStackPos, int16_t nPageId)

Assign a page to the page stack.

void gslc SetStackState (gslc tsGui *pGui, uint8 t nStackPos, bool bActive, bool bDoDraw)

Change the status of a page in a page stack.

void gslc SetPageBase (gslc tsGui *pGui, int16 t nPageId)

Assigns a page for the base layer in the page stack.

void gslc_SetPageCur (gslc_tsGui *pGui, int16_t nPageId)

Select a page for the current layer in the page stack.

void gslc_SetPageOverlay (gslc_tsGui *pGui, int16_t nPageId)

Select a page for the overlay layer in the page stack.

void gslc_PopupShow (gslc_tsGui *pGui, int16_t nPageId, bool bModal)

Show a popup dialog.

void gslc_PopupHide (gslc_tsGui *pGui)

Hides the currently active popup dialog.

void gslc_PageRedrawSet (gslc_tsGui *pGui, bool bRedraw)

Update the need-redraw status for the current page.

bool gslc_PageRedrawGet (gslc_tsGui *pGui)

Get the need-redraw status for the current page.

void gslc_PageAdd (gslc_tsGui *pGui, int16_t nPageId, gslc_tsElem *psElem, uint16_t nMaxElem, gslc_
tsElemRef *psElemRef, uint16_t nMaxElemRef)

Add a page to the GUI.

• gslc_tsElemRef * gslc_PageFindElemById (gslc_tsGui *pGui, int16_t nPageId, int16_t nElemId)

Find an element in the GUI by its Page ID and Element ID.

• gslc_tsElemRef * gslc_ElemCreateTxt (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsRect rElem, char *pStrBuf, uint8_t nStrBufMax, int16_t nFontId)

Create a Text Element.

• gslc_tsElemRef * gslc_ElemCreateBtnTxt (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsRect rElem, char *pStrBuf, uint8_t nStrBufMax, int16_t nFontId, GSLC_CB_TOUCH cbTouch)

Create a textual Button Element.

 gslc_tsElemRef * gslc_ElemCreateBtnImg (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsRect rElem, gslc_tsImgRef sImgRef, gslc_tsImgRef sImgRefSel, GSLC_CB_TOUCH cbTouch)

Create a graphical Button Element.

gslc_tsElemRef * gslc_ElemCreateBox (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsRect r
 Elem)

Create a Box Element.

gslc_tsElemRef * gslc_ElemCreateLine (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1)

Create a Line Element.

gslc_tsElemRef * gslc_ElemCreateImg (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsRect r←
 Elem, gslc_tsImgRef sImgRef)

Create an image Element.

int gslc ElemGetId (gslc tsGui *pGui, gslc tsElemRef *pElemRef)

Get an Element ID from an element structure.

• void gslc ElemSetFillEn (gslc tsGui *pGui, gslc tsElemRef *pElemRef, bool bFillEn)

Set the fill state for an Element.

void gslc_ElemSetFrameEn (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bFrameEn)

Set the frame state for an Element.

void gslc_ElemSetRoundEn (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bRoundEn)

Set the rounded frame/fill state for an Element.

void gslc_ElemSetCol (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colFrame, gslc_tsColor colFill, gslc_tsColor colFillGlow)

Update the common color selection for an Element.

void gslc_ElemSetGlowCol (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colFrameGlow, gslc_tsColor colFillGlow, gslc_tsColor colTxtGlow)

Update the common color selection for glowing state of an Element.

void gslc ElemSetGroup (gslc tsGui *pGui, gslc tsElemRef *pElemRef, int nGroupId)

Set the group ID for an element.

• int gslc_ElemGetGroup (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get the group ID for an element.

void gslc_ElemSetRect (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsRect rElem)

Set the position and size for an element.

gslc_tsRect gslc_ElemGetRect (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get the rectangular region for an element.

void gslc_ElemSetTxtAlign (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, unsigned nAlign)

Set the alignment of a textual element (horizontal and vertical)

• void gslc_ElemSetTxtMargin (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, unsigned nMargin)

Set the margin around of a textual element.

void gslc_ElemSetTxtMarginXY (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int8_t nMarginX, int8_t n
 MarginY)

Set the margin around of a textual element (X & Y offsets can be different)

void gslc StrCopy (char *pDstStr, const char *pSrcStr, uint16 t nDstLen)

Helper routine to perform string deep copy.

void gslc ElemSetTxtStr (gslc tsGui *pGui, gslc tsElemRef *pElemRef, const char *pStr)

Update the text string associated with an Element.

char * gslc_ElemGetTxtStr (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Fetch the current text string associated with an Element.

void gslc ElemSetTxtCol (gslc tsGui *pGui, gslc tsElemRef *pElemRef, gslc tsColor colVal)

Update the text string color associated with an Element ID.

• void gslc_ElemSetTxtMem (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_teTxtFlags eFlags)

Update the text string location in memory.

void gslc_ElemSetTxtEnc (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_teTxtFlags eFlags)

Update the text string encoding mode.

void gslc_ElemUpdateFont (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int nFontId)

Update the Font selected for an Element's text.

void gslc ElemSetRedraw (gslc tsGui *pGui, gslc tsElemRef *pElemRef, gslc teRedrawType eRedraw)

Update the need-redraw status for an element.

gslc_teRedrawType gslc_ElemGetRedraw (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get the need-redraw status for an element.

void gslc_ElemSetGlowEn (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bGlowEn)

Update the glowing enable for an element.

• void gslc_ElemSetClickEn (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bClickEn)

Update the click enable for an element.

void gslc_ElemSetTouchFunc (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, GSLC_CB_TOUCH funcCb)

Update the touch function callback for an element.

void gslc_ElemSetStyleFrom (gslc_tsGui *pGui, gslc_tsElemRef *pElemRefSrc, gslc_tsElemRef *pElem←
 RefDest)

Copy style settings from one element to another.

void gslc_ResetRectState (gslc_tsRectState *pState)

Reset the element region state struct.

void gslc_ElemCalcRectState (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsRectState *pState)

Calculate the element region state struct.

• int8_t gslc_ElemCalcResizeForFocus (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Calculate the change in dimensions of an element to account for any change in focus and/or frame attributes.

void gslc_ElemGrowRect (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int8_t nDelta)

Increase or decrease the size of an element's region.

bool gslc ElemGetGlowEn (gslc tsGui *pGui, gslc tsElemRef *pElemRef)

Get the glowing enable for an element.

• void gslc ElemSetGlow (gslc tsGui *pGui, gslc tsElemRef *pElemRef, bool bGlowing)

Update the glowing indicator for an element.

• bool gslc_ElemGetGlow (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get the glowing indicator for an element.

bool gslc ElemGetFocusEn (gslc tsGui *pGui, gslc tsElemRef *pElemRef)

Get the focus enable for an element.

void gslc_ElemSetFocusEn (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bFocusEn)

Set the focus enable for an element.

void gslc_ElemSetFocus (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bFocused)

Update the focused indicator for an element.

bool gslc_ElemGetFocus (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get the focused indicator for an element.

void gslc_ElemSetEdit (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bEditing)

Update the editing indicator for an element.

bool gslc_ElemGetEdit (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get the editing indicator for an element.

void gslc_ElemSetVisible (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bVisible)

Update the visibility status for an element.

bool gslc_ElemGetVisible (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get the visibility status for an element.

bool gslc_ElemGetOnScreen (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Determine whether an element is visible on the screen.

void gslc ElemSetDrawFunc (gslc tsGui *pGui, gslc tsElemRef *pElemRef, GSLC CB DRAW funcCb)

Assign the drawing callback function for an element.

void gslc_ElemSetTickFunc (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, GSLC_CB_TICK funcCb)

Assign the tick callback function for an element.

bool gslc_ElemOwnsCoord (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nX, int16_t nY, bool b
 —
 OnlyClickEn)

Determine if a coordinate is inside of an element.

• bool gslc_InitTouch (gslc_tsGui *pGui, const char *acDev)

Initialize the touchscreen device driver.

• bool gslc_GetTouch (gslc_tsGui *pGui, int16_t *pnX, int16_t *pnY, uint16_t *pnPress, gslc_teInputRawEvent *peInputEvent, int16_t *pnInputVal)

Initialize the touchscreen device driver.

void gslc SetTouchRemapEn (gslc tsGui *pGui, bool bEn)

Configure touchscreen remapping.

void gslc_SetTouchRemapCal (gslc_tsGui *pGui, uint16_t nXMin, uint16_t nXMax, uint16_t nYMin, uint16_t nYMax)

Configure touchscreen calibration remapping values.

void gslc_SetTouchPressCal (gslc_tsGui *pGui, uint16_t nPressMin, uint16_t nPressMax)

Configure touchscreen calibration pressure values.

void gslc_SetTouchRemapYX (gslc_tsGui *pGui, bool bSwap)

Configure touchscreen XY swap.

void gslc_SetTouchEn (gslc_tsGui *pGui, bool bEn)

Make touchscreen sensitive (GUI reacts to touch events) or insensitive (GUI ignores touch events)

bool gslc_GetTouchEn (gslc_tsGui *pGui)

Get whether the GUI will react to touch events or not.

void gslc_SetPinPollFunc (gslc_tsGui *pGui, GSLC_CB_PIN_POLL pfunc)

Specify the callback function that is used to collect the state of any external inputs (eg.

void gslc InitInputMap (gslc tsGui *pGui, gslc tsInputMap *asInputMap, uint8 t nInputMapMax)

Specify the mapping between external pin inputs (fetched by the SetPinPollFunc() callback and the GUI actions.

Add an entry into the external input mapping table.

gslc_tsElemRef * gslc_FocusElemGet (gslc_tsGui *pGui)

Find the currently focused element.

void gslc_FocusPageStep (gslc_tsGui *pGui, bool bNext)

Advance the focus to the next page in the page stack.

• int16_t gslc_FocusElemStep (gslc_tsGui *pGui, bool bNext)

Advance the focus to the next element in the focused page.

void gslc FocusElemIndSet (gslc tsGui *pGui, int16 t nPageInd, int16 t nElemInd, bool bFocus)

Change the focus to the indexed element on the specified page.

void gslc_FocusSetToTrackedElem (gslc_tsGui *pGui, gslc_tsCollect *pCollect)

Change the focus to the currently-tracked element.

gslc tslmgRef gslc Resetlmage ()

Create a blank image reference structure.

gslc_tsElem gslc_ElemCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPageId, int16_t nType, gslc_ts←
 Rect rElem, char *pStrBuf, uint8_t nStrBufMax, int16_t nFontId)

Create a new element with default styling.

gslc_tsElemRef * gslc_ElemAdd (gslc_tsGui *pGui, int16_t nPageId, gslc_tsElem *pElem, gslc_teElem←
 RefFlags eFlags)

Add the Element to the list of generated elements in the GUI environment.

uint8 t gslc GetElemRefFlag (gslc tsGui *pGui, gslc tsElemRef *pElemRef, uint8 t nFlagMask)

Get the flags associated with an element reference.

 void gslc_SetElemRefFlag (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, uint8_t nFlagMask, uint8_t n← FlagVal)

Set the flags associated with an element reference.

• gslc tsElem * gslc GetElemFromRef (gslc tsGui *pGui, gslc tsElemRef *pElemRef)

Returns a pointer to an element from an element reference, copying from FLASH to RAM if element is stored in PROGMEM.

- $\bullet \ \ gslc_tsElem* gslc_GetElemFromRefD \ (gslc_tsGui*pGui, gslc_tsElemRef* *pElemRef*, int16_t \ nLineNum)$
 - Returns a pointer to an element from an element reference.

void * gslc_GetXDataFromRef (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nType, int16_t nLine
 Num)

Returns a pointer to the data structure associated with an extended element.

void gslc_ElemSetImage (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsImgRef sImgRef, gslc_ts
 ImgRef sImgRefSel)

Set an element to use a bitmap image.

- bool gslc_ElemDrawByRef (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_teRedrawType eRedraw)
 - Draw an element to the active display.
- void gslc ElemDraw (gslc tsGui *pGui, int16 t nPageId, int16 t nElemId)

Draw an element to the active display.

void gslc_DrawTxtBase (gslc_tsGui *pGui, char *pStrBuf, gslc_tsRect rTxt, gslc_tsFont *pTxtFont, gslc←
 _teTxtFlags eTxtFlags, int8_t eTxtAlign, gslc_tsColor colTxt, gslc_tsColor colBg, int16_t nMarginW, int16_t nMarginH)

Draw text with full text justification.

• void gslc SetRoundRadius (gslc tsGui *pGui, uint8 t nRadius)

Set the global rounded radius.

void gslc_SetFocusCol (gslc_tsGui *pGui, gslc_tsColor colFocusNone, gslc_tsColor colFocus, gslc_tsColor colFocusEdit)

Set the global focus color choices.

bool gslc PageEvent (void *pvGui, gslc tsEvent sEvent)

Common event handler function for a page.

• void gslc PageRedrawGo (gslc tsGui *pGui)

Redraw all elements on the active page.

void gslc_PageFlipSet (gslc_tsGui *pGui, bool bNeeded)

Indicate whether the screen requires page flip.

bool gslc PageFlipGet (gslc tsGui *pGui)

Get state of pending page flip state.

void gslc_PageFlipGo (gslc_tsGui *pGui)

Update the visible screen if page has been marked for flipping.

gslc_tsPage * gslc_PageFindByld (gslc_tsGui *pGui, int16_t nPageId)

Find a page in the GUI by its ID.

void gslc_PageRedrawCalc (gslc_tsGui *pGui)

Perform a redraw calculation on the page to determine if additional elements should also be redrawn.

gslc_tsEvent gslc_EventCreate (gslc_tsGui *pGui, gslc_teEventType eType, uint8_t nSubType, void *pv
 Scope, void *pvData)

Create an event structure.

bool gslc_ElemEvent (void *pvGui, gslc_tsEvent sEvent)

Common event handler function for an element.

Trigger an element's touch event.

void gslc_CollectReset (gslc_tsCollect *pCollect, gslc_tsElem *asElem, uint16_t nElemMax, gslc_tsElemRef
 *asElemRef, uint16_t nElemRefMax)

Reset the members of an element collection.

• gslc_tsElemRef * gslc_CollectElemAdd (gslc_tsGui *pGui, gslc_tsCollect *pCollect, const gslc_tsElem *p← Elem, gslc_teElemRefFlags eFlags)

Add an element to a collection.

bool gslc CollectGetRedraw (gslc tsGui *pGui, gslc tsCollect *pCollect)

Determine if any elements in a collection need redraw.

 $\bullet \ gslc_tsElemRef * gslc_CollectFindElemById (gslc_tsGui * pGui, gslc_tsCollect * pCollect, int16_t nElemId) \\$

Find an element in a collection by its Element ID.

gslc_tsElemRef * gslc_CollectFindElemFromCoord (gslc_tsGui *pGui, gslc_tsCollect *pCollect, int16_t nX, int16_t nY, int16_t *pnElemInd)

Find an element in a collection by a coordinate coordinate.

int gslc_CollectGetNextId (gslc_tsGui *pGui, gslc_tsCollect *pCollect)

Allocate the next available Element ID in a collection.

• gslc_tsElemRef * gslc_CollectGetElemRefTracked (gslc_tsGui *pGui, gslc_tsCollect *pCollect)

Get the element within a collection that is currently being tracked.

void gslc_CollectSetElemTracked (gslc_tsGui *pGui, gslc_tsCollect *pCollect, gslc_tsElemRef *pElemRef, int16_t nElemInd)

Set the element within a collection that is currently being tracked.

void gslc_CollectSetParent (gslc_tsGui *pGui, gslc_tsCollect *pCollect, gslc_tsElemRef *pElemRefParent)

Assign the parent element reference to all elements within a collection.

bool gslc CollectEvent (void *pvGui, gslc tsEvent sEvent)

Common event handler function for an element collection.

void gslc_CollectTouch (gslc_tsGui *pGui, gslc_tsCollect *pCollect, gslc_tsEventTouch *pEventTouch)

Handle touch events within the element collection.

bool gslc_CollectTouchCompound (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY, gslc_tsCollect *pCollect)

Handle dispatch of touch (up,down,move) events to compound elements sub elements.

void gslc_CollectInput (gslc_tsGui *pGui, gslc_tsCollect *pCollect, gslc_tsEventTouch *pEventTouch)

Handle direct input events within the element collection.

• void gslc_TrackTouch (gslc_tsGui *pGui, gslc_tsPage *pPage, int16_t nX, int16_t nY, uint16_t nPress)

Handles a touch event and performs the necessary tracking, glowing and selection actions depending on the press state.

- void gslc_TrackInput (gslc_tsGui *pGui, gslc_teInputRawEvent eInputEvent, int16_t nInputVal)

 Handles a direct input event and performs the necessary tracking, glowing and selection actions depending on the
- bool gslc_InputMapLookup (gslc_tsGui *pGui, gslc_teInputRawEvent eInputEvent, int16_t nInputVal, gslc
 _teAction *peAction, int16_t *pnActionVal)
- void gslc_GuiDestruct (gslc_tsGui *pGui)

Free up any surfaces associated with the GUI, pages, collections and elements.

void gslc_PageDestruct (gslc_tsGui *pGui, gslc_tsPage *pPage)

Free up any members associated with a page.

void gslc_CollectDestruct (gslc_tsGui *pGui, gslc_tsCollect *pCollect)

Free up any members associated with an element collection.

void gslc_ElemDestruct (gslc_tsElem *pElem)

Free up any members associated with an element.

void gslc_ResetFont (gslc_tsFont *pFont)

Initialize a Font struct.

void gslc_ResetElem (gslc_tsElem *pElem)

Initialize an Element struct.

Variables

• GSLC_CB_DEBUG_OUT g_pfDebugOut

Global debug output function.

9.45.1 Macro Definition Documentation

9.45.1.1 GSLC_2PI

#define GSLC_2PI

9.45.1.2 GSLC_ALIGN_BOT_LEFT

#define GSLC_ALIGN_BOT_LEFT

Align to bottom-left.

9.45.1.3 GSLC_ALIGN_BOT_MID

#define GSLC_ALIGN_BOT_MID

Align to middle of bottom.

9.45.1.4 GSLC_ALIGN_BOT_RIGHT #define GSLC_ALIGN_BOT_RIGHT Align to bottom-right. 9.45.1.5 GSLC_ALIGN_MID_LEFT #define GSLC_ALIGN_MID_LEFT Align to middle of left side. 9.45.1.6 GSLC_ALIGN_MID_MID #define GSLC_ALIGN_MID_MID Align to center. 9.45.1.7 GSLC_ALIGN_MID_RIGHT #define GSLC_ALIGN_MID_RIGHT Align to middle of right side. 9.45.1.8 GSLC_ALIGN_TOP_LEFT #define GSLC_ALIGN_TOP_LEFT Align to top-left. 9.45.1.9 GSLC_ALIGN_TOP_MID #define GSLC_ALIGN_TOP_MID Align to middle of top.

9.45.1.10 GSLC_ALIGN_TOP_RIGHT #define GSLC_ALIGN_TOP_RIGHT Align to top-right. 9.45.1.11 GSLC_ALIGNH_LEFT #define GSLC_ALIGNH_LEFT Horizontal align to left. 9.45.1.12 GSLC_ALIGNH_MID #define GSLC_ALIGNH_MID Horizontal align to middle. 9.45.1.13 GSLC_ALIGNH_RIGHT #define GSLC_ALIGNH_RIGHT Horizontal align to right. 9.45.1.14 GSLC_ALIGNV_BOT #define GSLC_ALIGNV_BOT Vertical align to bottom. 9.45.1.15 GSLC_ALIGNV_MID

#define GSLC_ALIGNV_MID

Vertical align to middle.

9.45.1.16 GSLC_ALIGNV_TOP #define GSLC_ALIGNV_TOP Element text alignment. Vertical align to top 9.45.1.17 GSLC_COL_BLACK #define GSLC_COL_BLACK Black. 9.45.1.18 GSLC_COL_BLUE #define GSLC_COL_BLUE Blue. 9.45.1.19 GSLC_COL_BLUE_DK1 #define GSLC_COL_BLUE_DK1 Blue (dark1) 9.45.1.20 GSLC_COL_BLUE_DK2 #define GSLC_COL_BLUE_DK2 Blue (dark2) 9.45.1.21 GSLC_COL_BLUE_DK3 #define GSLC_COL_BLUE_DK3 Blue (dark3)

```
9.45.1.22 GSLC_COL_BLUE_DK4
#define GSLC_COL_BLUE_DK4
Blue (dark4)
9.45.1.23 GSLC_COL_BLUE_LT1
#define GSLC_COL_BLUE_LT1
Blue (light1)
9.45.1.24 GSLC_COL_BLUE_LT2
#define GSLC_COL_BLUE_LT2
Blue (light2)
9.45.1.25 GSLC_COL_BLUE_LT3
#define GSLC_COL_BLUE_LT3
Blue (light3)
9.45.1.26 GSLC_COL_BLUE_LT4
#define GSLC_COL_BLUE_LT4
Blue (light4)
9.45.1.27 GSLC_COL_BROWN
#define GSLC_COL_BROWN
Brown.
```

9.45.1.28 GSLC_COL_CYAN #define GSLC_COL_CYAN Cyan. 9.45.1.29 GSLC_COL_GRAY #define GSLC_COL_GRAY Gray. 9.45.1.30 GSLC_COL_GRAY_DK1 #define GSLC_COL_GRAY_DK1 Gray (dark1) 9.45.1.31 GSLC_COL_GRAY_DK2 #define GSLC_COL_GRAY_DK2 Gray (dark2) 9.45.1.32 GSLC_COL_GRAY_DK3 #define GSLC_COL_GRAY_DK3 Gray (dark3) 9.45.1.33 GSLC_COL_GRAY_DK4 #define GSLC_COL_GRAY_DK4 Gray (dark4)

```
9.45.1.34 GSLC_COL_GRAY_LT1
#define GSLC_COL_GRAY_LT1
Gray (light1)
9.45.1.35 GSLC_COL_GRAY_LT2
#define GSLC_COL_GRAY_LT2
Gray (light2)
9.45.1.36 GSLC_COL_GRAY_LT3
#define GSLC_COL_GRAY_LT3
Gray (light3)
9.45.1.37 GSLC_COL_GRAY_LT4
#define GSLC_COL_GRAY_LT4
Gray (light4)
9.45.1.38 GSLC_COL_GREEN
#define GSLC_COL_GREEN
Green.
9.45.1.39 GSLC_COL_GREEN_DK1
#define GSLC_COL_GREEN_DK1
Green (dark1)
```

9.45.1.40 GSLC_COL_GREEN_DK2 #define GSLC_COL_GREEN_DK2 Green (dark2) 9.45.1.41 GSLC_COL_GREEN_DK3 #define GSLC_COL_GREEN_DK3 Green (dark3) 9.45.1.42 GSLC_COL_GREEN_DK4 #define GSLC_COL_GREEN_DK4 Green (dark4) 9.45.1.43 GSLC_COL_GREEN_LT1 #define GSLC_COL_GREEN_LT1 Green (light1) 9.45.1.44 GSLC_COL_GREEN_LT2 #define GSLC_COL_GREEN_LT2 Green (light2) 9.45.1.45 GSLC_COL_GREEN_LT3 #define GSLC_COL_GREEN_LT3 Green (light3)

```
9.45.1.46 GSLC_COL_GREEN_LT4
#define GSLC_COL_GREEN_LT4
Green (light4)
9.45.1.47 GSLC_COL_MAGENTA
#define GSLC_COL_MAGENTA
Magenta.
9.45.1.48 GSLC_COL_ORANGE
#define GSLC_COL_ORANGE
Orange.
9.45.1.49 GSLC_COL_PURPLE
#define GSLC_COL_PURPLE
Purple.
9.45.1.50 GSLC_COL_RED
#define GSLC_COL_RED
Red.
9.45.1.51 GSLC_COL_RED_DK1
#define GSLC_COL_RED_DK1
Red (dark1)
```

9.45.1.52 GSLC_COL_RED_DK2 #define GSLC_COL_RED_DK2 Red (dark2) 9.45.1.53 GSLC_COL_RED_DK3 #define GSLC_COL_RED_DK3 Red (dark3) 9.45.1.54 GSLC_COL_RED_DK4 #define GSLC_COL_RED_DK4 Basic color definition. Red (dark4) 9.45.1.55 GSLC_COL_RED_LT1 #define GSLC_COL_RED_LT1 Red (light1) 9.45.1.56 GSLC_COL_RED_LT2 #define GSLC_COL_RED_LT2 Red (light2) 9.45.1.57 GSLC_COL_RED_LT3 #define GSLC_COL_RED_LT3 Red (light3)

9.45.1.58	GSLC_COL_RED_LT4
#define	GSLC_COL_RED_LT4
Red (light	14)
9.45.1.59	GSLC_COL_TEAL
#define	GSLC_COL_TEAL
Teal.	
9.45.1.60	GSLC_COL_WHITE
#define	GSLC_COL_WHITE
White.	
9.45.1.61	GSLC_COL_YELLOW
#define	GSLC_COL_YELLOW
Yellow.	
9.45.1.62	GSLC_COL_YELLOW_DK
#define	GSLC_COL_YELLOW_DK
Yellow (da	ark)
9.45.1.63	GSLC_COLMONO_BLACK
#define	GSLC_COLMONO_BLACK
Black.	

9.45.1.64 GSLC_COLMONO_WHITE #define GSLC_COLMONO_WHITE White. 9.45.1.65 GSLC_ELEM_FEA_CLICK_EN #define GSLC_ELEM_FEA_CLICK_EN Element accepts touch presses. 9.45.1.66 GSLC_ELEM_FEA_EDIT_EN #define GSLC_ELEM_FEA_EDIT_EN Element supports edit. 9.45.1.67 GSLC_ELEM_FEA_FILL_EN #define GSLC_ELEM_FEA_FILL_EN Element is drawn with a fill. 9.45.1.68 GSLC_ELEM_FEA_FOCUS_EN #define GSLC_ELEM_FEA_FOCUS_EN Element can accept focus. 9.45.1.69 GSLC_ELEM_FEA_FRAME_EN

#define GSLC_ELEM_FEA_FRAME_EN

Element is drawn with a frame.

9.45.1.70 GSLC_ELEM_FEA_GLOW_EN

#define GSLC_ELEM_FEA_GLOW_EN

Element supports glowing state.

9.45.1.71 GSLC_ELEM_FEA_NONE

#define GSLC_ELEM_FEA_NONE

Element default (no features set))

9.45.1.72 GSLC_ELEM_FEA_NOSHRINK

#define GSLC_ELEM_FEA_NOSHRINK

Element features type.

Element can't be shrunk (eg. contains image)

9.45.1.73 GSLC_ELEM_FEA_ROUND_EN

#define GSLC_ELEM_FEA_ROUND_EN

Element is drawn with a rounded profile.

9.45.1.74 GSLC_ELEM_FEA_VALID

#define GSLC_ELEM_FEA_VALID

Element record is valid.

9.45.1.75 GSLC_ELEMREF_DEFAULT

#define GSLC_ELEMREF_DEFAULT

Define the default element reference flags for new elements.

9.45.1.76 GSLC_FEATURE_FOCUS_ON_TOUCH

#define GSLC_FEATURE_FOCUS_ON_TOUCH

9.45.1.77 GSLC_MAX

9.45.1.78 GSLC_MIN

9.45.1.79 GSLC_PMEM

#define GSLC_PMEM

9.45.2 Typedef Documentation

9.45.2.1 GSLC_CB_DEBUG_OUT

typedef int16_t(* GSLC_CB_DEBUG_OUT) (char ch)

9.45.2.2 GSLC_CB_DRAW

typedef bool(* GSLC_CB_DRAW) (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

Callback function for element drawing.

9.45.2.3 GSLC_CB_EVENT

```
typedef bool(* GSLC_CB_EVENT) (void *pvGui, gslc_tsEvent sEvent)
```

Callback function for element drawing.

9.45.2.4 GSLC_CB_INPUT

```
typedef bool(* GSLC_CB_INPUT) (void *pvGui, void *pvElemRef, int16_t nStatus, void *pvData)
```

Callback function for element input ready.

9.45.2.5 GSLC_CB_PIN_POLL

```
typedef bool(* GSLC_CB_PIN_POLL) (void *pvGui, int16_t *pnPinInd, int16_t *pnPinVal)
```

Callback function for pin polling.

9.45.2.6 GSLC_CB_TICK

```
typedef bool(* GSLC_CB_TICK) (void *pvGui, void *pvElemRef)
```

Callback function for element tick.

9.45.2.7 GSLC_CB_TOUCH

```
typedef bool(* GSLC_CB_TOUCH) (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nX,
int16_t nY)
```

Callback function for element touch tracking.

9.45.2.8 gslc_tsColor

```
typedef struct gslc_tsColor gslc_tsColor
```

Color structure. Defines RGB triplet.

9.45.2.9 gslc_tsElem

```
typedef struct gslc_tsElem gslc_tsElem
```

Element Struct.

- · Represents a single graphic element in the GUIslice environment
- · A page is made up of a number of elements
- Each element is created with a user-specified ID for further accesses (or GSLC_ID_AUTO for it to be autogenerated)
- · Display order of elements in a page is based upon the creation order
- Extensions to the core element types is provided through the pXData reference and pfuncX* callback functions.

```
9.45.2.10 gslc_tsEvent
```

```
typedef struct gslc_tsEvent gslc_tsEvent
```

Event structure.

9.45.2.11 gslc_tsEventTouch

```
typedef struct gslc_tsEventTouch gslc_tsEventTouch
```

Structure used to pass touch data through event.

```
9.45.2.12 gslc_tsPt
```

```
typedef struct gslc_tsPt gslc_tsPt
```

Define point coordinates.

9.45.2.13 gslc_tsRect

```
typedef struct gslc_tsRect gslc_tsRect
```

Rectangular region. Defines X,Y corner coordinates plus dimensions.

9.45.2.14 gslc_tsRectState

```
{\tt typedef \ struct \ gslc\_tsRectState \ gslc\_tsRectState}
```

State associated with an element's region.

- This struct is used for gslc_ElemCalcRectState()
- · Accounts for various rects including focus, frame and internal content
- · Also contains the various colors associated with each region.

9.45.3 Enumeration Type Documentation

9.45.3.1 gslc_teAction

enum gslc_teAction

GUI Action Requested These actions are usually the result of an InputMap lookup.

Enumerator

GSLC_ACTION_UNDEF	Invalid action.
GSLC_ACTION_NONE	No action to perform.
GSLC_ACTION_FOCUS_PREV	Advance focus to the previous GUI element.
GSLC_ACTION_FOCUS_NEXT	Advance focus to the next GUI element.
GSLC_ACTION_PRESELECT	Pre-Select the currently focused GUI element (glow)
GSLC_ACTION_SELECT	Select the currently focused GUI element.
GSLC_ACTION_SET_REL	Adjust value (relative) of focused element.
GSLC_ACTION_SET_ABS	Adjust value (absolute) of focused element.
GSLC_ACTION_DEBUG	Internal debug action.

9.45.3.2 gslc_teElemId

 $\verb"enum gslc_teElemId"$

Element ID enumerations.

- The Element ID is the primary means for user code to reference a graphic element.
- Application code can assign arbitrary Element ID values in the range of 0...16383
- Specifying GSLC_ID_AUTO to ElemCreate() requests that GUIslice auto-assign an ID value for the Element. These auto-assigned values will begin at GSLC_ID_AUTO_BASE.
- · Negative Element ID values are reserved

Enumerator

GSLC_ID_USER_BASE	Starting Element ID for user assignments.
GSLC_ID_NONE	No Element ID has been assigned.
GSLC_ID_AUTO	Auto-assigned Element ID requested.
GSLC_ID_TEMP	ID for Temporary Element.
GSLC_ID_AUTO_BASE	Starting Element ID to start auto-assignment (when GSLC_ID_AUTO is specified)

9.45.3.3 gslc_teElemInd

enum gslc_teElemInd

Element Index enumerations.

• The Element Index is used for internal purposes as an offset

Enumerator

GSLC_IND_NONE	No Element Index is available.
GSLC_IND_FIRST	User elements start at index 0.

9.45.3.4 gslc_teElemRefFlags

enum gslc_teElemRefFlags

Element reference flags: Describes characteristics of an element.

• Primarily used to support relocation of elements to Flash memory (PROGMEM)

Enumerator

GSLC_ELEMREF_NONE	No element defined.
GSLC_ELEMREF_SRC_RAM	Element is read/write Stored in RAM (internal element array)) Access directly.
GSLC_ELEMREF_SRC_PROG	Element is read-only / const Stored in FLASH (external to element array) Access via PROGMEM.
GSLC_ELEMREF_SRC_CONST	Element is read-only / const Stored in FLASH (external to element array) Access directly.
GSLC_ELEMREF_REDRAW_NONE	No redraw requested.
GSLC_ELEMREF_REDRAW_FULL	Full redraw of element requested.
GSLC_ELEMREF_REDRAW_INC	Incremental redraw of element requested.
GSLC_ELEMREF_REDRAW_FOCUS	Focus-only redraw of element requested.

Enumerator

GSLC_ELEMREF_EDITING	Element is in edit state (1=edit, 0=navigate)
GSLC_ELEMREF_FOCUSED	Element state is focused.
GSLC_ELEMREF_GLOWING	Element state is glowing.
GSLC_ELEMREF_VISIBLE	Element is currently shown (ie. visible)
GSLC_ELEMREF_SRC	Mask for Source flags [bits 1,0].
GSLC_ELEMREF_REDRAW_MASK	Mask for Redraw flags [bits 5,4].

9.45.3.5 gslc_teEventSubType

enum gslc_teEventSubType

Event sub-types.

Enumerator

GSLC_EVTSUB_NONE	
GSLC_EVTSUB_DRAW_NEEDED	Incremental redraw (as needed)
GSLC_EVTSUB_DRAW_FORCE	Force a full redraw.

9.45.3.6 gslc_teEventType

enum gslc_teEventType

Event types.

Enumerator

GSLC_EVT_NONE	No event; ignore.
GSLC_EVT_DRAW	Perform redraw.
GSLC_EVT_TOUCH	Track touch event.
GSLC_EVT_TICK	Perform background tick handling.
GSLV_EVT_CUSTOM	Custom event.

9.45.3.7 gslc_teFontId

enum gslc_teFontId

Font ID enumerations.

- · The Font ID is the primary means for user code to reference a specific font.
- Application code can assign arbitrary Font ID values in the range of 0...16383
- · Negative Font ID values are reserved

Enumerator

GSLC_FONT_USER_BASE	Starting Font ID for user assignments.
GSLC_FONT_NONE	No Font ID has been assigned.

9.45.3.8 gslc_teFontRefMode

enum gslc_teFontRefMode

Font Reference modes.

- The Font Reference mode defines the source for the selected font. For graphics libraries that offer multiple types of fonts, this can be used to differentiate between a default font, hardware fonts, software fonts, etc.
- The encoding between the different modes is driver-specific.

Enumerator

GSLC_FONTREF_MODE_DEFAULT	Default font mode.
GSLC_FONTREF_MODE_1	Font mode 1.
GSLC_FONTREF_MODE_2	Font mode 2.
GSLC_FONTREF_MODE_3	Font mode 3.

9.45.3.9 gslc_teFontRefType

enum gslc_teFontRefType

Font Reference types.

• The Font Reference type defines the way in which a font is selected. In some device targets (such as LINUX SDL) a filename to a font file is provided. In others (such as Arduino, ESP8266), a pointer is given to a font structure (or NULL for default).

Enumerator

GSLC_FONTREF_FNAME	Font reference is a filename (full path)
GSLC_FONTREF_PTR	Font reference is a pointer to a font structure.

9.45.3.10 gslc_teGroupId

enum gslc_teGroupId

Group ID enumerations.

Enumerator

GSLC_GROUP_ID_USER_BASE	Starting Group ID for user assignments.
GSLC_GROUP_ID_NONE	No Group ID has been assigned.

9.45.3.11 gslc_telmgRefFlags

enum gslc_teImgRefFlags

Image reference flags: Describes characteristics of an image reference.

Enumerator

GSLC_IMGREF_NONE	No image defined.
GSLC_IMGREF_SRC_FILE	Image is stored in file system.
GSLC_IMGREF_SRC_SD	Image is stored on SD card.
GSLC_IMGREF_SRC_RAM	Image is stored in RAM.
GSLC_IMGREF_SRC_PROG	Image is stored in program memory (PROGMEM)
GSLC_IMGREF_FMT_BMP24	Image format is BMP (24-bit)
GSLC_IMGREF_FMT_BMP16	Image format is BMP (16-bit RGB565)
GSLC_IMGREF_FMT_RAW1	Image format is raw monochrome (1-bit)
GSLC_IMGREF_FMT_JPG	Image format is JPG (ESP32/ESP8366)
GSLC_IMGREF_SRC	Mask for Source flags.
GSLC_IMGREF_FMT	Mask for Format flags.

9.45.3.12 gslc_telnitStat

enum gslc_teInitStat

Status of a module's initialization.

Enumerator

GSLC_INITSTAT_UNDEF	Module status has not been defined yet.
GSLC_INITSTAT_INACTIVE	Module is not enabled.
GSLC_INITSTAT_FAIL	Module is enabled but failed to init.
GSLC INITSTAT_ACTIVE	Module is enabled and initalized OK.

9.45.3.13 gslc_telnputMode

enum gslc_teInputMode

External input mode.

Dictates how directional controls affect the interaction with the GUI elements.

Enumerator

GSLC_INPUTMODE_NAV	External input is in navigation mode.
	External input is in element edit mode.
GSLC_INPUTMODE_EDIT	

9.45.3.14 gslc_teInputRawEvent

enum gslc_teInputRawEvent

Raw input event types: touch, key, GPIOs.

Enumerator

GSLC_INPUT_NONE	No input event.
GSLC_INPUT_TOUCH	Touch / mouse event.
GSLC_INPUT_KEY_DOWN	Key press down / pin input asserted.
GSLC_INPUT_KEY_UP	Key press up (released)
GSLC_INPUT_PIN_ASSERT	GPIO pin input asserted (eg. set to 1 / High)
GSLC_INPUT_PIN_DEASSERT	GPIO pin input deasserted (eg. set to 0 / Low)

9.45.3.15 gslc_tePageId

enum gslc_tePageId

Page ID enumerations.

- $\bullet\,$ The Page ID is the primary means for user code to reference a specific page of elements.
- Application code can assign arbitrary Page ID values in the range of 0...16383
- · Negative Page ID values are reserved

Enumerator

GSLC_PAGE_USER_BASE	Starting Page ID for user assignments.	
GSLC_PAGE_NONE	No Page ID has been assigned.	

9.45.3.16 gslc_tePin

enum gslc_tePin

General purpose pin/button constants.

Enumerator

Button A (short press)
Button A (long press)
Button B (short press)
Button B (long press)
Button C (short press)
Button C (long press)
Button D (short press)
Button D (long press)
Button E (short press)
Button E (long press)
Button Up (short press)
Button Down (short press)
Button Left (short press)
Button Right (short press)
Button Select (short press)

9.45.3.17 gslc_teRedrawType

enum gslc_teRedrawType

Redraw types.

Enumerator

GSLC_REDRAW_NONE	No redraw requested.
GSLC_REDRAW_FULL	Full redraw of element requested.
GSLC_REDRAW_INC	Incremental redraw of element requested.
GSLC_REDRAW_FOCUS	Only focus redraw requested.

9.45.3.18 gslc_teStackPage

enum gslc_teStackPage

Define page stack.

Enumerator

GSLC_STACK_BASE	Base page.
GSLC_STACK_CUR	Current page.
GSLC_STACK_OVERLAY	Overlay page (eg. popups)
GSLC_STACKMAX	Defines maximum number of pages in stack.

9.45.3.19 gslc_teTouch

enum gslc_teTouch

Processed event from input raw events and actions.

Enumerator

GSLC_TOUCH_NONE	No touch event active.
GSLC_TOUCH_TYPE_MASK	Mask for type: coord/direct mode.
GSLC_TOUCH_COORD	Event based on touch coordinate.
GSLC_TOUCH_DIRECT	Event based on specific element index (keyboard/GPIO action)
GSLC_TOUCH_SUBTYPE_MASK	Mask for subtype.
GSLC_TOUCH_DOWN	Touch event (down)
GSLC_TOUCH_DOWN_IN	Touch event (down inside tracked element)
GSLC_TOUCH_DOWN_OUT	Touch event (down outside tracked element)
GSLC_TOUCH_UP	Touch event (up)
GSLC_TOUCH_UP_IN	Touch event (up inside tracked element)
GSLC_TOUCH_UP_OUT	Touch event (up outside tracked element)
GSLC_TOUCH_MOVE	Touch event (move)
GSLC_TOUCH_MOVE_IN	Touch event (move inside tracked element)
GSLC_TOUCH_MOVE_OUT	Touch event (move outside tracked element)
GSLC_TOUCH_FOCUS_ON	Direct event focus on element.
GSLC_TOUCH_FOCUS_OFF	Direct event focus away from focused element.
GSLC_TOUCH_FOCUS_PRESELECT	Direct event select focus element (glow before select)
GSLC_TOUCH_FOCUS_SELECT	Direct event select focus element.
GSLC_TOUCH_SET_REL	Direct event set value (relative) on focus element.
GSLC_TOUCH_SET_ABS	Direct event set value (absolute) on focus element.

9.45.3.20 gslc_teTxtFlags

 $\verb"enum gslc_teTxtFlags"$

Text reference flags: Describes the characteristics of a text string (ie.

whether internal to element or external and RAM vs Flash).)

Supported flag combinations are:

- ALLOC_NONE
- ALLOC_INT | MEM_RAM
- ALLOC_EXT \mid MEM_RAM
- ALLOC_EXT | MEM_PROG

Enumerator

GSLC_TXT_MEM_RAM	Text string is in SRAM (read-write)
GSLC_TXT_MEM_PROG	Text string is in PROGMEM (read-only)
GSLC_TXT_ALLOC_NONE	No text string present.
GSLC_TXT_ALLOC_INT	Text string allocated in internal element memory (GSLC_STR_LOCAL=1)
GSLC_TXT_ALLOC_EXT	Text string allocated in external memory (GSLC_STR_LOCAL=0), ie. user code.
GSLC_TXT_ENC_PLAIN	Encoding is plain text (LATIN1))
GSLC_TXT_ENC_UTF8	Encoding is UTF-8.
GSLC_TXT_MEM	Mask for updating text memory type.
GSLC_TXT_ALLOC	Mask for updating location of text string buffer allocation.
GSLC_TXT_ENC	Mask for updating text encoding.
GSLC_TXT_DEFAULT	

9.45.3.21 gslc_teTypeCore

enum gslc_teTypeCore

Element type.

Enumerator

GSLC_TYPE_NONE	No element type specified.
GSLC_TYPE_BKGND	Background element type.
GSLC_TYPE_BTN	Button element type.
GSLC_TYPE_TXT	Text label element type.
GSLC_TYPE_BOX	Box / frame element type.
GSLC_TYPE_LINE	Line element type.
GSLC_TYPE_BASE_EXTEND	Base value for extended type enumerations.

9.45.4 Variable Documentation

9.45.4.1 g_pfDebugOut

GSLC_CB_DEBUG_OUT g_pfDebugOut

Global debug output function.

• The user assigns this function via gslc_InitDebug()

9.46 src/GUIslice_config.h File Reference

This graph shows which files directly or indirectly include this file:




9.47 src/GUIslice_drv.h File Reference

This graph shows which files directly or indirectly include this file:



9.48 src/GUIslice_drv_adagfx.cpp File Reference

#include "GUIslice_config.h"
Include dependency graph for GUIslice_drv_adagfx.cpp:

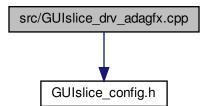


9.49 src/GUIslice_drv_adagfx.h File Reference

GUIslice library (driver layer for Adafruit-GFX)

#include "GUIslice.h"
#include <stdio.h>

Include dependency graph for GUIslice_drv_adagfx.h:

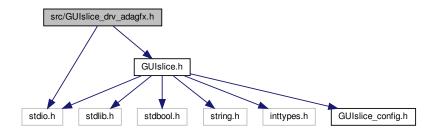

Data Structures

· struct gslc_tsDriver

Macros

• #define DRV_HAS_DRAW_POINT

Support gslc_DrvDrawPoint()

#define DRV_HAS_DRAW_POINTS

Support gslc_DrvDrawPoints()

• #define DRV_HAS_DRAW_LINE

Support gslc_DrvDrawLine()

• #define DRV_HAS_DRAW_RECT_FRAME

Support gslc_DrvDrawFrameRect()

• #define DRV_HAS_DRAW_RECT_FILL

Support gslc_DrvDrawFillRect()

• #define DRV_HAS_DRAW_RECT_ROUND_FRAME

Support gslc_DrvDrawFrameRoundRect()

• #define DRV_HAS_DRAW_RECT_ROUND_FILL

Support gslc_DrvDrawFillRoundRect()

• #define DRV HAS DRAW CIRCLE FRAME

Support gslc_DrvDrawFrameCircle()

• #define DRV_HAS_DRAW_CIRCLE_FILL

Support gslc_DrvDrawFillCircle()

• #define DRV_HAS_DRAW_TRI_FRAME

Support gslc_DrvDrawFrameTriangle()

#define DRV_HAS_DRAW_TRI_FILL

Support gslc_DrvDrawFillTriangle()

• #define DRV_HAS_DRAW_TEXT

Support gslc_DrvDrawTxt()

• #define DRV_HAS_DRAW_BMP_MEM

Support gslc_DrvDrawBmp24FromMem()

• #define DRV_OVERRIDE_TXT_ALIGN

Driver provides text alignment.

Functions

• bool gslc_DrvInit (gslc_tsGui *pGui)

Initialize the SDL library.

• bool gslc_DrvInitTs (gslc_tsGui *pGui, const char *acDev)

Perform any touchscreen-specific initialization.

void gslc DrvDestruct (gslc tsGui *pGui)

Free up any members associated with the driver.

const char * gslc_DrvGetNameDisp (gslc_tsGui *pGui)

Get the display driver name.

const char * gslc DrvGetNameTouch (gslc tsGui *pGui)

Get the touch driver name.

• void * gslc_DrvGetDriverDisp (gslc_tsGui *pGui)

Get the native display driver instance.

void * gslc_DrvGetDriverTouch (gslc_tsGui *pGui)

Get the native touch driver instance.

void * gslc_DrvLoadImage (gslc_tsGui *pGui, gslc_tsImgRef sImgRef)

Load a bitmap (*.bmp) and create a new image resource.

• bool gslc_DrvSetBkgndImage (gslc_tsGui *pGui, gslc_tsImgRef sImgRef)

Configure the background to use a bitmap image.

bool gslc DrvSetBkgndColor (gslc tsGui *pGui, gslc tsColor nCol)

Configure the background to use a solid color.

bool gslc DrvSetElemImageNorm (gslc tsGui *pGui, gslc tsElem *pElem, gslc tsImgRef sImgRef)

Set an element's normal-state image.

bool gslc DrvSetElemImageGlow (gslc tsGui *pGui, gslc tsElem *pElem, gslc tsImgRef sImgRef)

Set an element's glow-state image.

void gslc_DrvImageDestruct (void *pvImg)

Release an image surface.

bool gslc DrvSetClipRect (gslc tsGui *pGui, gslc tsRect *pRect)

Set the clipping rectangle for future drawing updates.

const void * gslc DrvFontAdd (gslc teFontRefType eFontRefType, const void *pvFontRef, uint16 t nFontSz)

Load a font from a resource and return pointer to it.

void gslc_DrvFontsDestruct (gslc_tsGui *pGui)

Release all fonts defined in the GUI.

 bool gslc_DrvGetTxtSize (gslc_tsGui *pGui, gslc_tsFont *pFont, const char *pStr, gslc_teTxtFlags eTxt← Flags, int16_t *pnTxtX, int16_t *pnTxtY, uint16_t *pnTxtSzW, uint16_t *pnTxtSzH)

Get the extent (width and height) of a text string.

• bool gslc_DrvDrawTxt (gslc_tsGui *pGui, int16_t nTxtX, int16_t nTxtY, gslc_tsFont *pFont, const char *pStr, gslc_teTxtFlags eTxtFlags, gslc_tsColor colTxt, gslc_tsColor colBg)

Draw a text string at the given coordinate.

void gslc_DrvPageFlipNow (gslc_tsGui *pGui)

Force a page flip to occur.

• bool gslc_DrvDrawPoint (gslc_tsGui *pGui, int16_t nX, int16_t nY, gslc_tsColor nCol)

Draw a point.

bool gslc_DrvDrawPoints (gslc_tsGui *pGui, gslc_tsPt *asPt, uint16_t nNumPt, gslc_tsColor nCol)

Draw a point.

• bool gslc_DrvDrawFrameRect (gslc_tsGui *pGui, gslc_tsRect rRect, gslc_tsColor nCol)

Draw a framed rectangle.

• bool gslc_DrvDrawFillRect (gslc_tsGui *pGui, gslc_tsRect rRect, gslc_tsColor nCol)

Draw a filled rectangle.

bool gslc_DrvDrawFrameRoundRect (gslc_tsGui *pGui, gslc_tsRect rRect, int16_t nRadius, gslc_tsColor n←
 Col)

Draw a framed rounded rectangle.

- bool gslc_DrvDrawFillRoundRect (gslc_tsGui *pGui, gslc_tsRect rRect, int16_t nRadius, gslc_tsColor nCol)

 Draw a filled rounded rectangle.
- bool gslc_DrvDrawLine (gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, gslc_tsColor nCol)

Draw a line.

bool gslc_DrvDrawFrameCircle (gslc_tsGui *pGui, int16_t nMidX, int16_t nMidY, uint16_t nRadius, gslc_ts←
 Color nCol)

Draw a framed circle.

bool gslc_DrvDrawFillCircle (gslc_tsGui *pGui, int16_t nMidX, int16_t nMidY, uint16_t nRadius, gslc_tsColor nCol)

Draw a filled circle.

• bool gslc_DrvDrawFrameTriangle (gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int16_t nX2, int16_t nY2, gslc_tsColor nCol)

Draw a framed triangle.

bool gslc_DrvDrawFillTriangle (gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int16_t nX2, int16_t nY2, gslc_tsColor nCol)

Draw a filled triangle.

bool gslc_DrvDrawImage (gslc_tsGui *pGui, int16_t nDstX, int16_t nDstY, gslc_tsImgRef sImgRef)

Copy all of source image to destination screen at specified coordinate.

 void gslc_DrvDrawMonoFromMem (gslc_tsGui *pGui, int16_t nDstX, int16_t nDstY, const unsigned char *p← Bitmap, bool bProgMem)

Draw a monochrome bitmap from a memory array.

 void gslc_DrvDrawBmp24FromMem (gslc_tsGui *pGui, int16_t nDstX, int16_t nDstY, const unsigned char *pBitmap, bool bProgMem)

Draw a color 24-bit depth bitmap from a memory array.

• void gslc_DrvDrawBmp24FromSD (gslc_tsGui *pGui, const char *filename, uint16_t x, uint16_t y)

Draw a color 24-bit depth bitmap from SD card.

void gslc_DrvDrawBkgnd (gslc_tsGui *pGui)

Copy the background image to destination screen.

bool gslc_DrvInitTouch (gslc_tsGui *pGui, const char *acDev)

Perform any touchscreen-specific initialization.

bool gslc_DrvGetTouch (gslc_tsGui *pGui, int16_t *pnX, int16_t *pnY, uint16_t *pnPress, gslc_teInputRaw←
 Event *peInputEvent, int16 t *pnInputVal)

Get the last touch event from the internal touch handler.

• bool gslc_DrvRotate (gslc_tsGui *pGui, uint8_t nRotation)

Change rotation, automatically adapt touchscreen axes swap/flip.

• uint16_t gslc_DrvAdaptColorToRaw (gslc_tsColor nCol)

9.49.1 Detailed Description

GUIslice library (driver layer for Adafruit-GFX)

9.49.2 Macro Definition Documentation

9.49.2.1 DRV_HAS_DRAW_BMP_MEM #define DRV_HAS_DRAW_BMP_MEM Support gslc_DrvDrawBmp24FromMem() 9.49.2.2 DRV_HAS_DRAW_CIRCLE_FILL #define DRV_HAS_DRAW_CIRCLE_FILL Support gslc_DrvDrawFillCircle() 9.49.2.3 DRV_HAS_DRAW_CIRCLE_FRAME #define DRV_HAS_DRAW_CIRCLE_FRAME Support gslc_DrvDrawFrameCircle() 9.49.2.4 DRV_HAS_DRAW_LINE #define DRV_HAS_DRAW_LINE Support gslc_DrvDrawLine() 9.49.2.5 DRV_HAS_DRAW_POINT #define DRV_HAS_DRAW_POINT Support gslc_DrvDrawPoint() 9.49.2.6 DRV_HAS_DRAW_POINTS #define DRV_HAS_DRAW_POINTS

Support gslc_DrvDrawPoints()

```
9.49.2.7 DRV_HAS_DRAW_RECT_FILL
#define DRV_HAS_DRAW_RECT_FILL
Support gslc_DrvDrawFillRect()
9.49.2.8 DRV_HAS_DRAW_RECT_FRAME
#define DRV_HAS_DRAW_RECT_FRAME
Support gslc_DrvDrawFrameRect()
9.49.2.9 DRV_HAS_DRAW_RECT_ROUND_FILL
#define DRV_HAS_DRAW_RECT_ROUND_FILL
Support gslc_DrvDrawFillRoundRect()
9.49.2.10 DRV_HAS_DRAW_RECT_ROUND_FRAME
#define DRV_HAS_DRAW_RECT_ROUND_FRAME
Support gslc_DrvDrawFrameRoundRect()
9.49.2.11 DRV_HAS_DRAW_TEXT
#define DRV_HAS_DRAW_TEXT
Support gslc_DrvDrawTxt()
9.49.2.12 DRV_HAS_DRAW_TRI_FILL
```

Generated by Doxygen

#define DRV_HAS_DRAW_TRI_FILL

Support gslc_DrvDrawFillTriangle()

9.49.2.13 DRV_HAS_DRAW_TRI_FRAME

```
#define DRV_HAS_DRAW_TRI_FRAME
```

Support gslc_DrvDrawFrameTriangle()

9.49.2.14 DRV_OVERRIDE_TXT_ALIGN

```
#define DRV_OVERRIDE_TXT_ALIGN
```

Driver provides text alignment.

9.49.3 Function Documentation

9.49.3.1 gslc_DrvAdaptColorToRaw()

9.49.3.2 gslc_DrvDestruct()

```
void gslc_DrvDestruct ( {\tt gslc\_tsGui} \ * \ p{\tt Gui} \ )
```

Free up any members associated with the driver.

• Eg. renderers, windows, background surfaces, etc.

Parameters

in <i>pGui</i> Pointer to	GUI
---------------------------	-----

Returns

none

9.49.3.3 gslc_DrvDrawBkgnd()

```
void gslc_DrvDrawBkgnd ( {\tt gslc\_tsGui} \ * \ pGui \ )
```

Copy the background image to destination screen.

Parameters

```
in pGui Pointer to GUI
```

Returns

true if success, false if fail

9.49.3.4 gslc_DrvDrawBmp24FromMem()

Draw a color 24-bit depth bitmap from a memory array.

- Note that users must convert images from their native format (eg. BMP, PNG, etc.) into a C array. Please refer to the following guide for details: https://github.com/ImpulseAdventure/GU← Islice/wiki/Display-Images-from-FLASH
- The converted file (c array) can then be included in the sketch.

Parameters

in	pGui	Pointer to GUI
in	nDstX	X coord for copy
in	nDstY	Y coord for copy
in	pBitmap	Pointer to bitmap buffer
in	bProgMem	Bitmap is stored in Flash if true, RAM otherwise

Returns

none

9.49.3.5 gslc_DrvDrawBmp24FromSD()

Draw a color 24-bit depth bitmap from SD card.

Parameters

in	pGui	Pointer to GUI
in	filename	Filename on SD card (usually in form "/pic.bmp")
in	X	X coordinate to draw bitmap
in	у	Y coordinate to draw bitmap

Returns

none

9.49.3.6 gslc_DrvDrawFillCircle()

Draw a filled circle.

Parameters

in	pGui	Pointer to GUI
in	nMidX	Center of circle (X coordinate)
in	nMidY	Center of circle (Y coordinate)
in	nRadius	Radius of circle
in	nCol	Color RGB value to fill

Returns

true if success, false if error

9.49.3.7 gslc_DrvDrawFillRect()

Draw a filled rectangle.

Parameters

in	pGui	Pointer to GUI
in	rRect	Rectangular region to fill
in	nCol	Color RGB value to fill

Returns

true if success, false if error

9.49.3.8 gslc_DrvDrawFillRoundRect()

Draw a filled rounded rectangle.

Parameters

in	pGui	Pointer to GUI
in	rRect	Rectangular region to fill
in	nRadius	Radius for rounded corners
in	nCol	Color RGB value to fill

Returns

true if success, false if error

9.49.3.9 gslc_DrvDrawFillTriangle()

```
int16_t nY0,
int16_t nX1,
int16_t nY1,
int16_t nX2,
int16_t nY2,
gslc_tsColor nCol )
```

Draw a filled triangle.

Parameters

in	pGui	Pointer to GUI
in	nX0	X Coordinate #1
in	nY0	Y Coordinate #1
in	nX1	X Coordinate #2
in	nY1	Y Coordinate #2
in	nX2	X Coordinate #3
in	nY2	Y Coordinate #3
in	nCol	Color RGB value to fill

Returns

true if success, false if error

9.49.3.10 gslc_DrvDrawFrameCircle()

Draw a framed circle.

Parameters

in	pGui	Pointer to GUI
in	nMidX	Center of circle (X coordinate)
in	nMidY	Center of circle (Y coordinate)
in	nRadius	Radius of circle
in	nCol	Color RGB value to frame

Returns

true if success, false if error

9.49.3.11 gslc_DrvDrawFrameRect()

Draw a framed rectangle.

Parameters

in	pGui	Pointer to GUI
in	rRect	Rectangular region to frame
in	nCol	Color RGB value to frame

Returns

true if success, false if error

9.49.3.12 gslc_DrvDrawFrameRoundRect()

Draw a framed rounded rectangle.

Parameters

in	pGui	Pointer to GUI
in	rRect	Rectangular region to frame
in	nRadius	Radius for rounded corners
in	nCol	Color RGB value to frame

Returns

true if success, false if error

9.49.3.13 gslc_DrvDrawFrameTriangle()

```
int16_t nY0,
int16_t nX1,
int16_t nY1,
int16_t nX2,
int16_t nY2,
gslc_tsColor nCol )
```

Draw a framed triangle.

Parameters

in	pGui	Pointer to GUI
in	nX0	X Coordinate #1
in	nY0	Y Coordinate #1
in	nX1	X Coordinate #2
in	nY1	Y Coordinate #2
in	nX2	X Coordinate #3
in	nY2	Y Coordinate #3
in	nCol	Color RGB value to frame

Returns

true if success, false if error

9.49.3.14 gslc_DrvDrawImage()

Copy all of source image to destination screen at specified coordinate.

Parameters

in	pGui	Pointer to GUI
in	nDstX	Destination X coord for copy
in	nDstY	Destination Y coord for copy
in	sImgRef	Image reference

Returns

true if success, false if fail

9.49.3.15 gslc_DrvDrawLine()

Draw a line.

Parameters

in	pGui	Pointer to GUI
in	nX0	Line start (X coordinate)
in	nY0	Line start (Y coordinate)
in	nX1	Line finish (X coordinate)
in	nY1	Line finish (Y coordinate)
in	nCol	Color RGB value to draw

Returns

true if success, false if error

9.49.3.16 gslc_DrvDrawMonoFromMem()

Draw a monochrome bitmap from a memory array.

· Draw from the bitmap buffer using the foreground color defined in the header (unset bits are transparent)

in	pGui	Pointer to GUI
in	nDstX	Destination X coord for copy
in	nDstY	Destination Y coord for copy
in	pBitmap	Pointer to bitmap buffer
in	bProgMem	Bitmap is stored in Flash if true, RAM otherwise

Returns

none

9.49.3.17 gslc_DrvDrawPoint()

Draw a point.

Parameters

in	pGui	Pointer to GUI
in	nΧ	X coordinate of point
in	nΥ	Y coordinate of point
in	nCol	Color RGB value to draw

Returns

true if success, false if error

9.49.3.18 gslc_DrvDrawPoints()

Draw a point.

Parameters

	in	pGui	Pointer to GUI
	in	asPt	Array of points to draw
ĺ	in	n⊷	Number of points in array
		NumPt	
ĺ	in	nCol	Color RGB value to draw

Returns

true if success, false if error

9.49.3.19 gslc_DrvDrawTxt()

Draw a text string at the given coordinate.

Parameters

in	pGui	Pointer to GUI
in	nTxtX	X coordinate of top-left text string
in	nTxtY	Y coordinate of top-left text string
in	pFont	Ptr to Font
in	pStr	String to display
in	eTxtFlags	Flags associated with text string
in	colTxt	Color to draw text
in	colBg	unused in ADAGFX, defaults to black

Returns

true if success, false if failure

9.49.3.20 gslc_DrvFontAdd()

Load a font from a resource and return pointer to it.

in	eFontRefType	Font reference type (GSLC_FONTREF_PTR for Arduino)
in	pvFontRef	Font reference pointer (Pointer to the GFXFont array)
in	nFontSz	Typeface size to use

Returns

Void ptr to driver-specific font if load was successful, NULL otherwise

9.49.3.21 gslc_DrvFontsDestruct()

```
void gslc_DrvFontsDestruct ( {\tt gslc\_tsGui\ *\ pGui\ )}
```

Release all fonts defined in the GUI.

Parameters

in	pGui	Pointer to GUI
----	------	----------------

Returns

none

9.49.3.22 gslc_DrvGetDriverDisp()

Get the native display driver instance.

• This can be useful to access special commands available in the selected driver.

Parameters

```
in pGui Pointer to GUI
```

Returns

Void pointer to the display driver instance. This pointer should be typecast to the particular driver being used. If no driver was created then this function will return NULL.

9.49.3.23 gslc_DrvGetDriverTouch()

Get the native touch driver instance.

• This can be useful to access special commands available in the selected driver.

Parameters

in pG	ui Pointer to GUI
-------	-------------------

Returns

Void pointer to the touch driver instance. This pointer should be typecast to the particular driver being used. If no driver was created then this function will return NULL.

9.49.3.24 gslc_DrvGetNameDisp()

Get the display driver name.

Parameters

in <i>pGui</i> Pointer to

Returns

String containing driver name

9.49.3.25 gslc_DrvGetNameTouch()

Get the touch driver name.

Parameters

```
in pGui Pointer to GUI
```

Returns

String containing driver name

9.49.3.26 gslc_DrvGetTouch()

Get the last touch event from the internal touch handler.

Parameters

in	pGui	Pointer to GUI	
out	pnX	Ptr to X coordinate of last touch event	
out	pnY	Ptr to Y coordinate of last touch event	
out	pnPress	Ptr to Pressure level of last touch event (0 for none, 1 for touch)	
out	peInputEvent	Indication of event type	
out	pnInputVal	Additional data for event type	

Returns

true if an event was detected or false otherwise

9.49.3.27 gslc_DrvGetTxtSize()

Get the extent (width and height) of a text string.

in	pGui	Pointer to GUI
in	pFont	Ptr to Font structure
in	pStr	String to display
in	eTxtFlags	Flags associated with text string
out	pnTxtX	Ptr to offset X of text
out	pnTxtY	Ptr to offset Y of text
out	pnTxtSzW	Ptr to width of text
out	pnTxtSzH	Ptr to height of text

Returns

true if success, false if failure

9.49.3.28 gslc_DrvImageDestruct()

```
void gslc_DrvImageDestruct ( \mbox{void} \ *\ pvImg\ )
```

Release an image surface.

Parameters

in pvimg void ptr to image		in	pvlmg	Void ptr to image
--------------------------------	--	----	-------	-------------------

Returns

none

9.49.3.29 gslc_DrvInit()

Initialize the SDL library.

- Performs clean startup workaround (if enabled)
- · Configures video mode
- · Initializes font support

PRE:

• The environment variables should be configured before calling gslc_DrvInit(). This can be done with gslc_← DrvInitEnv() or manually in user function.

Parameters

in	pGui	Pointer to GUI

Returns

true if success, false if fail

9.49.3.30 gslc_DrvInitTouch()

Perform any touchscreen-specific initialization.

Parameters

in	pGui	Pointer to GUI	
in	acDev	Device path to touchscreen eg. "/dev/input/touchscreen"	

Returns

true if successful

9.49.3.31 gslc_DrvInitTs()

Perform any touchscreen-specific initialization.

Parameters

	in	pGui	Pointer to GUI	
in acDev Device path to touchscreen eg		acDev	Device path to touchscreen eg. "/dev/input/touchscreen"	

Returns

true if successful

9.49.3.32 gslc_DrvLoadImage()

Load a bitmap (*.bmp) and create a new image resource.

Transparency is enabled by GSLC_BMP_TRANS_EN through use of color (GSLC_BMP_TRANS_RGB).

Parameters

in	pGui	Pointer to GUI
in	sImgRef	Image reference

Returns

Image pointer (surface/texture) or NULL if error

9.49.3.33 gslc_DrvPageFlipNow()

Force a page flip to occur.

This generally copies active screen surface to the display.

Parameters

in	pGui	Pointer to GUI
----	------	----------------

Returns

none

9.49.3.34 gslc_DrvRotate()

Change rotation, automatically adapt touchscreen axes swap/flip.

Parameters

ſ	in	pGui	Pointer to GUI
	in	nRotation	Screen Rotation value (0, 1, 2 or 3)

Returns

true if successful

9.49.3.35 gslc_DrvSetBkgndColor()

Configure the background to use a solid color.

• The background is used when redrawing the entire page

Parameters

in	pGui	Pointer to GUI
in	nCol	RGB Color to use

Returns

true if success, false if fail

9.49.3.36 gslc_DrvSetBkgndImage()

Configure the background to use a bitmap image.

• The background is used when redrawing the entire page

Parameters

in	pGui	Pointer to GUI
in	sImgRef	Image reference

Returns

true if success, false if fail

9.49.3.37 gslc_DrvSetClipRect()

Set the clipping rectangle for future drawing updates.

Parameters

in	pGui	Pointer to GUI	
in	pRect	Rectangular region to constrain edits	1

Returns

true if success, false if error

9.49.3.38 gslc_DrvSetElemImageGlow()

Set an element's glow-state image.

Parameters

in	pGui	Pointer to GUI
in <i>pElem</i>		Pointer to Element to update
in <i>slmgRef</i>		Image reference

Returns

true if success, false if error

9.49.3.39 gslc_DrvSetElemImageNorm()

Set an element's normal-state image.


in	pGui	Pointer to GUI
in	pElem	Pointer to Element to update
in <i>slmgRef</i>		Image reference

Returns

true if success, false if error

9.50 src/GUIslice_drv_m5stack.cpp File Reference


#include "GUIslice_config.h"
Include dependency graph for GUIslice_drv_m5stack.cpp:

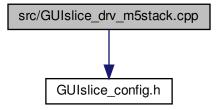

9.51 src/GUIslice_drv_m5stack.h File Reference

GUIslice library (driver layer for M5stack)

#include "GUIslice.h"
#include <stdio.h>
Include dependency graph for GUIslice_drv_m5stack.h:

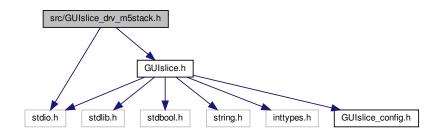

Data Structures

struct gslc_tsDriver

Macros

• #define DRV_HAS_DRAW_POINT

Support gslc_DrvDrawPoint()

• #define DRV_HAS_DRAW_POINTS

Support gslc_DrvDrawPoints()

• #define DRV_HAS_DRAW_LINE

Support gslc_DrvDrawLine()

• #define DRV_HAS_DRAW_RECT_FRAME

Support gslc_DrvDrawFrameRect()

• #define DRV_HAS_DRAW_RECT_FILL

Support gslc_DrvDrawFillRect()

#define DRV_HAS_DRAW_RECT_ROUND_FRAME

Support gslc_DrvDrawFrameRoundRect()

#define DRV_HAS_DRAW_RECT_ROUND_FILL

Support gslc DrvDrawFillRoundRect()

• #define DRV HAS DRAW CIRCLE FRAME

Support gslc_DrvDrawFrameCircle()

• #define DRV_HAS_DRAW_CIRCLE_FILL

Support gslc_DrvDrawFillCircle()

#define DRV_HAS_DRAW_TRI_FRAME

Support gslc_DrvDrawFrameTriangle()

• #define DRV_HAS_DRAW_TRI_FILL

Support gslc_DrvDrawFillTriangle()

#define DRV_HAS_DRAW_TEXT

Support gslc_DrvDrawTxt()

• #define DRV_HAS_DRAW_BMP_MEM

Support gslc_DrvDrawBmp24FromMem()

• #define DRV_OVERRIDE_TXT_ALIGN

Driver provides text alignment.

Functions

• bool gslc_DrvInit (gslc_tsGui *pGui)

Initialize the SDL library.

• bool gslc_DrvInitTs (gslc_tsGui *pGui, const char *acDev)

Perform any touchscreen-specific initialization.

void gslc_DrvDestruct (gslc_tsGui *pGui)

Free up any members associated with the driver.

const char * gslc_DrvGetNameDisp (gslc_tsGui *pGui)

Get the display driver name.

const char * gslc_DrvGetNameTouch (gslc_tsGui *pGui)

Get the touch driver name.

void * gslc DrvGetDriverDisp (gslc tsGui *pGui)

Get the native display driver instance.

void * gslc_DrvGetDriverTouch (gslc_tsGui *pGui)

Get the native touch driver instance.

void * gslc DrvLoadImage (gslc tsGui *pGui, gslc tsImgRef sImgRef)

Load a bitmap (*.bmp) and create a new image resource.

bool gslc_DrvSetBkgndImage (gslc_tsGui *pGui, gslc_tsImgRef sImgRef)

Configure the background to use a bitmap image.

bool gslc_DrvSetBkgndColor (gslc_tsGui *pGui, gslc_tsColor nCol)

Configure the background to use a solid color.

bool gslc DrvSetElemImageNorm (gslc tsGui *pGui, gslc tsElem *pElem, gslc tsImgRef sImgRef)

Set an element's normal-state image.

bool gslc DrvSetElemImageGlow (gslc tsGui *pGui, gslc tsElem *pElem, gslc tsImgRef sImgRef)

Set an element's glow-state image.

void gslc_DrvImageDestruct (void *pvImg)

Release an image surface.

bool gslc_DrvSetClipRect (gslc_tsGui *pGui, gslc_tsRect *pRect)

Set the clipping rectangle for future drawing updates.

• const void * gslc_DrvFontAdd (gslc_teFontRefType eFontRefType, const void *pvFontRef, uint16_t nFontSz)

Load a font from a resource and return pointer to it.

• void gslc_DrvFontsDestruct (gslc_tsGui *pGui)

Release all fonts defined in the GUI.

 bool gslc_DrvGetTxtSize (gslc_tsGui *pGui, gslc_tsFont *pFont, const char *pStr, gslc_teTxtFlags eTxt← Flags, int16_t *pnTxtX, int16_t *pnTxtY, uint16_t *pnTxtSzW, uint16_t *pnTxtSzH)

Get the extent (width and height) of a text string.

• bool gslc_DrvDrawTxt (gslc_tsGui *pGui, int16_t nTxtX, int16_t nTxtY, gslc_tsFont *pFont, const char *pStr, gslc_tsTxtFlags eTxtFlags, gslc_tsColor colTxt, gslc_tsColor colBg)

Draw a text string at the given coordinate.

bool gslc_DrvDrawTxtAlign (gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int8_t e
 TxtAlign, gslc_tsFont *pFont, const char *pStr, gslc_teTxtFlags eTxtFlags, gslc_tsColor colTxt, gslc_tsColor colBg)

Draw a text string in a bounding box using the specified alignment.

void gslc_DrvPageFlipNow (gslc_tsGui *pGui)

Force a page flip to occur.

bool gslc_DrvDrawPoint (gslc_tsGui *pGui, int16_t nX, int16_t nY, gslc_tsColor nCol)

Draw a point.

bool gslc_DrvDrawPoints (gslc_tsGui *pGui, gslc_tsPt *asPt, uint16_t nNumPt, gslc_tsColor nCol)

Draw a point.

bool gslc_DrvDrawFrameRect (gslc_tsGui *pGui, gslc_tsRect rRect, gslc_tsColor nCol)

Draw a framed rectangle.

bool gslc_DrvDrawFillRect (gslc_tsGui *pGui, gslc_tsRect rRect, gslc_tsColor nCol)

Draw a filled rectangle.

bool gslc_DrvDrawFrameRoundRect (gslc_tsGui *pGui, gslc_tsRect rRect, int16_t nRadius, gslc_tsColor n← Col)

Draw a framed rounded rectangle.

• bool gslc_DrvDrawFillRoundRect (gslc_tsGui *pGui, gslc_tsRect rRect, int16_t nRadius, gslc_tsColor nCol)

Draw a filled rounded rectangle.

 bool gslc_DrvDrawLine (gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, gslc_tsColor nCol)

Draw a line

bool gslc_DrvDrawFrameCircle (gslc_tsGui *pGui, int16_t nMidX, int16_t nMidY, uint16_t nRadius, gslc_ts
 — Color nCol)

Draw a framed circle.

 bool gslc_DrvDrawFillCircle (gslc_tsGui *pGui, int16_t nMidX, int16_t nMidY, uint16_t nRadius, gslc_tsColor nCol)

Draw a filled circle.

• bool gslc_DrvDrawFrameTriangle (gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int16_t nX2, int16_t nY2, gslc_tsColor nCol)

Draw a framed triangle.

• bool gslc_DrvDrawFillTriangle (gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int16_t nX2, int16_t nY2, gslc_tsColor nCol)

Draw a filled triangle.

• bool gslc_DrvDrawImage (gslc_tsGui *pGui, int16_t nDstX, int16_t nDstY, gslc_tsImgRef sImgRef)

Copy all of source image to destination screen at specified coordinate.

void gslc_DrvDrawMonoFromMem (gslc_tsGui *pGui, int16_t nDstX, int16_t nDstY, const unsigned char *p←
 Bitmap, bool bProgMem)

Draw a monochrome bitmap from a memory array.

 void gslc_DrvDrawBmp24FromMem (gslc_tsGui *pGui, int16_t nDstX, int16_t nDstY, const unsigned char *pBitmap, bool bProgMem)

Draw a color 24-bit depth bitmap from a memory array.

void gslc DrvDrawBkgnd (gslc tsGui *pGui)

Copy the background image to destination screen.

bool gslc_DrvRotate (gslc_tsGui *pGui, uint8_t nRotation)

Change rotation, automatically adapt touchscreen axes swap/flip.

uint16_t gslc_DrvAdaptColorToRaw (gslc_tsColor nCol)

Variables

- const char GSLC_PMEM ERRSTR_NULL []
- const char GSLC_PMEM ERRSTR_PXD_NULL []

9.51.1 Detailed Description

GUIslice library (driver layer for M5stack)

9.51.2 Macro Definition Documentation

9.51.2.1 DRV_HAS_DRAW_BMP_MEM

#define DRV_HAS_DRAW_BMP_MEM

Support gslc_DrvDrawBmp24FromMem()

9.51.2.2 DRV_HAS_DRAW_CIRCLE_FILL

#define DRV_HAS_DRAW_CIRCLE_FILL

Support gslc_DrvDrawFillCircle()

9.51.2.3 DRV_HAS_DRAW_CIRCLE_FRAME #define DRV_HAS_DRAW_CIRCLE_FRAME Support gslc_DrvDrawFrameCircle() 9.51.2.4 DRV_HAS_DRAW_LINE #define DRV_HAS_DRAW_LINE Support gslc_DrvDrawLine() 9.51.2.5 DRV_HAS_DRAW_POINT #define DRV_HAS_DRAW_POINT Support gslc_DrvDrawPoint() 9.51.2.6 DRV_HAS_DRAW_POINTS #define DRV_HAS_DRAW_POINTS Support gslc_DrvDrawPoints() 9.51.2.7 DRV_HAS_DRAW_RECT_FILL #define DRV_HAS_DRAW_RECT_FILL Support gslc_DrvDrawFillRect() 9.51.2.8 DRV_HAS_DRAW_RECT_FRAME #define DRV_HAS_DRAW_RECT_FRAME

Support gslc_DrvDrawFrameRect()

9.51.2.9 DRV_HAS_DRAW_RECT_ROUND_FILL #define DRV_HAS_DRAW_RECT_ROUND_FILL Support gslc_DrvDrawFillRoundRect() 9.51.2.10 DRV_HAS_DRAW_RECT_ROUND_FRAME #define DRV_HAS_DRAW_RECT_ROUND_FRAME

Support gslc_DrvDrawFrameRoundRect()

9.51.2.11 DRV_HAS_DRAW_TEXT

#define DRV_HAS_DRAW_TEXT

Support gslc_DrvDrawTxt()

9.51.2.12 DRV_HAS_DRAW_TRI_FILL

#define DRV_HAS_DRAW_TRI_FILL

Support gslc_DrvDrawFillTriangle()

9.51.2.13 DRV_HAS_DRAW_TRI_FRAME

#define DRV_HAS_DRAW_TRI_FRAME

Support gslc_DrvDrawFrameTriangle()

9.51.2.14 DRV_OVERRIDE_TXT_ALIGN

#define DRV_OVERRIDE_TXT_ALIGN

Driver provides text alignment.

9.51.3 Function Documentation

9.51.3.1 gslc_DrvAdaptColorToRaw()

9.51.3.2 gslc_DrvDestruct()

Free up any members associated with the driver.

• Eg. renderers, windows, background surfaces, etc.

Parameters

in <i>pGui</i>	Pointer to GUI
----------------	----------------

Returns

none

9.51.3.3 gslc_DrvDrawBkgnd()

Copy the background image to destination screen.

Parameters

in	pGui	Pointer to GUI

Returns

true if success, false if fail

9.51.3.4 gslc_DrvDrawBmp24FromMem()

Draw a color 24-bit depth bitmap from a memory array.

- Note that users must convert images from their native format (eg. BMP, PNG, etc.) into a C array. Please refer to the following guide for details: https://github.com/ImpulseAdventure/GU← Islice/wiki/Display-Images-from-FLASH
- The converted file (c array) can then be included in the sketch.

Parameters

in	pGui	Pointer to GUI
in	nDstX	X coord for copy
in	nDstY	Y coord for copy
in	pBitmap	Pointer to bitmap buffer
in	bProgMem	Bitmap is stored in Flash if true, RAM otherwise

Returns

none

9.51.3.5 gslc_DrvDrawFillCircle()

Draw a filled circle.

in	pGui	Pointer to GUI
in	nMidX	Center of circle (X coordinate)
in	nMidY	Center of circle (Y coordinate)
in	nRadius	Radius of circle
in	nCol	Color RGB value to fill

Returns

true if success, false if error

9.51.3.6 gslc_DrvDrawFillRect()

Draw a filled rectangle.

Parameters

in	pGui	Pointer to GUI
in	rRect	Rectangular region to fill
in	nCol	Color RGB value to fill

Returns

true if success, false if error

9.51.3.7 gslc_DrvDrawFillRoundRect()

Draw a filled rounded rectangle.

Parameters

in	pGui	Pointer to GUI
in	rRect	Rectangular region to fill
in	nRadius	Radius for rounded corners
in	nCol	Color RGB value to fill

Returns

true if success, false if error

9.51.3.8 gslc_DrvDrawFillTriangle()

Draw a filled triangle.

Parameters

in	pGui	Pointer to GUI
in	nX0	X Coordinate #1
in	nY0	Y Coordinate #1
in	nX1	X Coordinate #2
in	nY1	Y Coordinate #2
in	nX2	X Coordinate #3
in	nY2	Y Coordinate #3
in	nCol	Color RGB value to fill

Returns

true if success, false if error

9.51.3.9 gslc_DrvDrawFrameCircle()

Draw a framed circle.

in	pGui	Pointer to GUI
in	nMidX	Center of circle (X coordinate)
in	nMidY	Center of circle (Y coordinate)
in	nRadius	Radius of circle
in	nCol	Color RGB value to frame

Returns

true if success, false if error

9.51.3.10 gslc_DrvDrawFrameRect()

Draw a framed rectangle.

Parameters

in	pGui	Pointer to GUI
in	rRect	Rectangular region to frame
in	nCol	Color RGB value to frame

Returns

true if success, false if error

9.51.3.11 gslc_DrvDrawFrameRoundRect()

Draw a framed rounded rectangle.

Parameters

in	pGui	Pointer to GUI
in	rRect	Rectangular region to frame
in	nRadius	Radius for rounded corners
in	nCol	Color RGB value to frame

Returns

true if success, false if error

9.51.3.12 gslc_DrvDrawFrameTriangle()

Draw a framed triangle.

Parameters

in	pGui	Pointer to GUI
in	nX0	X Coordinate #1
in	nY0	Y Coordinate #1
in	nX1	X Coordinate #2
in	nY1	Y Coordinate #2
in	nX2	X Coordinate #3
in	nY2	Y Coordinate #3
in	nCol	Color RGB value to frame

Returns

true if success, false if error

9.51.3.13 gslc_DrvDrawImage()

Copy all of source image to destination screen at specified coordinate.

Parameters

in	pGui	Pointer to GUI
in	nDstX	Destination X coord for copy
in	nDstY	Destination Y coord for copy
in	sImgRef	Image reference

Returns

true if success, false if fail

9.51.3.14 gslc_DrvDrawLine()

Draw a line.

Parameters

in	pGui	Pointer to GUI
in	nX0	Line start (X coordinate)
in	nY0	Line start (Y coordinate)
in	nX1	Line finish (X coordinate)
in	nY1	Line finish (Y coordinate)
in	nCol	Color RGB value to draw

Returns

true if success, false if error

9.51.3.15 gslc_DrvDrawMonoFromMem()

Draw a monochrome bitmap from a memory array.

• Draw from the bitmap buffer using the foreground color defined in the header (unset bits are transparent)

	in	pGui	Pointer to GUI
ĺ	in	nDstX	Destination X coord for copy
ĺ	in	nDstY	Destination Y coord for copy
ĺ	in	pBitmap	Pointer to bitmap buffer
	in	bProgMem	Bitmap is stored in Flash if true, RAM otherwise

Returns

none

9.51.3.16 gslc_DrvDrawPoint()

Draw a point.

Parameters

in	pGui	Pointer to GUI	
in	nΧ	X coordinate of point	
in	nΥ	Y coordinate of point	
in	nCol	Color RGB value to draw	

Returns

true if success, false if error

9.51.3.17 gslc_DrvDrawPoints()

Draw a point.

Parameters

	in	pGui	Pointer to GUI
	in	asPt	Array of points to draw
ĺ	in	n⊷	Number of points in array
		NumPt	
ĺ	in	nCol	Color RGB value to draw

Returns

true if success, false if error

9.51.3.18 gslc_DrvDrawTxt()

Draw a text string at the given coordinate.

Parameters

in	pGui	Pointer to GUI	
in	nTxtX	X coordinate of top-left text string	
in	nTxtY	Y coordinate of top-left text string	
in	pFont	Ptr to Font	
in	pStr	String to display	
in	eTxtFlags	Flags associated with text string	
in	colTxt	Color to draw text	
in	colBg	unused in m5stack, defaults to black	

Returns

true if success, false if failure

9.51.3.19 gslc_DrvDrawTxtAlign()

Draw a text string in a bounding box using the specified alignment.

Parameters

in	pGui	Pointer to GUI	
in	nX0	<i>nX0</i> X coordinate of top-left of bounding box	
in	nY0	Y coordinate of top-left of bounding box	
in	nX1	X coordinate of bot-right of bounding box	
in	nY1	Y coordinate of bot-right of bounding box	
in	eTxtAlign	1	
in	pFont	Ptr to Font	
in	pStr	String to display	
in	eTxtFlags	Flags associated with text string	
in	colTxt	Color to draw text	
in	colBg	Bg unused in m5stack, defaults to black	

Returns

true if success, false if failure

9.51.3.20 gslc_DrvFontAdd()

Load a font from a resource and return pointer to it.

Parameters

in	eFontRefType	Font reference type (GSLC_FONTREF_PTR for Arduino)	
in	pvFontRef Font reference pointer (Pointer to the GFXFont array)		
in	nFontSz Typeface size to use		

Returns

Void ptr to driver-specific font if load was successful, NULL otherwise

9.51.3.21 gslc_DrvFontsDestruct()

```
void gslc_DrvFontsDestruct ( {\tt gslc\_tsGui\ *\ pGui\ )}
```

Release all fonts defined in the GUI.

Parameters

	in	pGui	Pointer to GUI
--	----	------	----------------

Returns

none

9.51.3.22 gslc_DrvGetDriverDisp()

Get the native display driver instance.

• This can be useful to access special commands available in the selected driver.

Parameters

in	pGui	Pointer to GUI
----	------	----------------

Returns

Void pointer to the display driver instance. This pointer should be typecast to the particular driver being used. If no driver was created then this function will return NULL.

9.51.3.23 gslc_DrvGetDriverTouch()

Get the native touch driver instance.

• This can be useful to access special commands available in the selected driver.

in	pGui	Pointer to GUI

Returns

Void pointer to the touch driver instance. This pointer should be typecast to the particular driver being used. If no driver was created then this function will return NULL.

9.51.3.24 gslc_DrvGetNameDisp()

Get the display driver name.

Parameters

Returns

String containing driver name

9.51.3.25 gslc_DrvGetNameTouch()

Get the touch driver name.

Parameters

```
in pGui Pointer to GUI
```

Returns

String containing driver name

9.51.3.26 gslc_DrvGetTxtSize()

```
int16_t * pnTxtX,
int16_t * pnTxtY,
uint16_t * pnTxtSzW,
uint16_t * pnTxtSzH )
```

Get the extent (width and height) of a text string.

Parameters

in	pGui	Pointer to GUI
in	pFont	Ptr to Font structure
in	pStr	String to display
in	eTxtFlags	Flags associated with text string
out	pnTxtX	Ptr to offset X of text
out	pnTxtY	Ptr to offset Y of text
out	pnTxtSzW	Ptr to width of text
out	pnTxtSzH	Ptr to height of text

Returns

true if success, false if failure

9.51.3.27 gslc_DrvImageDestruct()

```
void gslc_DrvImageDestruct ( void * pvImg )
```

Release an image surface.

Parameters

in	pvlmg	Void ptr to image

Returns

none

9.51.3.28 gslc_DrvInit()

Initialize the SDL library.

Performs clean startup workaround (if enabled)

- · Configures video mode
- · Initializes font support

PRE:

The environment variables should be configured before calling gslc_DrvInit(). This can be done with gslc_←
 DrvInitEnv() or manually in user function.

Parameters

in	pGui	Pointer to GUI
T11	paui	I diliter to doi

Returns

true if success, false if fail

9.51.3.29 gslc_DrvInitTs()

Perform any touchscreen-specific initialization.

Parameters

in	pGui	Pointer to GUI	
in	acDev	Device path to touchscreen eg. "/dev/input/touchscreen"	

Returns

true if successful

9.51.3.30 gslc_DrvLoadImage()

Load a bitmap (*.bmp) and create a new image resource.

Transparency is enabled by GSLC_BMP_TRANS_EN through use of color (GSLC_BMP_TRANS_RGB).

Parameters

in	pGui	Pointer to GUI
in	sImgRef	Image reference

Returns

Image pointer (surface/texture) or NULL if error

9.51.3.31 gslc_DrvPageFlipNow()

Force a page flip to occur.

This generally copies active screen surface to the display.

Parameters

in	pGui	Pointer to GUI
----	------	----------------

Returns

none

9.51.3.32 gslc_DrvRotate()

Change rotation, automatically adapt touchscreen axes swap/flip.

Parameters

in	pGui	Pointer to GUI
in	nRotation	Screen Rotation value (0, 1, 2 or 3)

Returns

true if successful

9.51.3.33 gslc_DrvSetBkgndColor()

Configure the background to use a solid color.

· The background is used when redrawing the entire page

Parameters

in	pGui	Pointer to GUI
in	nCol	RGB Color to use

Returns

true if success, false if fail

9.51.3.34 gslc_DrvSetBkgndlmage()

Configure the background to use a bitmap image.

· The background is used when redrawing the entire page

Parameters

in	pGui	Pointer to GUI
in	sImgRef	Image reference

Returns

true if success, false if fail

9.51.3.35 gslc_DrvSetClipRect()

Set the clipping rectangle for future drawing updates.

Parameters

in	pGui	Pointer to GUI	
in	pRect	Rectangular region to constrain edits	1

Returns

true if success, false if error

9.51.3.36 gslc_DrvSetElemImageGlow()

Set an element's glow-state image.

Parameters

in	pGui	Pointer to GUI
in	pElem	Pointer to Element to update
in	sImgRef	Image reference

Returns

true if success, false if error

9.51.3.37 gslc_DrvSetElemImageNorm()

Set an element's normal-state image.

Parameters

in	pGui	Pointer to GUI
in	pElem	Pointer to Element to update
in	sImgRef	Image reference

Returns

true if success, false if error

9.51.4 Variable Documentation

9.51.4.1 ERRSTR_NULL


const char GSLC_PMEM ERRSTR_NULL[]

9.51.4.2 ERRSTR_PXD_NULL

const char GSLC_PMEM ERRSTR_PXD_NULL[]

9.52 src/GUIslice_drv_sdl.c File Reference

#include "GUIslice_config.h"
Include dependency graph for GUIslice_drv_sdl.c:

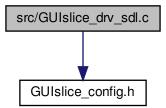


9.53 src/GUIslice_drv_sdl.h File Reference

GUIslice library (driver layer for LINUX / SDL)

#include "GUIslice.h"
#include <stdio.h>

Include dependency graph for GUIslice_drv_sdl.h:

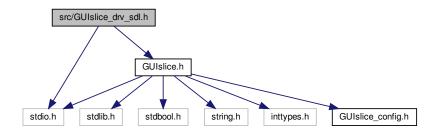

Data Structures

struct gslc_tsDriver

Macros

• #define DRV_HAS_DRAW_POINT

Support gslc_DrvDrawPoint()

#define DRV_OVERRIDE_TXT_ALIGN

Driver provides text alignment.

Functions

• bool gslc_DrvInit (gslc_tsGui *pGui)

Initialize the SDL library.

• void gslc_DrvDestruct (gslc_tsGui *pGui)

Free up any members associated with the driver.

const char * gslc_DrvGetNameDisp (gslc_tsGui *pGui)

Get the display driver name.

const char * gslc DrvGetNameTouch (gslc tsGui *pGui)

Get the touch driver name.

void * gslc_DrvGetDriverDisp (gslc_tsGui *pGui)

Get the native display driver instance.

void * gslc_DrvGetDriverTouch (gslc_tsGui *pGui)

Get the native touch driver instance.

void * gslc_DrvLoadImage (gslc_tsGui *pGui, gslc_tsImgRef sImgRef)

Load a bitmap (*.bmp) and create a new image resource.

• bool gslc_DrvSetBkgndImage (gslc_tsGui *pGui, gslc_tsImgRef sImgRef)

Configure the background to use a bitmap image.

bool gslc_DrvSetBkgndColor (gslc_tsGui *pGui, gslc_tsColor nCol)

Configure the background to use a solid color.

bool gslc DrvSetElemImageNorm (gslc tsGui *pGui, gslc tsElem *pElem, gslc tsImgRef sImgRef)

Set an element's normal-state image.

bool gslc_DrvSetElemImageGlow (gslc_tsGui *pGui, gslc_tsElem *pElem, gslc_tsImgRef sImgRef)

Set an element's glow-state image.

void gslc DrvImageDestruct (void *pvImg)

Release an image surface.

bool gslc_DrvSetClipRect (gslc_tsGui *pGui, gslc_tsRect *pRect)

Set the clipping rectangle for future drawing updates.

• const void * gslc_DrvFontAdd (gslc_teFontRefType eFontRefType, const void *pvFontRef, uint16_t nFontSz)

Load a font from a resource and return pointer to it.

void gslc_DrvFontsDestruct (gslc_tsGui *pGui)

Release all fonts defined in the GUI.

 bool gslc_DrvGetTxtSize (gslc_tsGui *pGui, gslc_tsFont *pFont, const char *pStr, gslc_teTxtFlags eTxt← Flags, int16 t *pnTxtX, int16 t *pnTxtY, uint16 t *pnTxtSzW, uint16 t *pnTxtSzH)

Get the extent (width and height) of a text string.

bool gslc_DrvDrawTxt (gslc_tsGui *pGui, int16_t nTxtX, int16_t nTxtY, gslc_tsFont *pFont, const char *pStr, gslc_teTxtFlags eTxtFlags, gslc_tsColor colTxt, gslc_tsColor colBg)

Draw a text string at the given coordinate.

void gslc_DrvPageFlipNow (gslc_tsGui *pGui)

Force a page flip to occur.

• bool gslc_DrvDrawPoint (gslc_tsGui *pGui, int16_t nX, int16_t nY, gslc_tsColor nCol)

Draw a point.

bool gslc_DrvDrawPoints (gslc_tsGui *pGui, gslc_tsPt *asPt, uint16_t nNumPt, gslc_tsColor nCol)

Draw a point.

bool gslc DrvDrawFrameRect (gslc tsGui *pGui, gslc tsRect rRect, gslc tsColor nCol)

Draw a framed rectangle.

bool gslc_DrvDrawFillRect (gslc_tsGui *pGui, gslc_tsRect rRect, gslc_tsColor nCol)

Draw a filled rectangle.

bool gslc_DrvDrawLine (gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, gslc_tsColor nCol)

Draw a line.

bool gslc DrvDrawImage (gslc tsGui *pGui, int16 t nDstX, int16 t nDstY, gslc tsImgRef sImgRef)

Copy all of source image to destination screen at specified coordinate.

void gslc_DrvDrawBkgnd (gslc_tsGui *pGui)

Copy the background image to destination screen.

bool gslc_DrvGetTouch (gslc_tsGui *pGui, int16_t *pnX, int16_t *pnY, uint16_t *pnPress, gslc_teInputRaw←
 Event *peInputEvent, int16_t *pnInputVal)

Get the last touch event from the SDL_Event handler.

bool gslc_DrvRotate (gslc_tsGui *pGui, uint8_t nRotation)

Change rotation, automatically adapt touchscreen axes swap/flip.

bool gslc_DrvCleanStart (const char *sTTY)

Ensure SDL initializes cleanly to workaround possible issues if previous SDL application failed to close down gracefully.

void gslc_DrvReportInfoPre ()

Report driver debug info (before initialization)

void gslc_DrvReportInfoPost ()

Report driver debug info (after initialization)

SDL_Rect gslc_DrvAdaptRect (gslc_tsRect rRect)

Translate a gslc_tsRect into an SDL_Rect.

• SDL_Color gslc_DrvAdaptColor (gslc_tsColor sCol)

Translate a gslc_tsColor into an SDL_Color.

bool gslc_DrvInitTouch (gslc_tsGui *pGui, const char *acDev)

Perform any touchscreen-specific initialization.

9.53.1 Detailed Description

GUIslice library (driver layer for LINUX / SDL)

9.53.2 Macro Definition Documentation

```
9.53.2.1 DRV_HAS_DRAW_POINT
```

```
#define DRV_HAS_DRAW_POINT
```

Support gslc_DrvDrawPoint()

9.53.2.2 DRV_OVERRIDE_TXT_ALIGN

```
#define DRV_OVERRIDE_TXT_ALIGN
```

Driver provides text alignment.

9.53.3 Function Documentation

9.53.3.1 gslc_DrvAdaptColor()

```
SDL_Color gslc_DrvAdaptColor ( {\tt gslc\_tsColor}~sCol~)
```

Translate a gslc_tsColor into an SDL_Color.

Parameters

in	cCol.	gslc tsColor
	3001	9310_1300101

Returns

Converted SDL_Color

9.53.3.2 gslc_DrvAdaptRect()

Translate a gslc_tsRect into an SDL_Rect.

Parameters

```
in rRect gslc_tsRect
```

Returns

Converted SDL_Rect

9.53.3.3 gslc_DrvCleanStart()

Ensure SDL initializes cleanly to workaround possible issues if previous SDL application failed to close down gracefully.

Parameters

```
in sTTY Terminal device (eg. "/dev/tty0")
```

Returns

true if success

9.53.3.4 gslc_DrvDestruct()

Free up any members associated with the driver.

• Eg. renderers, windows, background surfaces, etc.

Parameters

in	pGui	Pointer to GUI

Returns

none

9.53.3.5 gslc_DrvDrawBkgnd()

```
void gslc_DrvDrawBkgnd ( {\tt gslc\_tsGui} \ * \ pGui \ )
```

Copy the background image to destination screen.

Parameters

in <i>pGui</i> Pointer	to GUI
------------------------	--------

Returns

true if success, false if fail

9.53.3.6 gslc_DrvDrawFillRect()

Draw a filled rectangle.

Parameters

in	pGui	Pointer to GUI
in	rRect	Rectangular region to fill
in	nCol	Color RGB value to fill

Returns

true if success, false if error

9.53.3.7 gslc_DrvDrawFrameRect()

```
bool gslc_DrvDrawFrameRect ( {\tt gslc\_tsGui} \ * \ pGui,
```

```
gslc_tsRect rRect,
gslc_tsColor nCol )
```

Draw a framed rectangle.

Parameters

in	pGui	Pointer to GUI
in	rRect	Rectangular region to frame
in	nCol	Color RGB value to frame

Returns

true if success, false if error

9.53.3.8 gslc_DrvDrawImage()

Copy all of source image to destination screen at specified coordinate.

Parameters

in	pGui	Pointer to GUI
in	nDstX	Destination X coord for copy
in	nDstY	Destination Y coord for copy
in	sImgRef	Image reference

Returns

true if success, false if fail

9.53.3.9 gslc_DrvDrawLine()

Draw a line.

Parameters

in	pGui	Pointer to GUI
in	nX0	Line start (X coordinate)
in	nY0	Line start (Y coordinate)
in	nX1	Line finish (X coordinate)
in	nY1	Line finish (Y coordinate)
in	nCol	Color RGB value to draw

Returns

true if success, false if error

9.53.3.10 gslc_DrvDrawPoint()

Draw a point.

Parameters

in	pGui	Pointer to GUI
in	nΧ	X coordinate of point
in	nΥ	Y coordinate of point
in	nCol	Color RGB value to draw

Returns

true if success, false if error

9.53.3.11 gslc_DrvDrawPoints()

Draw a point.

Parameters

in	pGui	Pointer to GUI
in	asPt	Array of points to draw
in	n⊷	Number of points in array
	NumPt	
in	nCol	Color RGB value to draw

Returns

true if success, false if error

9.53.3.12 gslc_DrvDrawTxt()

Draw a text string at the given coordinate.

Parameters

in	pGui	Pointer to GUI
in	nTxtX	X coordinate of top-left text string
in	nTxtY	Y coordinate of top-left text string
in	pFont	Ptr to Font
in	pStr	String to display
in	eTxtFlags	Flags associated with text string
in	colTxt	Color to draw text
in	colBg	unused in SDL, defaults to black

Returns

true if success, false if failure

9.53.3.13 gslc_DrvFontAdd()

```
const void * pvFontRef,
uint16_t nFontSz )
```

Load a font from a resource and return pointer to it.

Parameters

in	eFontRefType	Font reference type (GSLC_FONTREF_FNAME for SDL)
in	pvFontRef	Font reference pointer (Pointer to the font filename)
in	nFontSz	Typeface size to use

Returns

Void ptr to driver-specific font if load was successful, NULL otherwise

9.53.3.14 gslc_DrvFontsDestruct()

Release all fonts defined in the GUI.

Parameters

in pGui Pointer to GUI

Returns

none

9.53.3.15 gslc_DrvGetDriverDisp()

Get the native display driver instance.

• This can be useful to access special commands available in the selected driver.

Parameters

in	pGui	Pointer to GUI
----	------	----------------

Returns

Void pointer to the display driver instance. This pointer should be typecast to the particular driver being used. If no driver was created then this function will return NULL.

9.53.3.16 gslc_DrvGetDriverTouch()

Get the native touch driver instance.

• This can be useful to access special commands available in the selected driver.

Parameters

in	pGui	Pointer to GUI
----	------	----------------

Returns

Void pointer to the touch driver instance. This pointer should be typecast to the particular driver being used. If no driver was created then this function will return NULL.

9.53.3.17 gslc_DrvGetNameDisp()

Get the display driver name.

Parameters

in	pGui	Pointer to GUI
----	------	----------------

Returns

String containing driver name

9.53.3.18 gslc_DrvGetNameTouch()

Get the touch driver name.

Parameters

in <i>pGui</i> Pointer t

Returns

String containing driver name

9.53.3.19 gslc_DrvGetTouch()

Get the last touch event from the SDL_Event handler.

Parameters

in	pGui	Pointer to GUI
out	pnX	Ptr to X coordinate of last touch event
out	pnY	Ptr to Y coordinate of last touch event
out	pnPress	Ptr to Pressure level of last touch event (0 for none, 1 for touch)
out	peInputEvent	Indication of event type
out	pnInputVal	Additional data for event type

Returns

true if an event was detected or false otherwise

9.53.3.20 gslc_DrvGetTxtSize()

Get the extent (width and height) of a text string.

Parameters

in	pGui	Pointer to GUI
in	pFont	Ptr to Font structure
in	pStr	String to display
in	eTxtFlags	Flags associated with text string
out	pnTxtX	Ptr to offset X of text
out	pnTxtY	Ptr to offset Y of text
out	pnTxtSzW	Ptr to width of text
out	pnTxtSzH	Ptr to height of text

Returns

true if success, false if failure

9.53.3.21 gslc_DrvImageDestruct()

```
void gslc_DrvImageDestruct ( void * pvImg )
```

Release an image surface.

Parameters

in	pvlmg	Void ptr to image
----	-------	-------------------

Returns

none

9.53.3.22 gslc_DrvInit()

Initialize the SDL library.

- Performs clean startup workaround (if enabled)
- · Configures video mode
- · Initializes font support

PRE:

• The environment variables should be configured before calling gslc_DrvInit().

Parameters

in	pGui	Pointer to GUI

Returns

true if success, false if fail

9.53.3.23 gslc_DrvInitTouch()

Perform any touchscreen-specific initialization.

Parameters

in	pGui	Pointer to GUI
in	acDev	Device path to touchscreen eg. "/dev/input/touchscreen"

Returns

true if successful

9.53.3.24 gslc_DrvLoadImage()

Load a bitmap (*.bmp) and create a new image resource.

Transparency is enabled by GSLC_BMP_TRANS_EN through use of color (GSLC_BMP_TRANS_RGB).

Parameters

in	pGui	Pointer to GUI
in	sImgRef	Image reference

Returns

Image pointer (surface/texture/path) or NULL if error

9.53.3.25 gslc_DrvPageFlipNow()

Force a page flip to occur.

This generally copies active screen surface to the display.

Parameters

in	pGui	Pointer to GUI
----	------	----------------

Returns

none

9.53.3.26 gslc_DrvReportInfoPost()

```
void gslc_DrvReportInfoPost ( )
```

Report driver debug info (after initialization)

Returns

none

9.53.3.27 gslc_DrvReportInfoPre()

```
void gslc_DrvReportInfoPre ( )
```

Report driver debug info (before initialization)

Returns

none

9.53.3.28 gslc_DrvRotate()

Change rotation, automatically adapt touchscreen axes swap/flip.

Parameters

in	pGui	Pointer to GUI
in	nRotation	Screen Rotation value (0, 1, 2 or 3)

Returns

true if successful

9.53.3.29 gslc_DrvSetBkgndColor()

Configure the background to use a solid color.

• The background is used when redrawing the entire page

Parameters

in	pGui	Pointer to GUI
in	nCol	RGB Color to use

Returns

true if success, false if fail

9.53.3.30 gslc_DrvSetBkgndImage()

Configure the background to use a bitmap image.

• The background is used when redrawing the entire page

Parameters

in	pGui	Pointer to GUI
in	sImgRef	Image reference

Returns

true if success, false if fail

9.53.3.31 gslc_DrvSetClipRect()

Set the clipping rectangle for future drawing updates.

Parameters

	in	pGui	Pointer to GUI	
ĺ	in	pRect	Rectangular region to constrain edits	

Returns

true if success, false if error

9.53.3.32 gslc_DrvSetElemImageGlow()

Set an element's glow-state image.

Parameters

in	pGui	Pointer to GUI
in	pElem	Pointer to Element to update
in	sImgRef	Image reference

Returns

true if success, false if error

9.53.3.33 gslc_DrvSetElemImageNorm()

```
gslc_tsElem * pElem,
gslc_tsImgRef sImgRef )
```

Set an element's normal-state image.

Parameters


in	pGui	Pointer to GUI
in	pElem	Pointer to Element to update
in	sImgRef	Image reference

Returns

true if success, false if error

9.54 src/GUIslice_drv_tft_espi.cpp File Reference

```
#include "GUIslice_config.h"
Include dependency graph for GUIslice_drv_tft_espi.cpp:
```

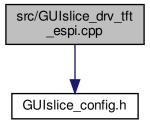


9.55 src/GUIslice_drv_tft_espi.h File Reference

GUIslice library (driver layer for TFT-eSPI)

```
#include "GUIslice.h"
#include <stdio.h>
```

Include dependency graph for GUIslice_drv_tft_espi.h:

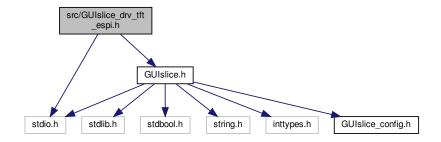

Data Structures

struct gslc_tsDriver

Macros

- #define GSLC SPIFFS EN
- #define DRV_HAS_DRAW_POINT

Support gslc_DrvDrawPoint()

• #define DRV_HAS_DRAW_POINTS

Support gslc_DrvDrawPoints()

• #define DRV_HAS_DRAW_LINE

Support gslc_DrvDrawLine()

#define DRV_HAS_DRAW_RECT_FRAME

Support gslc_DrvDrawFrameRect()

• #define DRV_HAS_DRAW_RECT_FILL

Support gslc_DrvDrawFillRect()

• #define DRV_HAS_DRAW_RECT_ROUND_FRAME

Support gslc_DrvDrawFrameRoundRect()

• #define DRV_HAS_DRAW_RECT_ROUND_FILL

Support gslc_DrvDrawFillRoundRect()

• #define DRV_HAS_DRAW_CIRCLE_FRAME

Support gslc_DrvDrawFrameCircle()

• #define DRV_HAS_DRAW_CIRCLE_FILL

Support gslc_DrvDrawFillCircle()

• #define DRV HAS DRAW TRI FRAME

Support gslc_DrvDrawFrameTriangle()

#define DRV_HAS_DRAW_TRI_FILL

Support gslc_DrvDrawFillTriangle()

#define DRV_HAS_DRAW_TEXT

Support gslc_DrvDrawTxt()

#define DRV_HAS_DRAW_BMP_MEM

Support gslc_DrvDrawBmp24FromMem()

#define DRV_OVERRIDE_TXT_ALIGN

Driver provides text alignment.

Functions

bool gslc_DrvInit (gslc_tsGui *pGui)

Initialize the SDL library.

bool gslc_DrvInitTs (gslc_tsGui *pGui, const char *acDev)

Perform any touchscreen-specific initialization.

void gslc_DrvDestruct (gslc_tsGui *pGui)

Free up any members associated with the driver.

const char * gslc_DrvGetNameDisp (gslc_tsGui *pGui)

Get the display driver name.

const char * gslc DrvGetNameTouch (gslc tsGui *pGui)

Get the touch driver name.

void * gslc_DrvGetDriverDisp (gslc_tsGui *pGui)

Get the native display driver instance.

void * gslc_DrvGetDriverTouch (gslc_tsGui *pGui)

Get the native touch driver instance.

void * gslc_DrvLoadImage (gslc_tsGui *pGui, gslc_tsImgRef sImgRef)

Load a bitmap (*.bmp) and create a new image resource.

bool gslc_DrvSetBkgndImage (gslc_tsGui *pGui, gslc_tsImgRef sImgRef)

Configure the background to use a bitmap image.

bool gslc_DrvSetBkgndColor (gslc_tsGui *pGui, gslc_tsColor nCol)

Configure the background to use a solid color.

• bool gslc_DrvSetElemImageNorm (gslc_tsGui *pGui, gslc_tsElem *pElem, gslc_tsImgRef sImgRef)

Set an element's normal-state image.

bool gslc_DrvSetElemImageGlow (gslc_tsGui *pGui, gslc_tsElem *pElem, gslc_tsImgRef sImgRef)

Set an element's glow-state image.

void gslc_DrvImageDestruct (void *pvImg)

Release an image surface.

bool gslc_DrvSetClipRect (gslc_tsGui *pGui, gslc_tsRect *pRect)

Set the clipping rectangle for future drawing updates.

const void * gslc_DrvFontAdd (gslc_teFontRefType eFontRefType, const void *pvFontRef, uint16_t nFontSz)

Load a font from a resource and return pointer to it.

void gslc DrvFontsDestruct (gslc tsGui *pGui)

Release all fonts defined in the GUI.

bool gslc_DrvGetTxtSize (gslc_tsGui *pGui, gslc_tsFont *pFont, const char *pStr, gslc_teTxtFlags eTxt←
 Flags, int16_t *pnTxtX, int16_t *pnTxtY, uint16_t *pnTxtSzW, uint16_t *pnTxtSzH)

Get the extent (width and height) of a text string.

bool gslc_DrvDrawTxt (gslc_tsGui *pGui, int16_t nTxtX, int16_t nTxtY, gslc_tsFont *pFont, const char *pStr, gslc_teTxtFlags eTxtFlags, gslc_tsColor colTxt, gslc_tsColor colBg)

Draw a text string at the given coordinate.

• bool gslc_DrvDrawTxtAlign (gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int8_t e
TxtAlign, gslc_tsFont *pFont, const char *pStr, gslc_teTxtFlags eTxtFlags, gslc_tsColor colTxt, gslc_tsColor colBg)

Draw a text string in a bounding box using the specified alignment.

void gslc_DrvPageFlipNow (gslc_tsGui *pGui)

Force a page flip to occur.

• bool gslc_DrvDrawPoint (gslc_tsGui *pGui, int16_t nX, int16_t nY, gslc_tsColor nCol)

Draw a point.

bool gslc_DrvDrawPoints (gslc_tsGui *pGui, gslc_tsPt *asPt, uint16_t nNumPt, gslc_tsColor nCol)

Draw a point

• bool gslc_DrvDrawFrameRect (gslc_tsGui *pGui, gslc_tsRect rRect, gslc_tsColor nCol)

Draw a framed rectangle.

bool gslc DrvDrawFillRect (gslc tsGui *pGui, gslc tsRect rRect, gslc tsColor nCol)

Draw a filled rectangle.

bool gslc_DrvDrawFrameRoundRect (gslc_tsGui *pGui, gslc_tsRect rRect, int16_t nRadius, gslc_tsColor n←
 Col)

Draw a framed rounded rectangle.

- bool gslc_DrvDrawFillRoundRect (gslc_tsGui *pGui, gslc_tsRect rRect, int16_t nRadius, gslc_tsColor nCol)

 Draw a filled rounded rectangle.
- bool gslc_DrvDrawLine (gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, gslc_tsColor nCol)

Draw a line.

bool gslc_DrvDrawFrameCircle (gslc_tsGui *pGui, int16_t nMidX, int16_t nMidY, uint16_t nRadius, gslc_ts←
 Color nCol)

Draw a framed circle.

bool gslc_DrvDrawFillCircle (gslc_tsGui *pGui, int16_t nMidX, int16_t nMidY, uint16_t nRadius, gslc_tsColor nCol)

Draw a filled circle.

• bool gslc_DrvDrawFrameTriangle (gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int16_t nX2, int16_t nY2, gslc_tsColor nCol)

Draw a framed triangle.

• bool gslc_DrvDrawFillTriangle (gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int16_t nX2, int16_t nY2, gslc_tsColor nCol)

Draw a filled triangle.

• bool gslc_DrvDrawImage (gslc_tsGui *pGui, int16_t nDstX, int16_t nDstY, gslc_tsImgRef sImgRef)

Copy all of source image to destination screen at specified coordinate.

 void gslc_DrvDrawMonoFromMem (gslc_tsGui *pGui, int16_t nDstX, int16_t nDstY, const unsigned char *p← Bitmap, bool bProgMem)

Draw a monochrome bitmap from a memory array.

 void gslc_DrvDrawBmp24FromMem (gslc_tsGui *pGui, int16_t nDstX, int16_t nDstY, const unsigned char *pBitmap, bool bProgMem)

Draw a color 24-bit depth bitmap from a memory array.

• void gslc DrvDrawBkgnd (gslc tsGui *pGui)

Copy the background image to destination screen.

bool gslc_DrvRotate (gslc_tsGui *pGui, uint8_t nRotation)

Change rotation, automatically adapt touchscreen axes swap/flip.

uint16_t gslc_DrvAdaptColorToRaw (gslc_tsColor nCol)

9.55.1 Detailed Description

GUIslice library (driver layer for TFT-eSPI)

9.55.2 Macro Definition Documentation

9.55.2.1 DRV_HAS_DRAW_BMP_MEM

#define DRV_HAS_DRAW_BMP_MEM

Support gslc_DrvDrawBmp24FromMem()

9.55.2.2 DRV_HAS_DRAW_CIRCLE_FILL #define DRV_HAS_DRAW_CIRCLE_FILL Support gslc_DrvDrawFillCircle() 9.55.2.3 DRV_HAS_DRAW_CIRCLE_FRAME #define DRV_HAS_DRAW_CIRCLE_FRAME Support gslc_DrvDrawFrameCircle() 9.55.2.4 DRV_HAS_DRAW_LINE #define DRV_HAS_DRAW_LINE Support gslc_DrvDrawLine() 9.55.2.5 DRV_HAS_DRAW_POINT #define DRV_HAS_DRAW_POINT Support gslc_DrvDrawPoint() 9.55.2.6 DRV_HAS_DRAW_POINTS #define DRV_HAS_DRAW_POINTS Support gslc_DrvDrawPoints()

9.55.2.7 DRV_HAS_DRAW_RECT_FILL

#define DRV_HAS_DRAW_RECT_FILL

Support gslc_DrvDrawFillRect()

9.55.2.8 DRV_HAS_DRAW_RECT_FRAME #define DRV_HAS_DRAW_RECT_FRAME Support gslc_DrvDrawFrameRect() 9.55.2.9 DRV_HAS_DRAW_RECT_ROUND_FILL #define DRV_HAS_DRAW_RECT_ROUND_FILL Support gslc_DrvDrawFillRoundRect() 9.55.2.10 DRV_HAS_DRAW_RECT_ROUND_FRAME #define DRV_HAS_DRAW_RECT_ROUND_FRAME Support gslc_DrvDrawFrameRoundRect() 9.55.2.11 DRV_HAS_DRAW_TEXT #define DRV_HAS_DRAW_TEXT Support gslc_DrvDrawTxt() 9.55.2.12 DRV_HAS_DRAW_TRI_FILL #define DRV_HAS_DRAW_TRI_FILL Support gslc_DrvDrawFillTriangle() 9.55.2.13 DRV_HAS_DRAW_TRI_FRAME #define DRV_HAS_DRAW_TRI_FRAME

Support gslc_DrvDrawFrameTriangle()

```
9.55.2.14 DRV_OVERRIDE_TXT_ALIGN
```

```
#define DRV_OVERRIDE_TXT_ALIGN
```

Driver provides text alignment.

9.55.2.15 GSLC_SPIFFS_EN

```
#define GSLC_SPIFFS_EN
```

9.55.3 Function Documentation

9.55.3.1 gslc_DrvAdaptColorToRaw()

9.55.3.2 gslc_DrvDestruct()

Free up any members associated with the driver.

• Eg. renderers, windows, background surfaces, etc.

Parameters

```
in pGui Pointer to GUI
```

Returns

none

9.55.3.3 gslc_DrvDrawBkgnd()

648 File Documentation

Copy the background image to destination screen.

Parameters

in <i>pGui</i>	Pointer to GUI
----------------	----------------

Returns

true if success, false if fail

9.55.3.4 gslc_DrvDrawBmp24FromMem()

Draw a color 24-bit depth bitmap from a memory array.

- Note that users must convert images from their native format (eg. BMP, PNG, etc.) into a C array. Please refer to the following guide for details: https://github.com/ImpulseAdventure/GU← Islice/wiki/Display-Images-from-FLASH
- The converted file (c array) can then be included in the sketch.

Parameters

in	pGui	Pointer to GUI
in	nDstX	X coord for copy
in	nDstY	Y coord for copy
in	pBitmap	Pointer to bitmap buffer
in	bProgMem	Bitmap is stored in Flash if true, RAM otherwise

Returns

none

9.55.3.5 gslc_DrvDrawFillCircle()

Draw a filled circle.

Parameters

in	pGui	Pointer to GUI
in	nMidX	Center of circle (X coordinate)
in	nMidY	Center of circle (Y coordinate)
in	nRadius	Radius of circle
in	nCol	Color RGB value to fill

Returns

true if success, false if error

9.55.3.6 gslc_DrvDrawFillRect()

Draw a filled rectangle.

Parameters

in	pGui	Pointer to GUI
in	rRect	Rectangular region to fill
in	nCol	Color RGB value to fill

Returns

true if success, false if error

9.55.3.7 gslc_DrvDrawFillRoundRect()

Draw a filled rounded rectangle.

Parameters

in	pGui	Pointer to GUI
in	rRect	Rectangular region to fill
in	nRadius	Radius for rounded corners
in	nCol	Color RGB value to fill

Returns

true if success, false if error

9.55.3.8 gslc_DrvDrawFillTriangle()

Draw a filled triangle.

Parameters

in	pGui	Pointer to GUI
in	nX0	X Coordinate #1
in	nY0	Y Coordinate #1
in	nX1	X Coordinate #2
in	nY1	Y Coordinate #2
in	nX2	X Coordinate #3
in	nY2	Y Coordinate #3
in	nCol	Color RGB value to fill

Returns

true if success, false if error

9.55.3.9 gslc_DrvDrawFrameCircle()

Draw a framed circle.

Parameters

in	pGui	Pointer to GUI
in	nMidX	Center of circle (X coordinate)
in.	nMidY	Center of circle (Y coordinate)
in	ed by Doxygen nRadius	Radius of circle
in	nCol	Color RGB value to frame

Returns

true if success, false if error

9.55.3.10 gslc_DrvDrawFrameRect()

Draw a framed rectangle.

Parameters

in	pGui	Pointer to GUI
in	rRect	Rectangular region to frame
in	nCol	Color RGB value to frame

Returns

true if success, false if error

9.55.3.11 gslc_DrvDrawFrameRoundRect()

Draw a framed rounded rectangle.

Parameters

in	pGui	Pointer to GUI
in	rRect	Rectangular region to frame
in	nRadius	Radius for rounded corners
in	nCol	Color RGB value to frame

Returns

true if success, false if error

9.55.3.12 gslc_DrvDrawFrameTriangle()

Draw a framed triangle.

Parameters

in	pGui	Pointer to GUI
in	nX0	X Coordinate #1
in	nY0	Y Coordinate #1
in	nX1	X Coordinate #2
in	nY1	Y Coordinate #2
in	nX2	X Coordinate #3
in	nY2	Y Coordinate #3
in	nCol	Color RGB value to frame

Returns

true if success, false if error

9.55.3.13 gslc_DrvDrawImage()

Copy all of source image to destination screen at specified coordinate.

Parameters

in	pGui	Pointer to GUI
in	nDstX	Destination X coord for copy
in	nDstY	Destination Y coord for copy
in	sImgRef	Image reference

Returns

true if success, false if fail

9.55.3.14 gslc_DrvDrawLine()

Draw a line.

Parameters

in	pGui	Pointer to GUI
in	in nX0 in nY0 in nX1 in nY1	Line start (X coordinate)
in		Line start (Y coordinate)
in		Line finish (X coordinate)
in		Line finish (Y coordinate)
in	nCol	Color RGB value to draw

Returns

true if success, false if error

9.55.3.15 gslc_DrvDrawMonoFromMem()

Draw a monochrome bitmap from a memory array.

• Draw from the bitmap buffer using the foreground color defined in the header (unset bits are transparent)

Parameters

	in	pGui	Pointer to GUI
	in	nDstX	Destination X coord for copy
	in	nDstY	Destination Y coord for copy
	in	pBitmap	Pointer to bitmap buffer
	in	bProgMem	Bitmap is stored in Flash if true, RAM otherwise

Returns

none

9.55.3.16 gslc_DrvDrawPoint()

Draw a point.

Parameters

in	pGui	Pointer to GUI	
in	nΧ	X coordinate of point	
in	nΥ	nY Y coordinate of point	
in	nCol	Color RGB value to draw	

Returns

true if success, false if error

9.55.3.17 gslc_DrvDrawPoints()

Draw a point.

Parameters

	in	pGui	Pointer to GUI
	in	asPt	Array of points to draw
ĺ	in	n⊷	Number of points in array
		NumPt	
ĺ	in	nCol	Color RGB value to draw

Returns

9.55.3.18 gslc_DrvDrawTxt()

Draw a text string at the given coordinate.

Parameters

in	pGui	Pointer to GUI
in	nTxtX	X coordinate of top-left text string
in	nTxtY	Y coordinate of top-left text string
in	pFont	Ptr to Font
in	pStr	String to display
in	eTxtFlags	Flags associated with text string
in	colTxt	Color to draw text
in	colBg	Color of Background for antialias blending

Returns

true if success, false if failure

9.55.3.19 gslc_DrvDrawTxtAlign()

Draw a text string in a bounding box using the specified alignment.

Parameters

in	pGui	Pointer to GUI
in	nX0	X coordinate of top-left of bounding box
in	nY0	Y coordinate of top-left of bounding box
in	nX1	X coordinate of bot-right of bounding box
in	nY1	Y coordinate of bot-right of bounding box
in	eTxtAlign	Alignment mode]
in	pFont	Ptr to Font
in	pStr	String to display
in	eTxtFlags	Flags associated with text string
in	colTxt	Color to draw text
in	colBg	Color of Background for antialias blending

Returns

true if success, false if failure

9.55.3.20 gslc_DrvFontAdd()

Load a font from a resource and return pointer to it.

Parameters

in	eFontRefType	Font reference type:	
		 GSLC_FONTREF_PTR for Standard TFT_eSPI Fonts 	
		GSLC_FONTREF_FNAME for antialiased Font in SPIFFS	
in	pvFontRef	Font reference pointer / SPIFFS font filename without ext.	
in	nFontSz	Typeface size to use, ignored for SPIFFS font	

Returns

Void ptr to driver-specific font if load was successful, NULL otherwise

9.55.3.21 gslc_DrvFontsDestruct()

Release all fonts defined in the GUI.

Parameters

	in	pGui	Pointer to GUI
--	----	------	----------------

Returns

none

9.55.3.22 gslc_DrvGetDriverDisp()

Get the native display driver instance.

• This can be useful to access special commands available in the selected driver.

Parameters

in <i>pGui</i>	Pointer to GUI
----------------	----------------

Returns

Void pointer to the display driver instance. This pointer should be typecast to the particular driver being used. If no driver was created then this function will return NULL.

9.55.3.23 gslc_DrvGetDriverTouch()

Get the native touch driver instance.

• This can be useful to access special commands available in the selected driver.

Parameters

in	pGui	Pointer to GUI

Returns

Void pointer to the touch driver instance. This pointer should be typecast to the particular driver being used. If no driver was created then this function will return NULL.

9.55.3.24 gslc_DrvGetNameDisp()

Get the display driver name.

Parameters

in <i>pGui</i>	Pointer to GUI
----------------	----------------

Returns

String containing driver name

9.55.3.25 gslc_DrvGetNameTouch()

Get the touch driver name.

Parameters

in <i>pGui</i> Pointer to GU

Returns

String containing driver name

9.55.3.26 gslc_DrvGetTxtSize()

```
int16_t * pnTxtX,
int16_t * pnTxtY,
uint16_t * pnTxtSzW,
uint16_t * pnTxtSzH )
```

Get the extent (width and height) of a text string.

Parameters

in	pGui	Pointer to GUI
in	pFont	Ptr to Font structure
in	pStr	String to display
in	eTxtFlags	Flags associated with text string
out	pnTxtX	Ptr to offset X of text
out	pnTxtY	Ptr to offset Y of text
out	pnTxtSzW	Ptr to width of text
out	pnTxtSzH	Ptr to height of text

Returns

true if success, false if failure

9.55.3.27 gslc_DrvImageDestruct()

```
void gslc_DrvImageDestruct ( void * pvImg )
```

Release an image surface.

Parameters

in	pvlmg	Void ptr to image

Returns

none

9.55.3.28 gslc_DrvInit()

Initialize the SDL library.

• Performs clean startup workaround (if enabled)

- · Configures video mode
- · Initializes font support

PRE:

The environment variables should be configured before calling gslc_DrvInit(). This can be done with gslc_←
 DrvInitEnv() or manually in user function.

Parameters

in	pGui	Pointer to GUI
----	------	----------------

Returns

true if success, false if fail

9.55.3.29 gslc_DrvInitTs()

Perform any touchscreen-specific initialization.

Parameters

	•	Pointer to GUI
in	acDev	Device path to touchscreen eg. "/dev/input/touchscreen"

Returns

true if successful

9.55.3.30 gslc_DrvLoadImage()

Load a bitmap (*.bmp) and create a new image resource.

Transparency is enabled by GSLC_BMP_TRANS_EN through use of color (GSLC_BMP_TRANS_RGB).

Parameters

in	pGui	Pointer to GUI
in	sImgRef	Image reference

Returns

Image pointer (surface/texture) or NULL if error

9.55.3.31 gslc_DrvPageFlipNow()

Force a page flip to occur.

This generally copies active screen surface to the display.

Parameters

in	pGui	Pointer to GUI
----	------	----------------

Returns

none

9.55.3.32 gslc_DrvRotate()

```
bool gslc_DrvRotate (  \frac{\text{gslc\_tsGui} * pGui,}{\text{uint8\_t} nRotation} )
```

Change rotation, automatically adapt touchscreen axes swap/flip.

Parameters

	in	pGui	Pointer to GUI
ſ	in	nRotation	Screen Rotation value (0, 1, 2 or 3)

Returns

true if successful

9.55.3.33 gslc_DrvSetBkgndColor()

Configure the background to use a solid color.

· The background is used when redrawing the entire page

Parameters

in	pGui	Pointer to GUI
in	nCol	RGB Color to use

Returns

true if success, false if fail

9.55.3.34 gslc_DrvSetBkgndImage()

Configure the background to use a bitmap image.

· The background is used when redrawing the entire page

Parameters

in	pGui	Pointer to GUI
in	sImgRef	Image reference

Returns

true if success, false if fail

9.55.3.35 gslc_DrvSetClipRect()

Set the clipping rectangle for future drawing updates.

Parameters

in	pGui	Pointer to GUI
in	pRect	Rectangular region to constrain edits

Returns

true if success, false if error

9.55.3.36 gslc_DrvSetElemImageGlow()

Set an element's glow-state image.

Parameters

in	pGui	Pointer to GUI
in	pElem	Pointer to Element to update
in	sImgRef	Image reference

Returns

true if success, false if error

9.55.3.37 gslc_DrvSetElemImageNorm()

Set an element's normal-state image.

Parameters


in	pGui	Pointer to GUI
in	pElem	Pointer to Element to update
in	sImgRef	Image reference

Returns

true if success, false if error

9.56 src/GUIslice_drv_utft.cpp File Reference


#include "GUIslice_config.h"
Include dependency graph for GUIslice_drv_utft.cpp:

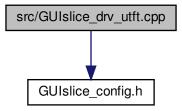

9.57 src/GUIslice_drv_utft.h File Reference

GUIslice library (driver layer for UTFT)

#include "GUIslice.h"
#include <stdio.h>
Include dependency graph for GUIslice_drv_utft.h:

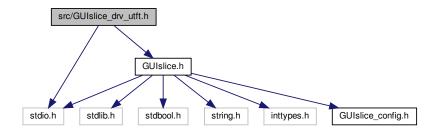

Data Structures

struct gslc_tsDriver

Macros

• #define DRV_HAS_DRAW_POINT

Support gslc_DrvDrawPoint()

• #define DRV_HAS_DRAW_POINTS

Support gslc_DrvDrawPoints()

• #define DRV_HAS_DRAW_LINE

Support gslc_DrvDrawLine()

• #define DRV_HAS_DRAW_RECT_FRAME

Support gslc_DrvDrawFrameRect()

• #define DRV_HAS_DRAW_RECT_FILL

Support gslc_DrvDrawFillRect()

• #define DRV HAS DRAW RECT ROUND FRAME

Support gslc_DrvDrawFrameRoundRect()

#define DRV_HAS_DRAW_RECT_ROUND_FILL

Support gslc DrvDrawFillRoundRect()

• #define DRV HAS DRAW CIRCLE FRAME

Support gslc_DrvDrawFrameCircle()

• #define DRV_HAS_DRAW_CIRCLE_FILL

Support gslc_DrvDrawFillCircle()

• #define DRV_HAS_DRAW_TRI_FRAME

Support gslc_DrvDrawFrameTriangle()

• #define DRV_HAS_DRAW_TRI_FILL

Support gslc_DrvDrawFillTriangle()

#define DRV_HAS_DRAW_TEXT

Support gslc_DrvDrawTxt()

• #define DRV_HAS_DRAW_BMP_MEM

Support gslc_DrvDrawBmp24FromMem()

• #define DRV_OVERRIDE_TXT_ALIGN

Driver provides text alignment.

Functions

• bool gslc_DrvInit (gslc_tsGui *pGui)

Initialize the SDL library.

• bool gslc_DrvInitTs (gslc_tsGui *pGui, const char *acDev)

Perform any touchscreen-specific initialization.

void gslc_DrvDestruct (gslc_tsGui *pGui)

Free up any members associated with the driver.

const char * gslc_DrvGetNameDisp (gslc_tsGui *pGui)

Get the display driver name.

const char * gslc_DrvGetNameTouch (gslc_tsGui *pGui)

Get the touch driver name.

void * gslc DrvGetDriverDisp (gslc tsGui *pGui)

Get the native display driver instance.

void * gslc_DrvGetDriverTouch (gslc_tsGui *pGui)

Get the native touch driver instance.

void * gslc DrvLoadImage (gslc tsGui *pGui, gslc tsImgRef sImgRef)

Load a bitmap (*.bmp) and create a new image resource.

bool gslc_DrvSetBkgndImage (gslc_tsGui *pGui, gslc_tsImgRef sImgRef)

Configure the background to use a bitmap image.

bool gslc_DrvSetBkgndColor (gslc_tsGui *pGui, gslc_tsColor nCol)

Configure the background to use a solid color.

bool gslc_DrvSetElemImageNorm (gslc_tsGui *pGui, gslc_tsElem *pElem, gslc_tsImgRef sImgRef)

Set an element's normal-state image.

• bool gslc_DrvSetElemImageGlow (gslc_tsGui *pGui, gslc_tsElem *pElem, gslc_tsImgRef sImgRef)

Set an element's glow-state image.

void gslc DrvImageDestruct (void *pvImg)

Release an image surface.

bool gslc_DrvSetClipRect (gslc_tsGui *pGui, gslc_tsRect *pRect)

Set the clipping rectangle for future drawing updates.

 $\bullet \ \ const \ void \ * gslc_DrvFontAdd \ (gslc_teFontRefType \ eFontRefType, \ const \ void \ * pvFontRef, \ uint16_t \ nFontSz)$

Load a font from a resource and return pointer to it.

void gslc_DrvFontsDestruct (gslc_tsGui *pGui)

Release all fonts defined in the GUI.

 bool gslc_DrvGetTxtSize (gslc_tsGui *pGui, gslc_tsFont *pFont, const char *pStr, gslc_teTxtFlags eTxt← Flags, int16_t *pnTxtX, int16_t *pnTxtY, uint16_t *pnTxtSzW, uint16_t *pnTxtSzH)

Get the extent (width and height) of a text string.

bool gslc_DrvDrawTxt (gslc_tsGui *pGui, int16_t nTxtX, int16_t nTxtY, gslc_tsFont *pFont, const char *pStr, gslc_teTxtFlags eTxtFlags, gslc_tsColor colTxt, gslc_tsColor colBg)

Draw a text string at the given coordinate.

void gslc_DrvPageFlipNow (gslc_tsGui *pGui)

Force a page flip to occur.

bool gslc DrvDrawPoint (gslc tsGui *pGui, int16 t nX, int16 t nY, gslc tsColor nCol)

Draw a point.

bool gslc_DrvDrawPoints (gslc_tsGui *pGui, gslc_tsPt *asPt, uint16_t nNumPt, gslc_tsColor nCol)

Draw a point.

bool gslc_DrvDrawFrameRect (gslc_tsGui *pGui, gslc_tsRect rRect, gslc_tsColor nCol)

Draw a framed rectangle.

• bool gslc_DrvDrawFillRect (gslc_tsGui *pGui, gslc_tsRect rRect, gslc_tsColor nCol)

Draw a filled rectangle.

• bool gslc_DrvDrawFrameRoundRect (gslc_tsGui *pGui, gslc_tsRect rRect, int16_t nRadius, gslc_tsColor n← Col)

Draw a framed rounded rectangle.

- bool gslc_DrvDrawFillRoundRect (gslc_tsGui *pGui, gslc_tsRect rRect, int16_t nRadius, gslc_tsColor nCol)

 Draw a filled rounded rectangle.
- bool gslc_DrvDrawLine (gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, gslc_tsColor nCol)

Draw a line.

bool gslc_DrvDrawFrameCircle (gslc_tsGui *pGui, int16_t nMidX, int16_t nMidY, uint16_t nRadius, gslc_ts←
 Color nCol)

Draw a framed circle.

bool gslc_DrvDrawFillCircle (gslc_tsGui *pGui, int16_t nMidX, int16_t nMidY, uint16_t nRadius, gslc_tsColor nCol)

Draw a filled circle.

• bool gslc_DrvDrawFrameTriangle (gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int16_t nX2, int16_t nY2, gslc_tsColor nCol)

Draw a framed triangle.

• bool gslc_DrvDrawFillTriangle (gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int16_t nX2, int16_t nY2, gslc_tsColor nCol)

Draw a filled triangle.

• bool gslc_DrvDrawImage (gslc_tsGui *pGui, int16_t nDstX, int16_t nDstY, gslc_tsImgRef sImgRef)

Copy all of source image to destination screen at specified coordinate.

void gslc_DrvDrawMonoFromMem (gslc_tsGui *pGui, int16_t nDstX, int16_t nDstY, const unsigned char *p←
 Bitmap, bool bProgMem)

Draw a monochrome bitmap from a memory array.

 void gslc_DrvDrawBmp24FromMem (gslc_tsGui *pGui, int16_t nDstX, int16_t nDstY, const unsigned char *pBitmap, bool bProgMem)

Draw a color 24-bit depth bitmap from a memory array.

• void gslc_DrvDrawBkgnd (gslc_tsGui *pGui)

Copy the background image to destination screen.

• bool gslc_DrvInitTouch (gslc_tsGui *pGui, const char *acDev)

Perform any touchscreen-specific initialization.

bool gslc_DrvGetTouch (gslc_tsGui *pGui, int16_t *pnX, int16_t *pnY, uint16_t *pnPress, gslc_teInputRaw←
 Event *peInputEvent, int16 t *pnInputVal)

Get the last touch event from the internal touch handler.

bool gslc_DrvRotate (gslc_tsGui *pGui, uint8_t nRotation)

Change rotation, automatically adapt touchscreen axes swap/flip.

• uint16_t gslc_DrvAdaptColorToRaw (gslc_tsColor nCol)

9.57.1 Detailed Description

GUIslice library (driver layer for UTFT)

9.57.2 Macro Definition Documentation

9.57.2.1 DRV_HAS_DRAW_BMP_MEM

#define DRV_HAS_DRAW_BMP_MEM

Support gslc_DrvDrawBmp24FromMem()

9.57.2.2 DRV_HAS_DRAW_CIRCLE_FILL

#define DRV_HAS_DRAW_CIRCLE_FILL

Support gslc DrvDrawFillCircle()

9.57.2.3 DRV_HAS_DRAW_CIRCLE_FRAME

#define DRV_HAS_DRAW_CIRCLE_FRAME

Support gslc_DrvDrawFrameCircle()

```
9.57.2.4 DRV_HAS_DRAW_LINE
#define DRV_HAS_DRAW_LINE
Support gslc_DrvDrawLine()
9.57.2.5 DRV_HAS_DRAW_POINT
#define DRV_HAS_DRAW_POINT
Support gslc_DrvDrawPoint()
9.57.2.6 DRV_HAS_DRAW_POINTS
#define DRV_HAS_DRAW_POINTS
Support gslc_DrvDrawPoints()
9.57.2.7 DRV_HAS_DRAW_RECT_FILL
#define DRV_HAS_DRAW_RECT_FILL
Support gslc_DrvDrawFillRect()
9.57.2.8 DRV_HAS_DRAW_RECT_FRAME
#define DRV_HAS_DRAW_RECT_FRAME
Support gslc_DrvDrawFrameRect()
9.57.2.9 DRV_HAS_DRAW_RECT_ROUND_FILL
```

#define DRV_HAS_DRAW_RECT_ROUND_FILL

Support gslc_DrvDrawFillRoundRect()

```
9.57.2.10 DRV_HAS_DRAW_RECT_ROUND_FRAME
#define DRV_HAS_DRAW_RECT_ROUND_FRAME
Support gslc_DrvDrawFrameRoundRect()
9.57.2.11 DRV HAS DRAW TEXT
#define DRV_HAS_DRAW_TEXT
Support gslc_DrvDrawTxt()
9.57.2.12 DRV_HAS_DRAW_TRI_FILL
#define DRV_HAS_DRAW_TRI_FILL
Support gslc_DrvDrawFillTriangle()
9.57.2.13 DRV_HAS_DRAW_TRI_FRAME
#define DRV_HAS_DRAW_TRI_FRAME
Support gslc_DrvDrawFrameTriangle()
9.57.2.14 DRV_OVERRIDE_TXT_ALIGN
#define DRV_OVERRIDE_TXT_ALIGN
Driver provides text alignment.
9.57.3 Function Documentation
9.57.3.1 gslc_DrvAdaptColorToRaw()
uint16_t gslc_DrvAdaptColorToRaw (
             gslc_tsColor nCol )
9.57.3.2 gslc_DrvDestruct()
void gslc_DrvDestruct (
             gslc_tsGui * pGui )
```

Free up any members associated with the driver.

• Eg. renderers, windows, background surfaces, etc.

Parameters

in <i>pGui</i>	Pointer to GUI
----------------	----------------

Returns

none

9.57.3.3 gslc_DrvDrawBkgnd()

Copy the background image to destination screen.

Parameters

```
in pGui Pointer to GUI
```

Returns

true if success, false if fail

9.57.3.4 gslc_DrvDrawBmp24FromMem()

Draw a color 24-bit depth bitmap from a memory array.

- Note that users must convert images from their native format (eg. BMP, PNG, etc.) into a C array. Please refer to the following guide for details: https://github.com/ImpulseAdventure/GU← Islice/wiki/Display-Images-from-FLASH
- The converted file (c array) can then be included in the sketch.

Parameters

in	pGui	Pointer to GUI
in	nDstX	X coord for copy
in	nDstY	Y coord for copy
in	pBitmap	Pointer to bitmap buffer
in	bProgMem	Bitmap is stored in Flash if true, RAM otherwise

Returns

none

9.57.3.5 gslc_DrvDrawFillCircle()

Draw a filled circle.

Parameters

in	pGui	Pointer to GUI
in	nMidX	Center of circle (X coordinate)
in	nMidY	Center of circle (Y coordinate)
in	nRadius	Radius of circle
in	nCol	Color RGB value to fill

Returns

true if success, false if error

9.57.3.6 gslc_DrvDrawFillRect()

Draw a filled rectangle.

Parameters

in	pGui	Pointer to GUI
in	rRect	Rectangular region to fill
in	nCol	Color RGB value to fill

Returns

9.57.3.7 gslc_DrvDrawFillRoundRect()

Draw a filled rounded rectangle.

Parameters

in	pGui	Pointer to GUI
in	rRect	Rectangular region to fill
in	nRadius	Radius for rounded corners
in	nCol	Color RGB value to fill

Returns

true if success, false if error

9.57.3.8 gslc_DrvDrawFillTriangle()

Draw a filled triangle.

Parameters

in	pGui	Pointer to GUI
in	nX0	X Coordinate #1
in	nY0	Y Coordinate #1
in	nX1	X Coordinate #2
in	nY1	Y Coordinate #2
in	nX2	X Coordinate #3
in	nY2	Y Coordinate #3
in	nCol	Color RGB value to fill

Returns

9.57.3.9 gslc_DrvDrawFrameCircle()

Draw a framed circle.

Parameters

in	pGui	Pointer to GUI
in	nMidX	Center of circle (X coordinate)
in	nMidY	Center of circle (Y coordinate)
in	nRadius	Radius of circle
in	nCol	Color RGB value to frame

Returns

true if success, false if error

9.57.3.10 gslc_DrvDrawFrameRect()

Draw a framed rectangle.

Parameters

in	pGui	Pointer to GUI
in	rRect	Rectangular region to frame
in	nCol	Color RGB value to frame

Returns

9.57.3.11 gslc_DrvDrawFrameRoundRect()

Draw a framed rounded rectangle.

Parameters

in	pGui	Pointer to GUI
in	rRect	Rectangular region to frame
in	nRadius	Radius for rounded corners
in	nCol	Color RGB value to frame

Returns

true if success, false if error

9.57.3.12 gslc_DrvDrawFrameTriangle()

Draw a framed triangle.

Parameters

in	pGui	Pointer to GUI
in	nX0	X Coordinate #1
in	nY0	Y Coordinate #1
in	nX1	X Coordinate #2
in	nY1	Y Coordinate #2
in	nX2	X Coordinate #3
in	nY2	Y Coordinate #3
in	nCol	Color RGB value to frame

Returns

9.57.3.13 gslc_DrvDrawlmage()

Copy all of source image to destination screen at specified coordinate.

Parameters

in	pGui	Pointer to GUI
in	nDstX	Destination X coord for copy
in	nDstY	Destination Y coord for copy
in	sImgRef	Image reference

Returns

true if success, false if fail

9.57.3.14 gslc_DrvDrawLine()

Draw a line.

Parameters

in	pGui	Pointer to GUI
in	nX0	Line start (X coordinate)
in	nY0	Line start (Y coordinate)
in	nX1	Line finish (X coordinate)
in	nY1	Line finish (Y coordinate)
in	nCol	Color RGB value to draw

Returns

9.57.3.15 gslc_DrvDrawMonoFromMem()

Draw a monochrome bitmap from a memory array.

• Draw from the bitmap buffer using the foreground color defined in the header (unset bits are transparent)

Parameters

in	pGui	Pointer to GUI
in	nDstX	Destination X coord for copy
in	nDstY	Destination Y coord for copy
in	pBitmap	Pointer to bitmap buffer
in	bProgMem	Bitmap is stored in Flash if true, RAM otherwise

Returns

none

9.57.3.16 gslc_DrvDrawPoint()

Draw a point.

Parameters

in	pGui	Pointer to GUI
in	nΧ	X coordinate of point
in	nΥ	Y coordinate of point
in	nCol	Color RGB value to draw

Returns

9.57.3.17 gslc_DrvDrawPoints()

Draw a point.

Parameters

in	pGui	Pointer to GUI
in	asPt	Array of points to draw
in	n⊷	Number of points in array
	NumPt	
in	nCol	Color RGB value to draw

Returns

true if success, false if error

9.57.3.18 gslc_DrvDrawTxt()

Draw a text string at the given coordinate.

Parameters

in	pGui	Pointer to GUI
in	nTxtX	X coordinate of top-left text string
in	nTxtY	Y coordinate of top-left text string
in	pFont	Ptr to Font
in	pStr	String to display
in	eTxtFlags	Flags associated with text string
in	colTxt	Color to draw text
in	colBg	unused in ADAGFX, defaults to black

Returns

true if success, false if failure

9.57.3.19 gslc_DrvFontAdd()

Load a font from a resource and return pointer to it.

Parameters

in	eFontRefType	Font reference type (GSLC_FONTREF_PTR for Arduino)
in	pvFontRef	Font reference pointer (Pointer to the GFXFont array)
in	nFontSz	Typeface size to use

Returns

Void ptr to driver-specific font if load was successful, NULL otherwise

9.57.3.20 gslc_DrvFontsDestruct()

Release all fonts defined in the GUI.

Parameters

in	pGui	Pointer to GUI

Returns

none

9.57.3.21 gslc_DrvGetDriverDisp()

Get the native display driver instance.

• This can be useful to access special commands available in the selected driver.

Parameters

In paul Pointer to Got		in	pGui	Pointer to GUI
----------------------------	--	----	------	----------------

Returns

Void pointer to the display driver instance. This pointer should be typecast to the particular driver being used. If no driver was created then this function will return NULL.

9.57.3.22 gslc_DrvGetDriverTouch()

Get the native touch driver instance.

• This can be useful to access special commands available in the selected driver.

Parameters

```
in pGui Pointer to GUI
```

Returns

Void pointer to the touch driver instance. This pointer should be typecast to the particular driver being used. If no driver was created then this function will return NULL.

9.57.3.23 gslc_DrvGetNameDisp()

Get the display driver name.

Parameters

in	pGui	Pointer to GUI

Returns

String containing driver name

9.57.3.24 gslc_DrvGetNameTouch()

```
\label{eq:const_char*} \mbox{const_char* gslc\_prvGetNameTouch (} \\ \mbox{gslc\_tsGui * $pGui$ )}
```

Get the touch driver name.

Parameters

in <i>pGui</i>	Pointer to GUI
----------------	----------------

Returns

String containing driver name

9.57.3.25 gslc_DrvGetTouch()

Get the last touch event from the internal touch handler.

Parameters

in	pGui	Pointer to GUI
out	pnX	Ptr to X coordinate of last touch event
out	pnY	Ptr to Y coordinate of last touch event
out	pnPress	Ptr to Pressure level of last touch event (0 for none, 1 for touch)
out	peInputEvent	Indication of event type
out	pnInputVal	Additional data for event type

Returns

true if an event was detected or false otherwise

9.57.3.26 gslc_DrvGetTxtSize()

Get the extent (width and height) of a text string.

Parameters

in	pGui	Pointer to GUI
in	pFont	Ptr to Font structure
in	pStr	String to display
in	eTxtFlags	Flags associated with text string
out	pnTxtX	Ptr to offset X of text
out	pnTxtY	Ptr to offset Y of text
out	pnTxtSzW	Ptr to width of text
out	pnTxtSzH	Ptr to height of text

Returns

true if success, false if failure

9.57.3.27 gslc_DrvImageDestruct()

```
void gslc_DrvImageDestruct ( void * pvImg )
```

Release an image surface.

Parameters

in	pvImg	Void ptr to image

Returns

none

9.57.3.28 gslc_DrvInit()

Initialize the SDL library.

- Performs clean startup workaround (if enabled)
- · Configures video mode
- · Initializes font support

PRE:

The environment variables should be configured before calling gslc_DrvInit(). This can be done with gslc_←
DrvInitEnv() or manually in user function.

Parameters

in	pGui	Pointer to GUI
----	------	----------------

Returns

true if success, false if fail

9.57.3.29 gslc_DrvInitTouch()

Perform any touchscreen-specific initialization.

Parameters

in	pGui	Pointer to GUI	
in	acDev	Device path to touchscreen eg. "/dev/input/touchscreen"	

Returns

true if successful

9.57.3.30 gslc_DrvInitTs()

Perform any touchscreen-specific initialization.

Parameters

	•	Pointer to GUI
in	acDev	Device path to touchscreen eg. "/dev/input/touchscreen"

Returns

true if successful

9.57.3.31 gslc_DrvLoadImage()

Load a bitmap (*.bmp) and create a new image resource.

Transparency is enabled by GSLC_BMP_TRANS_EN through use of color (GSLC_BMP_TRANS_RGB).

Parameters

in	pGui	Pointer to GUI
in	sImgRef	Image reference

Returns

Image pointer (surface/texture) or NULL if error

9.57.3.32 gslc_DrvPageFlipNow()

Force a page flip to occur.

This generally copies active screen surface to the display.

Parameters

in <i>pGui</i> Pointer to GUI

Returns

none

9.57.3.33 gslc_DrvRotate()

Change rotation, automatically adapt touchscreen axes swap/flip.

Parameters

in	pGui	Pointer to GUI
in	nRotation	Screen Rotation value (0, 1, 2 or 3)

Returns

true if successful

9.57.3.34 gslc_DrvSetBkgndColor()

Configure the background to use a solid color.

• The background is used when redrawing the entire page

Parameters

in	pGui	Pointer to GUI
in	nCol	RGB Color to use

Returns

true if success, false if fail

9.57.3.35 gslc_DrvSetBkgndImage()

Configure the background to use a bitmap image.

• The background is used when redrawing the entire page

Parameters

in	pGui	Pointer to GUI
in	sImgRef	Image reference

Returns

true if success, false if fail

9.57.3.36 gslc_DrvSetClipRect()

Set the clipping rectangle for future drawing updates.

Parameters

in	pGui	Pointer to GUI
in	pRect	Rectangular region to constrain edits

Returns

9.57.3.37 gslc_DrvSetElemImageGlow()

Set an element's glow-state image.

Parameters

in	pGui	Pointer to GUI
in	pElem	Pointer to Element to update
in	sImgRef	Image reference

Returns

true if success, false if error

9.57.3.38 gslc_DrvSetElemImageNorm()

Set an element's normal-state image.

Parameters

in	pGui	Pointer to GUI
in	pElem	Pointer to Element to update
in	sImgRef	Image reference


Returns

true if success, false if error

9.58 src/GUIslice_ex.h File Reference


```
#include "GUIslice.h"
#include "elem/XCheckbox.h"
#include "elem/XGauge.h"
#include "elem/XGraph.h"
#include "elem/XSelNum.h"
#include "elem/XSlider.h"
```

#include "elem/XTextbox.h"
Include dependency graph for GUIslice_ex.h:

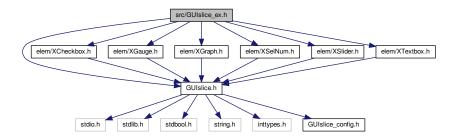

9.59 src/GUIslice_th.cpp File Reference

#include "GUIslice_th.h"
Include dependency graph for GUIslice_th.cpp:

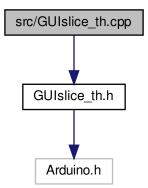

Functions

- void gslc_InitTouchHandler (TouchHandler *pTH)
- TouchHandler * gslc_getTouchHandler (void)

Variables

• TouchHandler * pTouchHandler

9.59.1 Function Documentation

9.59.1.1 gslc_getTouchHandler()

9.59.1.2 gslc_InitTouchHandler()

```
void gslc_InitTouchHandler ( {\tt TouchHandler} \ * \ p{\tt TH} \ )
```


9.59.2 Variable Documentation

9.59.2.1 pTouchHandler


TouchHandler* pTouchHandler

9.60 src/GUIslice_th.h File Reference

#include <Arduino.h>
Include dependency graph for GUIslice_th.h:

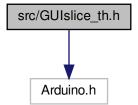

This graph shows which files directly or indirectly include this file:

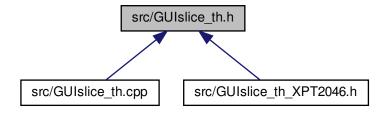

Data Structures

- class THPoint
- class TouchHandler

Functions

- void gslc InitTouchHandler (TouchHandler *pTHO)
- TouchHandler * gslc_getTouchHandler (void)

9.60.1 Function Documentation

9.60.1.1 gslc_getTouchHandler()


9.60.1.2 gslc_InitTouchHandler()

```
void gslc_InitTouchHandler ( {\tt TouchHandler} \ * \ p{\tt THO} \ )
```

9.61 src/GUIslice_th_XPT2046.h File Reference

```
#include <Arduino.h>
#include <GUIslice_th.h>
#include <XPT2046_touch.h>
```

Include dependency graph for GUIslice_th_XPT2046.h:

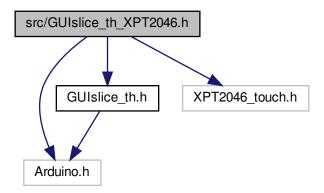


Data Structures

• class TouchHandler_XPT2046

9.62 src/GUIslice_version.h File Reference

This graph shows which files directly or indirectly include this file:

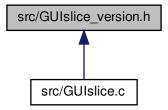

Macros

• #define GUISLICE_VER

9.62.1 Macro Definition Documentation

9.62.1.1 GUISLICE_VER

#define GUISLICE_VER