



Discover the Experience

EB tresos[®] installation guide

product release 13.06.0



EB tresos® installation guide

Elektrobit Automotive GmbH
Am Wolfsmantel 46
91058 Erlangen, Germany
Phone: +49 9131 7701 0
Fax: +49 9131 7701 6333
E-mail: info.automotive@elektrobit.com

Technical support

Europe

Phone: +49 9131 7701 6060

Japan

Phone: +81 3 5577 6110

USA

Phone: +1 888 346 3813

Support URL

[http://automotive.elektrobit.com/
support](http://automotive.elektrobit.com/support)

Legal notice

Confidential and proprietary information

ALL RIGHTS RESERVED. No part of this publication may be copied in any form, by photocopy, microfilm, retrieval system, or by any other means now known or hereafter invented without the prior written permission of Elektrobit Automotive GmbH.

ProOSEK®, tresos®, and street director® are registered trademarks of Elektrobit Automotive GmbH.

All brand names, trademarks and registered trademarks are property of their rightful owners and are used only for description.

© 2013 Elektrobit Automotive GmbH

Table of Contents

1. Installing EB tresos Studio	4
1.1. Overview	4
1.2. Preparing to install EB tresos Studio	5
1.2.1. System requirements	6
1.2.2. Components to be installed	6
1.2.3. Installing from CD-ROM	6
1.2.4. Downloading EB tresos Studio from the command server	7
1.3. Installing and updating floating licenses	9
1.3.1. Getting floating licenses	10
1.3.2. Checking items received	11
1.3.3. Setting up the server	12
1.3.4. Installing EB tresos Studio with floating licenses	14
1.3.5. Updating floating licenses	17
1.4. Installing and updating dongled licenses	18
1.4.1. Getting dongled licenses	19
1.4.2. Checking items received	19
1.4.3. Installing the dongle hardware	20
1.4.4. Installing EB tresos Studio with a dongled license	21
1.4.5. Updating dongled licenses	23
1.5. Installing and updating undongled licenses	24
1.5.1. Checking items received	24
1.5.2. Installing EB tresos Studio with an undongled license	25
1.5.3. Updating undongled licenses	26
1.6. Checking if licenses are installed correctly	27
1.7. Installing the same release of EB tresos Studio twice on the same computer	31
1.8. Installing two different releases of EB tresos Studio on the same computer	32
1.9. Installing service releases	32
2. EB tresos product line support	33
Index	34

1. Installing EB tresos Studio

Welcome to the installation guide of EB tresos Studio. If you have purchased EB tresos AutoCore together with EB tresos Studio, note the additional installation options in the EB tresos AutoCore installation instructions at the end of this chapter.

1.1. Overview

EB tresos Studio is sold with three different license types: floating licenses, dongled licenses, and undongled licenses¹. A floating license is a license to execute EB tresos Studio on any workstation attached to the local network. A dongled license works only on a computer with the dongle hardware plugged into the computer's USB port. The Wibu-Key dongle used with dongled licenses is a USB hardware device to execute EB tresos Studio on your local computer only.

distribution license type	.lic	hardware required
floating network	✓	server: set up by your administrator
dongled	✓	dongle: sent to you by EB
undongled	✓	operational only with signed basic software modules of the MCAL; for EB partners and their customers only
install:	install from inside the EB tresos Studio GUI	

Figure 1.1. License overview

The license distribution is:

.lic, which is a license file format used for licensing software programs.

The schema for .lic files is `tresos_Customer_<customername>_<licensetype>.lic`. In this naming schema:

- ▶ <customername> is your company name
- ▶ <licensetype> is one of three options:
 - ▶ DONGLED

¹Partners of EB may receive undongled licenses. These licenses are operational only with signed basic software modules of the micro-controller abstraction layer (MCAL).

- ▶ UNDONGLED²
- ▶ FLOATING

Example: The company 3SOFT has purchased a *floating* license. They would receive the following license:
`tresos_Customer_3SOFT_FLOATING.lic`

Example: The company 3SOFT has purchased a *dongled* license. Thus their license looks like this: `tresos_Customer_3SOFT_DONGLE.lic`.

To find out which set of instructions to follow, use the following directory:

License type	Install EB tresos Studio for the first time	Update licenses
Floating license	Go to Section 1.2, “Preparing to install EB tresos Studio” then to Section 1.3, “Installing and updating floating licenses”	Go to Section 1.3.5, “Updating floating licenses” .
Dongled license	Go to Section 1.2, “Preparing to install EB tresos Studio” then to Section 1.4, “Installing and updating dongled licenses”	Go to Section 1.4.5, “Updating dongled licenses”
Undongled license	Go to Section 1.2, “Preparing to install EB tresos Studio” and then to Section 1.5, “Installing and updating undongled licenses” .	Go to Section 1.5.3, “Updating undongled licenses” .

Table 1.1. Directory of installation procedures

1.2. Preparing to install EB tresos Studio

This chapter is suitable for you, if you are planning to install EB tresos Studio for the first time on your computer.

If you already installed a previous release of EB tresos Studio and you would like to use the old as well as the new release in parallel, refer to [Section 1.8, “Installing two different releases of EB tresos Studio on the same computer”](#) before continuing with this chapter.

If you are installing EB tresos Studio for the first time but would like to install it twice on the same computer, refer to [Section 1.7, “Installing the same release of EB tresos Studio twice on the same computer”](#) before continuing with this chapter.

²Operational only with signed basic software modules of the microcontroller abstraction layer (MCAL), distributed by semiconductor companies who are partners of EB.

NOTE**Administrator rights are required**

To install EB tresos Studio, make sure that you have administrator rights on your computer. If you do not have these rights, contact your system administrator to install the software for you.

1.2.1. System requirements

To run EB tresos Studio your computer system must provide:

- ▶ Microsoft Windows XP/ Windows 7 (32-Bit or 64-Bit)
- ▶ Adobe Acrobat Reader version 5 or higher

1.2.2. Components to be installed

The following components will be installed on your computer when you install EB tresos Studio:

- ▶ Java Runtime Environment version 1.6.0
- ▶ Eclipse Runtime Environment version 3.8.0
- ▶ Supporting Java libraries
- ▶ The make support tool
- ▶ Wibu-Key Dongle driver version 6.00a, if you use a dongled license.³

If you have received EB tresos Studio on a CD-ROM, follow the instructions at [Section 1.2.3, “Installing from CD-ROM”](#).

If you are using an command server download to install EB tresos Studio, follow [Section 1.2.4, “Downloading EB tresos Studio from the command server”](#).

1.2.3. Installing from CD-ROM

This chapter is suitable for you if you have received the EB tresos Studio software on CD-ROM.

1. Insert the installation CD-ROM into the CD drive of your computer.

³You need administrator rights to install the Wibu-Key dongle driver correctly.



2. Locate the installation CD in the Windows Explorer.

Depending on which kind of license files you use, continue the setup at:

- ▶ [Section 1.3, “Installing and updating floating licenses”](#)
- ▶ [Section 1.4, “Installing and updating dongled licenses”](#)
- ▶ [Section 1.5, “Installing and updating undongled licenses”](#)⁴

If you are not sure which kind of license you have, refer to [Section 1.1, “Overview”](#) and then continue as indicated above.

1.2.4. Downloading EB tresos Studio from the command server


You have purchased EB tresos Studio as download option and received an email with the EB Command login data and/or the news of a product update or new release version.

1. If you do not have an account yet, click on the link in the email to activate your account.


Follow the steps to create an account as directed in the email and in the browser, then proceed to log-in.

2. If you have already registered an account, log-in to this account now.


⁴Applies only to customers of EB partners who work with signed modules of the microcontroller abstraction layer (MCAL).

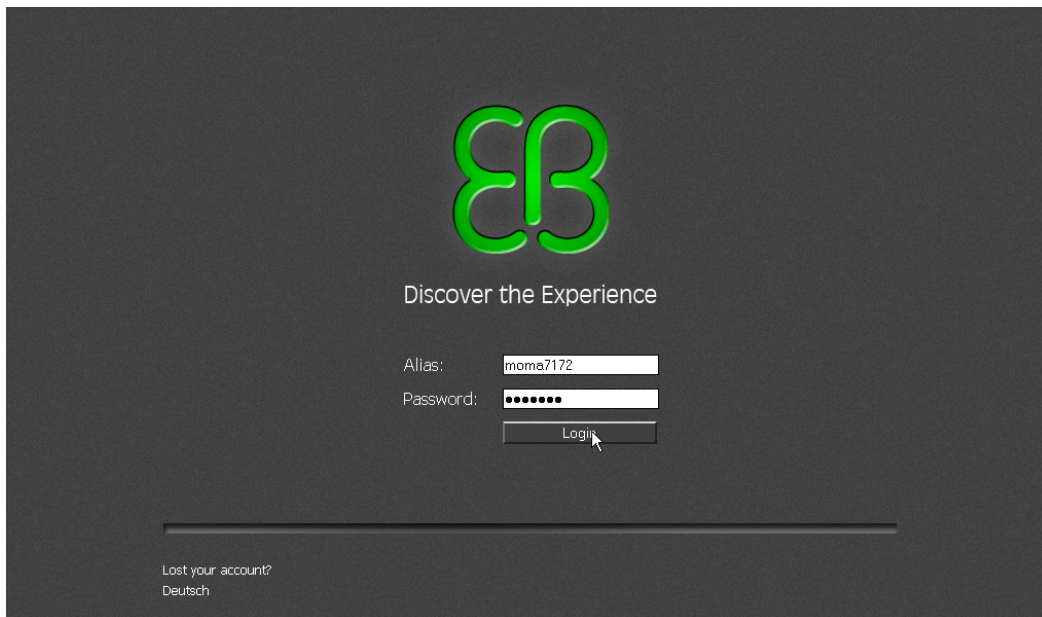

3. Select the product you would like to download and install. In the graphic below EB tresos Studio is downloadable as EB tresos Delivery.

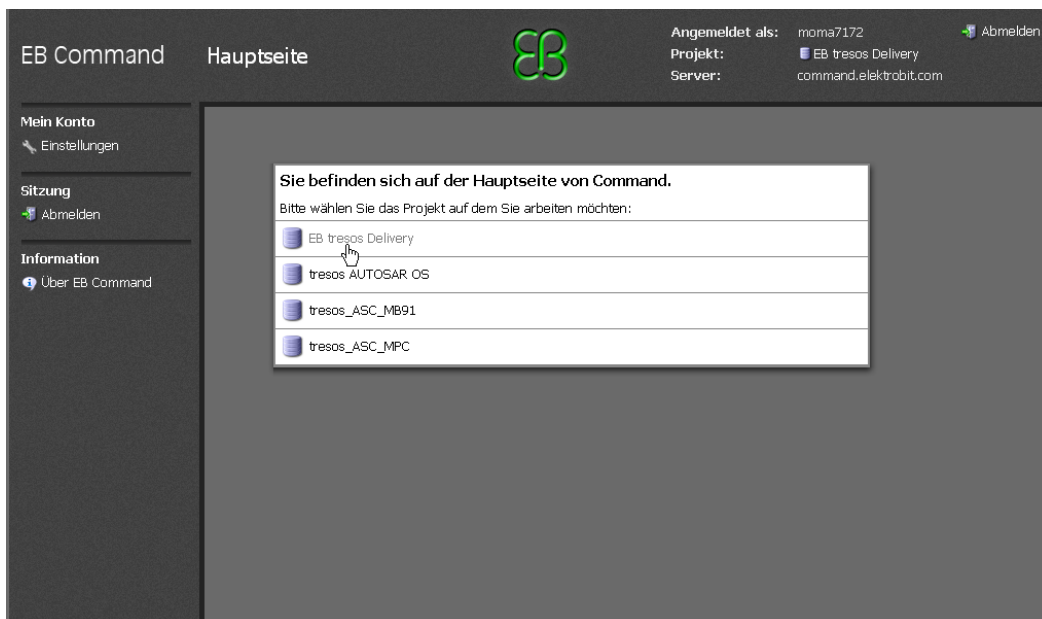

4. Download the EB tresos Studio software.

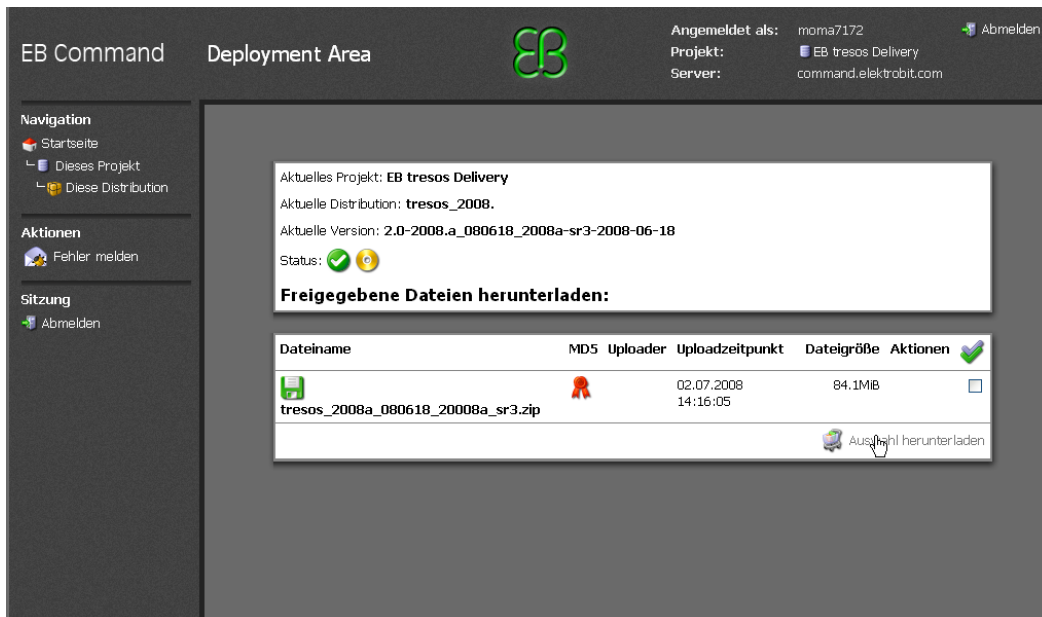

5. Save the .zip file to your computer and unzip it/extract all files.

Depending on which kind of license you use, continue the set-up at:

- ▶ [Section 1.3, “Installing and updating floating licenses”](#)
- ▶ [Section 1.4, “Installing and updating dongled licenses”](#)
- ▶ [Section 1.5, “Installing and updating undongled licenses”](#)⁵

If you are not sure which kind of license you have, refer to [Section 1.1, “Overview”](#) and then proceed to the chapters indicated above.

1.3. Installing and updating floating licenses

This chapter is suitable for you if you have purchased EB tresos Studio with a floating license and are installing it the first time or are updating licenses.

EB tresos Studio supports floating network licenses using FlexNet Publisher software components from Flexera Software Inc.

A floating network license restricts the usage of EB tresos Studio to a certain number of users (clients) but not to a specific client machine. In order to use these licenses your company needs to install and run (at least) one license server that can be reached from your client via a network. As a consequence each client that uses a floating network license must be connected to this network during run-time of EB tresos Studio.

⁵Applies only to customers of EB partners who work with signed modules of the microcontroller abstraction layer (MCAL).

EB tresos Studio checks for other valid licenses, e.g. a dongled license, before it uses the floating license.

If you are going to work with a floating network license, contact your system administrator first to set up the server before you proceed to install the floating licenses.

1.3.1. Getting floating licenses


To start using EB tresos Studio, you need a license.

The license file you are looking for is in the following format `tresos_Customer_<customer-name>_FLOATING.lic`. The file may be zipped in the `.zip` format.

The license to run EB tresos Studio is either sent to you by email or you may download it from the command server.

If you have not received a license via email ⁶, you may have access to the command server and download it.

1. To download licenses from the command server, log-in to your account on EB Command now.

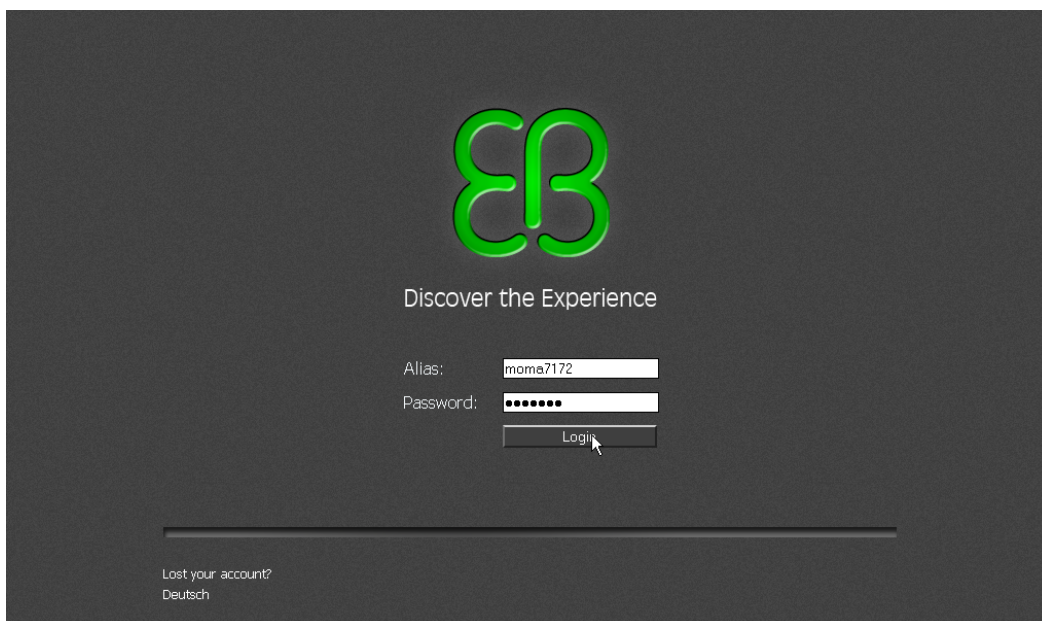

2. Select the license package you would like to download.
3. Save the file to your computer, unzip it if it is zipped.


Should you neither have received a license via email nor be able to download it from the command server, contact the EB support. Contact details are available at [Chapter 2, EB tresos product line support](#).

⁶ If you receive it via email the `.zip` suffix may have been changed to `.zap` to enable passing your firewall. If so, rename it to `.zip`.

1.3.2. Checking items received

For an installation of EB tresos Studio with floating license, check that you have received the following items. Unless stated otherwise, the following list applies to new installations as well as to license updates:

1. Client package comes in a .zip in the format `Studio<release>_<customer>_<user-code>_<date>`:
 - ▶ the `setup.exe` for EB tresos Studio. You will require this to install EB tresos Studio.⁷
 - ▶ the floating license for EB tresos Studio `tresos_Customer_<customername>_FLOATING.lic` packed in a .zip suffix file. You will require this when you install a license to run EB tresos Studio.
2. Server package comes in a .zip in the format `FLEXnet_Server_<customer>_<usercode>_<date>`:

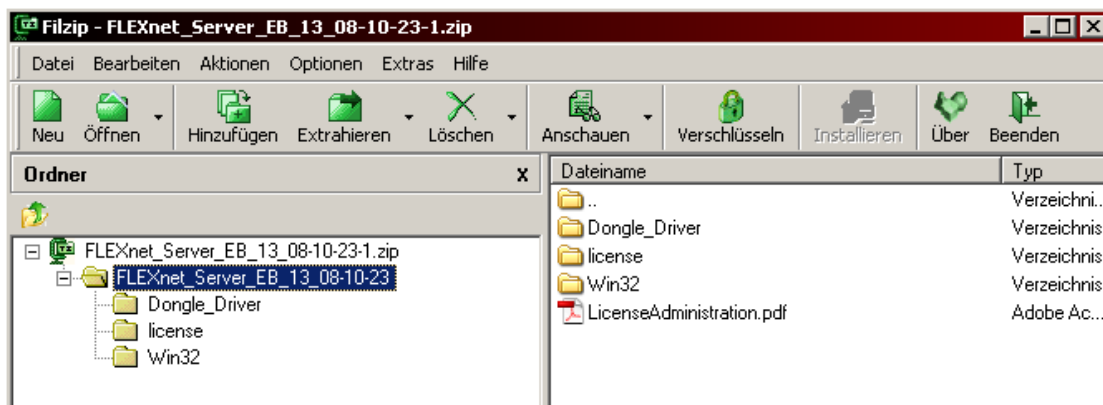

- ▶ in the folder `Dongle_Driver`
 - ▶ the `FLEXId_Dongle_Driver_Installer.exe`
 - ▶ the `FLEXnet_ID_Dongle_Drivers.pdf` documentation.
- ▶ in the folder `license` the floating license for the FlexNet server `FLEXnet_tresos_<customer>.lic`.
- ▶ in the folder `Win32` (name depends on platform used)
 - ▶ the `EB.exe` executable
 - ▶ the server executable `i86_n3_lmgrd.exe`
 - ▶ the `i86_n3_lmtools.exe`
- ▶ the `LicenseAdministration.pdf` documentation for the FlexNet server

This documentation provides instructions for the installation of a floating network license server. If you require more information, refer to Flexera Software Inc.'s web site at www.flexerasoftware.com and search for the term *FlexNet Publisher*.

⁷Applies only to new installations.

- the FLEXid dongle will be sent to you by mail.⁸

Contact your system administrator to set up the license server, if it is not yet set up.

1.3.3. Setting up the server

This chapter contains important information for network administrators and server administrators. It provides an introduction to the installation of a floating network license server.

NOTE




Only Microsoft Windows 32-bit operating systems are supported

Note that EB currently provides license server executables only for MS Windows 32-bit operating systems.

The server consists of the main server (`i86_n3_lmgrd.exe`), and a *vendor daemon* (the publisher-specific component in a FlexNet license server) `EB.exe`.

The default port of the FlexNet servers is 27000:

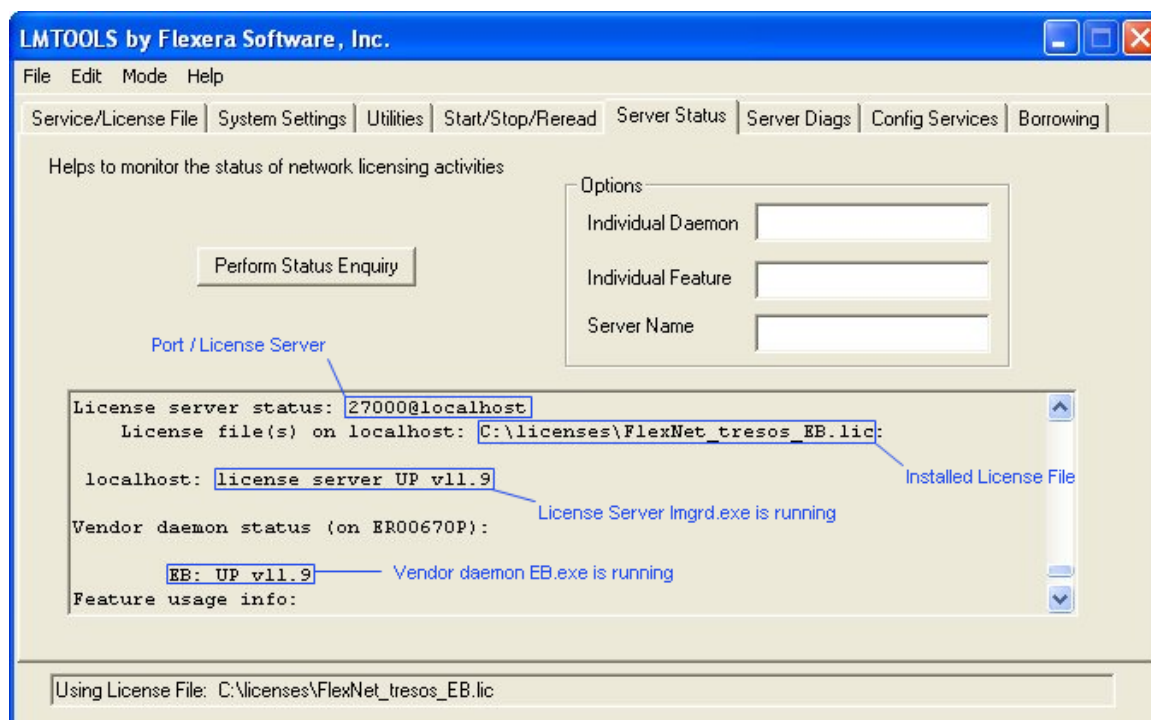

If your company already runs such a license server but for a different product from another company, you may use the existing server but must additionally install the `EB.exe` vendor daemon and the `FLEXnet_`

⁸This dongle is not to be confused with the Wibu-Key dongle, which is a dongle to run EB tresos Studio. The FLEXid dongle is a hardware device necessary to enable running the floating licenses on the FlexNet server. The EB tresos Studio floating license can run only on the server to which the FLEXid dongle has been connected via the server's USB port.

`tresos_<customer>.lic`. However, do make sure to always use the latest installation of the FlexNet server. Use at least the version 11.6 of the FlexNet server. For details, refer to the `LicenseAdministration.pdf`, chapter `Managing Licenses from Multiple Software Publishers`.

1. Copy the `EB.exe` and the server `lmgrd.exe` into one directory.
2. To simplify the configuration of the server, run the `i86_n3_lmtools.exe`⁹. This program opens a dialog-based configuration editor.
3. To configure a new license file on the license server select **Configuration using Services** on the tab *Service/License File*.
4. Locate the *Config Services* tab.
5. Insert a new service name.

A new service name is required for every license file configured for the license server.

6. Select the paths to the `lmgrd.exe`, the FlexNet license file provided by Elektrobit Automotive GmbH in the format `FLEXnet_tresos_<customer>.lic` and a debug log location and save the new service.

NOTE



You cannot enter the path to the vendor daemon


Note that you cannot enter the path to the *vendor daemon*. Since the license shows the vendor name in the `VENDOR` line (`VENDOR EB`), the server assumes the vendor daemon to be `EB.exe`.

7. To start the service, select the *Start/Stop/Reread* tab.
8. For further instructions, refer to the `LicenseAdministration.pdf`.

To check in `lmtools` if the server is set up correctly,

- ▶ Select the tab *Server Status*.
- ▶ Click on the **Perform Status Enquiry** button.
- ▶ Scroll to the results of your license server (the list might show other FlexNet license servers found on your network).
- ▶ Check that the license server and the vendor daemon *EB* both are *UP* and running as depicted below.

⁹The `.exe` delivered by EB is the `i86_n3_lmtools.exe`, however, the Flexera calls the tool `lmtools`.

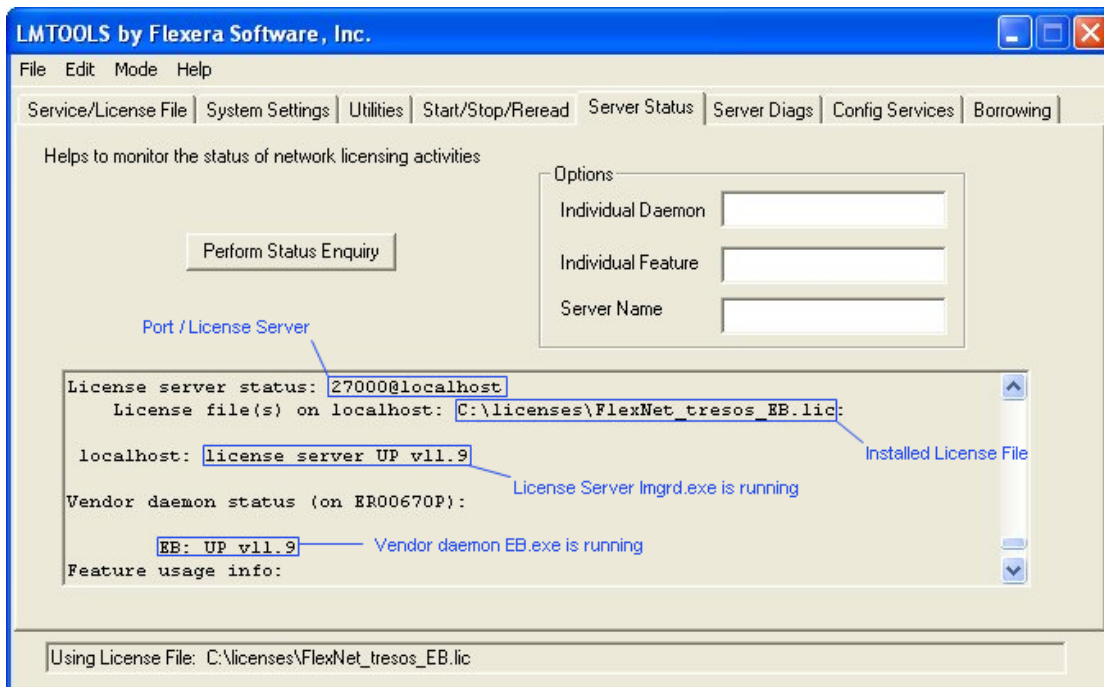

If the server is set up, the administrator is done.

Continue at [Section 1.3.4, “Installing EB tresos Studio with floating licenses”](#).


1.3.4. Installing EB tresos Studio with floating licenses

This chapter provides information for first-time users of EB tresos Studio after the license server for the floating license has been setup.

You have received a license in the `.lic` file format.

1. Locate the `setup.exe` on your CD-ROM or from the command server download.
2. Double-click the `setup.exe`.

The *EB tresos Installer* window opens up.

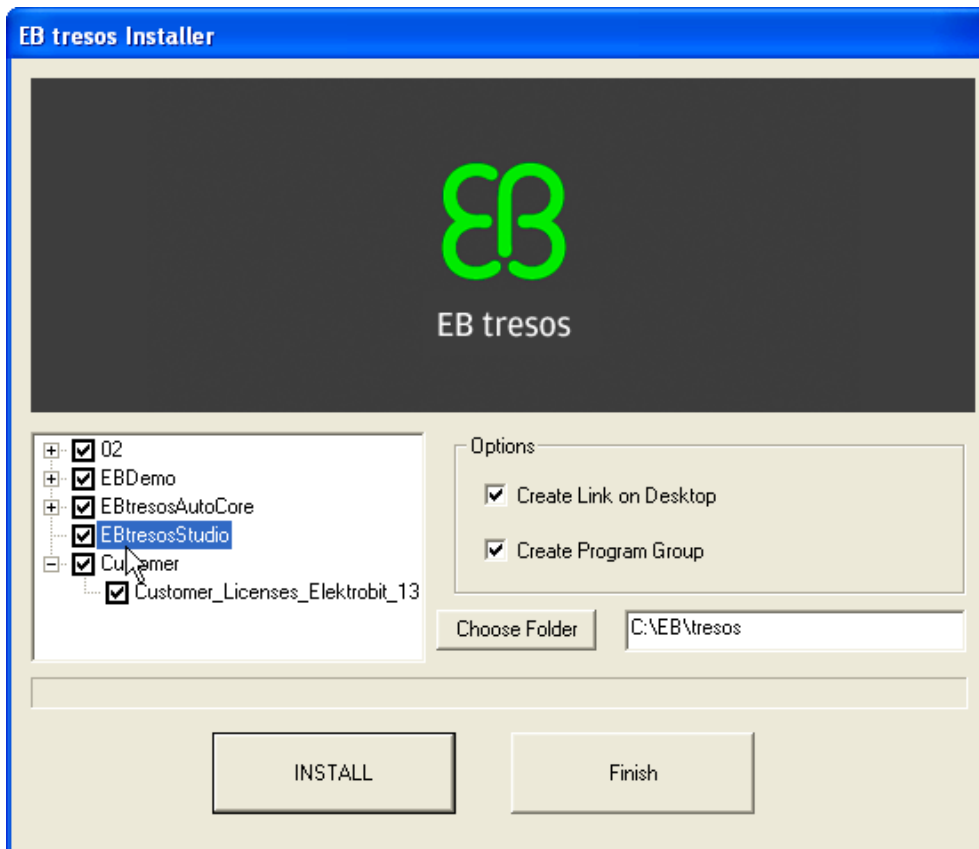

3. From the menu on the left hand side, select the *EBtresosStudio* check box¹⁰.
4. To create a link to EB tresos Studio on your desktop, check **Create Link on Desktop**.



5. To add a shortcut of EB tresos Studio to the Windows start menu, click **Create Program Group**.
6. Beside the *Choose Folder* button enter your EB tresos Studio installation directory.

WARNING**EB tresos Studio does not build correctly when you use blanks in the installation path**

Do not use blanks or spaces for the installation folder path. If the path name contains blanks, your EB tresos Studio will not build your software code correctly.

7. Click **INSTALL** to install EB tresos Studio.

The program is being installed. At the end of the installation a pop-up window prompts you: The installation is finished!.

¹⁰If you have purchased EB tresos AutoCore or parts thereof, select all available check boxes (this is the default setting).

8. Click **Finish**.

EB tresos Studio is now installed.

9. Start EB tresos Studio.
10. Select **Help**, then *Licenses*.

The *Licenses* window opens up.


11. Select the  button to add a license.

A dialog window opens up.


12. Browse to the directory to which you saved the `.lic` file, select the file, then click **Open**.

The added licenses show up in the EB tresos Studio license dialog.

13. Click on the **License Server Preference** button.

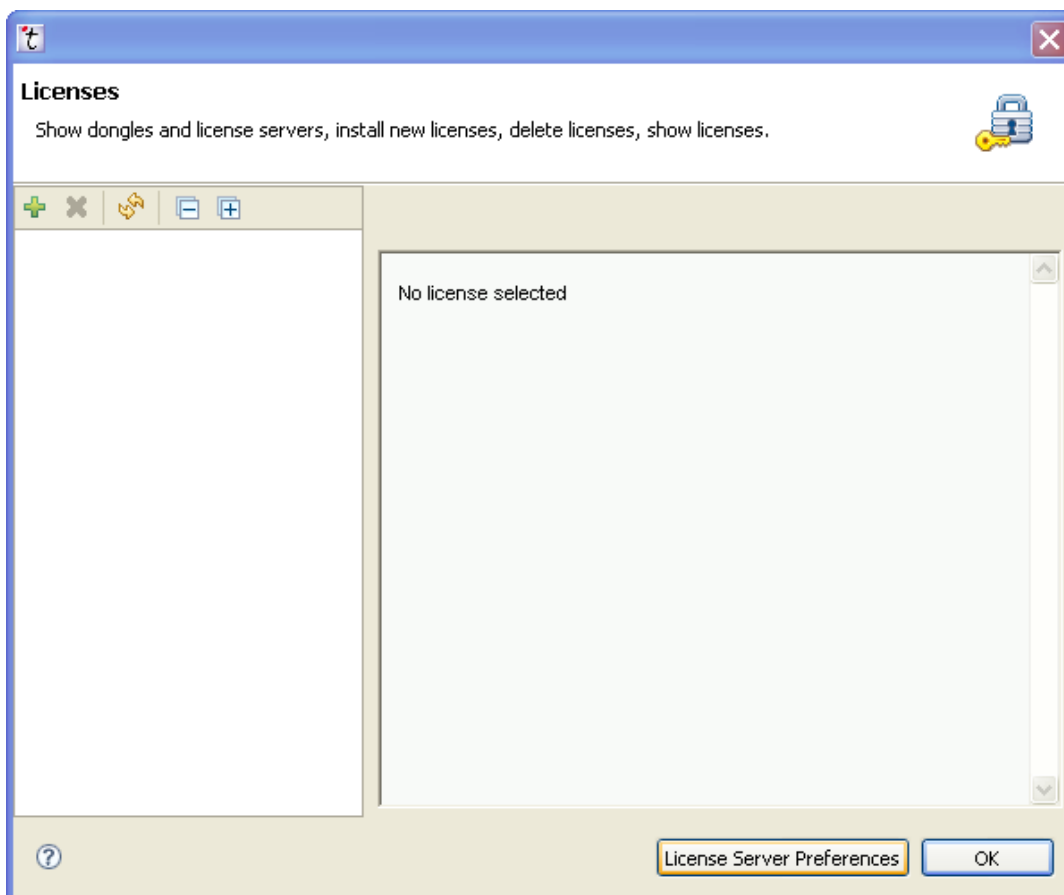

The *Preferences (Filtered)* window opens up.

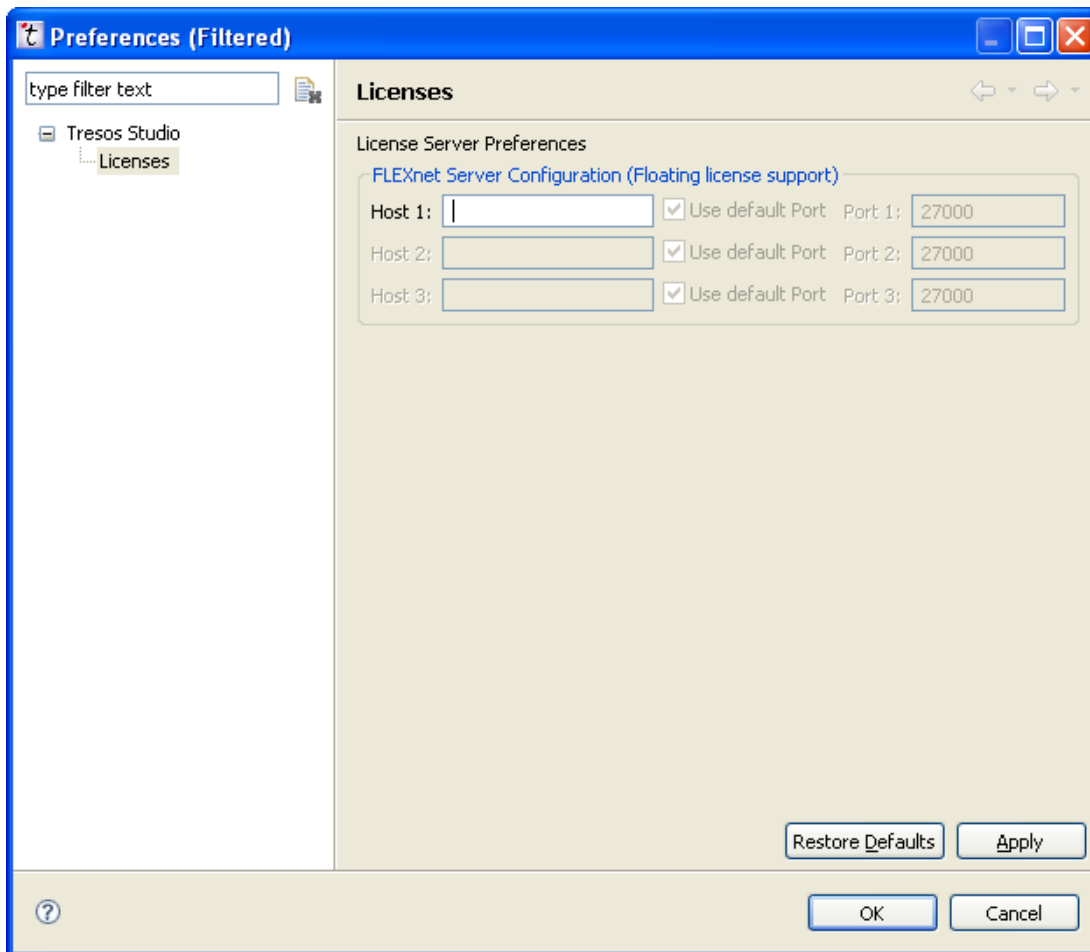

14. In the *Host 1*: text box, enter the server name for the floating license.

The reason for this is that to check if you are using a valid license and if one of the floating licenses is available, EB tresos Studio must connect to the server.

15. Click **Apply**, then **OK**.

You have installed EB tresos Studio and the floating license.

Proceed to [Section 1.6, “Checking if licenses are installed correctly”](#).


1.3.5. Updating floating licenses

This chapter is suitable for you if you are updating licenses, i.e. have worked with EB tresos Studio before. Note that a requirement for running EB tresos Studio after updating a floating license is a working license server.

You have received a license in the `.lic` file format.

1. Start EB tresos Studio
2. Select **Help**.

A drop-down list box opens up.

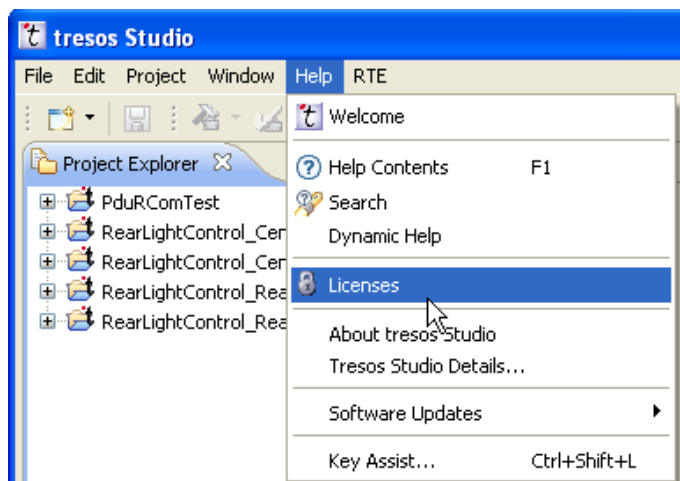

3. Double-click *Licenses*.

The *Licenses* window opens up.

4. Select the license with which you have worked so far.
5. Select the  button to remove the old license.
6. Select the  button to add the new license.

A dialog window opens up.

7. Browse to the directory to which you saved the `.lic` file, select the file, then click **Open**.

The added licenses show up in the EB tresos Studio license dialog.

8. Proceed to [Section 1.6, “Checking if licenses are installed correctly”](#).

1.4. Installing and updating dongled licenses

This chapter is suitable for you if you are working with a dongled license to run EB tresos Studio.

This chapter provides you with instructions how to install the dongle hardware and how to install or update licenses.

Follow the instructions:

- ▶ for installing EB tresos Studio for the first time proceed to [Section 1.4.1, “Getting dongled licenses”](#).

- ▶ for updating licenses in existing installations proceed to [Section 1.4.5, “Updating dongled licenses”](#).

1.4.1. Getting dongled licenses


To start using EB tresos Studio, you need a license.

The license file you are looking for is in the following format `Studio<release>_<customername>_<user-code>_<date>_lic.zip`, whereas `<licensetype>` in your case is `DONGLED`.

The license to run EB tresos Studio is either sent to you by email, by CD-ROM or you may download it from the command server.

If you have not received a license via email or CD-ROM, you may have access to the command server and download it.

1. To download licenses from the command server, log-in to your account on EB Command now.

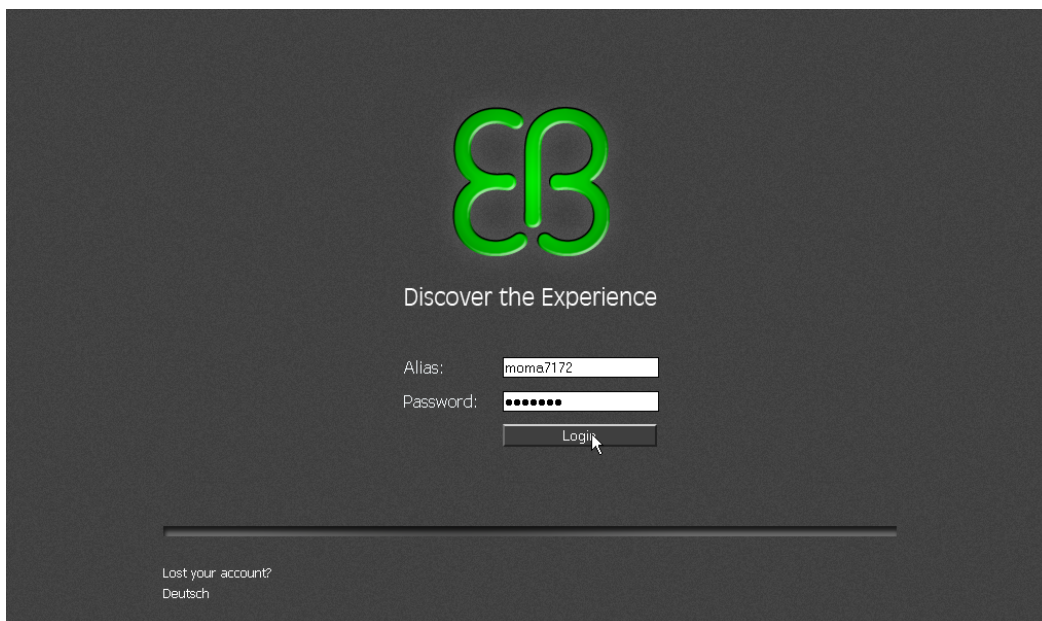

2. Select the license you would like to download.
3. Save the file to your computer, unzip it if it is zipped.

Should you neither have received an email with the license, nor have access to an command server download, contact the EB support. Contact details are available at [Chapter 2, EB tresos product line support](#).

1.4.2. Checking items received

You are ready to start installing or updating dongle hardware and license if you have the following items:

- ▶ Studio<release>_<customername>_<usercode>_<date>_lic.zip,.
- ▶ Wibu-Key Dongle driver version 5.0
- ▶ The Wibu-Key dongle hardware. This is sent to you by mail.

1.4.3. Installing the dongle hardware

In the following chapters you will be shown how to install the dongle driver and the dongle hardware, then how to install the license.

If you are updating your license and have already installed the dongle hardware and driver, skip this chapter and proceed to [Section 1.4.5, "Updating dongled licenses"](#).

To enable your computer for the dongle hardware, install the dongle driver software:


NOTE**Administrator rights are required**

To install the dongle driver on your computer you need administrator rights. If you do not have administrator rights, get an administrator to install the driver for you.


1. Close EB tresos Studio if it is opened.
2. Plug the dongle into one of your PC's USB ports.

NOTE**Plug in your dongle before installing the dongle driver**

If you open EB tresos Studio without plugging-in the dongle, a window opens up and warns you that your dongle is not connected.

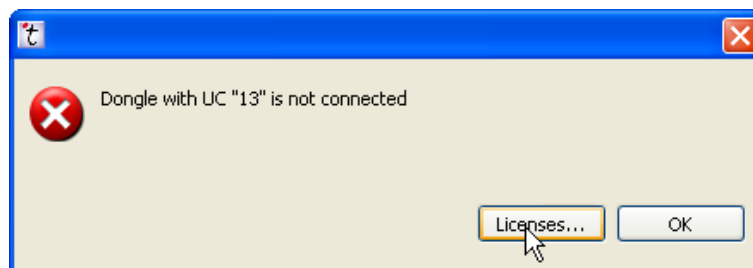

-
3. A window opens up and prompts you to install the dongle driver software.

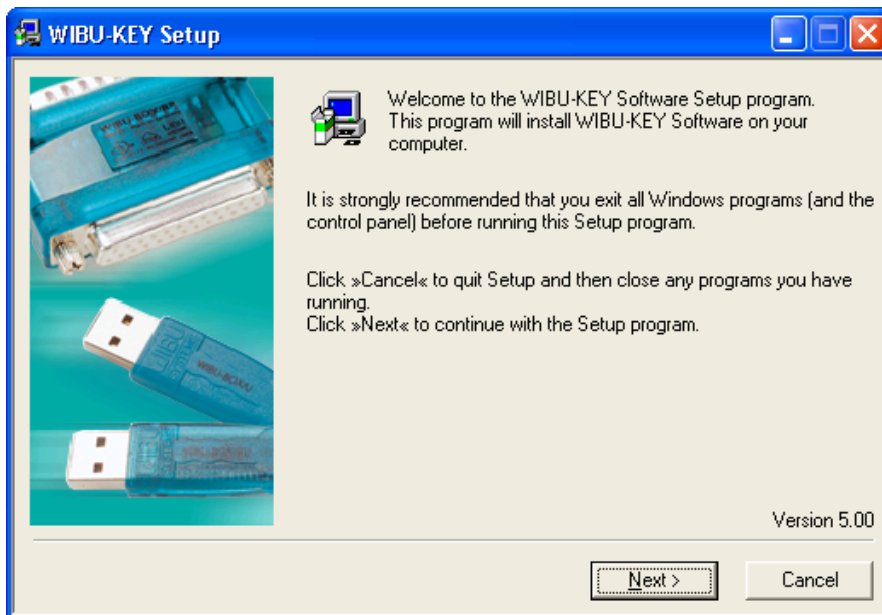

4. Let the wizard guide you through the set-up and on the last page select **Finish** to finish the installation.

If no window opened up when you plugged your dongle into the USB slot, you need to install the dongle manually:

1. Make sure you have *administrator* rights on your computer.
2. Suppose `TRESOS_BASE` is the directory to which you installed EB tresos Studio, e.g. `C:\eb\tresos:`

Locate the `WibuInstall.bat` program located at `$TRESOS_BASE/bin/`.

3. Run the program: `WibuInstall`.

The dongle installer window opens up.

4. The set-up window will guide you through the set-up. Select **Finish** on the last page to finish the installation.

Your dongle driver is now installed and the dongle is plugged into a USB port of your computer.

Proceed to [Section 1.4.4, "Installing EB tresos Studio with a dongled license"](#).

1.4.4. Installing EB tresos Studio with a dongled license

This section will show you how to install licenses for a dongled version of EB tresos Studio.

You have received or downloaded a `.zip` file in the format `Studio<release>_<customer>_<user-code>_<date>.zip`. This `.zip` includes:


- the `setup.exe` for EB tresos Studio. You will require this to install EB tresos Studio.

If you are only updating licenses, this file is not part of the delivery.

► tresos_Customer_<customer>_DONGLE.lic

1. Locate the `setup.exe`.
2. Double-click the `setup.exe`.

The *EB tresos Installer* window opens up.

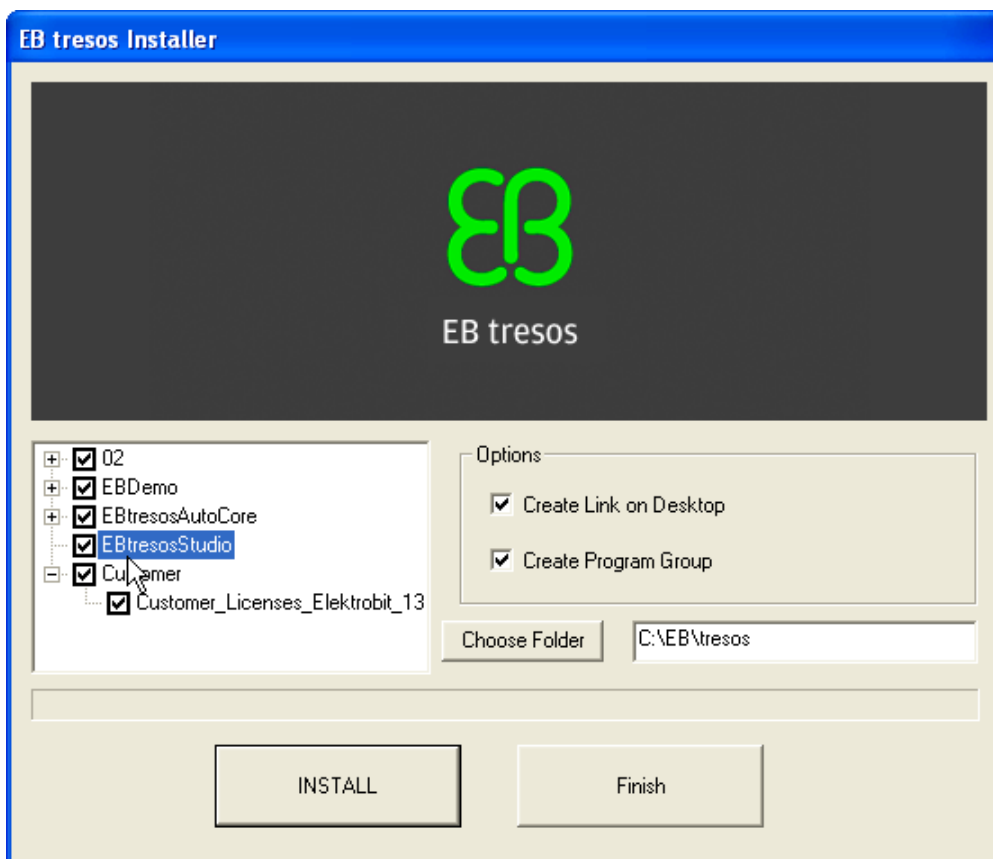

3. From the menu on the left hand side, select the *EBtresosStudio* check box¹¹.
4. To create a link to EB tresos Studio on your desktop, check **Create Link on Desktop**.



5. To add a shortcut of EB tresos Studio to the Windows start menu, click **Create Program Group**.
6. Beside the *Choose Folder* button enter your EB tresos Studio installation directory.

¹¹If you have purchased EB tresos AutoCore or parts thereof, select all available check boxes (this is the default setting).

WARNING**EB tresos Studio does not build correctly when you use blanks in the installation path**

Do not use blanks or spaces for the installation folder path. If the pathname contains blanks, your EB tresos Studio will not build your software code correctly.

7. Click **INSTALL** to install the license files.

The program is being installed. At the end of the installation a pop-up window prompts you: `The installation is finished!`.

8. Click **Finish**.

EB tresos Studio is now installed.

9. Start EB tresos Studio to install the license.
10. Select **Help**, then *Licenses*.

The *Licenses* window opens up.

11. Select the  button to add a license.

A dialog window opens up.

12. Browse to the directory to which you saved the `.lic` file, select the file, then click **Open**.

The added licenses show up in the EB tresos Studio license dialog.

Proceed to [Section 1.6, “Checking if licenses are installed correctly”](#).


1.4.5. Updating dongled licenses

You have received or downloaded a `.zip` file in the format `Studio<release>_<customer>_<user-code>_<date>.zip`. This `.zip` includes:

► `tresos_Customer_<customer>_DONGLE.lic`

1. Start EB tresos Studio.
2. Select **Help**.

A drop-down list box opens up.

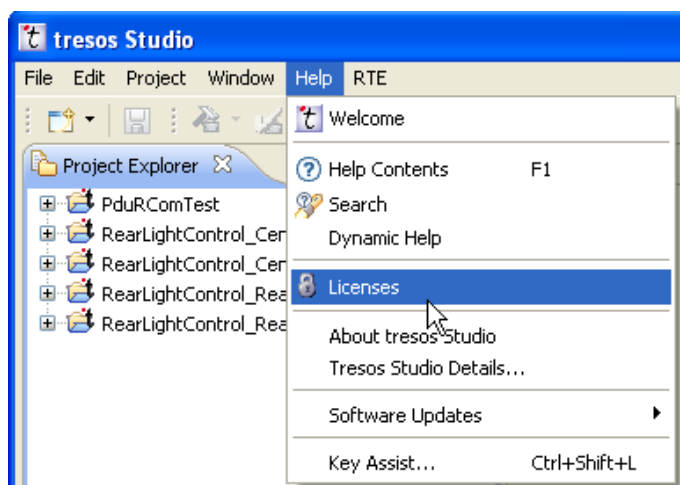

3. Double-click *Licenses*.

The *Licenses* window opens up.

4. Select the dongled license with which you have worked so far.
5. Select the  button to remove the license.

You need to remove this old license before you are able to install the license(s) for the latest release version.

6. Select the  button to add a license.

A dialog window opens up.

7. Browse to the directory to which you saved the `.lic` file, select the file, then click **Open**.

The added licenses show up in the EB tresos Studio license dialog

8. Proceed to [Section 1.6, "Checking if licenses are installed correctly"](#).

1.5. Installing and updating undongled licenses

Customers of EB partners may receive an undongled version of EB tresos Studio. This is operational only with signed basic software modules of the microcontroller abstraction layer (MCAL). These signed basic software modules are distributed by semiconductor companies who are partners of EB.

1.5.1. Checking items received

To install or update a version of EB tresos Studio that works with signed basic software modules of the MCAL you should have received:

- ▶ A license in the format `tresos_Partner_<customer>.lic`.
- ▶ The `setup.exe`.

This applies only if you install EB tresos Studio for the first time.

- ▶ The signed MCAL modules.


This applies only if you install the modules for the first time or install a module update.

1.5.2. Installing EB tresos Studio with an undongled license

This section will show you how to install EB tresos Studio and a `.lic` license for an undongled version of EB tresos Studio.

1. Locate the `setup.exe` for EB tresos Studio in your delivery.
2. Double-click the `setup.exe`.

The *EB tresos Installer* window opens up.

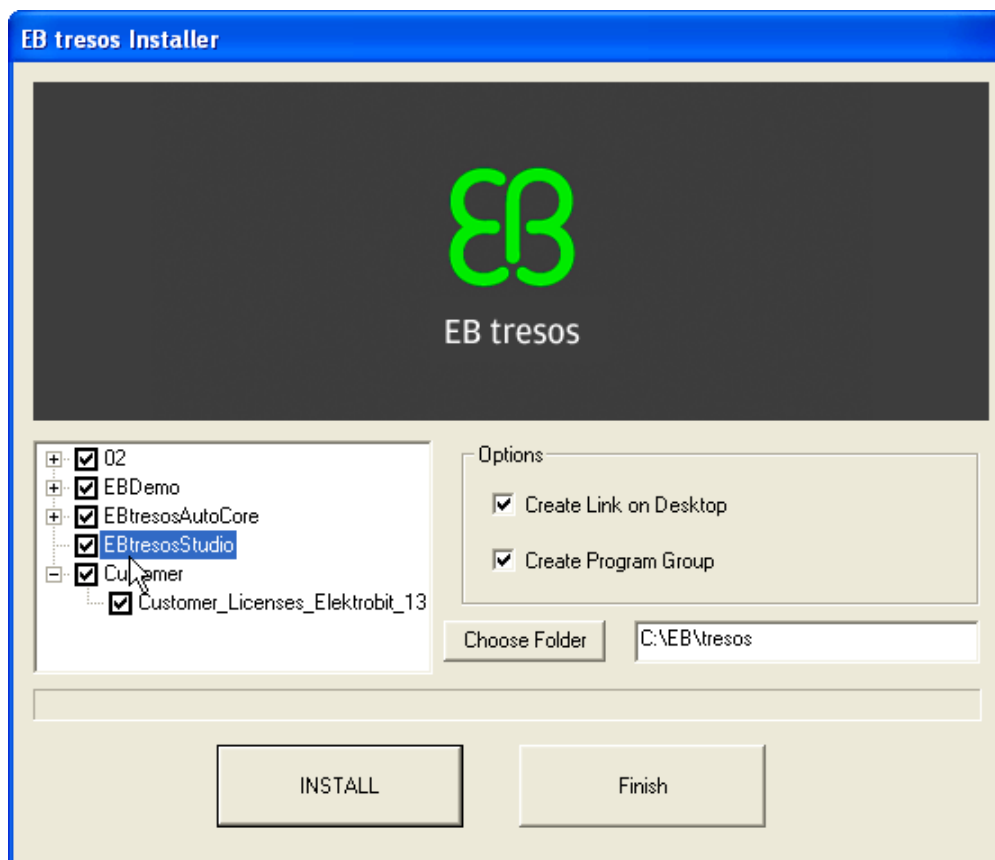

3. From the menu on the left hand side, select the *EBtresosStudio* check box.

4. To create a link to EB tresos Studio on your desktop, select **Create Link on Desktop**.



5. To add a shortcut of EB tresos Studio to the Windows start menu, click **Create Program Group**.
6. Beside the *Choose Folder* button enter your EB tresos Studio installation directory.

WARNING**EB tresos Studio does not build correctly when you use blanks in the installation path**

Do not use blanks or spaces for the installation folder path. If the path name contains blanks, your EB tresos Studio will not build your software code correctly.

7. Click **INSTALL** to install the license files.

The program is being installed. At the end of the installation a pop-up window prompts you: *The installation is finished!*.

8. Click **Finish**.

EB tresos Studio is now installed.

9. Start EB tresos Studio to install the license.
10. Select **Help**, then *Licenses*.

The *Licenses* window opens up.

11. Select the  button to add a license.

A dialog window opens up.

12. Browse to the directory to which you saved the `.lic` file, select the file, then click **Open**.

The added licenses show up in the EB tresos Studio license dialog


Proceed to [Section 1.6, “Checking if licenses are installed correctly”](#).

1.5.3. Updating undongled licenses

You have received licenses in the `.lic` file format.

1. Start EB tresos Studio
2. Select **Help**.

A drop-down list box opens up.

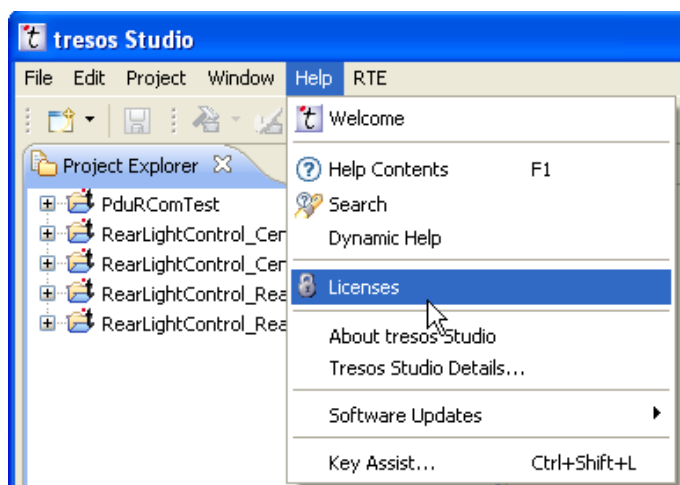

3. Double-click *Licenses*.

The *Licenses* window opens up.

4. Select the (expired) undongled license with which you have worked so far.
5. Select the  button to remove the license.
6. Select the  button to add the new license.

A dialog window opens up.

7. Browse to the directory to which you saved the `.lic` file, select the file, then click **Open**.

The added licenses show up in the EB tresos Studio license dialog

8. Proceed to [Section 1.6, “Checking if licenses are installed correctly”](#).

1.6. Checking if licenses are installed correctly

This section will show you how to check whether your licenses are installed correctly after you have newly installed or updated them.

To check if your license is installed correctly, you need EB tresos Studio opened.


1. If closed, open the EB tresos Studio GUI.

If you do not have a shortcut on your desktop or in your start menu, you may start the GUI from the `tresos_gui.exe` or `tresos_gui_64.exe` located in your `$TRESOS_BASE/bin/` directory (with `$TRESOS_BASE` being the root path of your EB tresos Studio installation, e.g. `C:\eb\tresos\`).

The EB tresos Studio GUI opens up.

In the *Error Log* view, EB tresos Studio now displays messages that the licenses have been found and are being installed.

The message varies depending on which license type you are working with. The illustration below shows a successfully installed floating license.

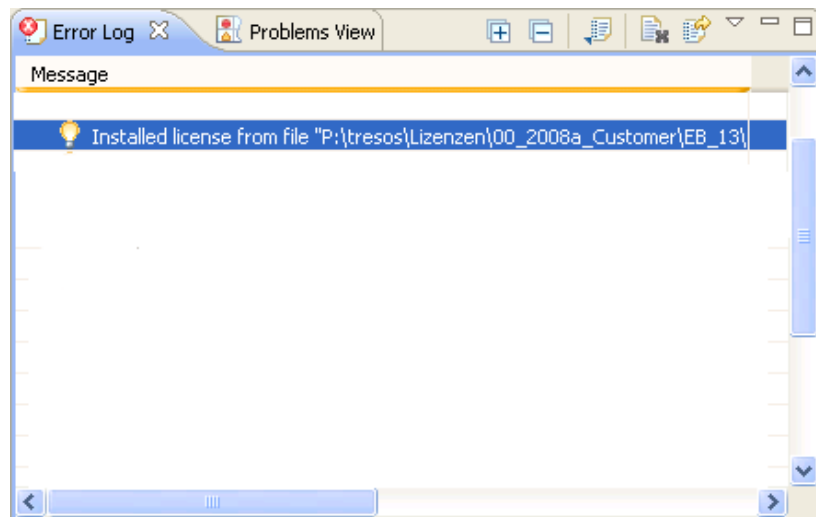


2. To check details of your licenses, select **Help**.

A drop-down list box opens up.

3. Click on *Licenses*.

The *Licenses* window opens up.

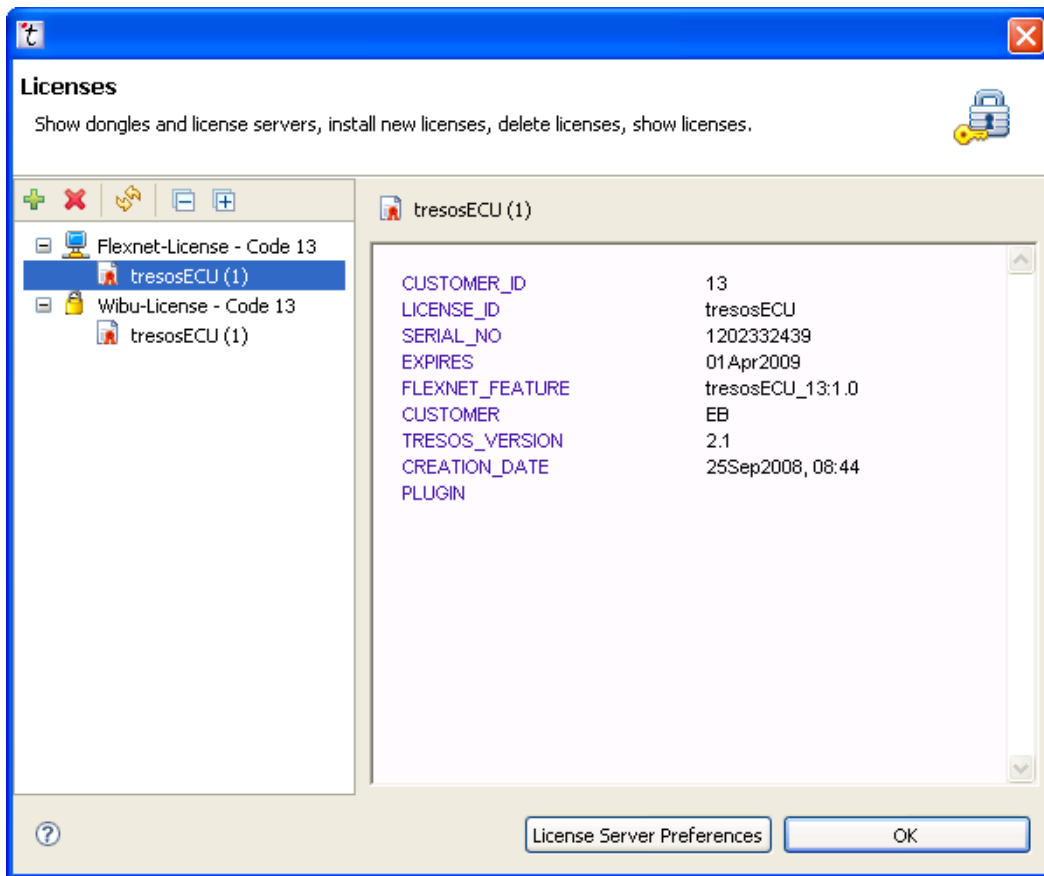


The illustration shows two licenses: a FlexNet-License (floating) and a Wibu-License (dongled).

4. Select the license listed underneath your license type (*Flexnet-License* or *Wibu-License*) to learn more details about the license.


The FlexNet-License in the illustration above has been successfully installed.

5.

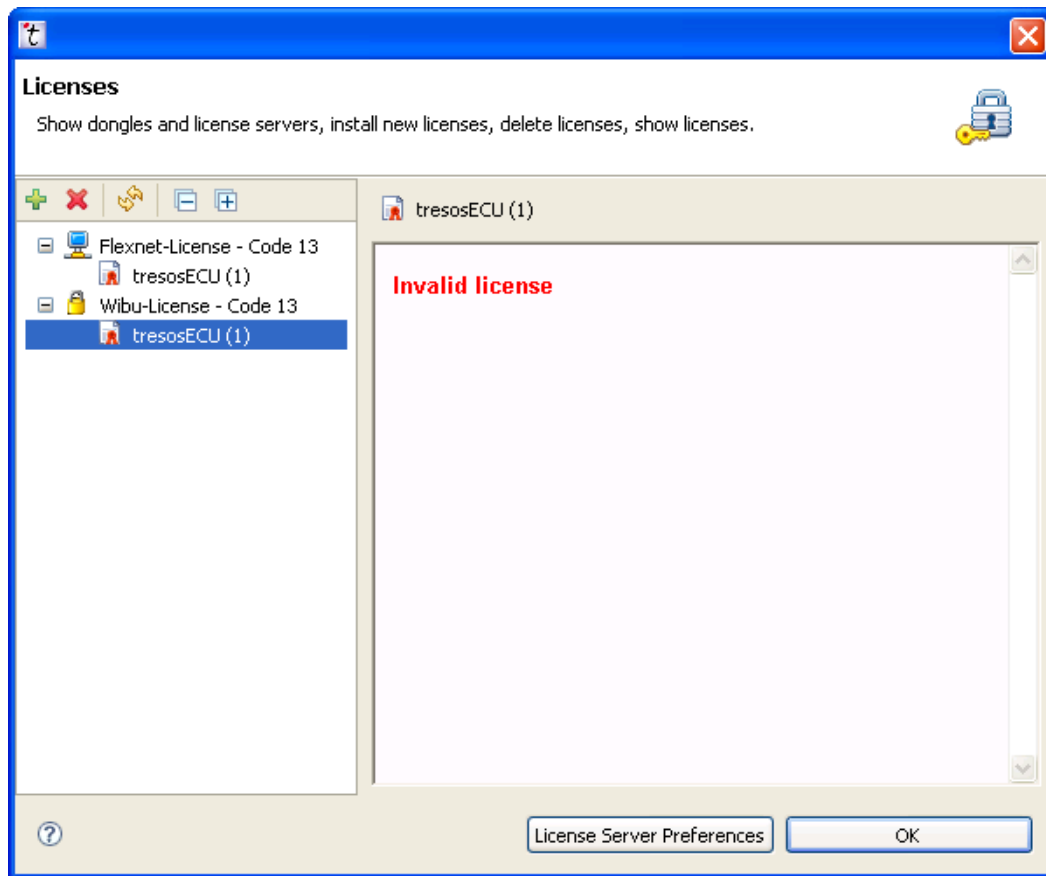

The Wibu-License is not successfully installed.

6. If your license has not been successfully installed:
- ▶ Click on the **Autoinstall licenses, update list** button to refresh the license information.

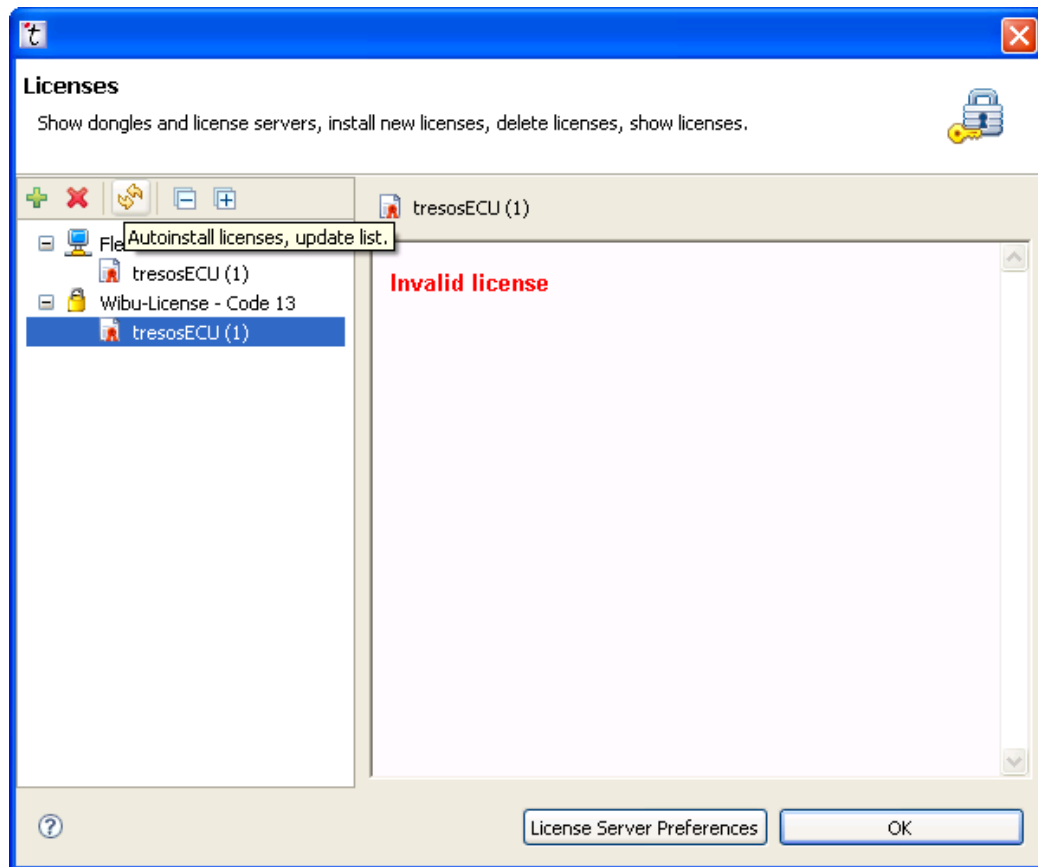

If refreshing the license information does not help, you need to uninstall the license and reinstall it.

- ▶ To uninstall the licenses, click on the  button.

The license is deleted.

- ▶ To newly install the license, click on the  button.

If your license shows up as correctly installed, you are done.

If your license does not install correctly, refer to [Chapter 2, EB tresos product line support](#).

1.7. Installing the same release of EB tresos Studio twice on the same computer

To install two versions of the same release of EB tresos Studio on the same computer in parallel, follow the instructions in [Section 1.2, “Preparing to install EB tresos Studio”](#).

However, when you select the folder, into which you want to install the second version beside the **Choose Folder** button:

- Make sure to choose a different folder into which to install the second version.

E.g. if you installed the first version into the folder `C:\EB\tresos_2008b_1`, install the second release into the folder `C:\EB\tresos_release2008b_2`.

1.8. Installing two different releases of EB tresos Studio on the same computer

To install two different release versions of EB tresos Studio on the same computer, follow the instructions in [Section 1.2, “Preparing to install EB tresos Studio”](#).

However, when you select the folder, into which you want to install the second version beside the **Choose Folder** button:

- Make sure to choose a different folder into which to install the second version.

E.g. if you installed the first version into the folder `C:\EB\tresos_2008a`, install the second release into the folder `C:\EB\tresos_release2008b`.

1.9. Installing service releases

If you purchased a maintenance pack of EB tresos Studio¹², you may have received a service release. Service releases fix problems or complete the feature set of full releases. Since service releases include all installation files for a complete installation, their installation is identical to that of a full release. For details on how to install a full release, depending on which license you have purchased, refer to [Section 1.3.4, “Installing EB tresos Studio with floating licenses”](#) or [Section 1.4.4, “Installing EB tresos Studio with a dongled license”](#).

The name schema for service releases is: `EB tresos Studio <release number>.sr<number>`. An example of a service release is e.g. `EB tresos Studio 2009.a.sr1`.

Not available for download is a new license file, since no separate license file is required for service releases. Use the license file of the last full version, e.g. in our example that of release 2009.a. This license is valid for all service releases of that full release.

Having installed a service release, you need to upgrade the EB tresos AutoCore modules of your projects. Refer to the EB tresos Studio user's guide, [chapter Upgrading module configurations to new module versions](#).

¹²If you bought EB tresos AutoCore with EB tresos Studio, the installation instructions for service releases are identical.

2. EB tresos product line support

Europe

Phone: +49 9131 7701 6060

Japan

Phone: +81 3 5577 6110

USA

Phone: +1 888 346 3813

Support URL

<http://automotive.elektrobit.com/support>

Index

C

- command server download, 7
- components to be installed on your computer, 6

D

- dongle hardware
 - dongle driver software, 18
 - wibu-key setup, 18
- dongle hardware installation, 20
- dongled license, 18
 - adding license, 23
 - check installation, 27
 - checklist, 19
 - dongle hardware installation, 20
 - dongle software installation, 20
 - getting, 19
 - installation, 21
 - items you need to start, 20
 - updating license, 23
- downloading from the command server, 7

F

- floating license, 9
 - administrator's job, 12
 - check installation, 27
 - checklist of items received, 11
 - client package, 11
 - EB tresos Studio installation, 14
 - FLEXid dongle, 12
 - getting licenses, 10
 - license instructions, 14
 - server package, 11
 - server set-up, 12
 - updating license, 17
 - user's job, 14

I

- installation, 5
 - from CD-ROM, 6

- from the command server, 7
- the same release twice, 31
- two different releases, 32

L

- license
 - check installation, 27
- license type
 - dongled, 4
 - example
 - dongled, 5
 - floating, 5
 - floating, 4
 - naming schema, 4
 - overview, 4
 - undongled, 4
 - where to start, 5

S

- set-up, 5
 - from CD-ROM, 6
 - from the command server, 7
- system requirements, 6

U

- undongled license
 - adding license, 26
 - check installation, 27
 - checklist, 24
 - installation, 24, 25
 - license update, 26