

FLAME_WAKEUP

About :

Pluto drone is equipped with a flame sensor to takeoff automatically, when fire is detected. It is an application to automate takeoff, incase of any fire.

Add-On used :

A flame sensor module is basically just a IR reciver module, which detects the fire by using the IR waves emitting from it.

Components and Connection:

Pluto drone, flame_sensor module and connecting wires.

Connect the Sound sensor on the RC port of Primus V5/X2 board


Primus V5/X2 pin	Peripherals
VCC on RC port	VCC on flame_module
GND on RC port	GND on flame_module
Signal on RC port	D0 on flame_module

How does it work?

Fame sensor module is basically a instrument to detect IR waves emitting from Hot objects:

- Normal reading → 1 = no takeoff
- Fire detected → 0 = take-off

PlutoBlocks

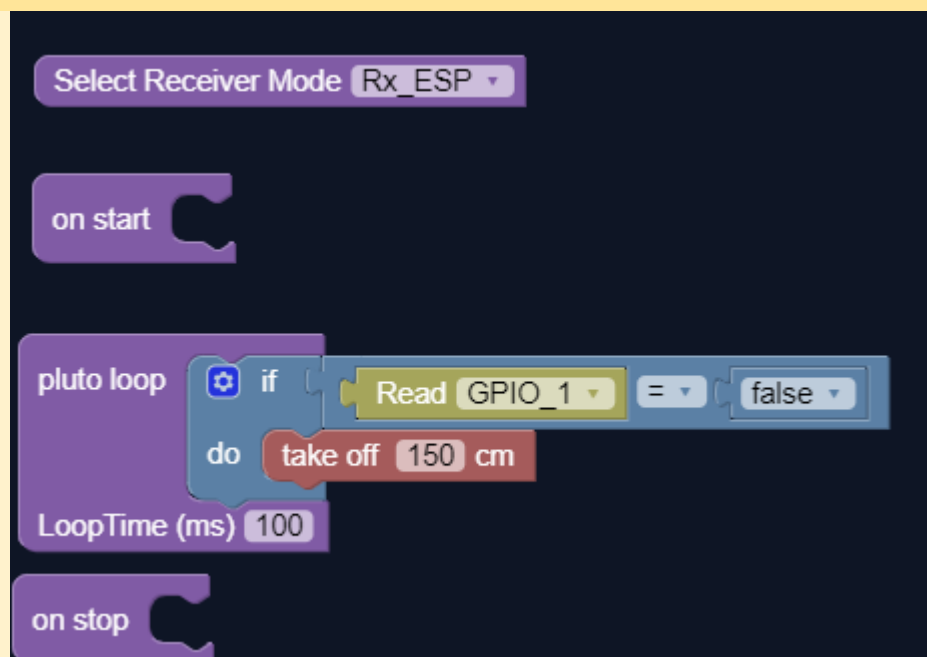

Working:

Initially, we set Receiver mode as ESP .

When loop begins, we constantly evaluate whether the flame sensor detects any flame. We then evaluate to land it or take off, depending on the reading of flame sensor.

Moving further

Try adding more features to help make firefighting operations more efficient.

Try making a flame follower drone.