

Technical Quick Guides

Adding Cameras from an XVR to an NVR

First Login to XVR Web Interface




Select the **Settings** on the upper left corner and click the **Network**






Under the Network settings navigate to TCP/IP and note the IP address of the XVR

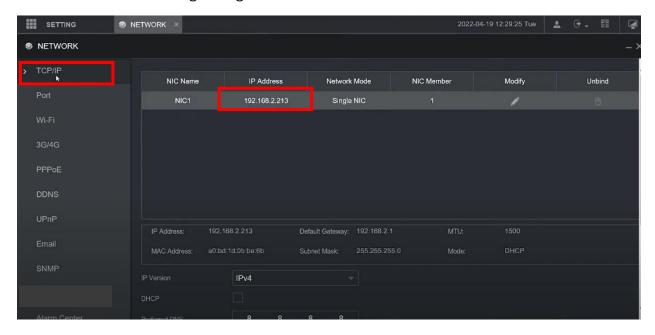

Select the Port section and note the Port number of the TCP

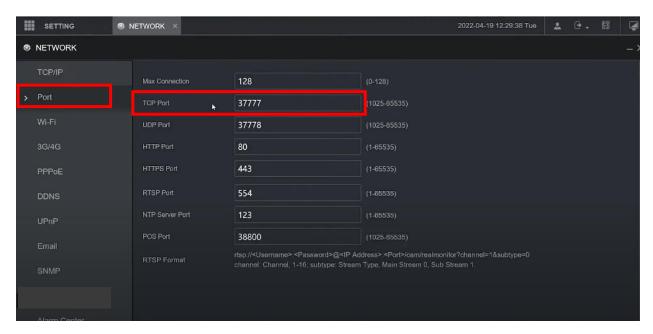




Log in to the NVR web interface




On the upper left corner, click the settings and select the Camera section.

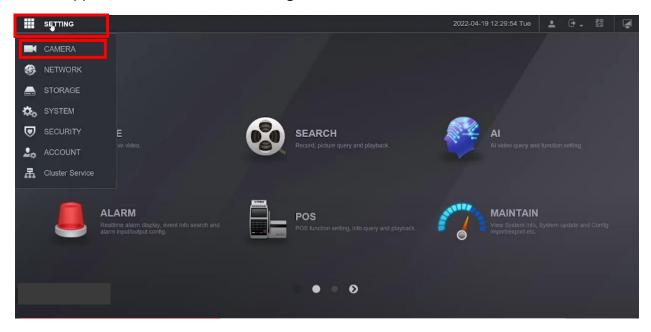




Under the Camera section click the "Manual Add"

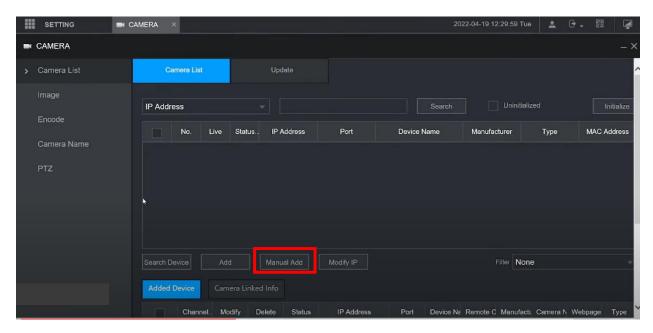


Input the details of the XVR like the IP address, Port number, username, password and click OK button when done.

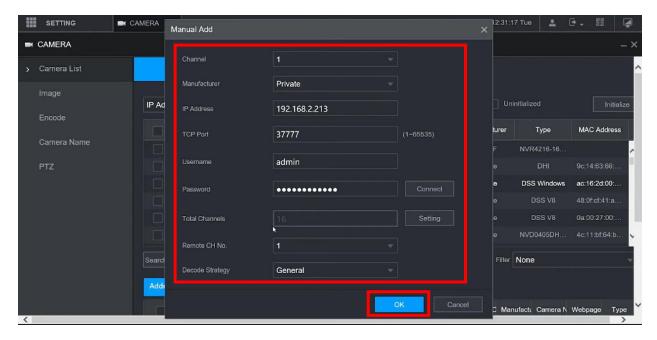




You can also add the camera channel you want by clicking the settings

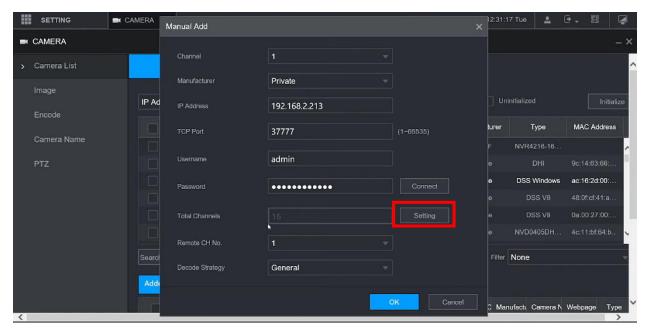


Select only the camera channel you want and click OK button.

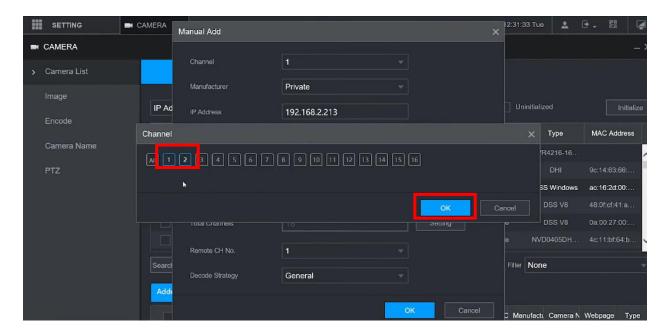




Scroll down the check if the camera is added, after successfully adding the camera, the status is initially red, click the refresh button to turn it to green

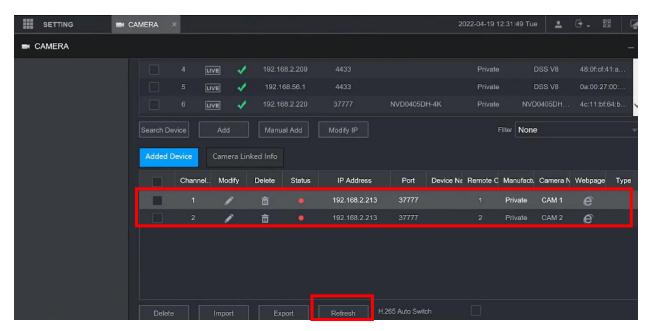

After confirming the status is green you can check on the live view and check the camera added.

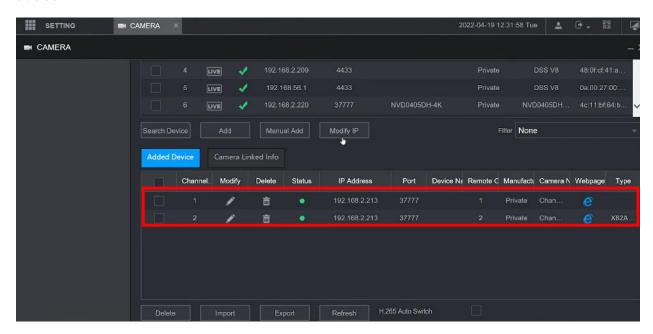



Select the camera on the left side to display the live view.

