



Technical Quick Guides

Changing IVS Sensitivity

Log in first on Camera web interface

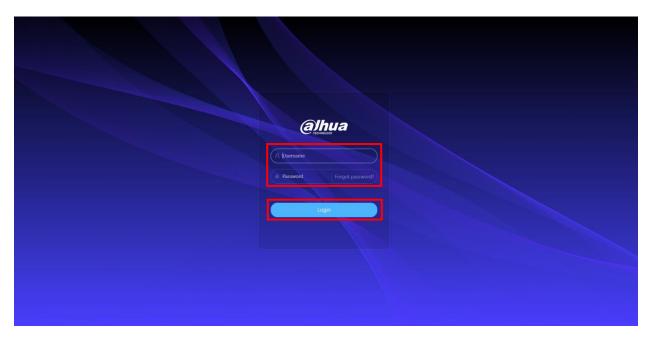


Click the Home icon at the upper right of the screen

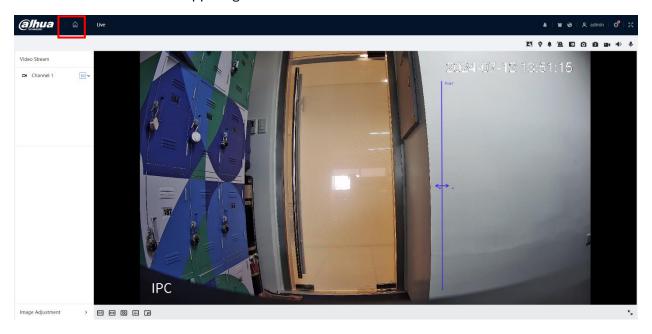




Select Al

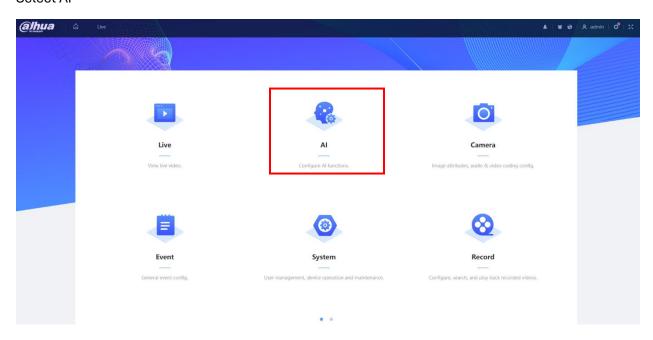

Click Next

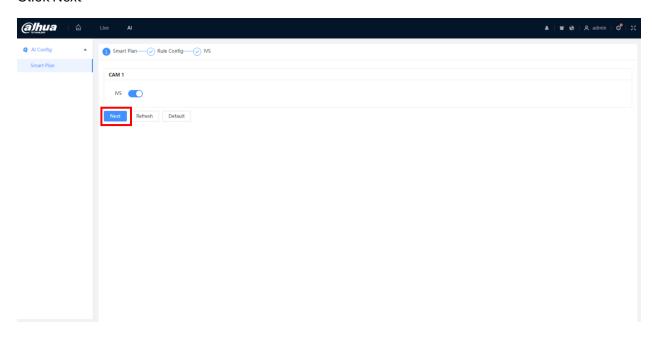



Adjust Sensitivity base on your preference and click **Apply Button**

