



Technical Quick Guides

Adding IPC for IP Intercom System on VTH Interface

On the VTH Screen click the Monitor Tab

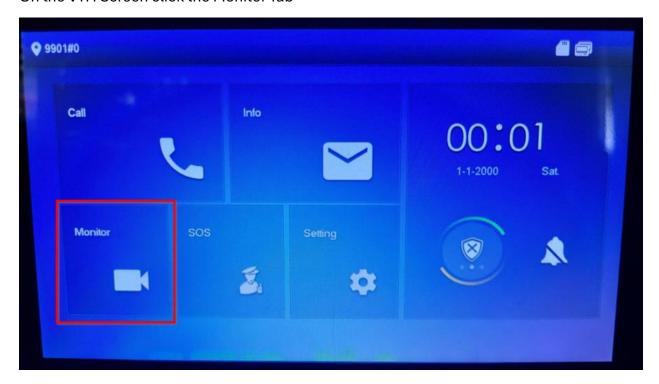


Click the IPC section and click the Add button to add the IPC details

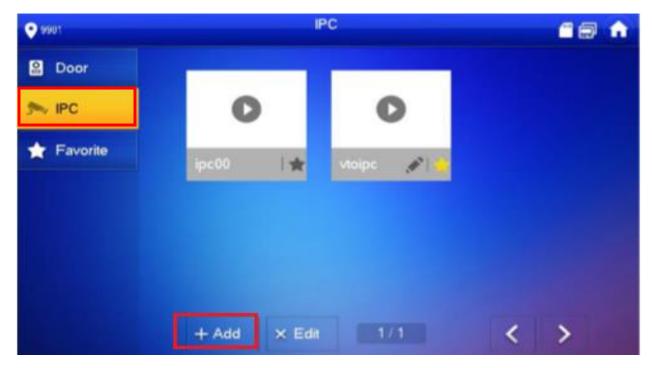



Configure IPC parameter fill in the camera's information in each field Press 'OK' to save and then the IPC is added

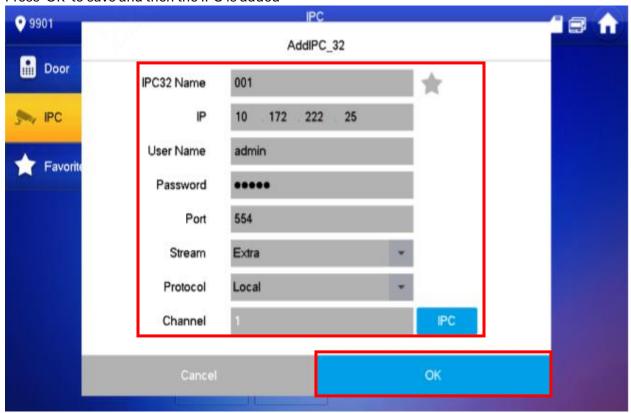

On the VTH, select 'Monitor >IPC', the system displays 'IPC' interface.





Click the IPC you want to view, then the system displays on the monitor interface.

