


Technical Quick Guides

How to update the firmware of the camera on NVR

Before Proceeding make sure that the NVR is connected to the Internet, or the status at P2P is Online

First Login on the NVR

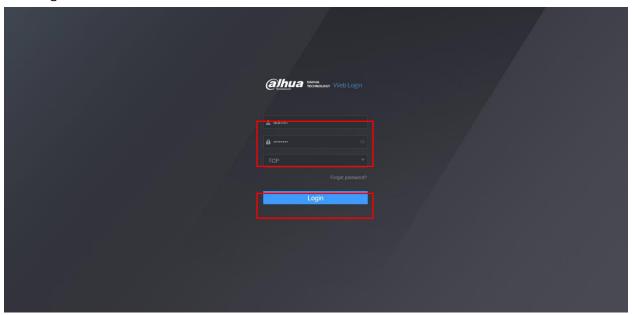


On the upper left corner of the screen, click the setting and select the Camera section






On the cameral section, click the Update tab

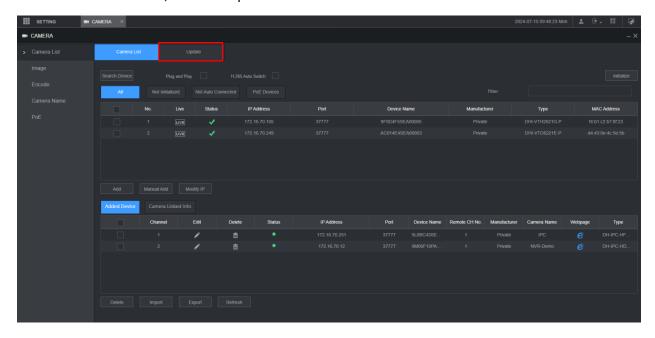


On the Update tab, click the Check button to check if there's available update for the camera

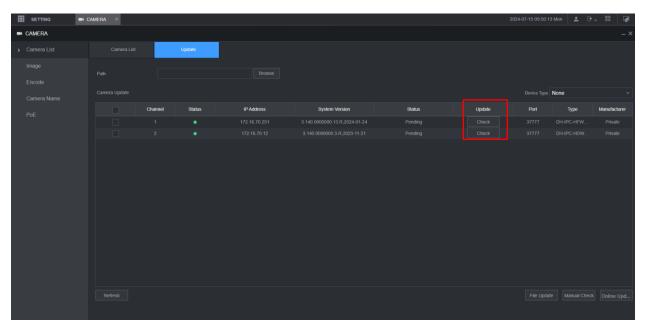




After clicking the Check button, it will display if there's available update for the camera

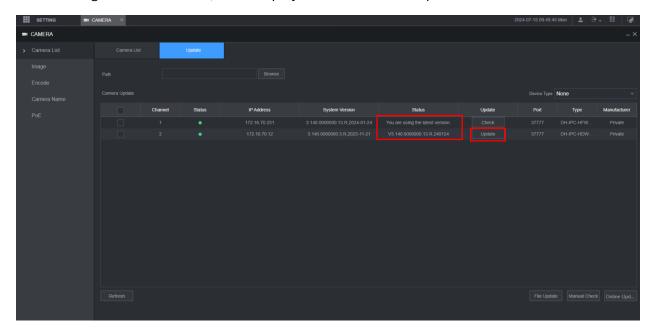


If you find any available update, click the Update button and it will pop up the system update tab.

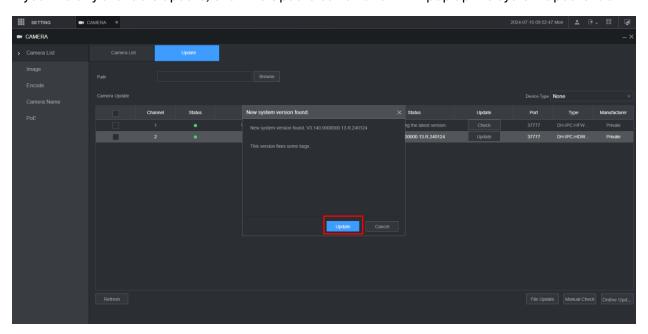




Click update and it will start downloading the updated firmware. Wait until the download is complete.

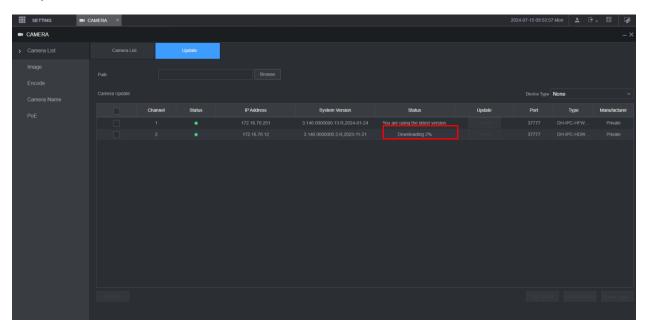


After the Download complete, it will start the updating process, wait until the updating process is completed.

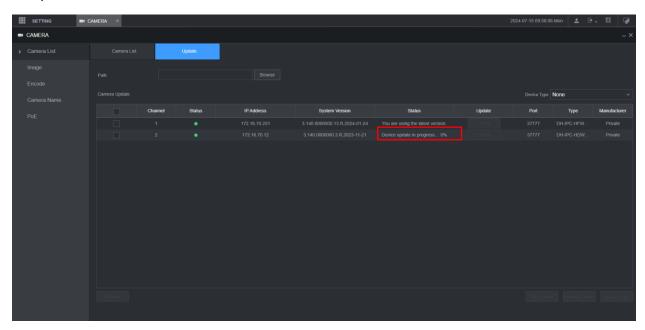



After the update process is completed, it will show "Update succeeded", the camera will reboot automatically

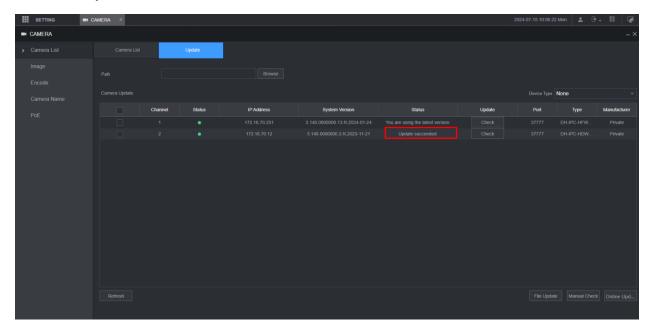

After the camera finished rebooting check the status if the camera is using the latest firmware version.

