



# HARNESS-CHASSIS, RZR PRO R (BASE)

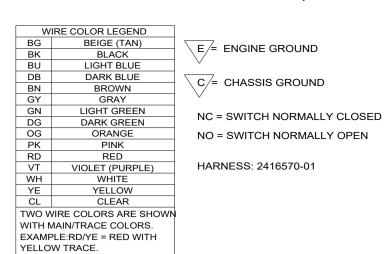

## **ENGINE HARNESS**

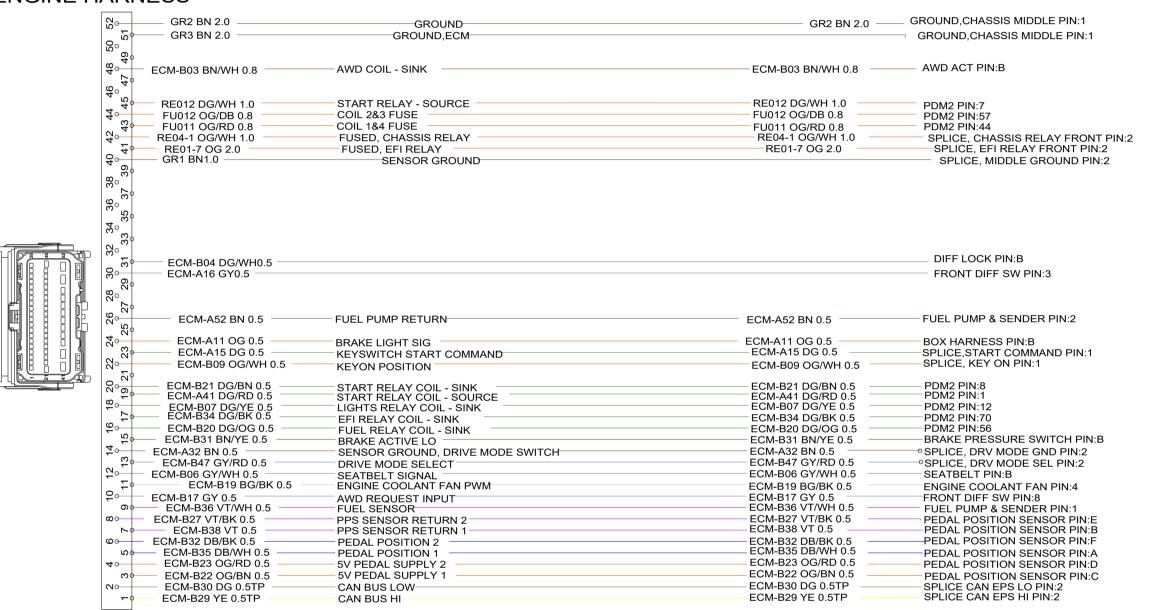

### PEDAL POSITION SENSOR

ENGINE HARNESS PIN:5 ENGINE HARNESS PIN:7 ENGINE HARNESS PIN:3 ENGINE HARNESS PIN:3 ENGINE HARNESS PIN:4 ENGINE HARNESS PIN:8 ENGINE HARNESS PIN:8 ENGINE HARNESS PIN:6 ECM-B23 DB/BI	PPS SENSOR RETURN 1 10.5 5V PEDAL SUPPLY 1 00.5 5V PEDAL SUPPLY 2 00.5 PPS SENSOR RETURN 2	ECM-B22 OG/BN 0.5 CCM-B23 OG/RD 0.5
---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------	-------------------------------------

## FUEL PUMP & SENDER

SPLICE, MIDDLE GROUND PIN:2 — GN	и2 BN 2.0 ———————————————————————————————————	- GROUND, FUEL PUMP-	- GM2 BN 2.0	4
PDM2 PIN:55 —— REG	03 OG/WH 2.0	FUEL PUMP RELAY OUT	RE03 OG/WH 2.0	
ENGINE HARNESS PIN:26 ——ECM	/I-A52 BN 0.5	FUEL PUMP RETURN	ECM-A52 BN 0.5	
ENGINE HARNESS PIN:9 —— ECI	M-B36 VT/WH 0.5	FUEL SENSOR	ECM-B36 VT/WH 0.5	<del>-</del>

#### **ENGINE COOLANT FAN**

PDM1 PIN:4 ——— PDM4 RD 5.0 —————	FUSED PDM3, ENGINE COOLANT FAN ——	PDM4 RD 5.0
GROUND,CHASSIS FRONT PIN:1 —— GF5 BN 5.0 ————	GROUND, ENGINE COOLANT FAN-	GF5 BN 5.0 ~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~
ENGINE HARNESS PIN:11 —— ECM-B19 BG/BK 0.5	ENGINE COOLANT FAN PWM	ECM-B19 BG/BK 0.5

# SEATBELT

ENGINE HARNESS PIN:12— ECM-B06 GY/WH 0.5	- SEATBELT SIGNAL	ECM-B06 GY/WH 0.5	
SPLICE, MIDDLE GROUND PIN:2 — GM4 BN 0.5 —	GROUND,SEATBELT	GM4 BN 0.5	

## BRAKE PRESSURE SWITCH

BRAKE PRESSURE


GROUND,CHASSIS FRONT PIN:1 —— GF9 BN 0.5 ———————————————————————————————————	GROUND, BKPS BRAKE ACTIVE LO	GF9 BN 0.5 ECM-B31 BN/YE 0.5
		0 5

5

4

3

1

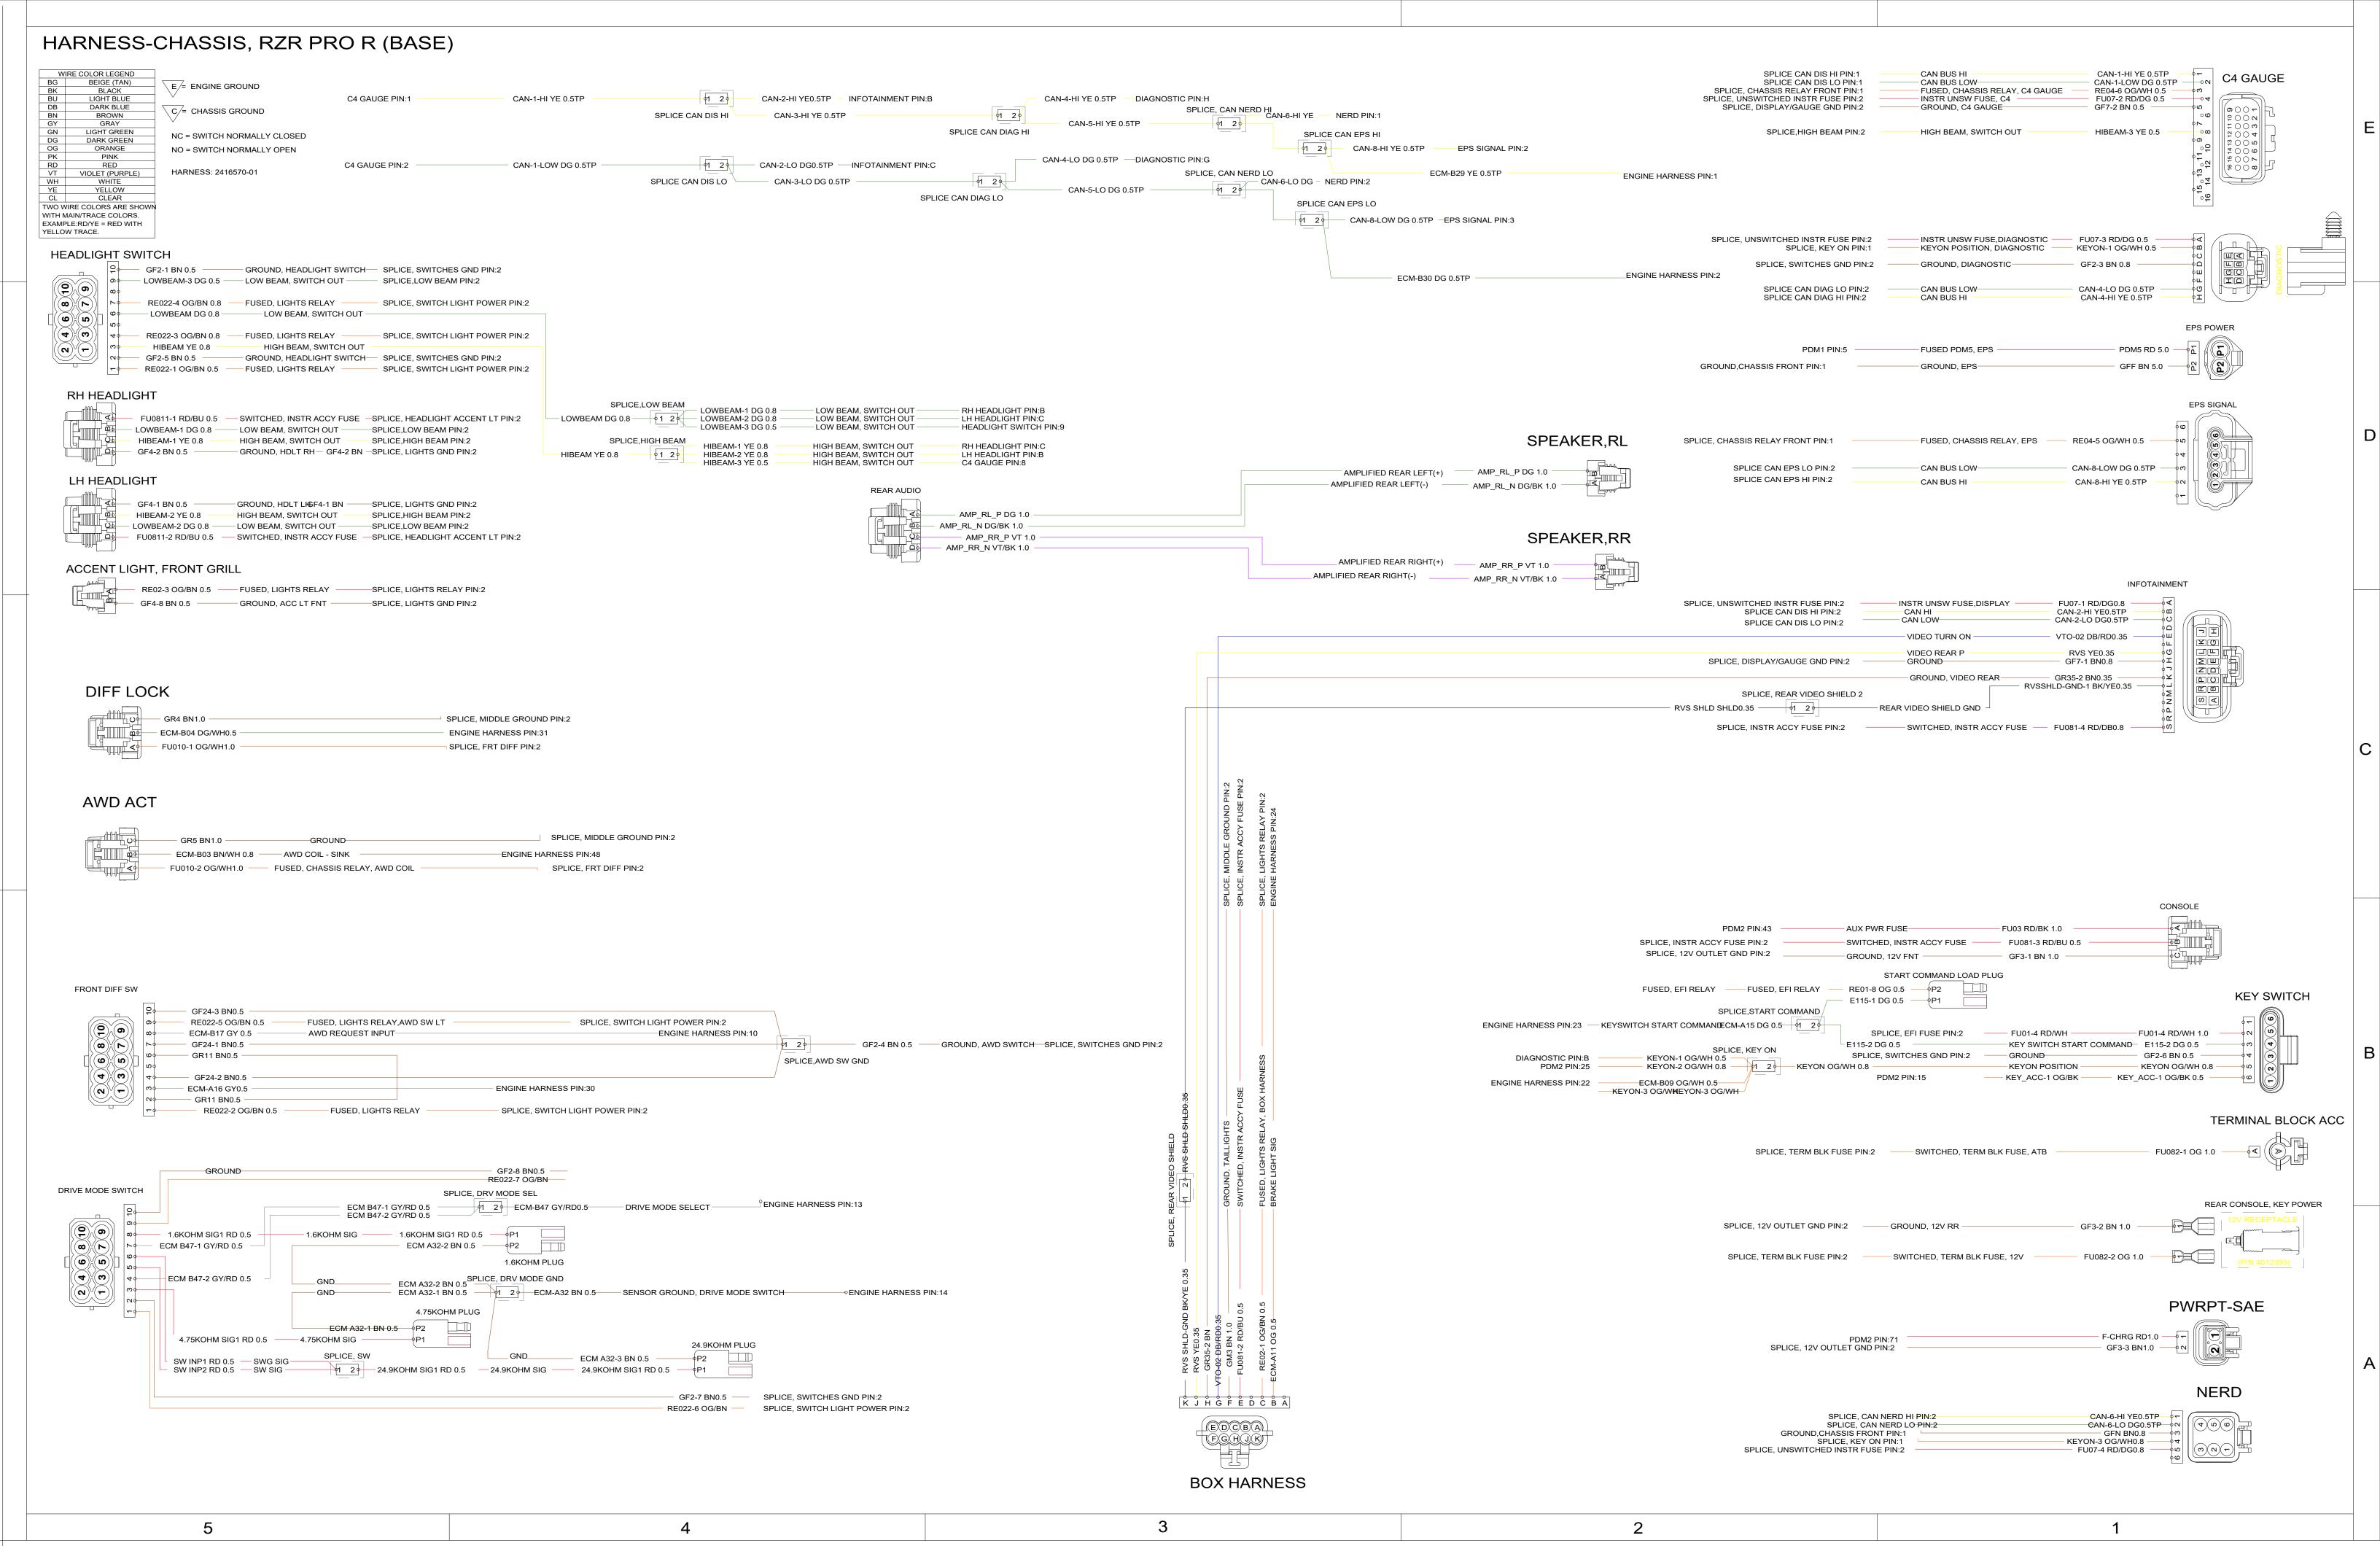

# HARNESS-CHASSIS, RZR

WIRE COLOR LEGEND

BG BEIGE (TAN)

BK BLACK

BU LIGHT BLUE

DB DARK BLUE

BN BROWN

GY GRAY

GN LIGHT GREEN

DG DARK GREEN

OG ORANGE

PK PINK

RD RED

VT VIOLET (PURPLE)

WH WHITE

YE YELLOW

CL CLEAR

TWO WIRE COLORS ARE SHOWN
WITH MAIN/TRACE COLORS.

EXAMPLE:RD/YE = RED WITH
YELLOW TRACE.

PRO F	R (BASE)									
Line No.	CCT # 1.6KOHM SIG1	CABLE <absent></absent>		GAUGE 0.5		FROM COMPONENT DRIVE MODE SWITCH	FROM PORT	TO COMPONENT 1.6KOHM PLUG	TO PORT	FUNCTION 1.6KOHM SIG
2	4.75KOHM SIG1 24.9KOHM SIG1	<absent></absent>	TXL	0.5	RD	DRIVE MODE SWITCH 24.9KOHM PLUG	_	4.75KOHM PLUG SPLICE, SW	P1 2	4.75KOHM SIG 24.9KOHM SIG
4 5	AMP_RL_N AMP_RL_P	<absent></absent>	TXL	1.0	DG	SPEAKER,RL SPEAKER,RL	A B	REAR AUDIO REAR AUDIO	B A	AMPLIFIED REAR LEFT(+) AMPLIFIED REAR LEFT(+)
D 6 7 8	AMP_RR_N AMP_RR_P E115-1	<absent> <absent> <absent></absent></absent></absent>	TXL TXL TXL	1.0 1.0 0.5	VT	SPEAKER,RR SPEAKER,RR START COMMAND LOAD PLUG	A B P1	REAR AUDIO REAR AUDIO SPLICE,START COMMAND	D C 2	AMPLIFIED REAR RIGHT(-)  AMPLIFIED REAR RIGHT(+)  KEY SWITCH START COMMAND
9	E115-2 ECM A32-1	<absent></absent>	TXL TXL	0.5	DG	KEY SWITCH	3 P2	SPLICE, START COMMAND SPLICE, DRV MODE GND	2	KEY SWITCH START COMMAND GND
11 12	ECM A32-2 ECM A32-3	<absent></absent>	TXL	0.5 0.5	BN	1.6KOHM PLUG SPLICE, DRV MODE GND		SPLICE, DRV MODE GND 24.9KOHM PLUG	1 P2	GND GND
13 14 15	ECM B47-1 ECM B47-2 ECM-A11	<absent> <absent> <absent></absent></absent></absent>	TXL	0.5 0.5 0.5	GY/RD	SPLICE, DRV MODE SEL SPLICE, DRV MODE SEL BOX HARNESS	1 1 B	DRIVE MODE SWITCH DRIVE MODE SWITCH ENGINE HARNESS	7 4 24	TBD TBD BRAKE LIGHT SIG
16 17	ECM-A16 ECM-A32	<absent></absent>	TXL	0.5 0.5	GY	FRONT DIFF SW SPLICE, DRV MODE GND	3	ENGINE HARNESS ENGINE HARNESS	30	TBD SENSOR GROUND, DRIVE MODE SWITCH
18 19	ECM-A52 ECM-B04	<absent> <absent></absent></absent>	TXL TXL	0.5 0.5	DG/WH	ENGINE HARNESS DIFF LOCK	26 B	FUEL PUMP & SENDER ENGINE HARNESS	2 31	FUEL PUMP RETURN TURF RELAY CONTROL
20 21 22	ECM-B47 F-CHRG	<absent></absent>	TXL TXL TXL	0.5 1.0 0.8	RD	SPLICE, DRV MODE SEL PDM2 INFOTAINMENT	2 71 A	PWRPT-SAE SPLICE, UNSWITCHED INSTR FUSE	13	CHARGE FUSE TO SAE PWRPT
22 23 24	FU07-1 FU07-4 FU09	<absent> <absent> <absent></absent></absent></absent>	TXL	0.8		SPLICE, UNSWITCHED INSTR FUSE	2 67	NERD PDM2	5 50	INSTR UNSW FUSE, DISPLAY INSTR UNSW FUSE, NERD FUEL FUSE TO FUEL RELAY
25 26	FU010 FU010-1	<absent></absent>	TXL TXL	1.0	OG/WH			SPLICE, FRT DIFF DIFF LOCK	1 A	TBD FUSED, CHASSIS RELAY,DIFF
27 28	FU010-2 FU081-4	<absent></absent>	TXL	0.8	RD/DB	SPLICE, FRT DIFF INFOTAINMENT	2 S	AWD ACT SPLICE, INSTR ACCY FUSE	A 2	FUSED, CHASSIS RELAY, AWD COIL SWITCHED, INSTR ACCY FUSE
29 30 31	GF2-4 GF2-5 GF2-6	<absent> <absent> <absent></absent></absent></absent>	TXL	0.5 0.5 0.5	BN	SPLICE,AWD SW GND SPLICE, SWITCHES GND SPLICE, SWITCHES GND	2	SPLICE, SWITCHES GND HEADLIGHT SWITCH KEY SWITCH	2	GROUND, AWD SWITCH GROUND, HEADLIGHT SWITCH GROUND
32 33	GF2-7 GF2-8	<absent></absent>		0.5	BN	SPLICE, SWITCHES GND SPLICE, SWITCHES GND	2	DRIVE MODE SWITCH DRIVE MODE SWITCH	2	TBD GROUND
34 35	GF3-3 GF7-1	<absent> <absent></absent></absent>	TXL TXL	1.0 0.8	BN	SPLICE, 12V OUTLET GND INFOTAINMENT	2 H	PWRPT-SAE SPLICE, DISPLAY/GAUGE GND	2	TBD GROUND
36 37	GF9 GF24-1	<absent></absent>	TXL	0.5	BN	BRAKE PRESSURE SWITCH SPLICE,AWD SW GND	A 1	GROUND, CHASSIS FRONT FRONT DIFF SW	7	GROUND, BKPS TBD
38 39 40	GF24-2 GF24-3 GFN	<absent> <absent> <absent></absent></absent></absent>	TXL	0.5 0.5 0.8	BN	SPLICE,AWD SW GND SPLICE,AWD SW GND GROUND,CHASSIS FRONT	1 1 1	FRONT DIFF SW FRONT DIFF SW NERD	10	TBD TBD GND, NERD
41	GM2 GM4	<absent></absent>	TXL	2.0	BN	SPLICE, MIDDLE GROUND SPLICE, MIDDLE GROUND	2	FUEL PUMP & SENDER SEATBELT	4 A	GROUND, FUEL PUMP GROUND, SEATBELT
43	GR1 GR2	<absent></absent>	_	2.0	BN	SPLICE, MIDDLE GROUND ENGINE HARNESS	2 52	ENGINE HARNESS GROUND,CHASSIS MIDDLE	40	SENSOR GROUND GROUND
45 46 47	GR3 GR4 GR5	<absent> <absent> <absent></absent></absent></absent>	TXL TXL TXL	2.0 1.0 1.0	BN	GROUND, CHASSIS MIDDLE SPLICE, MIDDLE GROUND SPLICE, MIDDLE GROUND	2	ENGINE HARNESS DIFF LOCK AWD ACT	51 C	GROUND,ECM GROUND,DIFF LOCK GROUND
48 49	GR11 GR35-2	<absent></absent>	TXL	0.5 0.35	BN	FRONT DIFF SW BOX HARNESS	2 H	FRONT DIFF SW INFOTAINMENT	6 K	GROUND GROUND, VIDEO REAR
50 51	KEY_ACC-1 KEYON-3	<absent> <absent></absent></absent>	TXL TXL	0.5	OG/BK OG/WH	KEY SWITCH SPLICE, KEY ON	6	PDM2 NERD	15 4	KEY ACC, ACC RELAY COIL IN TBD
52 53	PDM2-5 PDM3-2	<absent></absent>	_	2.0	RD	SPLICE, PDM2 SPLICE, PDM3	1	PDM2 PDM2	65 61	PDM2 TO CHARGE FUSE PDM3 TO FUEL FUSE
54 55 56	PDM3-3 RE01-8 RE02-1	<absent> <absent> <absent></absent></absent></absent>	TXL TXL TXL	1.0 0.5 0.5	OG	SPLICE, PDM3 SPLICE, EFI RELAY FRONT SPLICE, LIGHTS RELAY	2	PDM2 START COMMAND LOAD PLUG BOX HARNESS	14 P2 C	PDM3 TO START FUSE FUSED, EFI RELAY FUSED, LIGHTS RELAY, BOX HARNESS
57 58	RE04-2 RE022-5	<absent></absent>	TXL	1.0	OG/WH	SPLICE, CHASSIS RELAY FRONT SPLICE, SWITCH LIGHT POWER	2	PDM2 FRONT DIFF SW	62 9	TBD FUSED, LIGHTS RELAY,AWD SW LT
59 60	RE022-6 RE022-7	<absent></absent>	TXL	0.5 0.5	OG/BN	SPLICE, SWITCH LIGHT POWER SPLICE, SWITCH LIGHT POWER	2	DRIVE MODE SWITCH DRIVE MODE SWITCH	9	FUSED, LIGHTS RELAY,DRV SW LT FUSED, LIGHTS RELAY,DRV SW LT
61 62 63	RVS RVS SHLD RVS SHLD-GND	<absent> <absent> <absent></absent></absent></absent>	TXL SHLD TXL	0.35 0.35 0.35	SHLD	INFOTAINMENT SPLICE, REAR VIDEO SHIELD BOX HARNESS	G 2	BOX HARNESS SPLICE, REAR VIDEO SHIELD 2 SPLICE, REAR VIDEO SHIELD	J 1	VIDEO REAR P TBD REAR VIDEO SHIELD GROUND
64 65	RVSSHLD-GND-1 SW INP1	<absent></absent>	_	0.35	BK/YE	SPLICE, REAR VIDEO SHIELD 2 SPLICE, SW	2	INFOTAINMENT DRIVE MODE SWITCH	L 6	REAR VIDEO SHIELD GND SWG SIG
66 67	SW INP2 VTO-02	<absent></absent>	TXL	0.5 0.35	DB/RD	SPLICE, SW INFOTAINMENT	1 E	DRIVE MODE SWITCH BOX HARNESS	5 G	SW SIG VIDEO TURN ON
68 69 70	ECM-A15 ECM-A41 ECM-B03			0.5 0.5 0.8	DG/RD	SPLICE,START COMMAND PDM2 AWD ACT	1 1 B	ENGINE HARNESS ENGINE HARNESS ENGINE HARNESS	23 19 48	KEYSWITCH START COMMAND START RELAY COIL - SOURCE AWD COIL - SINK
71 72	ECM-B06 ECM-B07		TXL	0.5		SEATBELT	B 12	ENGINE HARNESS ENGINE HARNESS	12	SEATBELT SIGNAL LIGHTS RELAY COIL - SINK
73 74	ECM-B09 ECM-B17		TXL	0.5 0.5	GY	SPLICE, KEY ON FRONT DIFF SW	1 8	ENGINE HARNESS ENGINE HARNESS	22 10	KEYON POSITION AWD REQUEST INPUT
75 76 77	ECM-B19 ECM-B20 ECM-B21		TXL	0.5 0.5 0.5	DG/OG		4 56 20	ENGINE HARNESS ENGINE HARNESS PDM2	11 16 8	FUEL RELAY COIL - SINK START RELAY COIL - SINK
78 79	ECM-B31 ECM-B34		TXL	0.5	BN/YE	BRAKE PRESSURE SWITCH ENGINE HARNESS	B 17	ENGINE HARNESS PDM2	15 70	BRAKE ACTIVE LO EFI RELAY COIL - SINK
80 81	ECM-B36 FU01		TXL TXL	0.5 2.0	VT/WH RD/WH	FUEL PUMP & SENDER SPLICE, EFI FUSE	1	ENGINE HARNESS PDM2	9 58	FUEL SENSOR EFI FUSE TO SPLICE
82 83	FU01-1 FU01-2		TXL	0.5 1.0 2.0	RD	SPLICE, EFI FUSE PDM2 SPLICE, EFI FUSE	20	PDM2 PDM2 PDM2	63	START FUSE TO START RELAY
84 85 86	FU01-3 FU01-4 FU02		TXL	1.0		SPLICE, EFI FUSE	2	KEY SWITCH PDM2	64 2 23	EFI FUSE SPLICE TO EFI RELAY EFI FUSE, KEY SWITCH LIGHTS FUSE TO LIGHTS RELAY
87 88	FU03 FU04		TXL	1.0	RD/BK RD/WH	PDM2	43 33	CONSOLE PDM2	A 26	AUX PWR FUSE CHASSIS FUSE TO CHASSIS RELAY
89 90	FU05 FU06		TXL	0.8	RD/DB RD/BK	PDM2	24 48	PDM2 PDM2	30 54	SCM FUSE TO SCM RELAY SHOCK FUSE OUTPUT
91 92 93	FU07 FU07-2 FU07-3		TXL	0.8 0.5 0.5	RD/DG	SPLICE, UNSWITCHED INSTR FUSE SPLICE, UNSWITCHED INSTR FUSE SPLICE, UNSWITCHED INSTR FUSE	1 2 2	PDM2 C4 GAUGE DIAGNOSTIC	34 4 A	INSTR UNSW FUSE TO SPLICE INSTR UNSW FUSE, C4 INSTR UNSW FUSE, DIAGNOSTIC
94 95	FU011 FU012		TXL	0.8	OG/RD OG/DB	PDM2 PDM2	44 57	ENGINE HARNESS ENGINE HARNESS	43	COIL 1&4 FUSE COIL 2&3 FUSE
96 97	FU081 FU081-1		TXL TXL	1.0 0.5	RD/BU RD/BU	SPLICE, INSTR ACCY FUSE SPLICE, HEADLIGHT ACCENT LT	1	PDM2 SPLICE, INSTR ACCY FUSE	10 2	SWITCHED, INSTR ACCY FUSE SWITCHED, INSTR ACCY FUSE
98 99 100	FU081-2 FU081-3 FU082		TXL TXL TXL	0.5 0.5 1.0	RD/BU	SPLICE, INSTR ACCY FUSE SPLICE, INSTR ACCY FUSE SPLICE, TERM BLK FUSE	2 2 1	BOX HARNESS CONSOLE PDM2	Е В 9	SWITCHED, INSTR ACCY FUSE SWITCHED, INSTR ACCY FUSE SWITCHED, TERM BLK FUSE
101 102	FU082-1 FU082-2		TXL TXL	1.0	OG	SPLICE, TERM BLK FUSE SPLICE, TERM BLK FUSE	2	TERMINAL BLOCK ACC 12V RECEPTACLE HI RR	A 1	SWITCHED, TERM BLK FUSE, ATB SWITCHED, TERM BLK FUSE, 12V
103 104	FU0811-1 FU0811-2		TXL	0.5 0.5	RD/BU	RH HEADLIGHT LH HEADLIGHT	A D	SPLICE, HEADLIGHT ACCENT LT SPLICE, HEADLIGHT ACCENT LT	2 2	SWITCHED, INSTR ACCY FUSE SWITCHED, INSTR ACCY FUSE
105 106 107	GC1 GC1-1 GC1-2		TXL	0.5 0.5 0.5	BN	SPLICE, COIL DIODE GND PDM2 PDM2		PDM2 SPLICE, COIL DIODE GND SPLICE, COIL DIODE GND	13 2 2	GROUND, COIL DIODE CATHODE GROUND, ACCY RELAY COIL GROUND, CHASSIS RELAY COIL
108 109	GF1 GF1-1		TXL	1.0	BN	GROUND,CHASSIS FRONT SPLICE, COIL GROUND	1 2	SPLICE, COIL BIODE GND SPLICE, COIL GROUND PDM2	1 19	GROUND, CHASSIS RELAT COIL GROUND, RELAY COIL GROUND, COIL DIODE CATHODE
110 111	GF1-3 GF2		TXL TXL	0.5 1.0	BN BN	SPLICE, COIL GROUND GROUND,CHASSIS FRONT	2	PDM2 SPLICE, SWITCHES GND	36 1	GROUND, SCM RELAY COIL GROUND, SWITCHES
112 113	GF2-1 GF2-3 GF3		TXL	0.5	BN	SPLICE, SWITCHES GND SPLICE, SWITCHES GND GROUND CHASSIS EPONT	2	HEADLIGHT SWITCH DIAGNOSTIC	10 D	GROUND, HEADLIGHT SWITCH GROUND, DIAGNOSTIC
114 115 116	GF3-1 GF3-2		TXL	2.0 1.0 1.0	BN	GROUND,CHASSIS FRONT SPLICE, 12V OUTLET GND SPLICE, 12V OUTLET GND	1 2 2	SPLICE, 12V OUTLET GND CONSOLE 12V RECEPTACLE LO RR	1 C	GROUND, 12V GROUND, 12V FNT GROUND, 12V RR
117 118	GF4 GF4-1		TXL TXL	0.8 0.5	BN BN	GROUND,CHASSIS FRONT SPLICE, LIGHTS GND	1 2	SPLICE, LIGHTS GND LH HEADLIGHT	1 A	GROUND, LIGHTS GROUND, HDLT LH
119 120	GF4-2 GF4-8		TXL	0.5	BN	SPLICE, LIGHTS GND SPLICE, LIGHTS GND	2	RH HEADLIGHT ACCENT LIGHT, FRONT GRILL	D B	GROUND, HDLT RH GROUND, ACC LT FNT
121 122 123	GF5 GF7 GF7-2		TXL	5.0 1.0 0.5	BN	GROUND,CHASSIS FRONT GROUND,CHASSIS FRONT SPLICE, DISPLAY/GAUGE GND	1 2	ENGINE COOLANT FAN SPLICE, DISPLAY/GAUGE GND C4 GAUGE	2 1 5	GROUND, ENGINE COOLANT FAN GROUND, DISPLAY/GAUGE GROUND, C4 GAUGE
123 124 125	GFF GM3		TXL	5.0 1.0	BN	GROUND, CHASSIS FRONT SPLICE, MIDDLE GROUND	1 2	EPS POWER BOX HARNESS	P2 F	GROUND, C4 GAUGE GROUND, EPS GROUND, TAILLIGHTS
126 127	GMC HIBEAM		TXL TXL	5.0 0.8	BN YE	GROUND,CHASSIS MIDDLE SPLICE,HIGH BEAM	1	SPLICE, MIDDLE GROUND HEADLIGHT SWITCH	1 3	MIDDLE GROUND CABLE HIGH BEAM, SWITCH OUT
128	HIBEAM-1		TXL	0.8	YE	SPLICE,HIGH BEAM	2	RH HEADLIGHT	С	HIGH BEAM, SWITCH OUT

ne No.	CCT#	CABLE	TYPE	GAUGE	COLOR	FROM COMPONENT	FROM POR	TO COMPONENT	TO PORT	FUNCTION
29	HIBEAM-2			0.8		SPLICE,HIGH BEAM	2	LH HEADLIGHT	В	HIGH BEAM, SWITCH OUT
30	HIBEAM-3	-	TXL	0.5	YE	SPLICE,HIGH BEAM	2	C4 GAUGE	8	HIGH BEAM, SWITCH OUT
31	KEYON	-	TXL	0.8	OG/WH	KEY SWITCH	5	SPLICE, KEY ON	2	KEYON POSITION
132	KEYON-1	-		0.5	OG/WH	SPLICE, KEY ON	1	DIAGNOSTIC	В	KEYON POSITION, DIAGNOSTIC
133	KEYON-2			0.8		SPLICE, KEY ON	1	PDM2	25	KEYON POSITION
134	LOWBEAM			0.8		SPLICE,LOW BEAM	1	HEADLIGHT SWITCH	6	LOW BEAM, SWITCH OUT
135	LOWBEAM-1			0.8		SPLICE,LOW BEAM	2	RH HEADLIGHT	В	LOW BEAM, SWITCH OUT
136	LOWBEAM-2			0.8	DG	SPLICE,LOW BEAM	2	LH HEADLIGHT	С	LOW BEAM, SWITCH OUT
137	LOWBEAM-3			0.5	_	SPLICE,LOW BEAM	2	HEADLIGHT SWITCH	9	LOW BEAM, SWITCH OUT
138	PDM1			5.0		SPLICE, PDM1	2	PDM1	1	FUSED, PDM1
139	PDM1-1			0.8		SPLICE, PDM1	1	PDM2	28	PDM1 TO INSTR UNSW FUSE
140	PDM1-2			0.8		SPLICE, PDM1	1	PDM2	17	PDM1 TO LIGHTS FUSE
141	PDM1-3			2.0		SPLICE, PDM1	1	PDM2	16	PDM1 TO ACC RELAY
142	PDM2			5.0		SPLICE, PDM2	2	PDM1	2	FUSED, PDM2
143	PDM2-1			1.0		SPLICE, PDM2	1	PDM2	37	PDM2 TO AUX PWR FUSE
144	PDM2-2			2.0		SPLICE, PDM2	1	PDM2	27	PDM2 TO CHASSIS FUSE
145	PDM3			5.0	_	SPLICE, PDM3	2	PDM1	3	FUSED, PDM3
146	PDM3-1			1.0		SPLICE, PDM3	1	PDM2	52	PDM3 TO EFI FUSE
147	PDM4			5.0	RD	PDM1	4	ENGINE COOLANT FAN	1	FUSED PDM3, ENGINE COOLANT FAN
147 148	PDM5			5.0	RD	PDM1	5	EPS POWER	P1	FUSED PDM3, ENGINE COOLANT FAN
148 149	RE01					SPLICE, EFI RELAY FRONT	1	PDM2	69	FUSED PDM5, EPS FUSED, EFI RELAY - SOURCE
				2.0			1			
150	RE01-1			0.8		SPLICE, EFI RELAY FRONT	1	PDM2	38	FUSED, EFI RELAY, COIL 184 FUSE IN
151 152	RE01-2			0.8		SPLICE, EFI RELAY FRONT	1	PDM2	51	FUSED, EFI RELAY, COIL 2&3 FUSE IN
152	RE01-3			0.5		SPLICE, EFI RELAY FRONT	1	PDM2	5	FUSED, EFI RELAY, LIGHT RELAY COIL
153	RE01-4			0.5		SPLICE, EFI RELAY FRONT	7	PDM2	49	FUSED, EFI RELAY, FUEL RELAY COIL
154	RE01-7			2.0		SPLICE, EFI RELAY FRONT	2	ENGINE HARNESS	41	FUSED, EFI RELAY
155	RE02			0.8		SPLICE, LIGHTS RELAY	1	PDM2	11	FUSED, LIGHTS RELAY
156	RE02-2			0.8		SPLICE, LIGHTS RELAY	2	SPLICE, SWITCH LIGHT POWER	1	FUSED, LIGHTS RELAY
157	RE02-3			0.5		SPLICE, LIGHTS RELAY	2	ACCENT LIGHT, FRONT GRILL	A	FUSED, LIGHTS RELAY
158	RE03			2.0	OG/WH		55	FUEL PUMP & SENDER	3	FUEL PUMP RELAY OUT
159	RE04			2.0		SPLICE, CHASSIS RELAY FRONT	1	PDM2	31	FUSED, CHASSIS RELAY, OUT
160	RE04-1		TXL	1.0		SPLICE, CHASSIS RELAY FRONT	2	ENGINE HARNESS	42	FUSED, CHASSIS RELAY
161	RE04-5			0.5		SPLICE, CHASSIS RELAY FRONT	1	EPS SIGNAL	5	FUSED, CHASSIS RELAY, EPS
162	RE04-6			0.5		SPLICE, CHASSIS RELAY FRONT	1	C4 GAUGE	3	FUSED, CHASSIS RELAY, C4 GAUGE
163	RE08	-		2.0	OG/RD	SPLICE, ACCY RELAY	1	PDM2	21	UNFUSED, ACCY RELAY, OUT
164	RE08-1			1.0		SPLICE, ACCY RELAY	1	PDM2	4	UNFUSED, ACCY RELAY, INSTR
165	RE08-2	-	TXL	1.0	OG/RD	SPLICE, ACCY RELAY	1	PDM2	3	UNFUSED, ACCY RELAY, TERM BLK
166	RE012	-	TXL	1.0	DG/WH	PDM2	7	ENGINE HARNESS	45	START RELAY - SOURCE
167	RE022-1	-	TXL	0.5	OG/BN	HEADLIGHT SWITCH	1	SPLICE, SWITCH LIGHT POWER	2	FUSED, LIGHTS RELAY
168	RE022-2	-	TXL	0.5	OG/BN	FRONT DIFF SW	1	SPLICE, SWITCH LIGHT POWER	2	FUSED, LIGHTS RELAY
169	RE022-3	-	TXL	0.8	OG/BN	HEADLIGHT SWITCH	4	SPLICE, SWITCH LIGHT POWER	2	FUSED, LIGHTS RELAY
170	RE022-4	-	TXL	0.8	OG/BN	HEADLIGHT SWITCH	7	SPLICE, SWITCH LIGHT POWER	2	FUSED, LIGHTS RELAY
171	CAN-1-HI	CAN-1	TXL	0.5TP	YE	SPLICE CAN DIS HI	1	C4 GAUGE	1	CAN BUS HI
172	CAN-1-LOW			0.5TP	DG	SPLICE CAN DIS LO	1	C4 GAUGE	2	CAN BUS LOW
173	CAN-2-HI			0.5TP	YE	SPLICE CAN DIS HI	2	INFOTAINMENT	В	CAN HI
174	CAN-2-LO				DG	SPLICE CAN DIS LO	2	INFOTAINMENT	C	CAN LOW
175	CAN-3-HI				YE	SPLICE CAN DIS HI	2	SPLICE CAN DIAG HI	1	CAN BUS HI
176	CAN-3-LO				DG	SPLICE CAN DIS LO	2	SPLICE CAN DIAG LO	1	CAN BUS LOW
177	CAN-4-HI			0.5TP	YE	SPLICE CAN DIAG HI	2	DIAGNOSTIC	H	CAN BUS HI
178	CAN-4-LO			0.5TP	DG	SPLICE CAN DIAG LO	2	DIAGNOSTIC	G	CAN BUS LOW
179	CAN-5-HI			0.5TP	YE	SPLICE CAN DIAG HI	2	SPLICE, CAN NERD HI	1	CAN BUS HI
180	CAN-5-LO			0.5TP	DG	SPLICE CAN DIAG LO	2	SPLICE, CAN NERD LO	1	CAN BUS LO
181	CAN-6-HI			0.5TP	YE	SPLICE, CAN NERD HI	2	NERD	1	CAN HIGH
182	CAN-6-LO		TXL	0.5TP	DG	SPLICE, CAN NERD III	2	NERD	2	CAN LOW
183	CAN-0-LO			0.5TP	YE	SPLICE, CAN NERD HI	2	SPLICE CAN EPS HI	1	CAN HIGH
184	CAN-7-LO				DG	SPLICE, CAN NERD HI SPLICE, CAN NERD LO	2	SPLICE CAN EPS HI	1	CAN LOW
185	CAN-7-LO CAN-8-HI			0.5TP	YE	SPLICE, CAN NERD LO SPLICE CAN EPS HI	2	EPS SIGNAL	2	CAN BUS HI
185 186	CAN-8-HI			0.5TP	DG	SPLICE CAN EPS HI SPLICE CAN EPS LO	2	EPS SIGNAL EPS SIGNAL	3	CAN BUS HI
	ECM-B29			0.5TP	YE		2		1	
187						SPLICE CAN ERS LO		ENGINE HARNESS	1	CAN BUS HI
188	ECM-B30			0.5TP	DG OC/DN	SPLICE CAN EPS LO	2	ENGINE HARNESS	2	CAN BUS LOW
89	ECM-B22			0.5		PEDAL POSITION SENSOR	C	ENGINE HARNESS	3	5V PEDAL SUPPLY 1
190	ECM-B35			0.5		PEDAL POSITION SENSOR	A	ENGINE HARNESS	5	PEDAL POSITION 1
191	ECM-B38			0.5	VT	PEDAL POSITION SENSOR	В	ENGINE HARNESS	7	PPS SENSOR RETURN 1
192	ECM-B23			0.5		PEDAL POSITION SENSOR	D	ENGINE HARNESS	4	5V PEDAL SUPPLY 2
193	ECM-B27			0.5		PEDAL POSITION SENSOR	E	ENGINE HARNESS	8	PPS SENSOR RETURN 2
194	ECM-B32	TWIST-2	TXL	0.5		PEDAL POSITION SENSOR	F	ENGINE HARNESS	6	PEDAL POSITION 2