上位机使用说明书

Upper Computer software User Manual

高压级联锂电池均衡保护板

High Voltage Cascaded Lithium Battery BMS Manual

适用高压级联BMS产品（继电器电流控制）

Applicable to high-voltage cascaded BMS products (relay current control

目录

一、软件下载SD(Software Downloading) 3
二、级联使用说明 4
1.首页说明：Home page description: 4
2.1、主要设置说明-Main Settings Descriptions以下主要针对选择TK(整个系统）时方可生效；The following primarily applies when TK (the entire system) is selected.is selected. 5
2.1.2、参数设置parameter setting 6
2.1.3、电池总串数修改Battery total string number modification 7
2.2单个管理单元电池串数修改Modification of battery string count in a single management unit 8

一、软件下载SD(Software Downloading)

扫描二维码，跳转至github下载页面，选择文件5.1/5.2任意一个下载至电脑，然后解压即可。

Scan the QR code to access the GitHub download page. Select either file 5.1 or 5.2 to download to your computer, then extract the files.high-voltage, high-cell-count energy storage systems.

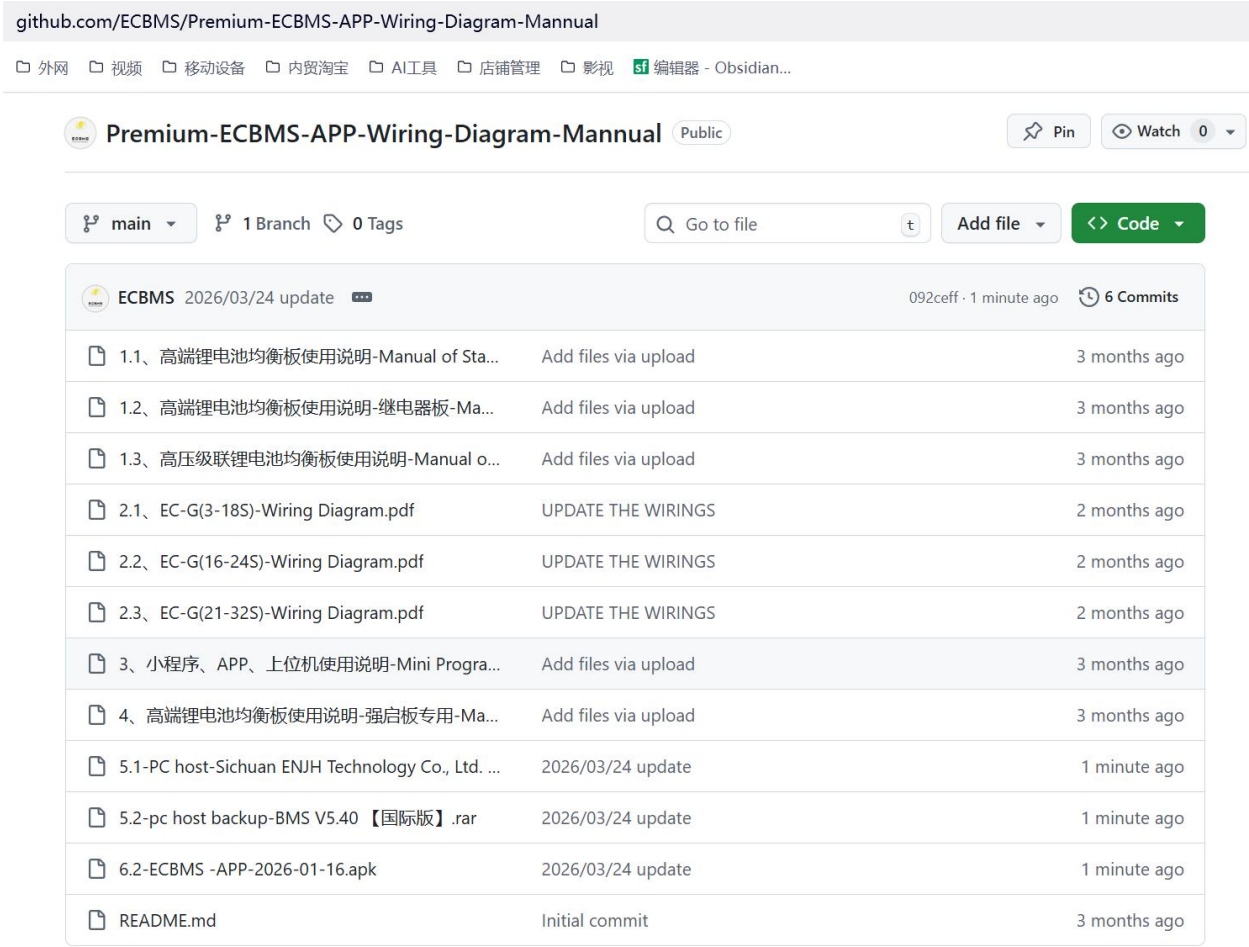

二、级联使用说明

1.首页说明：Home page description:

1.1.串口提前确认，并选择匹配的串口号；1.1. Confirm the serial port in advance and select the corresponding port number;

1.2.站地址默认为“1”，请勿改动；The default site address is "1". Do not change it.

1.3.点击默认“高压”，Click the default "High Voltage" setting.

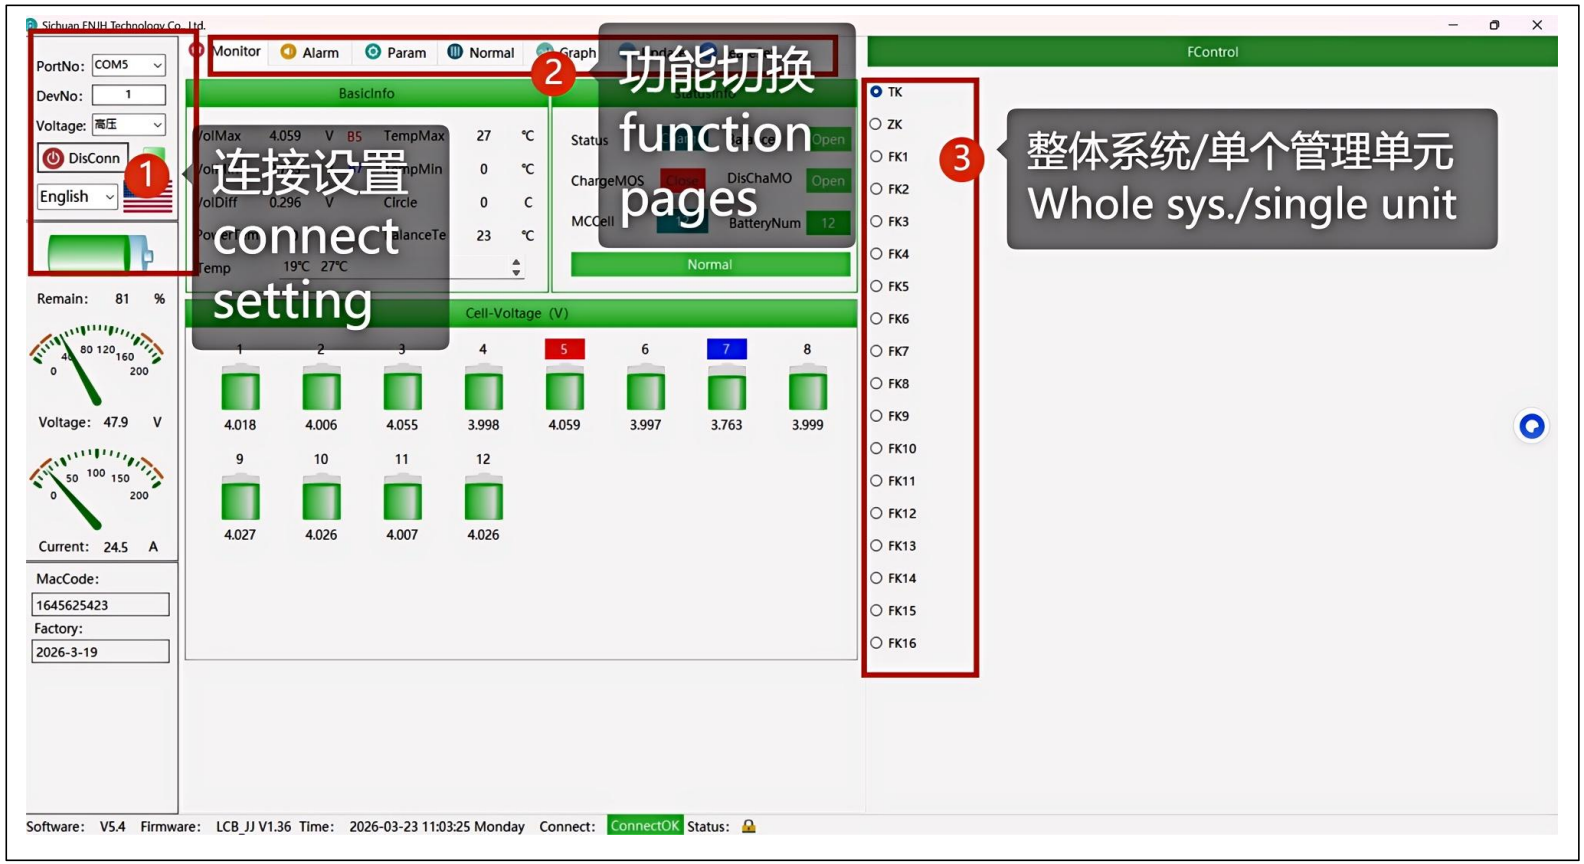

1.4.通过切换2区可实现不同功能模块的转换；通过3区可选择整体系统，主控机和分控机的设置、状态切换。By switching Zone 2, different functional modules can be converted; through Zone 3, the configuration and status switching of the entire system, master controller, and slave controllers can be selected.

2.1 、 主 要 设 置 说 明 -Main Settings Descriptions以下主要针对选择**TK(整个系统)**时方可生效；The following primarily applies when **TK (the entire system)** is selected.is selected.

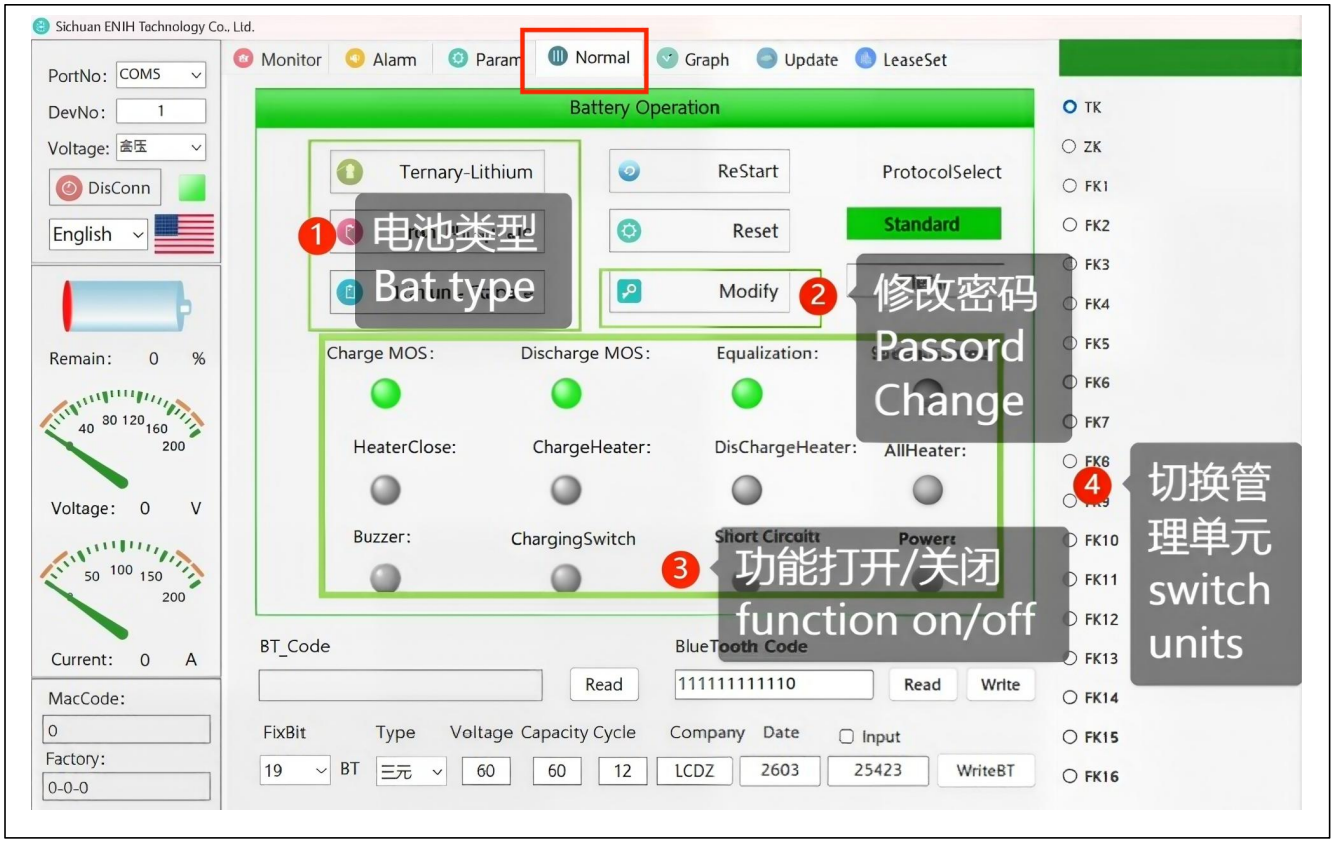

2.1.1.选择常规页面，通过1区可设置电池类型（三元锂/LFP/钛酸锂）；通过2区可以修改密码；通过3区可以实现充电放电MOS开启或关闭均衡启动或关闭，加热功能启动或关闭，蜂鸣器启动或关闭，短路启动或关闭等功能管理；For standard page settings, **Zone 1** allows configuration of battery type (ternary lithium/LFP/lithium titanate), **Zone 2** enables password modification, and **Zone 3** provides management functions including: MOS charging/discharging activation/deactivation, balancing startup/deactivation, heating function activation/deactivation, buzzer activation/deactivation, and short-circuit protection activation/deactivation.

2.1.2、参数设置parameter setting

选择参数页面，重点对黑色标注部分进行设置其中1区红色在选择TK时，请设置为电池组总串数2区为掉串电压保护，初始为800mv,推荐修改为1200mvOn the parameter selection page, focus on configuring the black-marked sections. For Zone 1 (red indicator): when selecting TK, set it to the total string count of the battery pack. Zone 2 is for string voltage protection, initially set at 800mV; it is recommended to adjust to 1200mV.

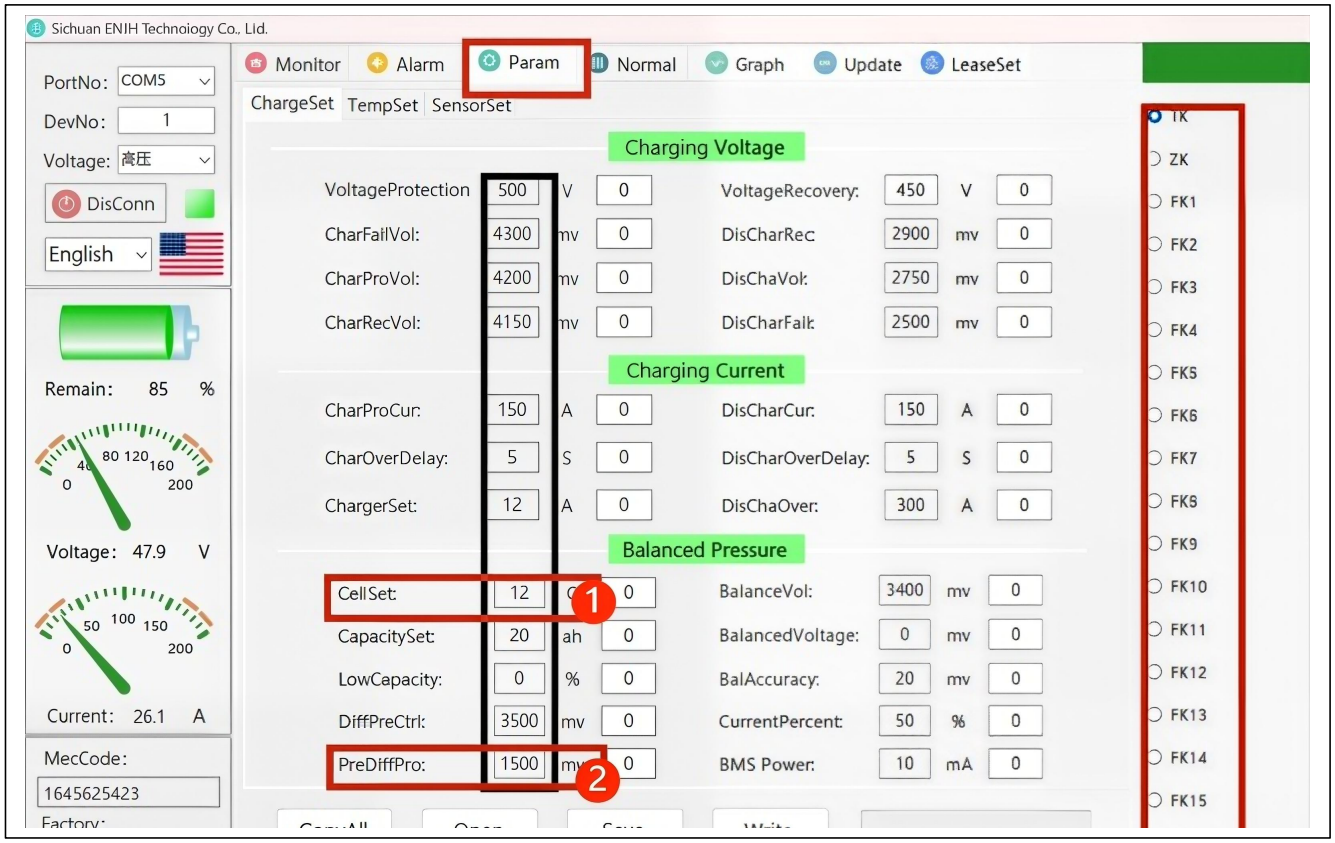

2.1.3、电池总串数修改Battery total string number modification

选择TK,切换到更新模块，在1区可进行电流校准和电池组总串数设置；

Select TK to access the update module, where current calibration and total string count configuration for battery packs can be performed in Zone 1.

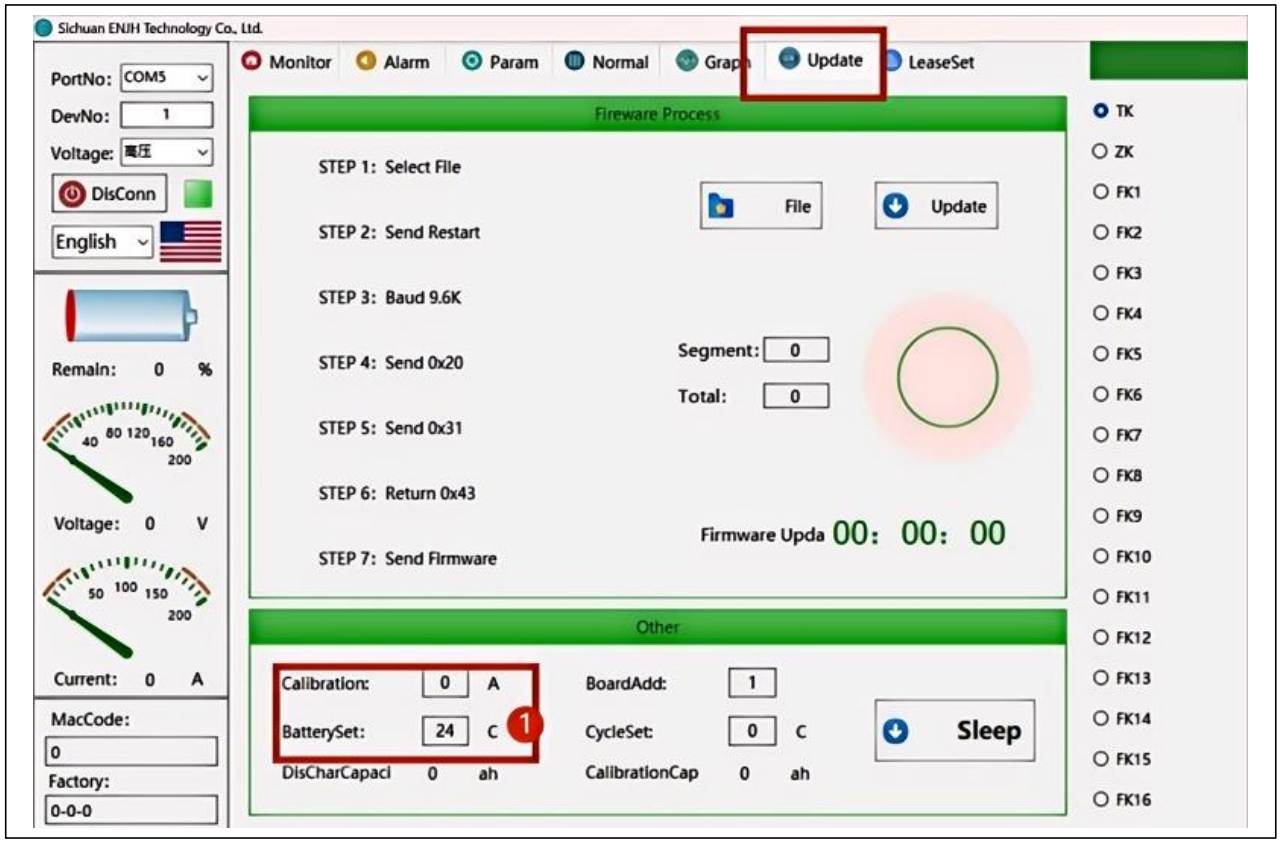

2.2单个管理单元电池串数修改Modification of battery string count in a single management unit
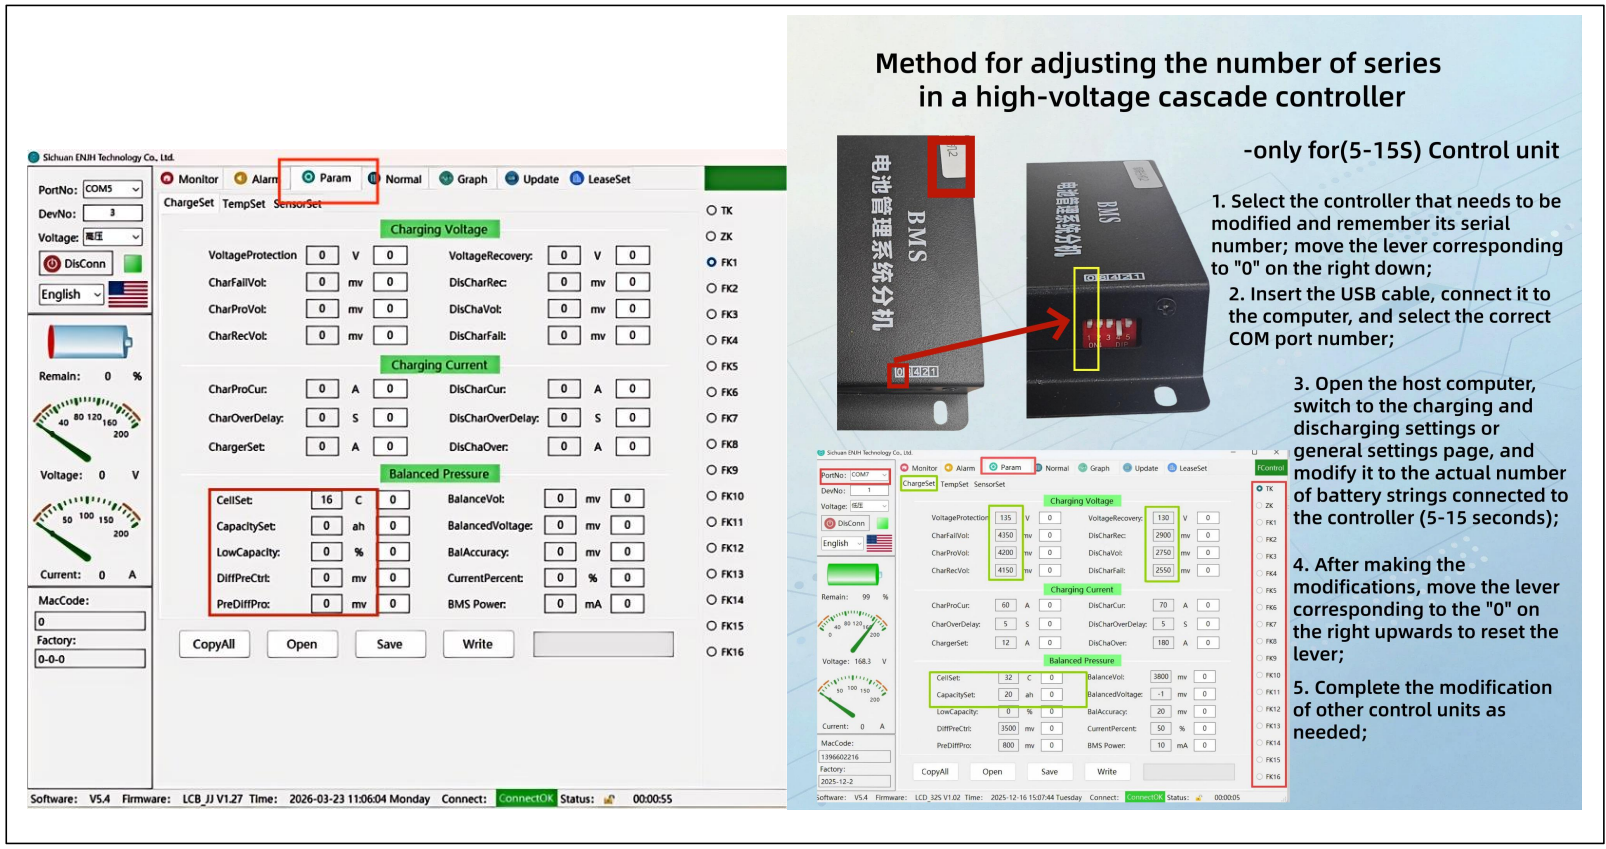
选择主控机（ZK）或者分控（FK）机，切换到参数页，修改该管理机的电池串数等，参照右侧具体操作流程；Select either the master controller (ZK) or the slave controller (FK) navigate to the parameter page, and modify settings such as the battery string count for this management unit, following the detailed operation steps on the right.