
DamnGlitchableWallet

Pinout

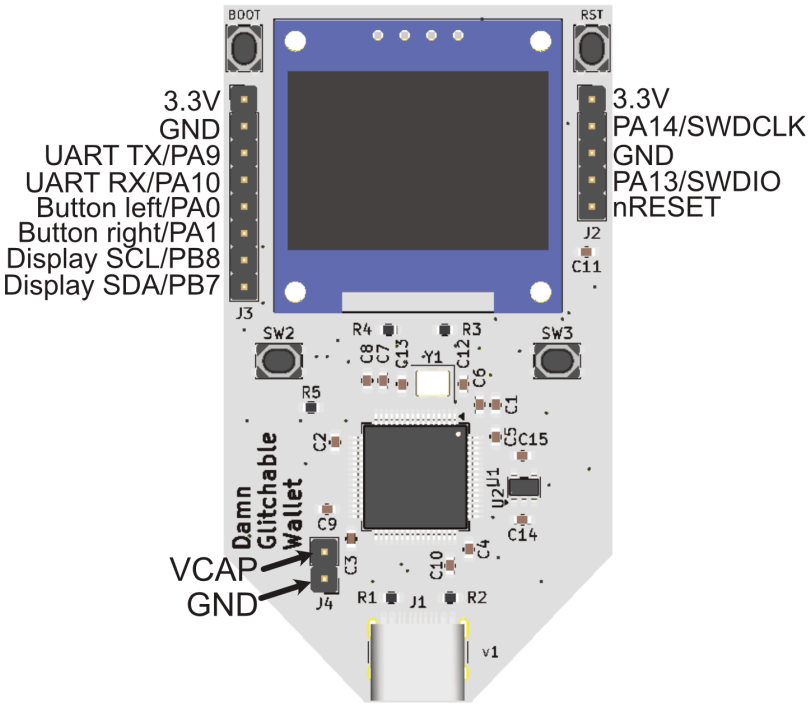

Hardware notes

Voltage-levels

All voltage-levels except VCAP are 3.3V.

DO NOT CONNECT 3.3V TO VCAP

Buttons

The buttons are *active low*: When ,pressed they are connected to ground. The button-signals are also exposed on the pin headers on the left.

VCAP

The VCAP signal is directly connected to the VCAP signal of the STM32. There is **no** overvoltage protection on this pin: Be very careful with what you connect here.

Reset

Reset is active low: Connecting it to ground will reset the target.

Bootloader

The device has the Trezor bootloader installed. Using trezorctl the firmware can be changed.

DO NOT OVERWRITE THE BOOTLOADER. IT'S NOT THE TARGET.

Note: Installing an unsigned firmware *will* erase the data stored on the device. If you need to restore challenge-data please visit us.