




ENGINE OVERHAUL

ENGINE REMOVAL

NOTE:

It is not necessary to remove the engine in order to remove the following parts.

- Cylinder/Cylinder head
- Piston/Piston rings
- Primary drive gear
- Kick axle
- Shift shaft
- Flywheel magneto assembly
- Clutch

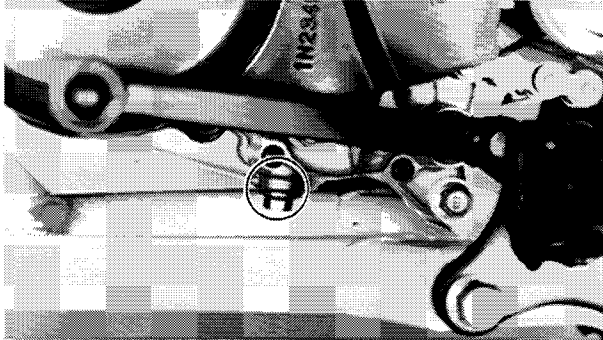

TRANSMISSION OIL

1. Drain:

- Transmission oil


Refer to "TRANSMISSION OIL REPLACEMENT" section in CHAPTER 3.

CARBURETOR

1. Remove:

- Carburetor

Refer to "CARBURETOR – REMOVAL" section in CHAPTER 5.

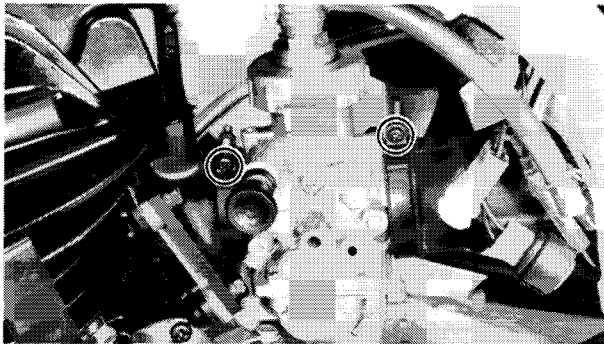

NOTE:


Cover the carburetor with a clean rag to prevent dirt or foreign matter into the carburetor.

REED VALVE

1. Remove:

- Carburetor joint
- Reed valve

Refer to "REED VALVE – REMOVAL" section in CHAPTER 5.

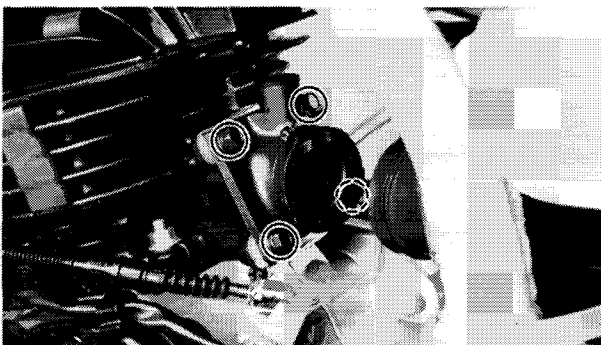

SEAT AND FUEL TANK

1. Remove:

- Seat ①

