




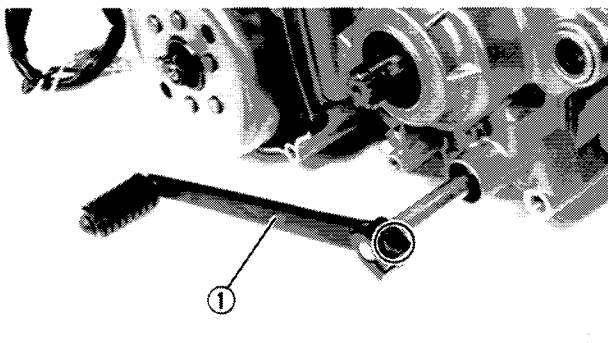

1. Remove:
 - Change pedal ①

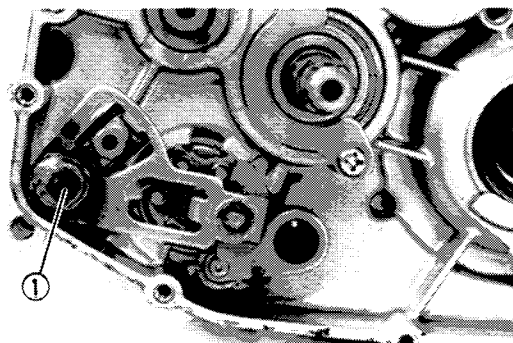

2. Remove:
 - Shift shaft ①
 - Spring

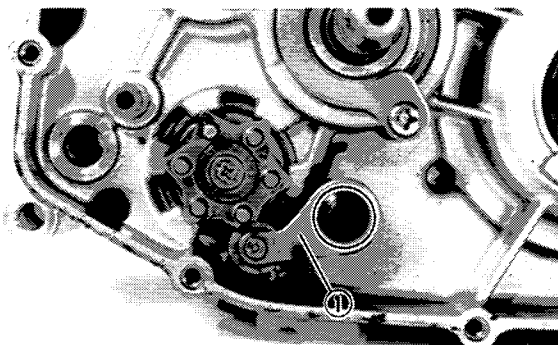

3. Remove:
 - Stopper lever ①
 - Spring


4

CDI MAGNETO

NOTE: _____

With the engine mounted, the CDI magneto can be maintained by removing the following parts.

- Crankcase cover (Left)

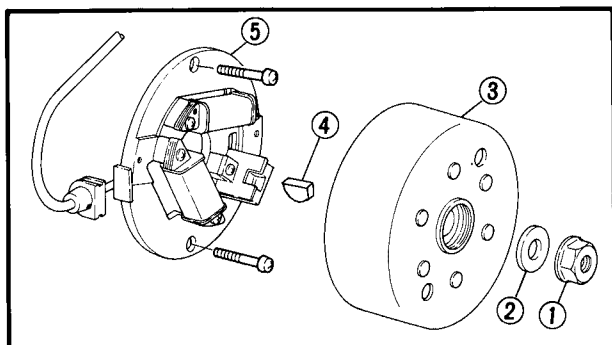

1. Remove:
 - Nut ①
 - Washer ②
 - Rotor ③
 - Key ④
 - Stator assembly ⑤