

**NOTE:**

- Hold the rotor by the Rotor Holder ① to loosen the nut ②.
- Remove the rotor by the Rotor Puller ③.

**Rotor Holder:**

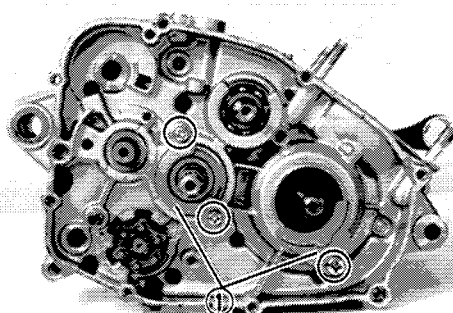
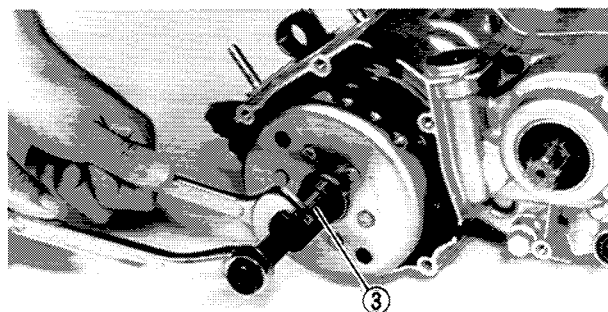
P/N YU-01235

P/N 90890-01235

Rotor Puller:

P/N YM-01189

P/N 90890-01189

**CRANKCASE (RIGHT)****1. Remove:**

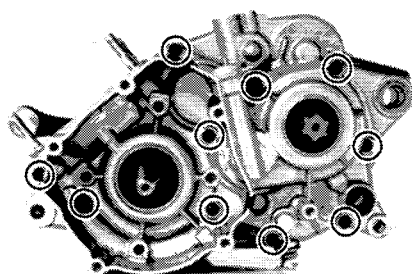
- Bearing stoppers ① (Main axle and crankshaft)

2. Remove:

- Bolts (Crankcase)

NOTE:

Loosen each screw 1/4 turn, and remove them after all are loosened.

**3. Remove:**

- Crankcase (Right)
- Dowel pins

Removal step:

- Turn the shift cam to the position shown in the figure so that it does not contact the crankcase.

