




- Attach the Crankcase Separating Tool ① .

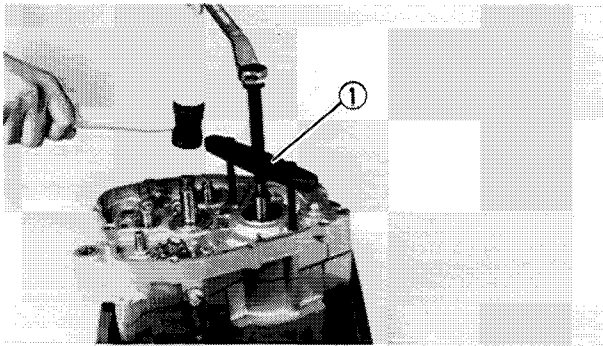

Crankcase Separating Tool:
P/N YU-01135
P/N 90890-01135


NOTE: _____
Fully tighten the tool holding bolts, but make sure the tool body is parallel with the case. If necessary, one screw may be backed out slightly to level tool body.

- As pressure is applied, alternately tap on the front engine mounting boss, transmission shafts, and shift cam.

⚠ CAUTION: _____

Use soft hammer to tap on the case half. Tap only on reinforced portions of case. Do not tap on gasket mating surface. Work slowly and carefully. Make sure the case halves separate evenly. If one end "hangs up", take pressure off the push screw, realign, and start over. If the cases do not separate, check for a remaining case screw or fitting. Do not force.

4

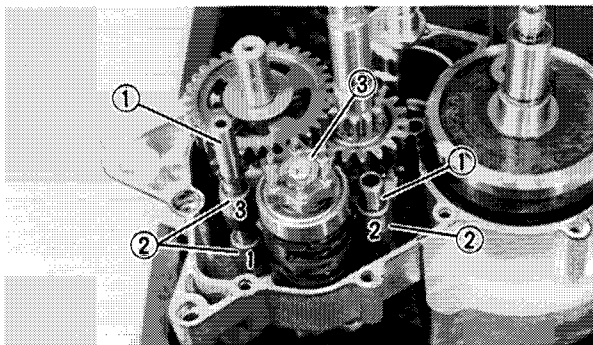

SHIFTER, TRANSMISSION AND BALANCER

1. Remove:

- Guide bars ①
- Shift forks ②
- Shift cam ③

NOTE: _____
Note the position of each part. Pay particular attention to the location and direction of shift forks.