




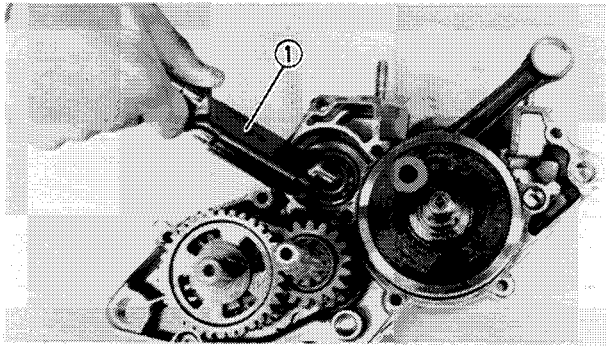

2. Remove:
 - Balancer weight ①

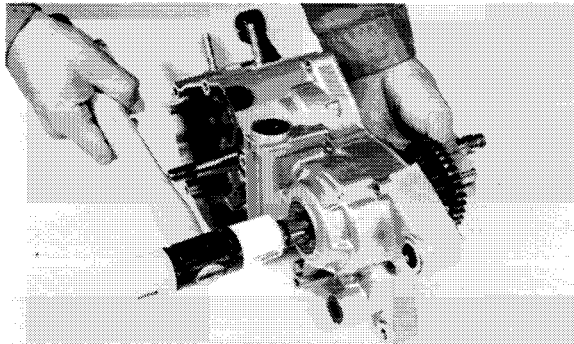


3. Remove:
 - Transmission assembly
Tap lightly on the transmission drive shaft with a soft hammer.

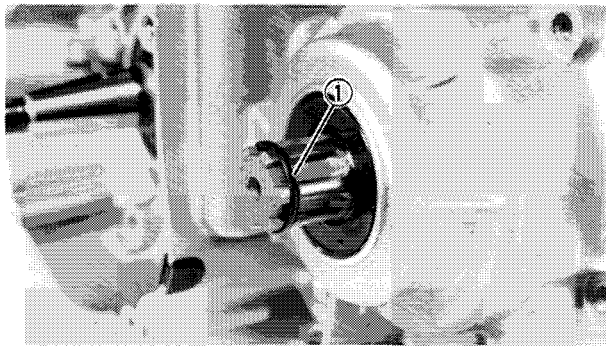

NOTE: _____
While removing the drive axle from the crankcase, pay careful attention to the oil seal lip. A recommended practice is to fit the O-ring ① and to apply grease over the fitted area.

4

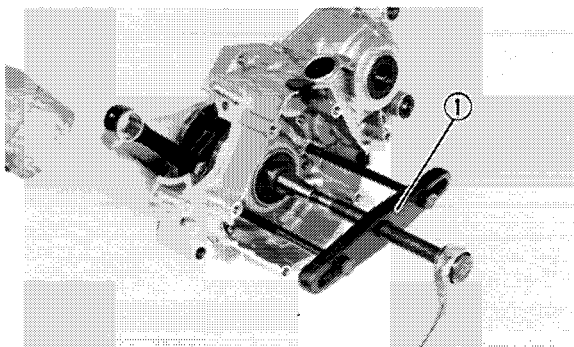

CRANKSHAFT

1. Remove:
 - Crankshaft

NOTE: _____
• Attach the Crankcase Separating Tool ① to remove the crankshaft.



Crankcase Separating Tool:
P/N YU-01135
P/N 90890-01135

- Fully tighten the tool holding bolts, but make sure the tool body is parallel with the case. If necessary, one screw may be backed out slightly to level tool body.