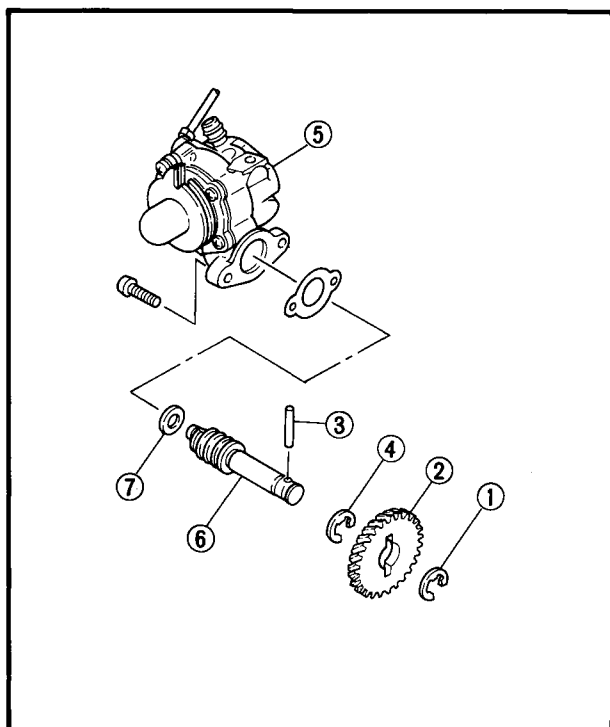
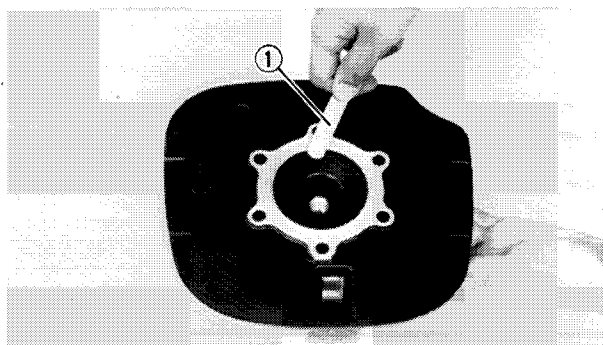


**AUTOLUBE PUMP**

1. Remove:

- Circlip ①
- Autolube pump gear ②
- Pin ③
- Circlip ④
- Autolube pump ⑤
- Drive shaft ⑥ (Autolube pump)
- Washer ⑦

4


**INSPECTION AND REPAIR****CYLINDER HEAD**

1. Eliminate:

- Carbon deposits
- Use a rounded scraper ①.

NOTE:

Take care to avoid damaging the spark plug threads. Do not use a sharp instrument. Avoid scratching the aluminum.

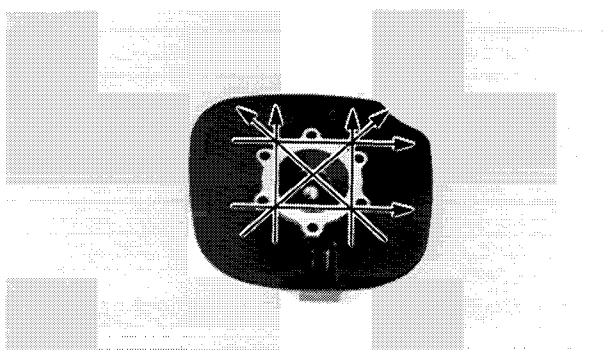


2. Measure:

- Cylinder head warpage
- Out of specification → Resurface.



Warpage Limit:
0.03 mm (0.0012 in)

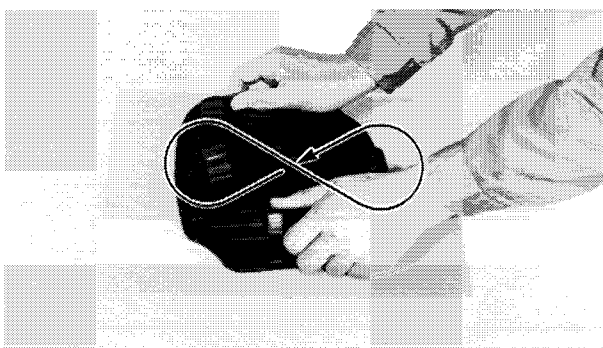**Warpage measurement and resurfacement steps:**

- Attach a straight edge and a thickness gauge on the cylinder head.
- Measure the warpage.
- If the warpage is out of specification, resurface the cylinder head.