



6. Measure:

- Piston-to-cylinder clearance



Piston-to-cylinder clearance measurement steps:

First step:

- Measure the cylinder bore "C" with a Cylinder Bore Gauge.

NOTE:

Measure the cylinder bore "C" in parallel to and at right angles to the crankshaft. Then, find the average of the measurements.

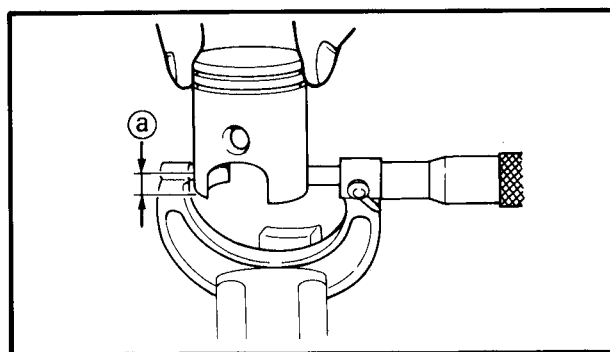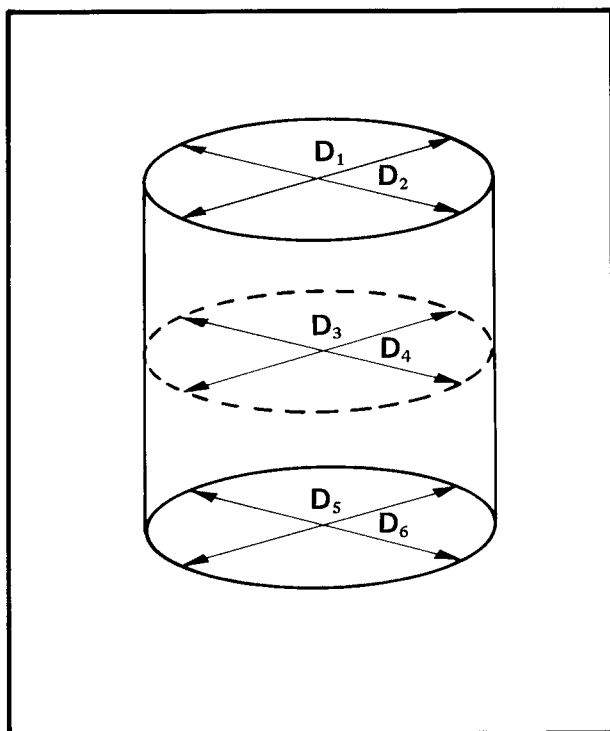

	Standard	Wear Limit
Cylinder Bore "C"	66.00 ~ 66.02 mm (2.598 ~ 2.599 in)	66.1 mm (2.602 in)
Taper "T"	—	0.08 mm (0.003 in)
Out of Round "R"	—	0.05 mm (0.002 in)

C = Maximum D

T = (Maximum D₁ or D₂) –
(Minimum D₅ or D₆)

R = (Maximum D₁, D₃ or D₅) –
(Minimum D₂, D₄ or D₆)

- If out of specification, rebore or replace cylinder, and replace piston and piston rings as a set.

2nd step:

- Measure the piston skirt diameter "P" with a micrometer.

Ⓐ 10.0 mm (0.39 in) from the piston bottom edge.

	Piston Size P
Standard	65.965 ~ 66.000 mm (2.597 ~ 2.598 in)
Oversize 1	66.25 mm (2.608 in)
Oversize 2	66.50 mm (2.618 in)

- If out of specification, replace piston and piston rings as a set.