



3rd step:



- Calculate the piston-to-cylinder clearance with following formula:

$$\text{Piston-to-cylinder Clearance} = \text{Cylinder Bore "C"} - \text{Piston Skirt Diameter "P"}$$

- If out of specification, rebore or replace cylinder, and replace piston and piston rings as a set.



Piston-to-cylinder Clearance:
 0.035 ~ 0.040 mm
 (0.0014 ~ 0.0016 in)
 Limit: 0.1 mm (0.004 in)

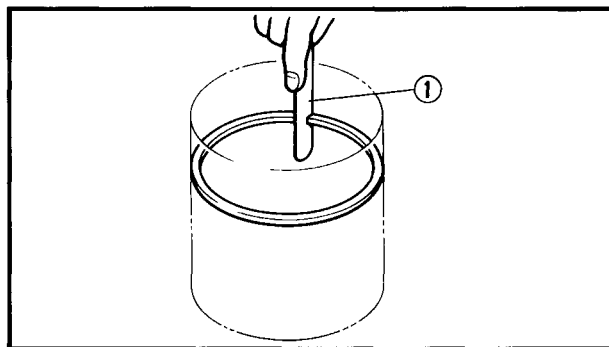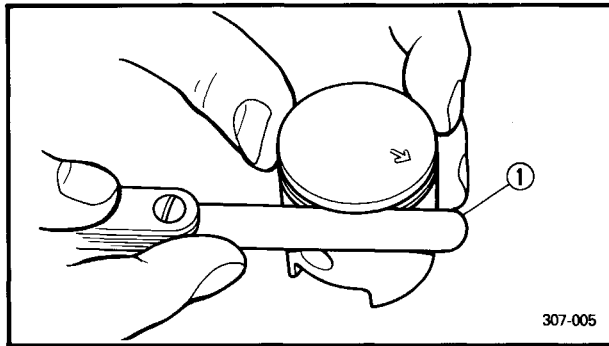

PISTON RINGS

1. Measure:

- Side clearance
 Out of specification → Replace piston and/or rings.
 Use a Feeler Gauge ① .



Side Clearance

Top	0.03 ~ 0.05 mm (0.0012 ~ 0.0020 in)
2nd	0.03 ~ 0.05 mm (0.0012 ~ 0.0020 in)

2. Install:

- Piston ring
 (Into the cylinder)
 Push the ring with the piston crown.

3. Measure:

- End gap
 Out of specification → Replace rings as a set.
 Use a Feeler Gauge ① .



End Gap

Top	0.20 ~ 0.35 mm (0.008 ~ 0.014 in)
2nd	0.20 ~ 0.35 mm (0.008 ~ 0.014 in)