

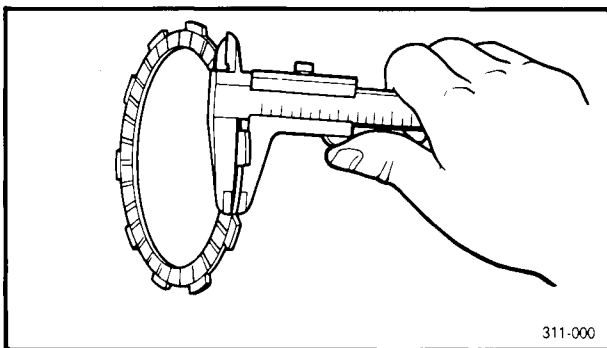


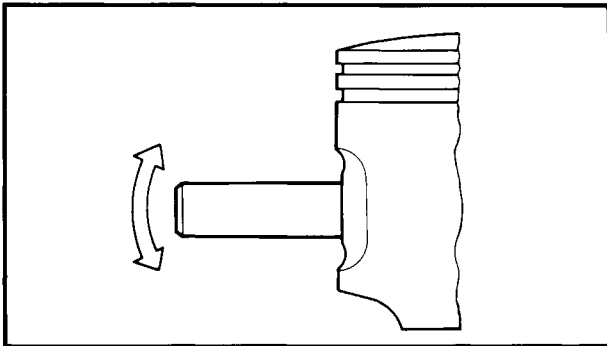

PISTON PIN AND BEARING

1. Lubricate:
 - 2 cycle oil (Lightly)
 - (To the piston pin and bearing)
2. Install:
 - Small end bearing
 - Piston pin
 - (Into the small end of connecting rod)

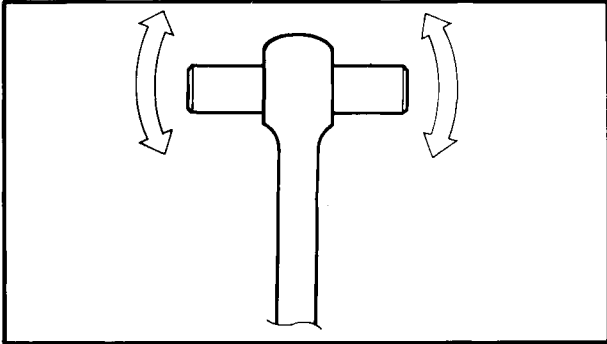

3. Check:
 - Free play
 - There should be no noticeable for the play.
 - Free play exists → Inspect the connecting rod for wear/Replace the pin and/or connecting rod as required.
4. Install:
 - Piston pin
 - (Into the piston pin hole).
5. Check:
 - Free play (When the piston pin is in place in the piston)
 - There should be no noticeable for the play.
 - Free play exists → Replace piston pin and/or piston.
6. Inspect:
 - Piston pin and bearing
 - Signs of heat discoloration → Replace.

CLUTCH

1. Inspect:
 - Friction plate
 - Damage/Wear → Replace friction plate as a set.
2. Measure:
 - Friction plate thickness
 - Out of specification → Replace friction plate as a set.
 - Measure at all four point.



Wear Limit: 2.8 mm (0.11 in)