


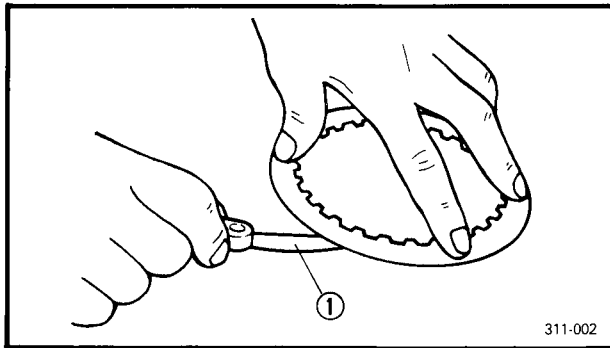

3. Inspect:

- Clutch plate

Damage → Replace clutch plate as a set.

4. Measure:


- Clutch plate warpage

Out of specification → Replace clutch plate as a set.

Use a surface plate and Feeler Gauge ① .



Warp Limit: 0.05 mm (0.002 in)

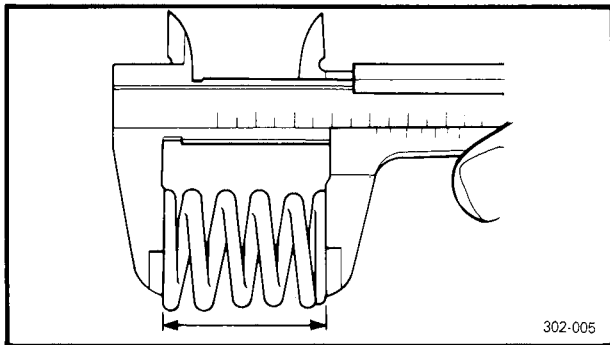

5. Measure:


- Clutch spring free length

Out of specification → Replace spring as a set.



**Clutch Spring Minimum Length:
30.0 mm (1.18 in)**

4

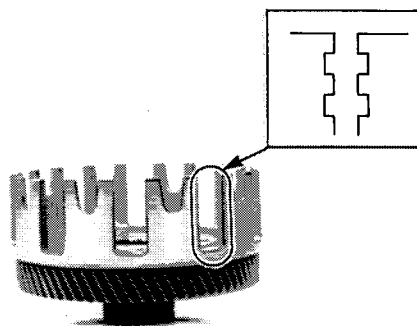

6. Inspect:

- Dogs on the clutch housing


Cracks/Wear/Damage → Deburr or replace.

- Clutch housing bearing

Scoring/Wear/Damage → Replace clutch housing.

NOTE:

Scoring on the clutch housing dogs will cause erratic operation.

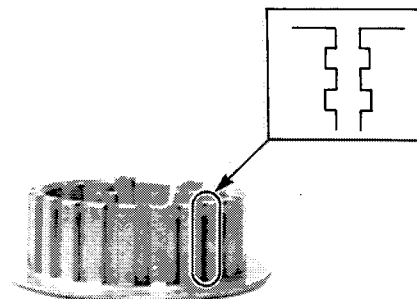

7. Inspect:

- Clutch boss splines

Scoring/Wear/Damage → Replace clutch boss.

NOTE:

Scoring on the clutch boss splines will cause erratic operation.