



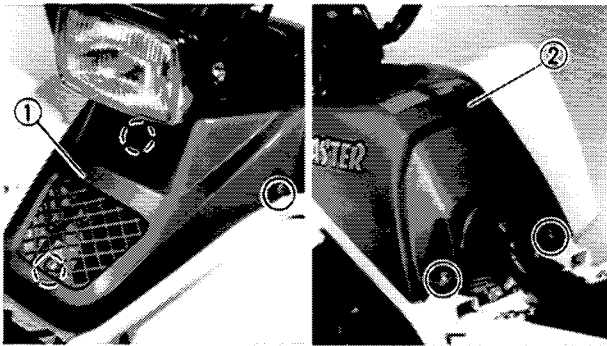

2. Remove:


- Fuel tank cover ① (Front)
- Fuel tank cover ② (Rear)
- Fuel tank cover (Inner)

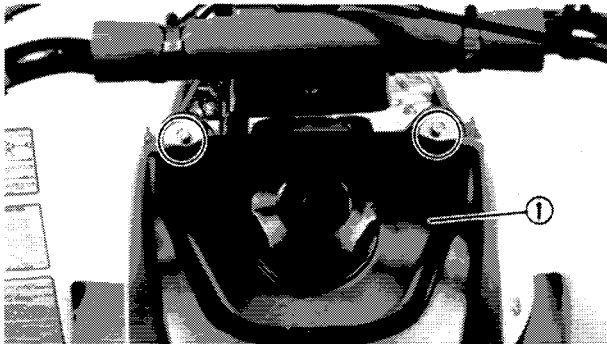

3. Remove:

- Fuel tank ①

4

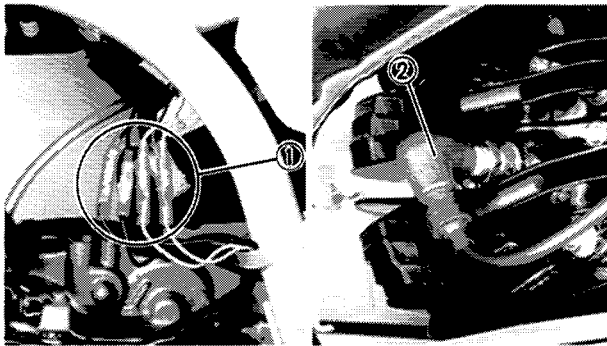

LEAD


1. Disconnect:

- C.D.I. magneto leads ①
- Spark plug lead ②

CABLE

1. Disconnect:

- Clutch cable
- From clutch lever.

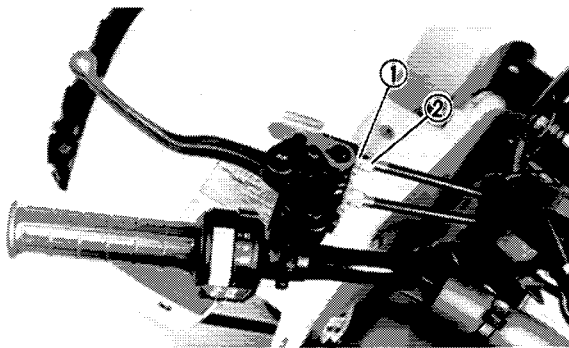

Removal step:

- Loosen the lock nut ① .
- Turn in the adjuster ② .
- Grip the lever and pull the cable out as you release the lever.

