




8. Check:

- Circumferential play
- Free play exists → Replace.

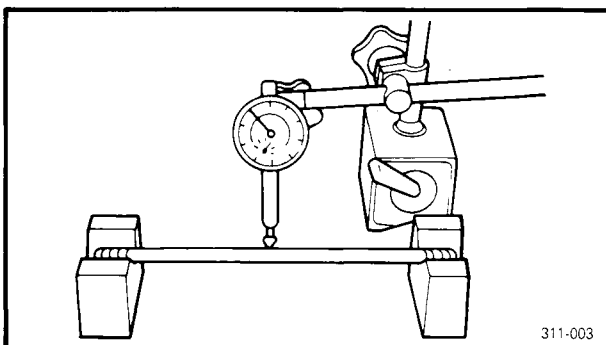


9. Measure:

- Push rod runout (Long rod)
- Out of specification → Replace.
Use the V-Blocks and Dial Gauge.




Runout Limit:
0.30 mm (0.012 in)

4

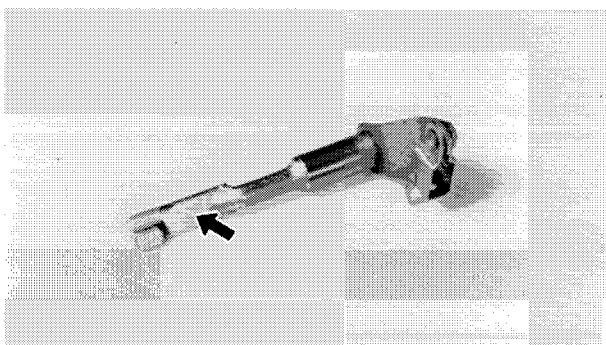

10. Inspect:


- Push lever
- Wear/Damage → Repair using 300 ~ 400 grit sand paper or replace.

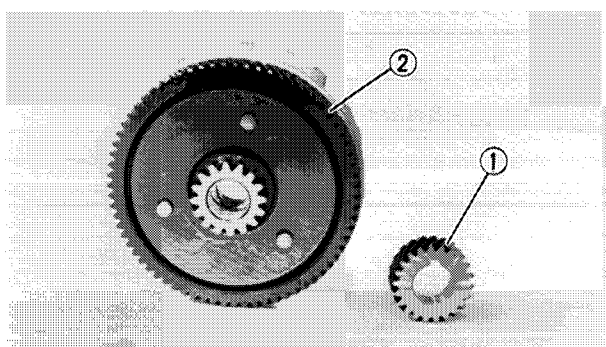

PRIMARY DRIVE

1. Inspect:

- Primary drive gear teeth ①
 - Primary driven gear teeth ②
- Wear/Damage → Replace both gears.
Excessive noises during operation → Replace both gears.

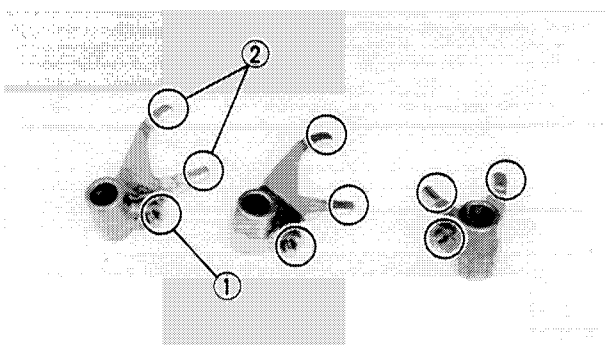

TRANSMISSION AND SHIFTER

1. Inspect:

- Shift fork cam follower ①
 - Shift fork pawl ②
- Scoring/Bends/Wear → Replace.