



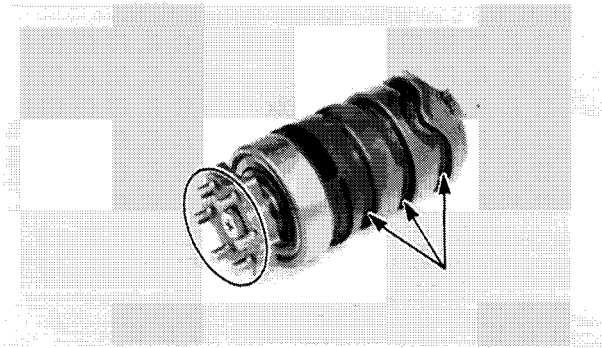


2. Inspect:

- Shift cam groove
 - Shift cam segment
- Wear/Damage → Replace.

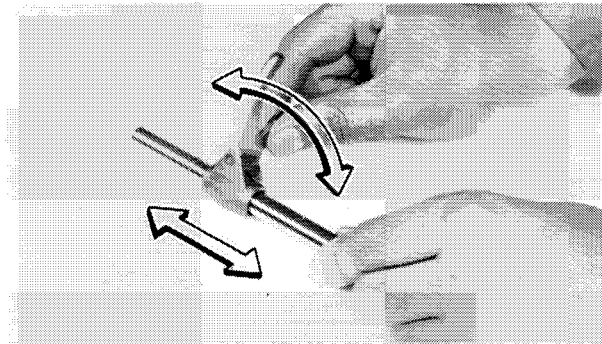

3. Check:

- Shift fork movement
- Unsmooth operation → Replace shift fork and/or guide bar.

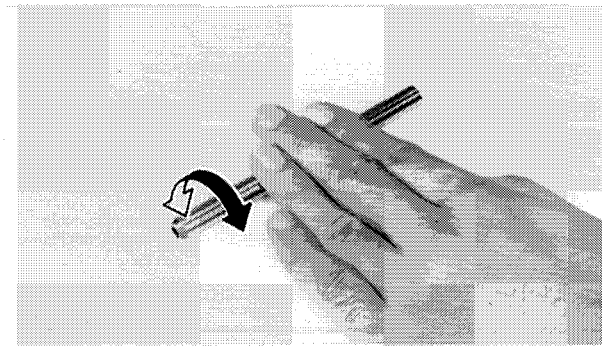

4. Inspect:

- Guide bar
- Roll the guide bar on a flat surface.
Bends → Replace.

 WARNING:

Do not attempt to straighten a bent guide bar.

5. Measure:

- Axle runout
- Use centering device and dial gauge.
Out of specification → Replace bent axle.



Runout Limit:
0.08 mm (0.003 in)

6. Inspect:

- Gear teeth
- Blue discoloration/Pitting/Wear → Replace.
- Mated dogs
- Rounded edges/Cracks/Missing portions → Replace.