





7. Check:

- Proper gear engagement (Each gear)
(To its counter part)
Incorrect → Reassemble.
- Gear movement
Roughness → Replace.

8. Inspect:

- Circlips
Damage/Looseness/Bends → Replace.

4

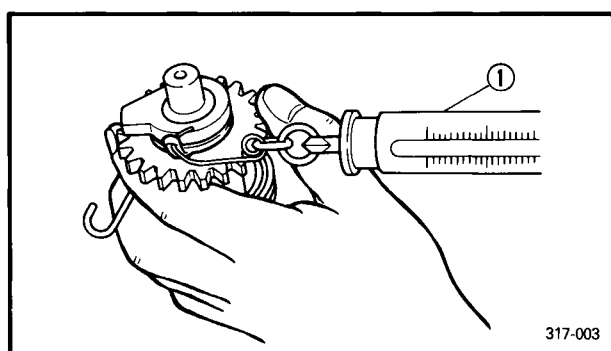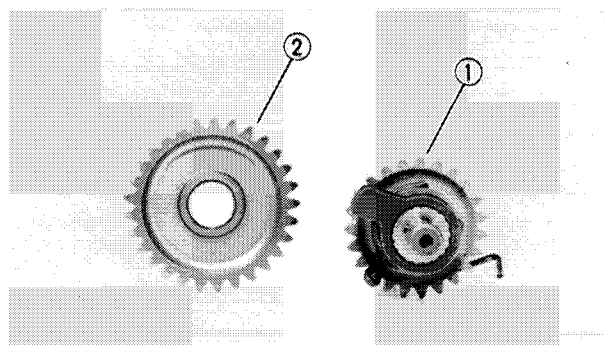

KICK STARTER

1. Inspect:

- Kick gear teeth ①
- Kick idle gear teeth ②
Damage/Wear → Replace both gears.

2. Measure:

- Kick clip tension
Out of specification → Replace.
Use a spring balance ① .

Kick Clip Tension:
0.8 ~ 1.2 kg (1.8 ~ 2.6 lb)

CAUTION:

Do not try to bend the clip.