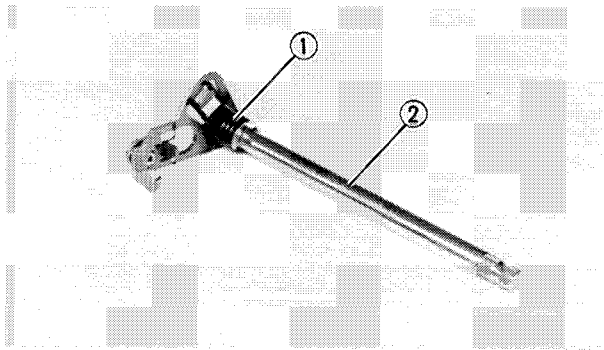


**SHIFT SHAFT**

1. Inspect:

- Spring ①
Damage → Replace.
- Shift shaft ②
Damage/Bends/Wear → Replace.

AUTOLUBE PUMP

Wear or an internal malfunction may cause pump output to vary from the factory setting. This situation is, however, extremely rare. If improper output is suspected, inspect the following:

1. Inspect:

- Delivery line
Obstructions → Blow out.
- Pump body seal/Crankcase cover seal
Wear/Damage → Replace.
- Check ball/Spring
Miss/Improper → Repair.

2. Inspect:

- Allowing air
Air exists → Air bleed.


3. Check:

- Pump output
Out of specification → Adjust.

Output at 200 Stroke:

3.47 ~ 4.23 cm³ (0.122 ~ 0.149 Imp oz,
0.117 ~ 0.143 US oz)

4

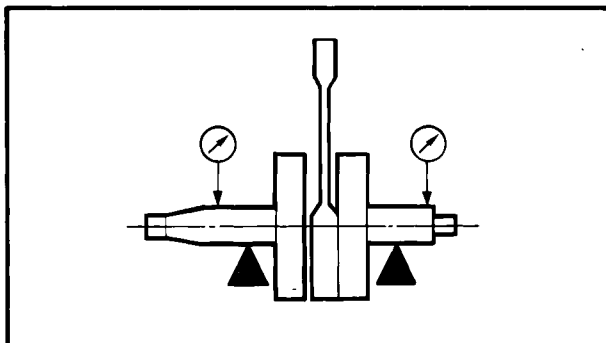**CRANKSHAFT**

1. Measure:

- Runout
Use a centering device and Dial Gauge.
Out of specification → Replace or repair.

**Runout Limit:**

0.03 mm (0.0012 in)