


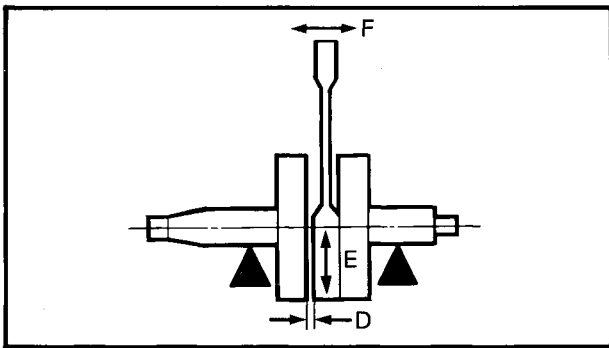

2. Measure:

- Small end free play "F"

Use a Dial Gauge.

Out of specification → Replace the defective parts.

**Small End Free Play:**

0.8 ~ 1.0 mm (0.031 ~ 0.039 in)

3. Measure:

- Big end side clearance "D"

Use a Feeler Gauge.

Out of specification → Replace the defective parts.

**Big End Side Clearance:**

0.4 ~ 0.7 mm (0.016 ~ 0.028 in)

4. Measure:

- Big end radial clearance "E"

Use a Dial Gauge.

Out of specification → Replace the defective parts.

**Big End Radial Clearance:**

0.021 ~ 0.035 mm
(0.0008 ~ 0.0014 in)

5. Inspect:

- Crankshaft bearing

Pitting/Damage → Replace.

NOTE:

Lubricate the bearing immediately after examining them to prevent rust.

6. Inspect:

- Oil seals

Wear/Damage → Replace.