


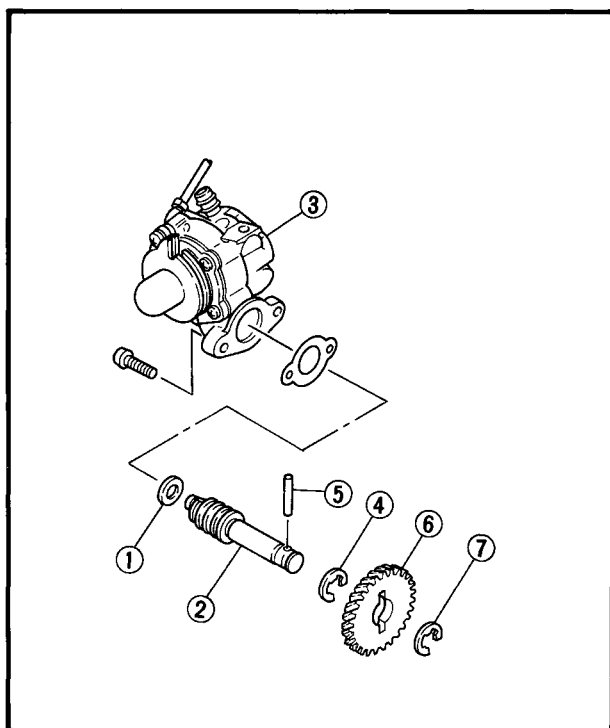

ENGINE ASSEMBLY AND ADJUSTMENT

AUTOLUBE PUMP

1. Install:


- Washer ①
- Drive shaft ② (Autolube pump)
- Autolube pump ③
- Circlip ④
- Pin ⑤
- Autolube pump gear ⑥
- Circlip ⑦

4

CARANKSHAFT

⚠ CAUTION:

To protect the crankshaft against scratches or to facilitate the operation of the installation. Apply the grease to the oil seal lips, and apply the engine oil to each hearing.

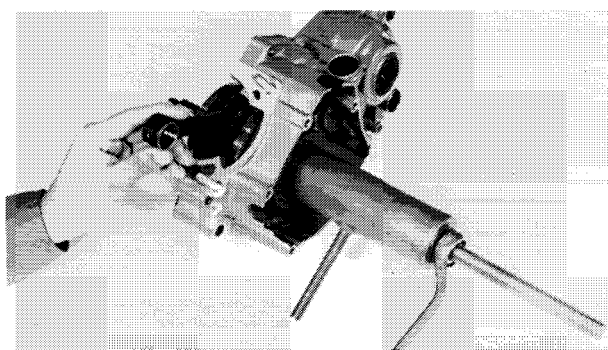

1. Install:

- Crankshaft

NOTE:

- Attach the Crankshaft Installing Tool to install the crankshaft.



Crankshaft Installing Tool:

P/N YU-90050
P/N YM-1383

P/N 90890-01274
P/N 90890-01275
P/N 90890-01278

- Hold the connecting rod at top dead center with one hand while turning the nut of the Installing Tool with the other. Operate the Installing Tool until the crankshaft bottoms against the bearing.