




BALANCER, TRANSMISSION AND SHIFTER


1. Install:

- Balancer weight ①

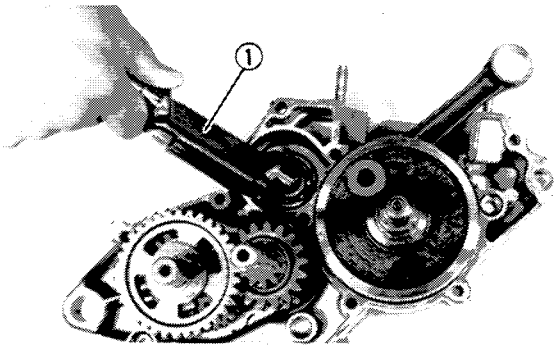

2. Install:

- Transmission assembly

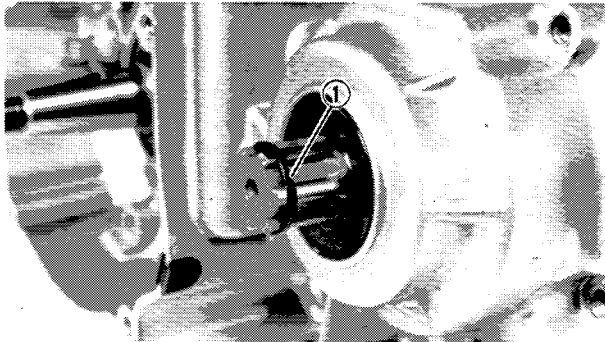
**NOTE:**

While installing the drive axle into the crankcase, pay careful attention to the oil seal lip.

A recommended practice is to fit the O-ring ① and apply grease over the fitted area.


3. Check:

- Transmission operation
Unsmooth operation → Repair.

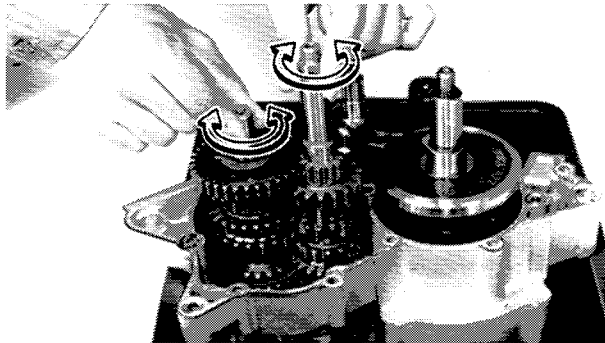

4. Install:

- Shift cam ①
- Shift forks ②
- Guide bars ③

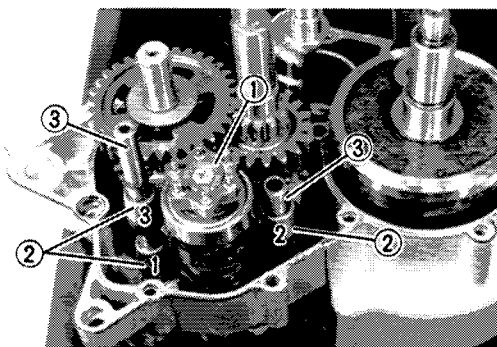**NOTE:**

Each shift forks is identified by a number cast on its side. All the numbers should face the left side.

5. Check:

- Shifter operation
Unsmooth operation → Repair.

