



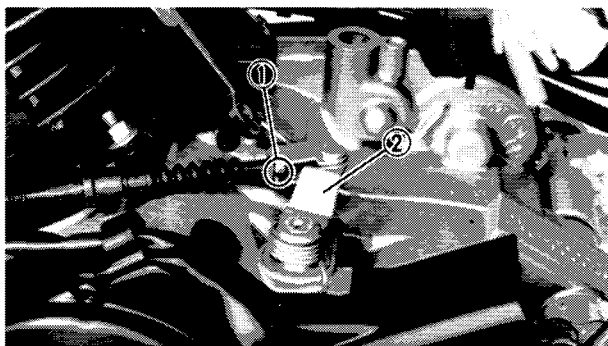

2. Disconnect:


- Cable end ① (Clutch cable)
- From push lever ②.

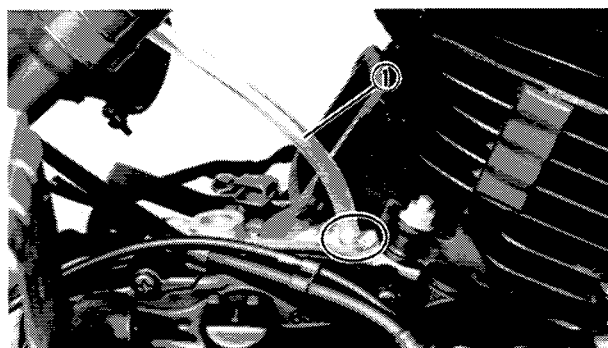

HOSE


1. Disconnect:

- Ventilation hose ①

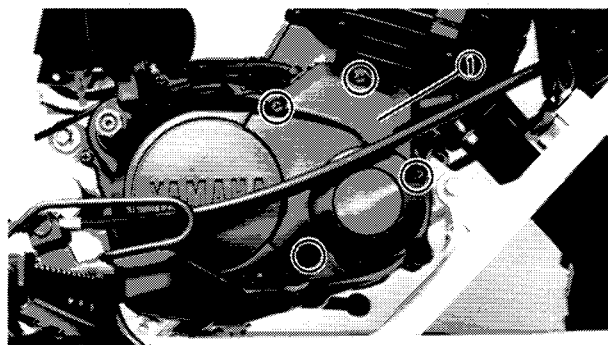

2. Remove:

- Cover ① (Autolube pump)

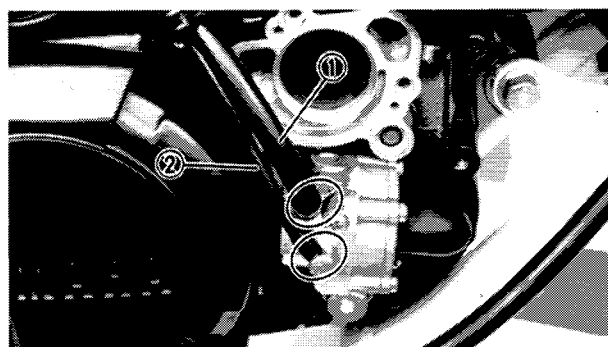


3. Disconnect:

- Oil hose ①
- Oil delivery hose ②

NOTE:

Plug the oil pipe so the oil will not run out of the oil tank.

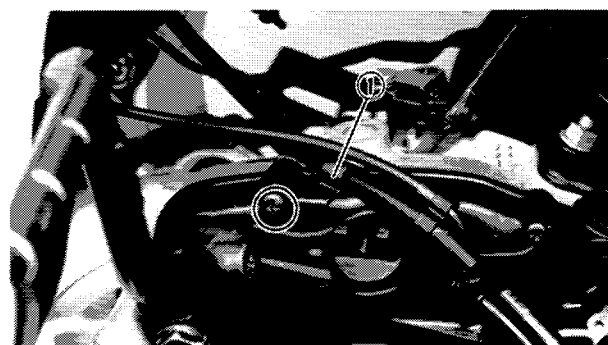

4. Remove:

- Clamp (Oil hose) ①