


**CRANKCASE (RIGHT)**

1. Apply:

- Sealant (Quick Gasket®)

To the mating surfaces of both crankcase halves.

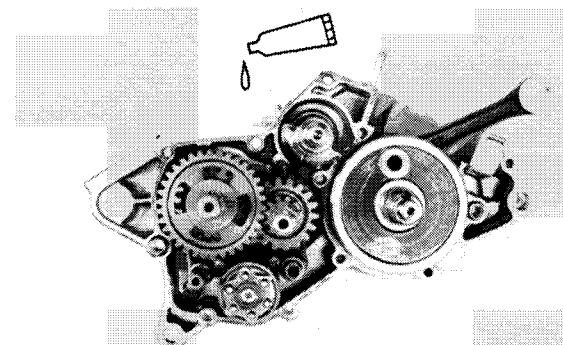

Sealant (Quick Gasket®):

P/N ACC-11001-05-01

Yamaha Bond No. 4:

P/N 90890-05143

2. Install:

- Dowel pins

3. Install:

- Crankcase (Right)

Installation step:

- Apply the lithium soap base grease to the oil seal lips.
- Fit the left crankcase onto the right case. Tap lightly on the case with a soft hammer.

NOTE:

Turn the shift cam to the position shown in the figure so that it does not contact the crankcase when installing the crankcase.

- Tighten the bolts (Crankcase).

CAUTION:

Before installing and torquing the bolts (Crankcase) be sure to check whether the transmission is functioning properly by manually rotating the shift cam either way.

NOTE:

Tighten the bolts (Crankcase) in stage, using a crisscross pattern.



Bolts (Crankcase):

10 Nm (1.0 m·kg, 7.2 ft·lb)

