




- Install the Bearing stoppers.

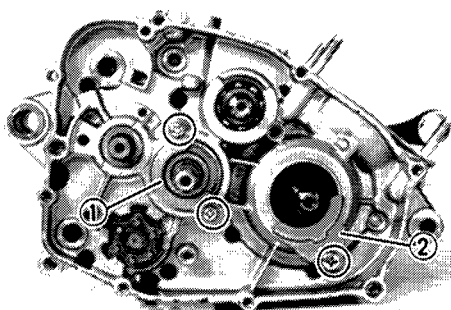

Screws (Bearing Stopper ① – Main Axle):

10 Nm (1.0 m·kg, 7.2 ft·lb)

Screw (Bearing Stopper ② – Crankshaft):

16 Nm (1.6 m·kg, 12 ft·lb)

Apply LOCTITE®

4. Apply:


- 2-stroke oil

To the crank pin, bearing and oil delivery hole.

5. Check:

- Crankshaft and transmission operation

Unsmooth operation → Repair.

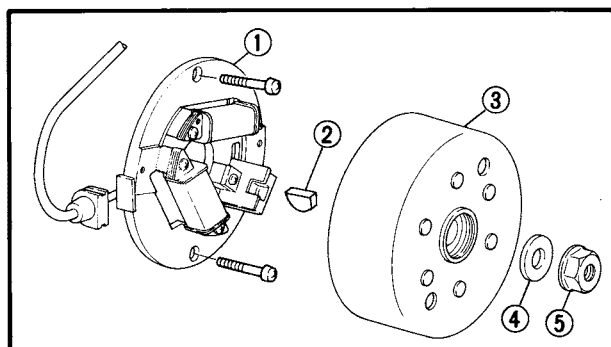

CDI MAGNETO

1. Install:

- Stator assembly ①
- Key ②
- Rotor ③
- Washer ④
- Nut ⑤



Screws (Stator Assembly):

8 Nm (0.8 m·kg, 5.8 ft·lb)

Use LOCTITE®

NOTE:

- When installing the CDI magneto, make sure the key is properly seated in the key way of the crankshaft. Apply a light coating of lithium soap base grease to the tapered portion of the crankshaft end.
- Hold the rotor by the Rotor Holder ① to tighten the nut ②.



Rotor Holder:

P/N YU-01235

P/N 90890-01235



Nut (Rotor):

73 Nm (7.3 m·kg, 53 ft·lb)

