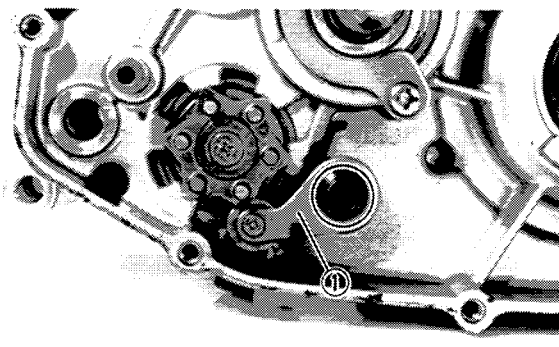


**STOPPER LEVER AND SHIFT SHAFT**


1. Install:

- Spring
- Stopper lever ①

2. Set the stopper lever and torsion spring as properly position.


**Bolt (Stopper Lever):**

14 Nm (1.4 m·kg, 10 ft·lb)
Apply LOCTITE®

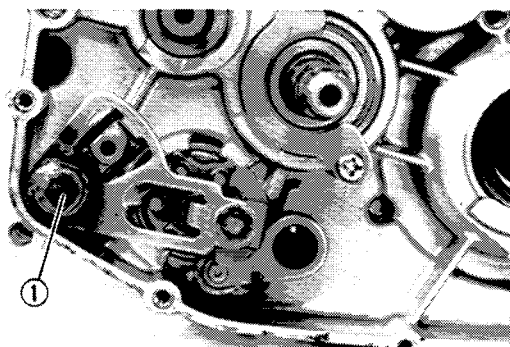

3. Install:

- Spring
- Shift shaft ①

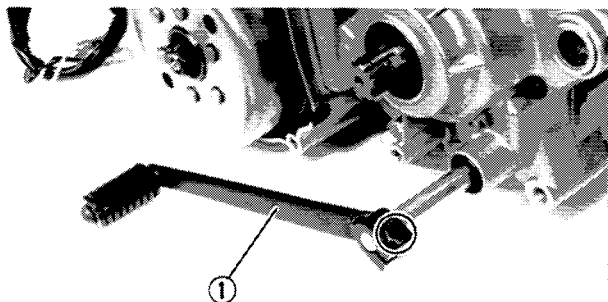


4. Install:

- Change pedal ①

5. Check:

- Change operation
- Unsmooth operation → Repair.

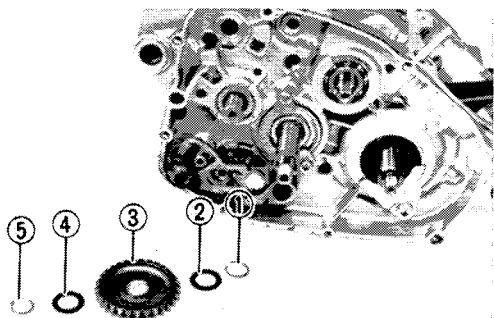**KICK AXLE**

1. Install:

- Circlip ①
- Plain washer ②
- Kick idle gear ③
- Plain washer ④
- Circlip ⑤