


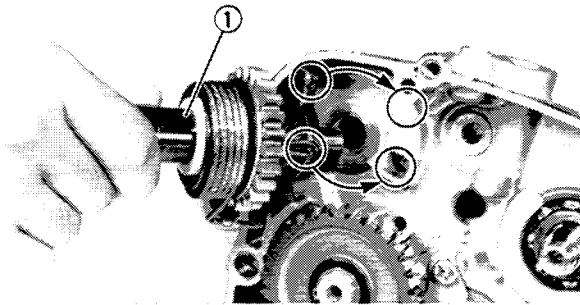


2. Install:

- Kick axle assembly ①
- Rotate the shaft clockwise.

NOTE:

- Make sure that the kick stopper is stopped at the projection of the crankcase.
- Make sure that the spring is engaged with the crankcase hole.

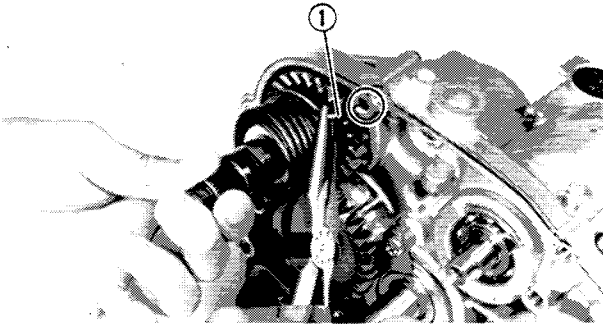


3. Set the kick spring ① to the spring hook.

4. Check:

- Kick axle operation
- Unsmooth operation → Repair.


4

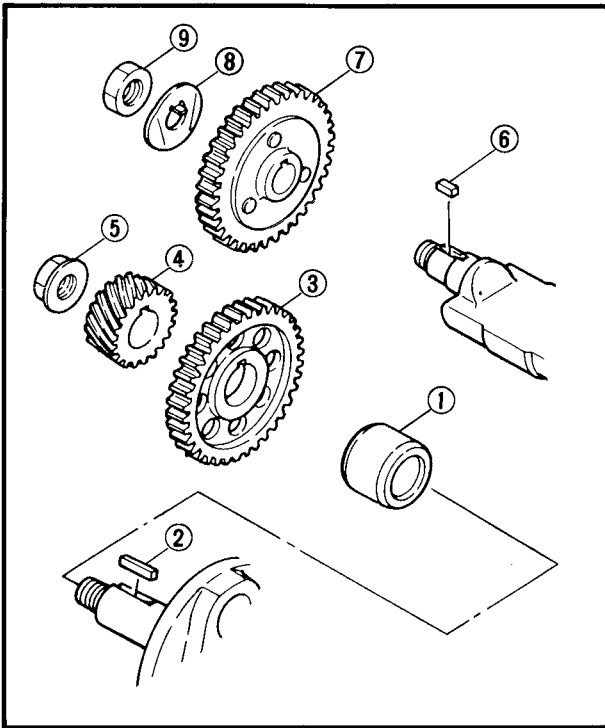

PRIMARY DRIVE GEAR AND BALANCER GEAR

1. Install:

- Collar ①
- Key ②
- Balancer drive gear ③
- Primary drive gear ④
- Nut ⑤ (Primary drive gear)
- Key ⑥
- Balancer gear ⑦
- Lock washer ⑧
- Nut ⑨ (Balancer gear)

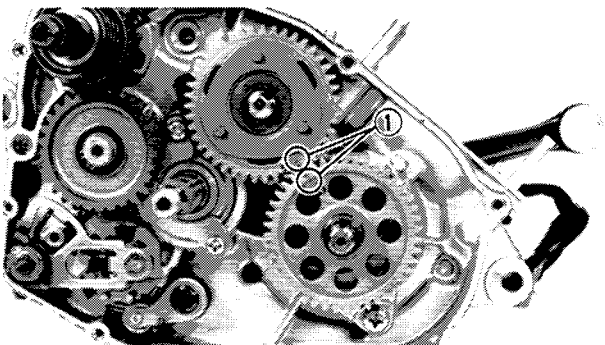

NOTE:

Note that there is the punched mark ① on the drive gear and punched mark ① on the balancer gear which must be aligned to install the balancer gear.