


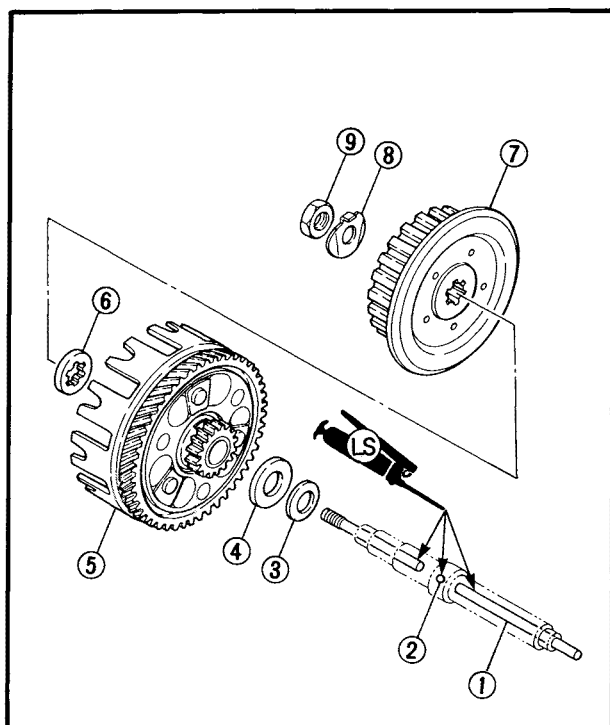


3. Install:

- Push rod ①
- Ball ②
- Conical spring washer ③
- Spacer ④
- Clutch housing ⑤
- Spacer ⑥
- Clutch boss ⑦
- Lock washer ⑧
- Nut ⑨ (Clutch boss)

4. Apply:

- Lithium soap base grease
To push rod ① and ball ② .

4

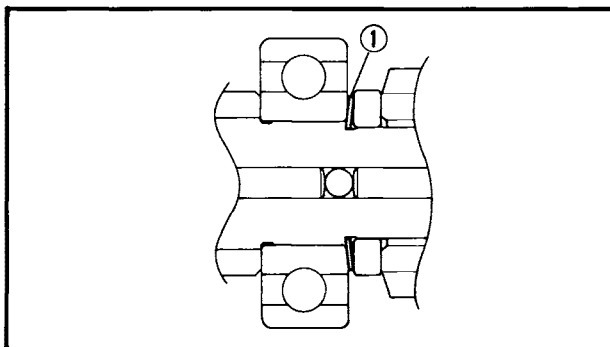

NOTE:


- Be careful to install the conical spring washer ① in proper position as shown.
- Install the lock washer tab into the hole of the clutch boss.

⚠ WARNING:

Always use a new lock washer.

NOTE:

- Hold the clutch boss by the Universal Clutch Holder ① to tighten the nut ② (Clutch boss).

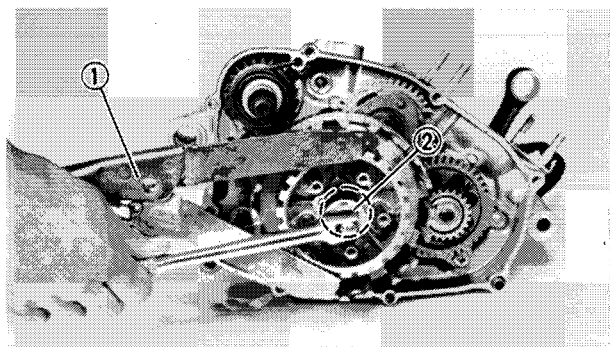

Universal Clutch Holder:
P/N YM-91042
P/N 90890-04086



Nut (Clutch Boss):
80 Nm (8.0 m·kg, 58 ft·lb)

- Bend the lock washer tab.