
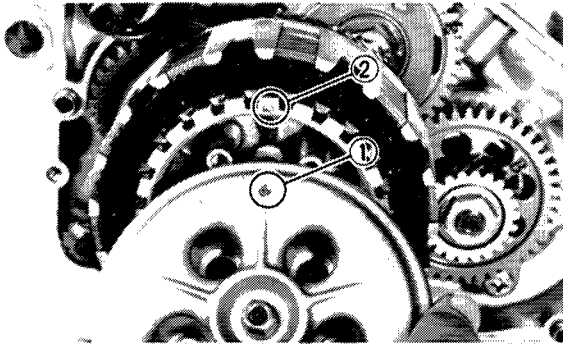


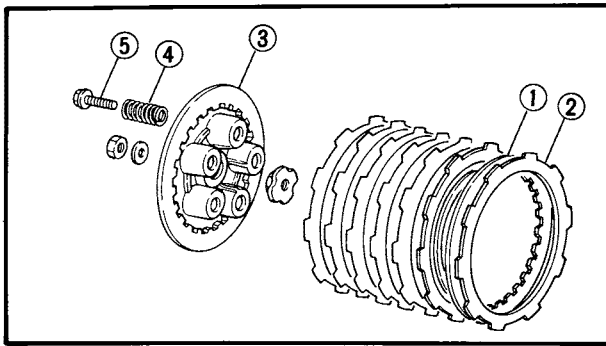

5. Install:

- Clutch plates ①
- Friction plates ②
- Pressure plate ③
- Clutch springs ④
- Bolts ⑤

NOTE:

- Align the pressure plate mark ① with the clutch boss mark ②.

6. Tighten:


- Bolts (Pressure plate)



Bolts (Pressure Plate):
6 Nm (0.6 m·kg, 4.3 ft·lb)

NOTE:

Tighten the bolts (Pressure plate) in stage, using a crisscross pattern.

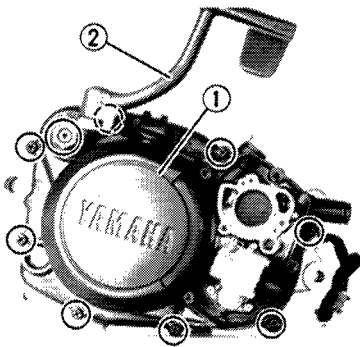

7. Install:

- Dowel pins
- Gasket
- Crankcase cover ① (Right)
- Kick crank ②

NOTE:

Tighten the bolts (Crankcase Cover — Right) in stage, using a crisscross pattern.



Bolts (Crankcase Cover — Right):
10 Nm (1.0 m·kg, 7.2 ft·lb)

Bolt (Kick Crank):
65 Nm (6.5 m·kg, 47 ft·lb)

⚠ WARNING:

Always use a new gasket.