


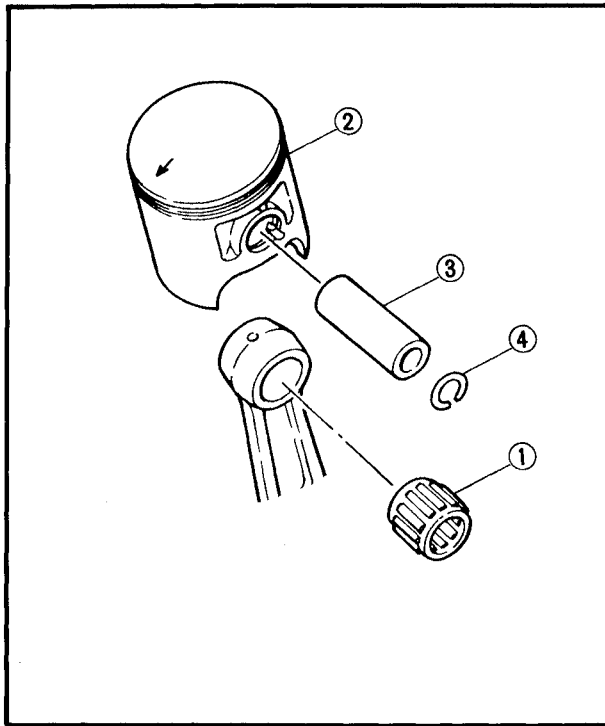

CYLINDER HEAD, CYLINDER AND PISTON

1. Install:

- Bearing ①
- Piston ②
- Piston pin ③
- Piston pin clip ④


NOTE:

- Apply 2-stroke oil to the piston pin, bearing, piston ring grooves and piston skirt areas.
- The arrow on the piston must point to the front of the engine.
- Before installing the piston pin clip, cover the crankcase with a clean towel or rag so you will not accidentally drop the pin clip and material into the crankcase.

⚠ WARNING:

Always use a new piston pin clip.

4

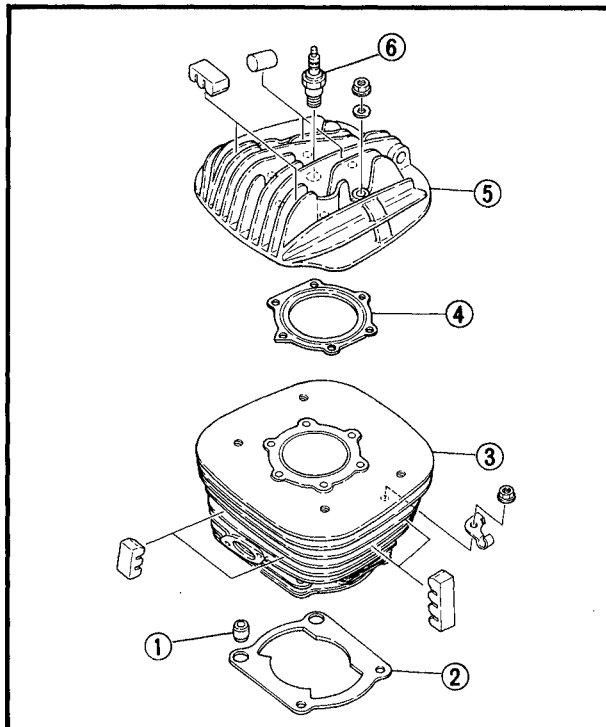

2. Install:

- Dowel pins ①
- Gasket ②
- Cylinder ③
- Gasket ④
- Cylinder head ⑤
- Spark plug ⑥