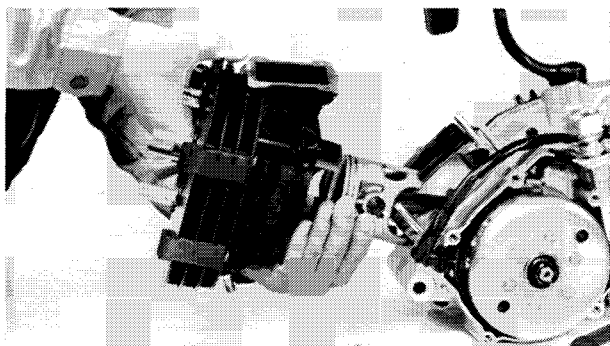
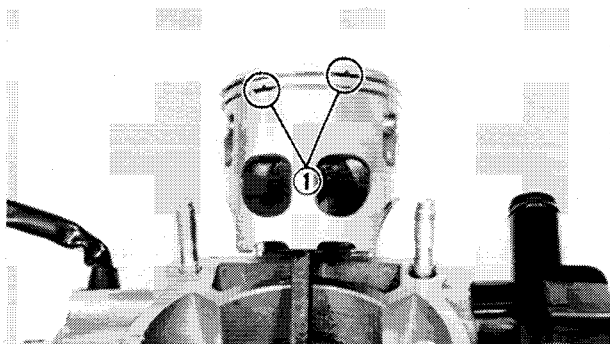



**NOTE:**

- Be sure to check the manufacturer's marks or numbers stamped on the rings are on the top side of the rings.
- Make sure the ring ends ① are properly fitted around the ring locating pins in the piston grooves.
- Before installing the cylinder, apply a liberal coating of 2-stroke oil to the piston rings.
- Install the cylinder with one hand while compressing the piston rings with the other hand.


⚠ WARNING:

Always use a new gasket.

4

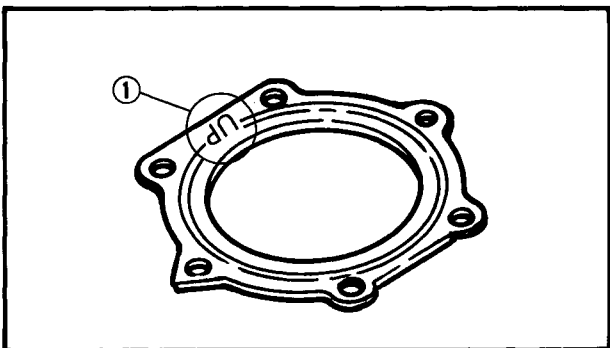**NOTE:**

Install the gasket (Cylinder head) with the "UP" mark ① faced upward.

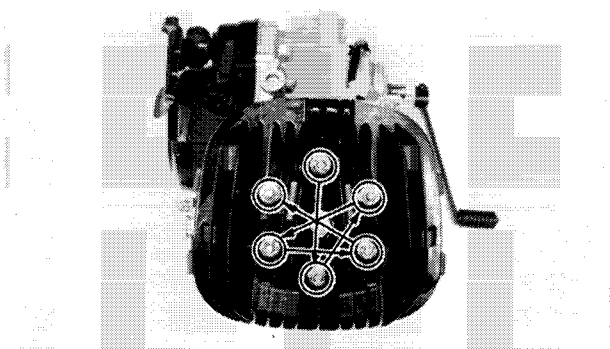**3. Tighten:**

- Nuts (Cylinder)
- Nuts (Cylinder head)
- Spark plug



Nuts (Cylinder):
25 Nm (2.5 m·kg, 18 ft·lb)

Nuts (Cylinder Head):
27 Nm (2.7 m·kg, 20 ft·lb)

Spark Plug:
25 Nm (2.5 m·kg, 18 ft·lb)