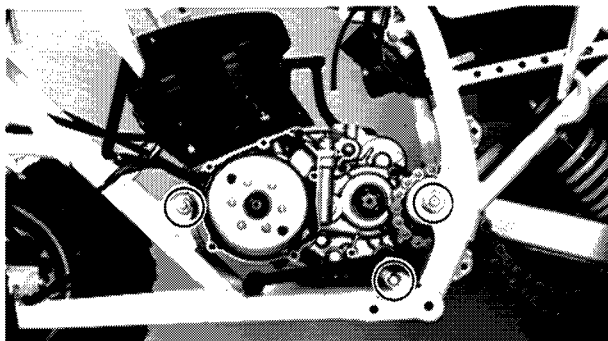


**REMOUNTING ENGINE**

Reverse the "ENGINE REMOVAL" procedure.
Note the following points.

1. Install:

- Engine assembly
- Mounting bolts

NOTE:

- Apply lithium soap base grease to the bolt (Pivot shaft).
- Temporary tighten the bolts before tightening them to specification.

**Mounting Bolts:****Front:**

45 Nm (4.5 m·kg, 33 ft·lb)


Rear:

33 Nm (3.3 m·kg, 24 ft·lb)

Pivot Shaft:

85 Nm (8.5 m·kg, 61 ft·lb)

4

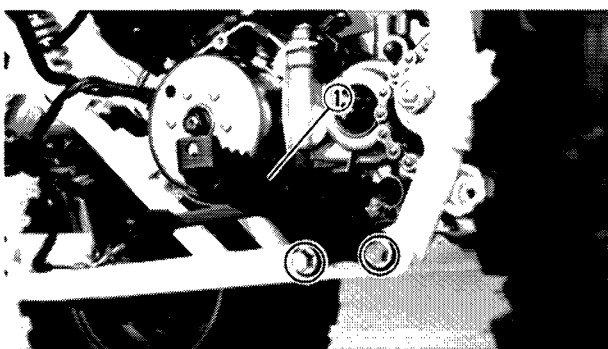


2. Install:

- Footrest ① (Left)

**Bolts (Footrest):**

55 Nm (5.5 m·kg, 40 ft·lb)

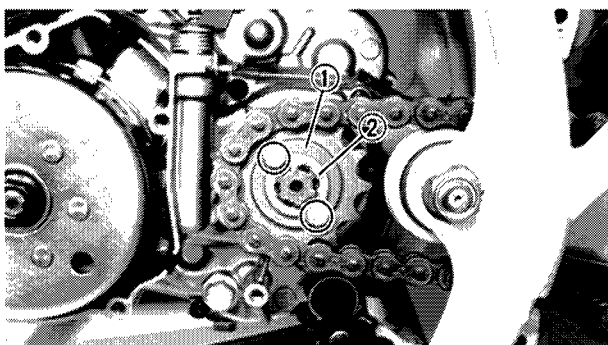

3. Install:

- Drive sprocket ①
- Sprocket holder ②

**Bolts (Sprocket Holder):**

10 Nm (1.0 m·kg, 7.2 ft·lb)