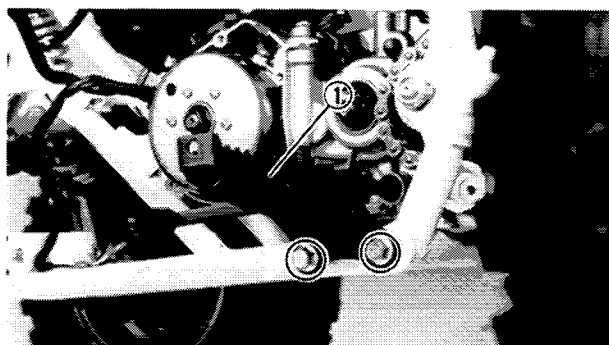
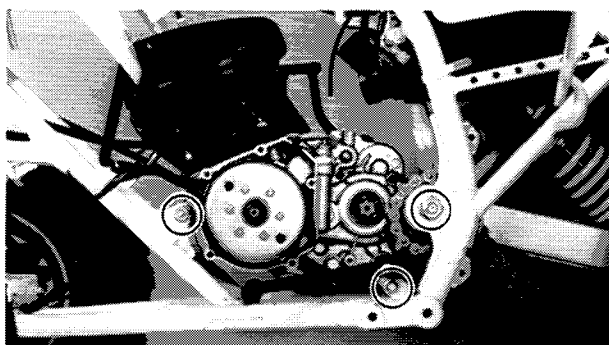


**FOOTREST**


1. Remove:
 - Footrest ① (Left)

**ENGINE REMOVAL**

1. Remove:
 - Mounting bolts

NOTE: _____

The engine and swingarm are installed using the same pivot shaft. Therefore, take care so that the pivot shaft is pulled, not entirely out, but for enough to set the engine free.

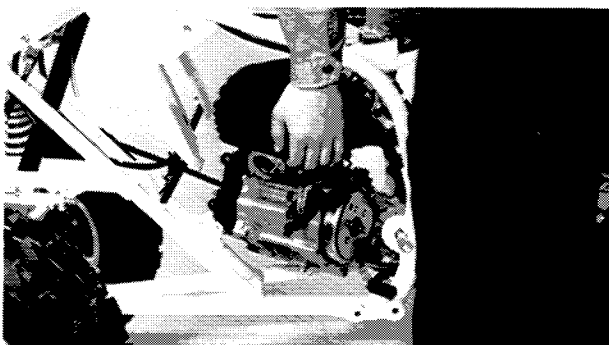

2. Remove:
 - Engine assembly
To the left.

4**ENGINE DISASSEMBLY****CYLINDER HEAD, CYLINDER AND PISTON****NOTE:** _____

With the engine mounted, the cylinder head, cylinder and piston can be maintained by removing the following parts.

- Exhaust pipe
- Carburetor
- Reed valve