


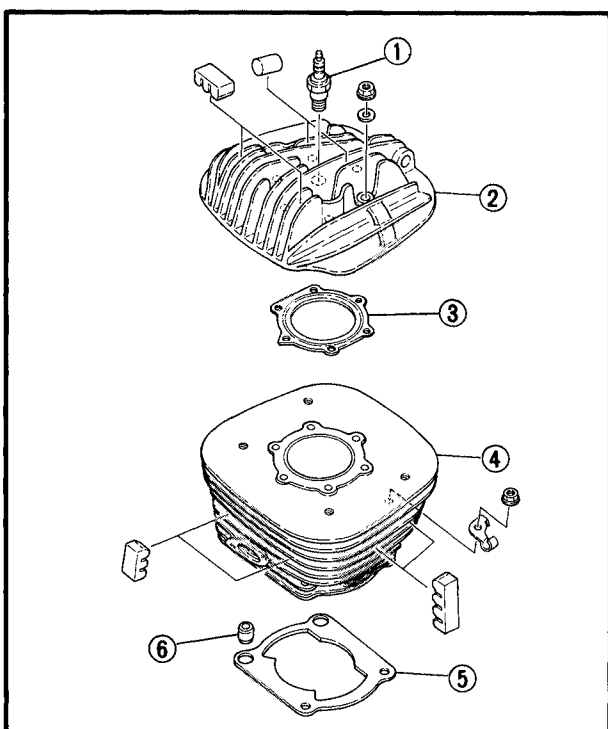


1. Remove:

- Spark plug ①
- Cylinder head ②
- Gasket ③ (Cylinder head)
- Cylinder ④
- Gasket ⑤ (Cylinder)
- Dowel pins ⑥

NOTE:

Loosen the nuts (Cylinder head) 1/2 turn each time, and remove.

4

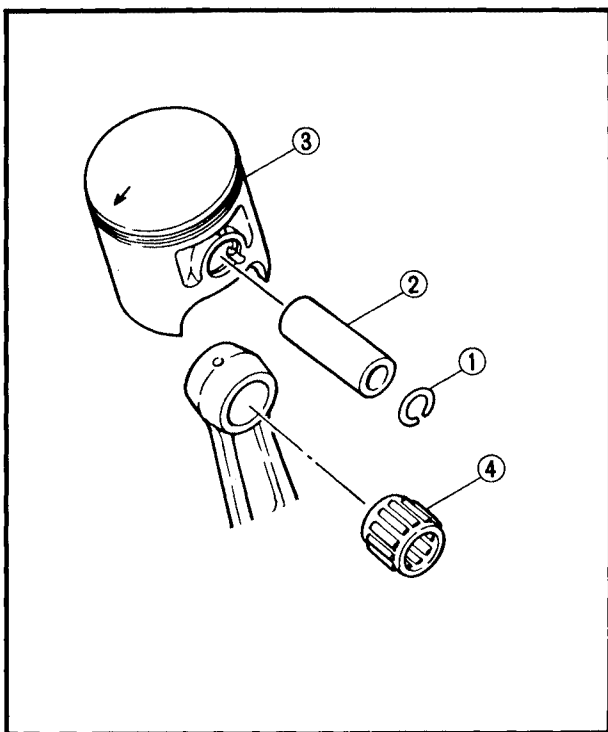

2. Remove:

- Piston pin clip ①
- Piston pin ②
- Piston ③
- Bearing ④

NOTE:

- Before removing the piston pin clip, cover the crankcase with a clean rag so you will not accidentally drop the clip into the crankcase.
- Before removing the piston pin, deburr the clip groove and pin hole area. If the piston pin groove is deburred and piston pin is still difficult to remove, use Piston Pin Puller.



Piston Pin Puller:
P/N YU-01304
P/N 90890-01304

CAUTION:

Do not use a hammer to drive the piston pin out.