




CLUTCH

NOTE:


With the engine mounted, the clutch can be maintained by removing the following parts.

- Footrest (Right)

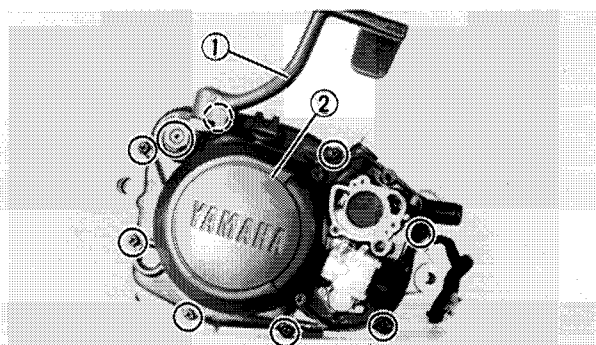

1. Remove:

- Kick crank ①
- Crankcase cover ② (Right)
- Gasket
- Dowel pins

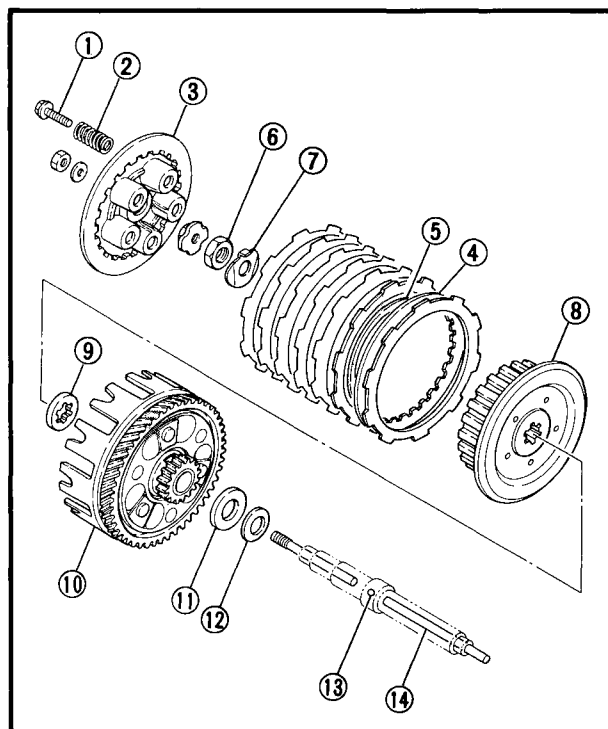


2. Remove:

- Bolts ①
- Clutch springs ②
- Pressure plate ③
- Friction plates ④
- Clutch plates ⑤
- Nut ⑥ (Clutch boss)
- Lock washer ⑦
- Clutch boss ⑧
- Spacer ⑨
- Clutch housing ⑩
- Spacer ⑪
- Conical spring washer ⑫
- Ball ⑬
- Push rod ⑭

NOTE:

- Before removing the nut (Clutch boss), straighten the lock washer tab.
- Hold the clutch boss by the Universal Clutch Holder ① to loosen the nut ② (Clutch boss).

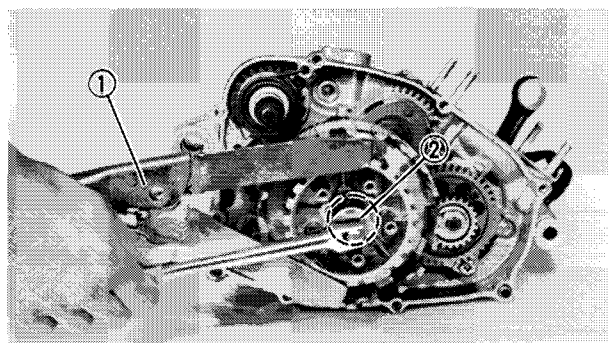

Universal Clutch Holder:
P/N YM-91042
P/N 90890-04086