


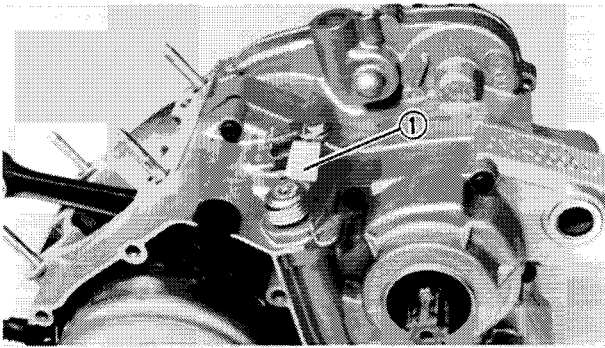

3. Remove:

- Push lever ①


PRIMARY DRIVE GEAR AND BALANCER GEAR

NOTE:

With the engine mounted, the primary drive gear and balancer gear can be maintained by removing the following parts.

- Footrest (Right)
- Kick crank
- Crankcase cover (Right)
- Clutch

4

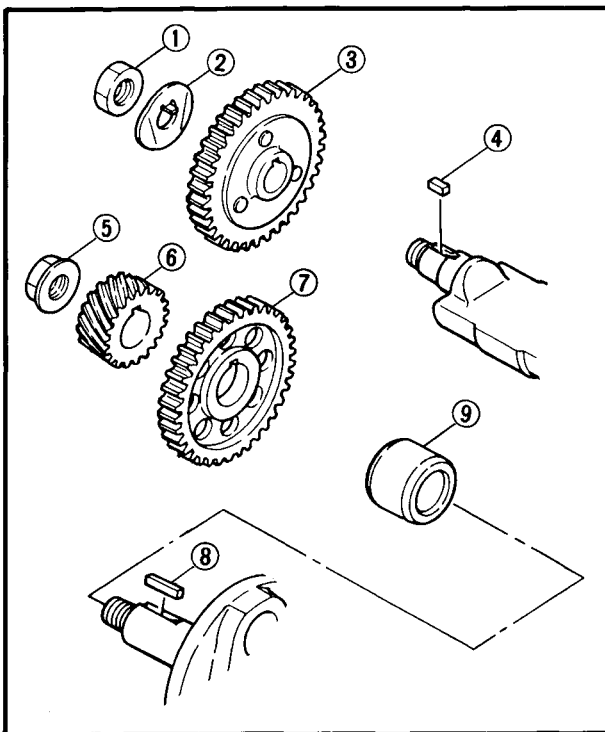

1. Remove:

- Nut ① (Balancer gear)
- Lock washer ②
- Balancer gear ③
- Key ④
- Nut ⑤ (Primary drive gear)
- Primary drive gear ⑥
- Balancer drive gear ⑦
- Key ⑧
- Collar ⑨

NOTE:

- Before removing the nut (Balancer gear), straighten the lock washer tab.
- Loosen both nuts simultaneously (Primary drive gear and balancer gear).