


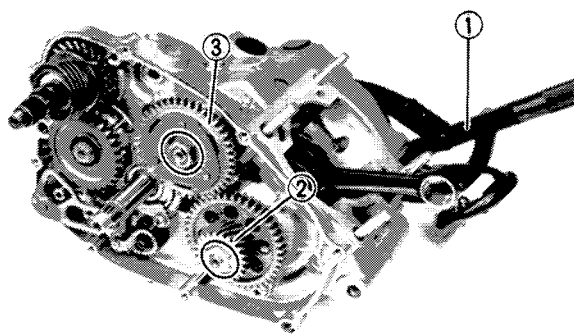

- Hold the rotor (CDI magneto) by the Rotor Holder ① to loosen the nuts (Primary drive gear ② and balancer gear ③).





Rotor Holder:
P/N YU-01235
P/N 90890-01235

KICK AXLE

NOTE:

With the engine mounted, the kick axle can be maintained by removing the following parts.

- Footrest (Right)
- Kick crank
- Crankcase cover (Right)
- Clutch

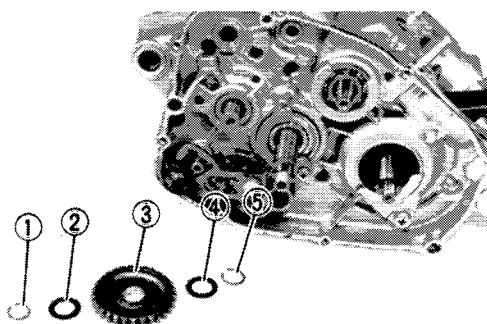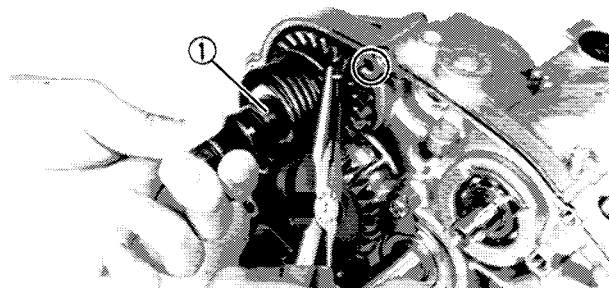

1. Unhook the kick spring from its position.
2. Remove:

- Kick axle assembly ①
Rotate the shaft counterclockwise.

3. Remove:

- Circlip ①
- Plain washer ②
- Kick idle gear ③
- Plain washer ④
- Circlip ⑤

SHIFT SHAFT AND STOPPER LEVER

NOTE:

With the engine mounted, the shift shaft and stopper lever can be maintained by removing the following parts.

- Footrest (Right)
- Kick crank
- Crankcase cover (Right)
- Clutch