



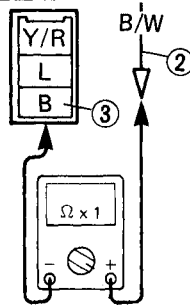

6. "ENGINE STOP" switch conduct

- Disconnect the "ENGINE STOP" switch leads ①.
- Connect the Pocket Tester ($\Omega \times 1$) to the "ENGINE STOP" switch leads.

Tester (+) Lead → Black/White ② Lead
Tester (–) Lead → Black ③ Lead

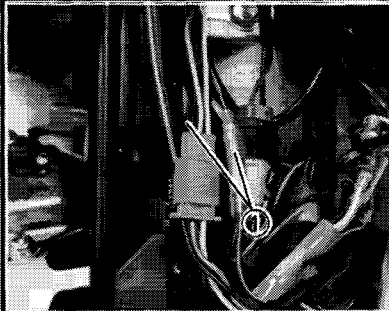

- Turn the "ENGINE STOP" switch to "OFF" and "RUN".
- Check the "ENGINE STOP" switch for continuity.

Switch position	Good condition	Bad condition		
RUN	X	○	X	○
OFF	○	X	X	○

○ : Continuity X : Nocontinuity

BAD CONDITION

"ENGINE STOP" switch is faulty, replace handlebar switch (Left).



GOOD CONDITION

7. Ignition coil resistance

- Disconnect the ignition coil leads (Orange and Black).
- Remove the ignition coil.
- Connect the Pocket Tester ($\Omega \times 1$) to the ignition coil.

Tester (+) Lead → Orange ① Lead
Tester (–) Lead → Ground ② Terminal

