




- Check the primary coil for specified resistance.



Primary Coil Resistance:
1.44 ~ 1.76Ω at 20°C (68°F)

- Connect the Pocket Tester (Ω x 1K) to the ignition coil.

Tester (+) Lead → Spark Plug Lead ①
Tester (–) Lead → Orange ② Lead

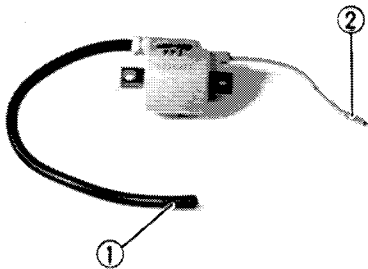

- Check the secondary coil for specified resistance.



Secondary Coil Resistance:
5.28 ~ 7.92kΩ at 20°C (68°F)

OUT OF SPECIFICATION


Ignition coil is faulty, replace it.

↓ BOTH MEET SPECIFICATION

8. Source coil resistance

- Disconnect the CDI magneto leads ① (Black/Red and Black).
- Connect the Pocket Tester (Ω x 100) to the source coil leads.

Tester (+) Lead → Black/Red ② Lead
Tester (–) Lead → Black ③ Lead

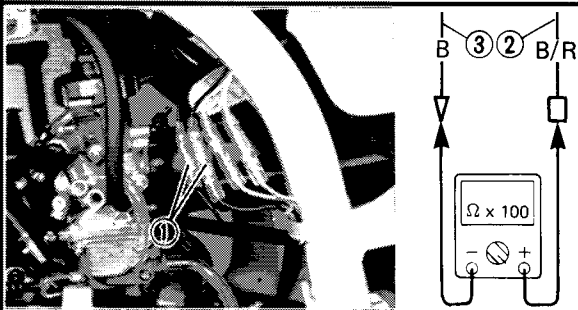

- Check the source coil for specified resistance.



Source Coil Resistance:
192 ~ 288Ω at 20°C (68°F)

OUT OF SPECIFICATION

Source coil is faulty, replace it.

↓ MEETS SPECIFICATION
*