





9. Pickup coil resistance

- Disconnect the CDI magneto leads ① (White/Red and Black).
- Connect the Pocket Tester ($\Omega \times 10$) to the pickup coil leads.

Tester (+) Lead → White/Red ② Lead

Tester (–) Lead → Black ③ Lead

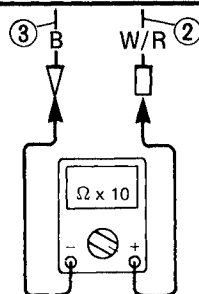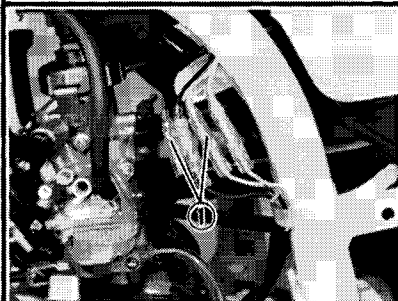

- Check the pickup coil for specified resistance.



Pickup Coil Resistance:
16-24 Ω @ 20°C (68°F)

OUT OF SPECIFICATION

Pickup coil is faulty, replace it.



MEETS SPECIFICATION

10. Wiring connection (Entire ignition system)

- Check entire ignition system for connections. Refer to "WIRING DIAGRAM" section.

POOR CONNECTION

Correct.



CORRECT

CDI unit is faulty. Replace it.