



Procedure (2)

Check;

1. Throttle cable free play
2. Throttle switch conduct
3. Carburetor switch conduct
4. Wiring connection
(Entire ignition control system)

1. Throttle cable free play

- Check the throttle cable free play. Refer to "THROTTLE CABLE FREE PLAY ADJUSTMENT" section in the CHAPTER 3.



Free Play:

4 ~ 6 mm (0.16 ~ 0.24 in)

OUT OF SPECIFICATION

Adjust the throttle cable free play.





MEETS TO SPECIFICATION

2. Throttle switch conduct

- Disconnect the throttle switch coupler ① (Yellow/Black and Black).
- Connect the Pocket Tester ($\Omega \times 1$) to the throttle switch coupler.

Tester (+) Lead → Yellow/Black ② Lead
Tester (−) Lead → Black ③ Lead

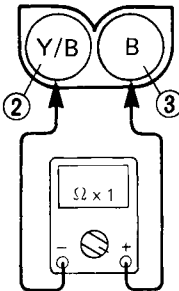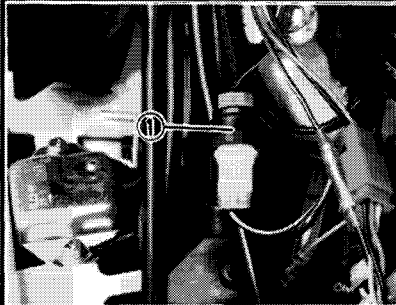

- Turn the throttle lever to open and close.
- Check the throttle switch for continuity.

BAD CONDITION

Throttle switch is faulty, replace it.

Throttle lever	Good condition	Bad condition		
Open	○	X	X	○
Close	X	○	X	○
○ : Continuity X : Nocontinuity				



GOOD CONDITION

*