



TROUBLESHOOTING

HEADLIGHT DOES NOT COME ON.

Procedure

Check;

- | | |
|-------------------------------------|---|
| 1. Headlight bulb conduct | 4. Lighting voltage |
| 2. Headlight bulb socket conduct | 5. Lighting coil resistance |
| 3. "LIGHTS" (Dimmer) switch conduct | 6. Wiring connection (Entire lighting system) |

NOTE:

- Remove the following parts before troubleshooting.
 - 1) Headlight cover
 - 2) Fuel tank cover (Front)
- Use the following special tools in the troubleshooting.



Pocket Tester:
P/N. YU-03112
P/N. 90890-03112



Inductive Tachometer:
P/N. YU-03113
P/N. 90890-03113

1. Headlight bulb conduct

- Remove the headlight bulb. Refer to "CHAPTER 3. HEADLIGHT BULB REPLACEMENT" section.


⚠ WARNING:

Keep flammable products or your hands away from bulb while it is on, it will be hot. Do not touch bulb until it cools down.

- Connect the Pocket Tester ($\Omega \times 1$) to the bulb terminals.

Tester (+) Lead → Terminal ①
Tester (−) Lead → Terminal ②

Tester (+) Lead → Terminal ①
Tester (−) Lead → Terminal ③

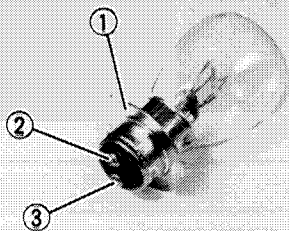

- Check the bulb for continuity.

CONTINUITY DOES NOT
EXIST ON ONE CIRCUIT.

Bulb is faulty, replace it.

CONTINUITY EXISTS ON
BOTH CIRCUITS.

*